



ASSEMBLY INSTRUCTIONS
ELECTRIC ADJUSTABLE DESK

 
COMPONENTS

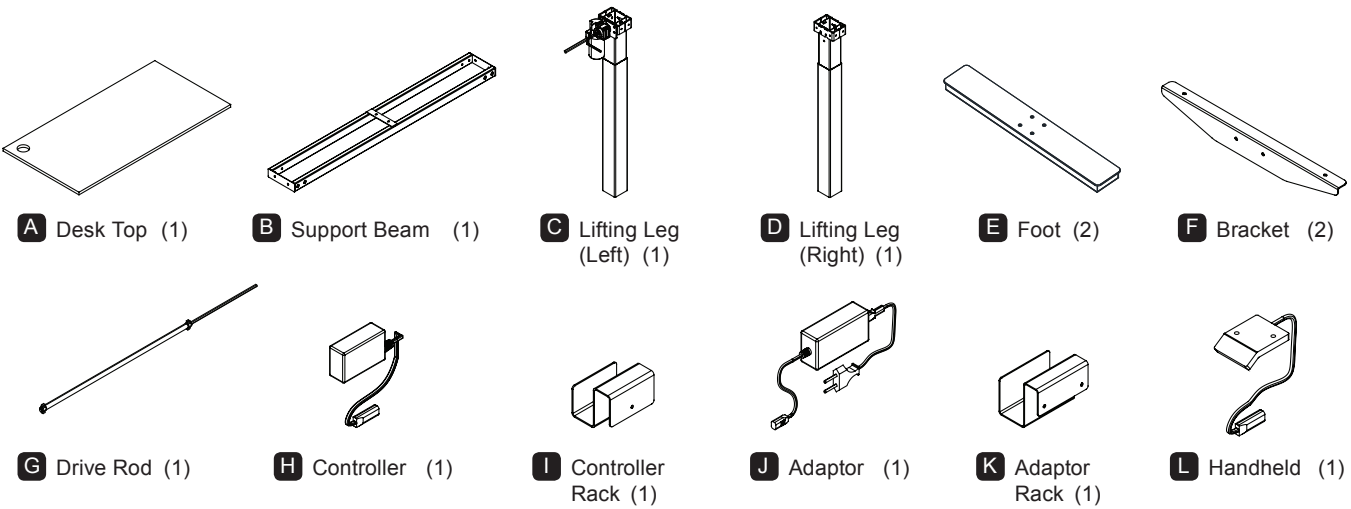

HARDWARE/TOOLS

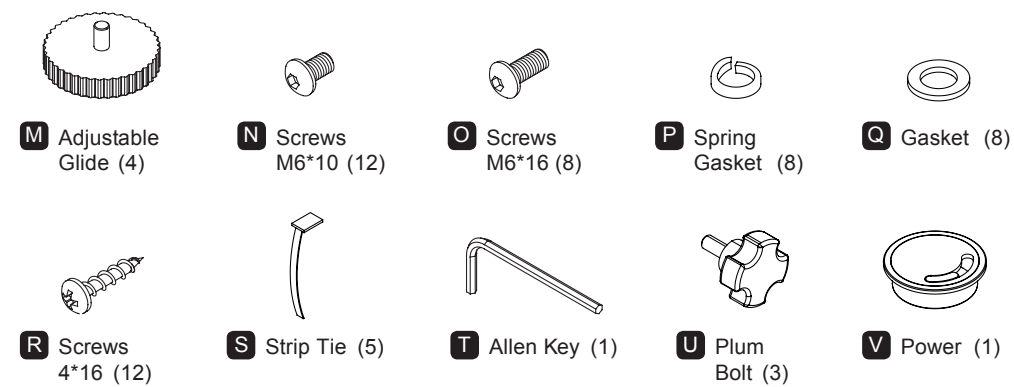


! Tools Required for Assembly




Phillips Screwdriver

1


Extend drive rod(G) into leg(D) first, then attach leg(C) after.

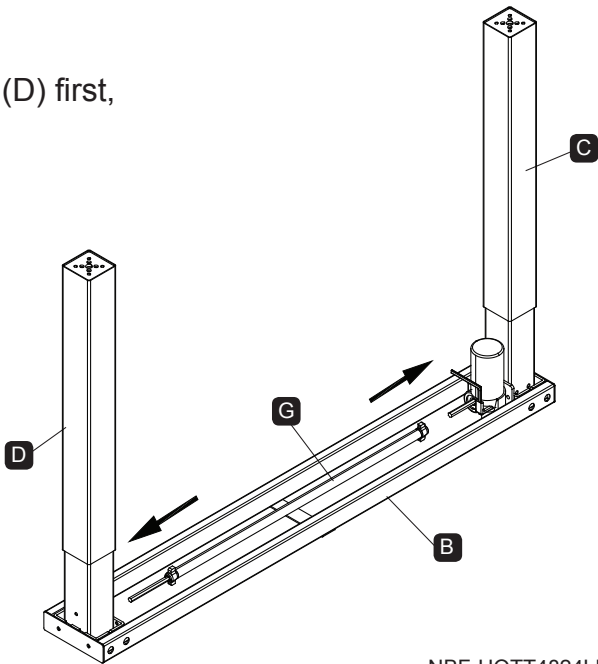


2

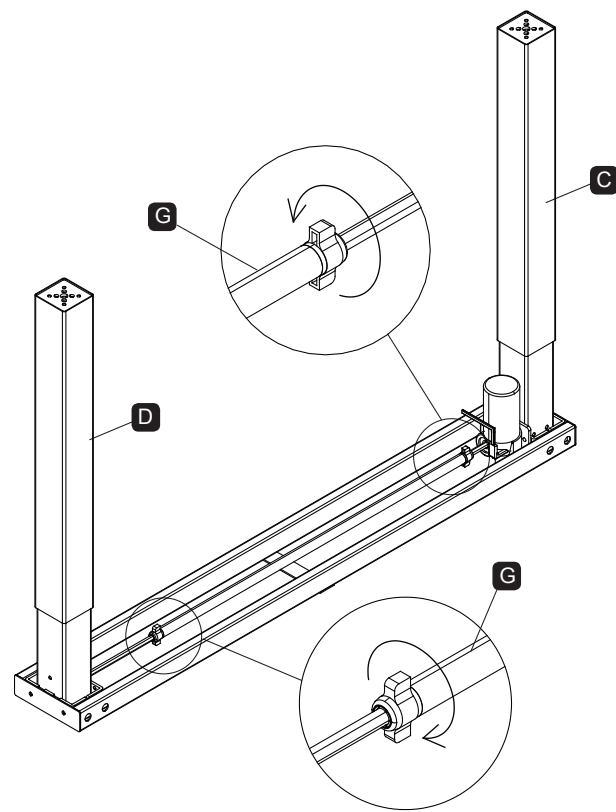


3

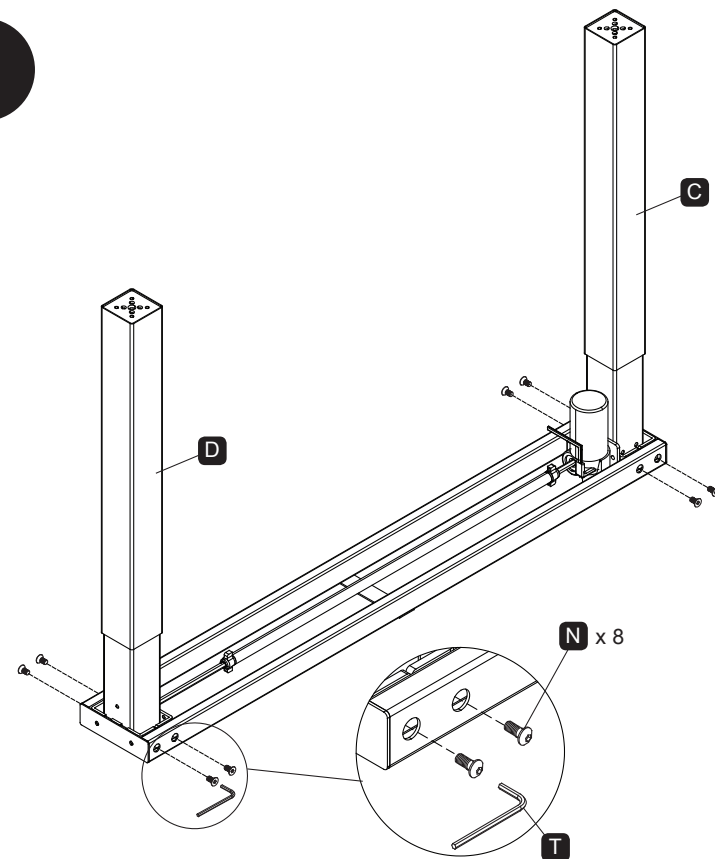


4

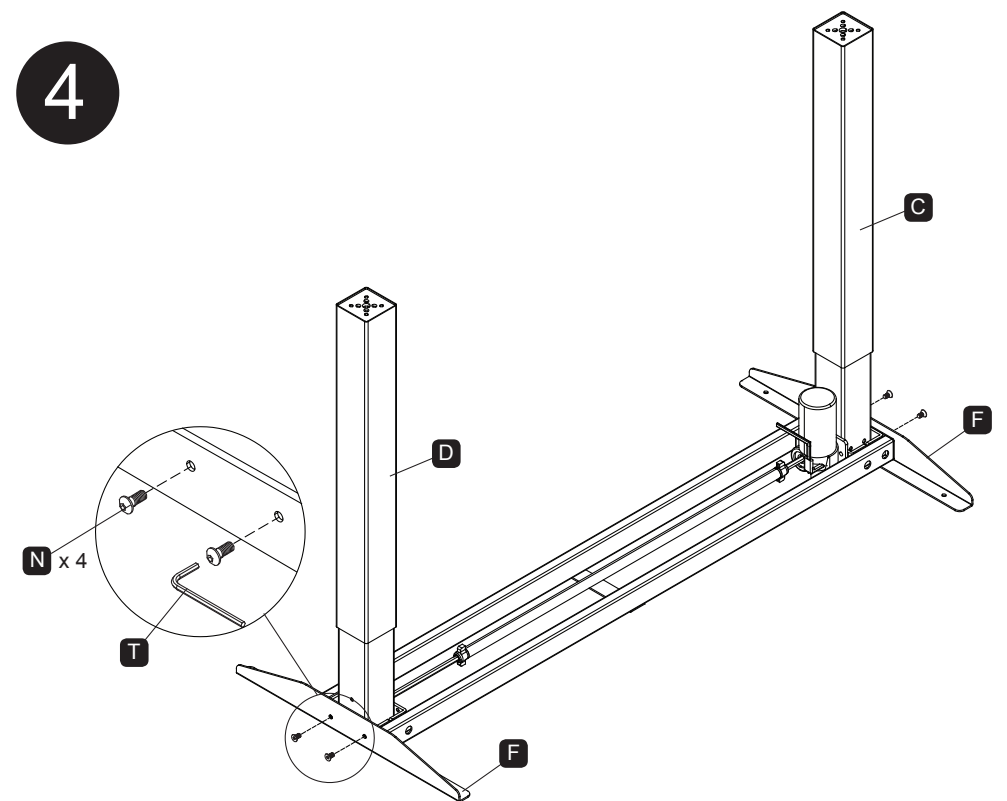


5

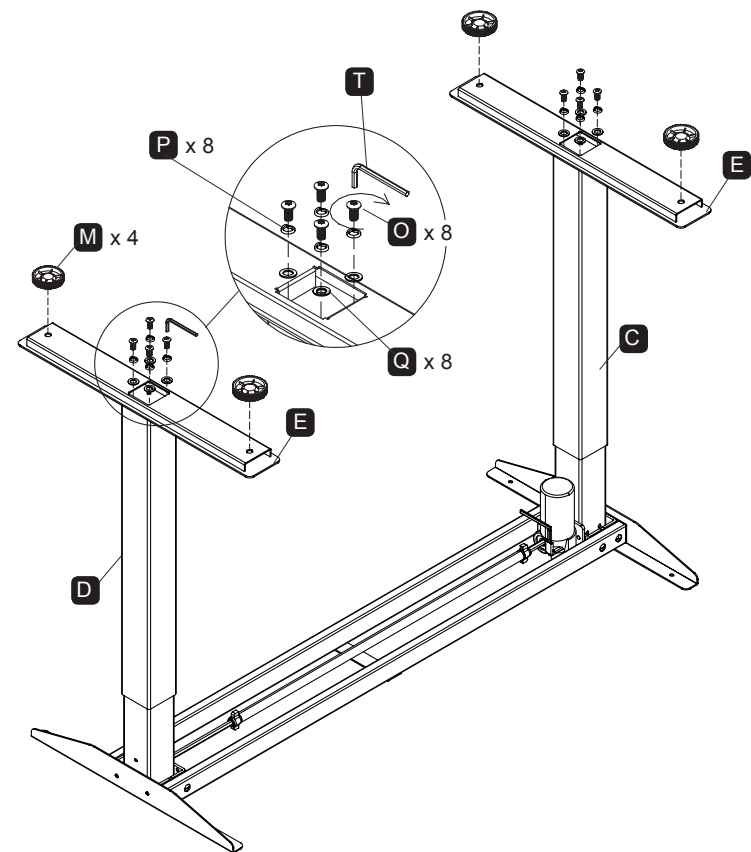


6

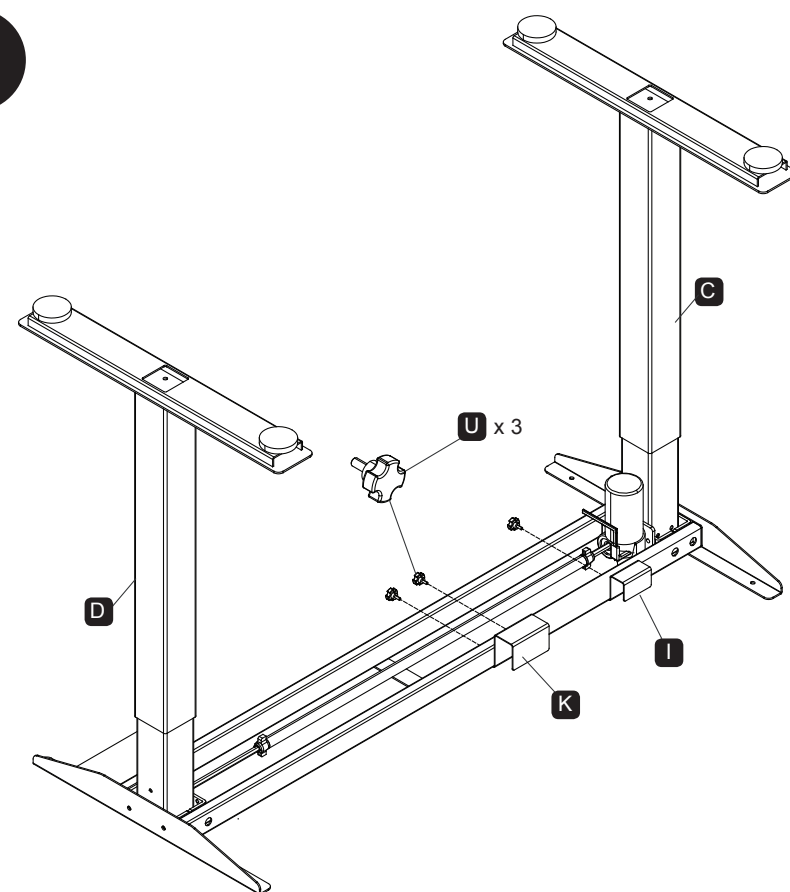


7

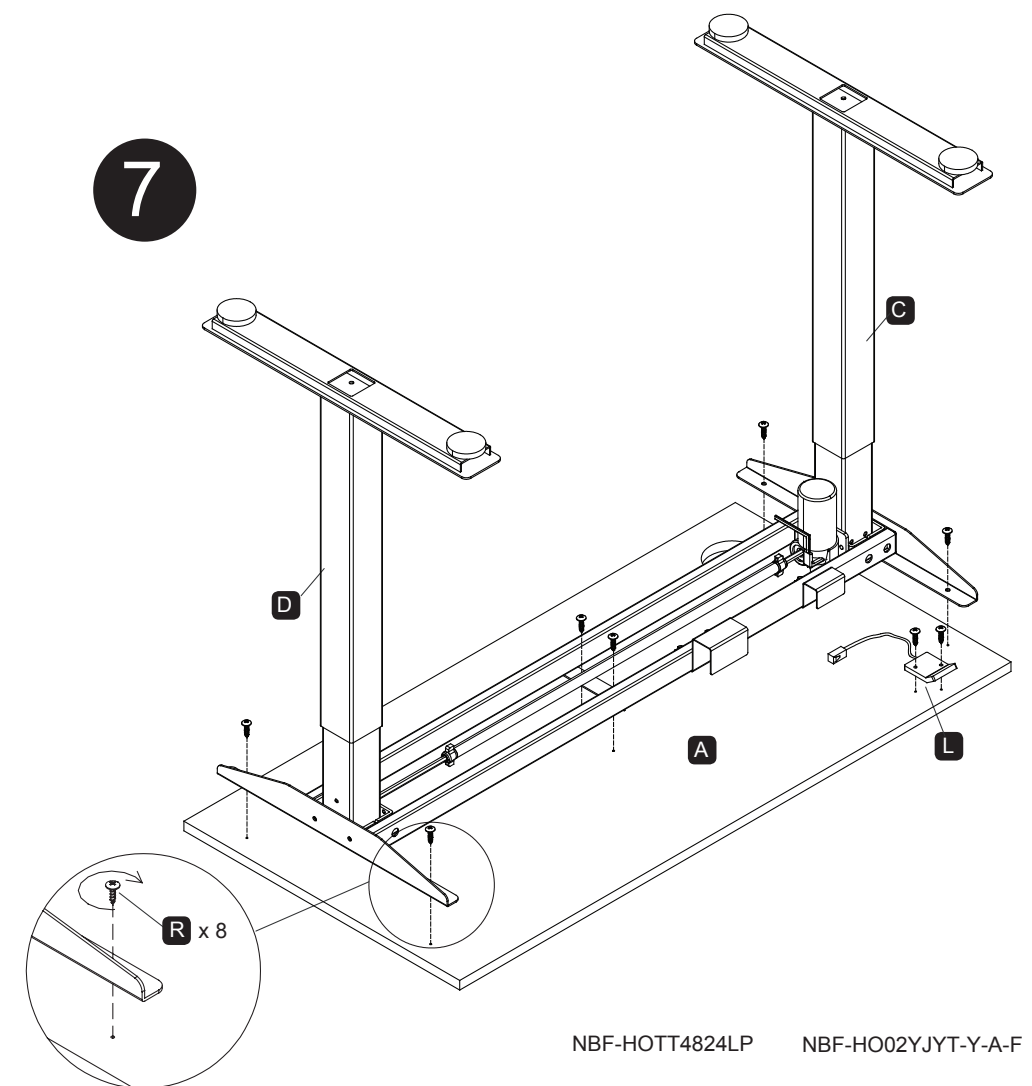

8

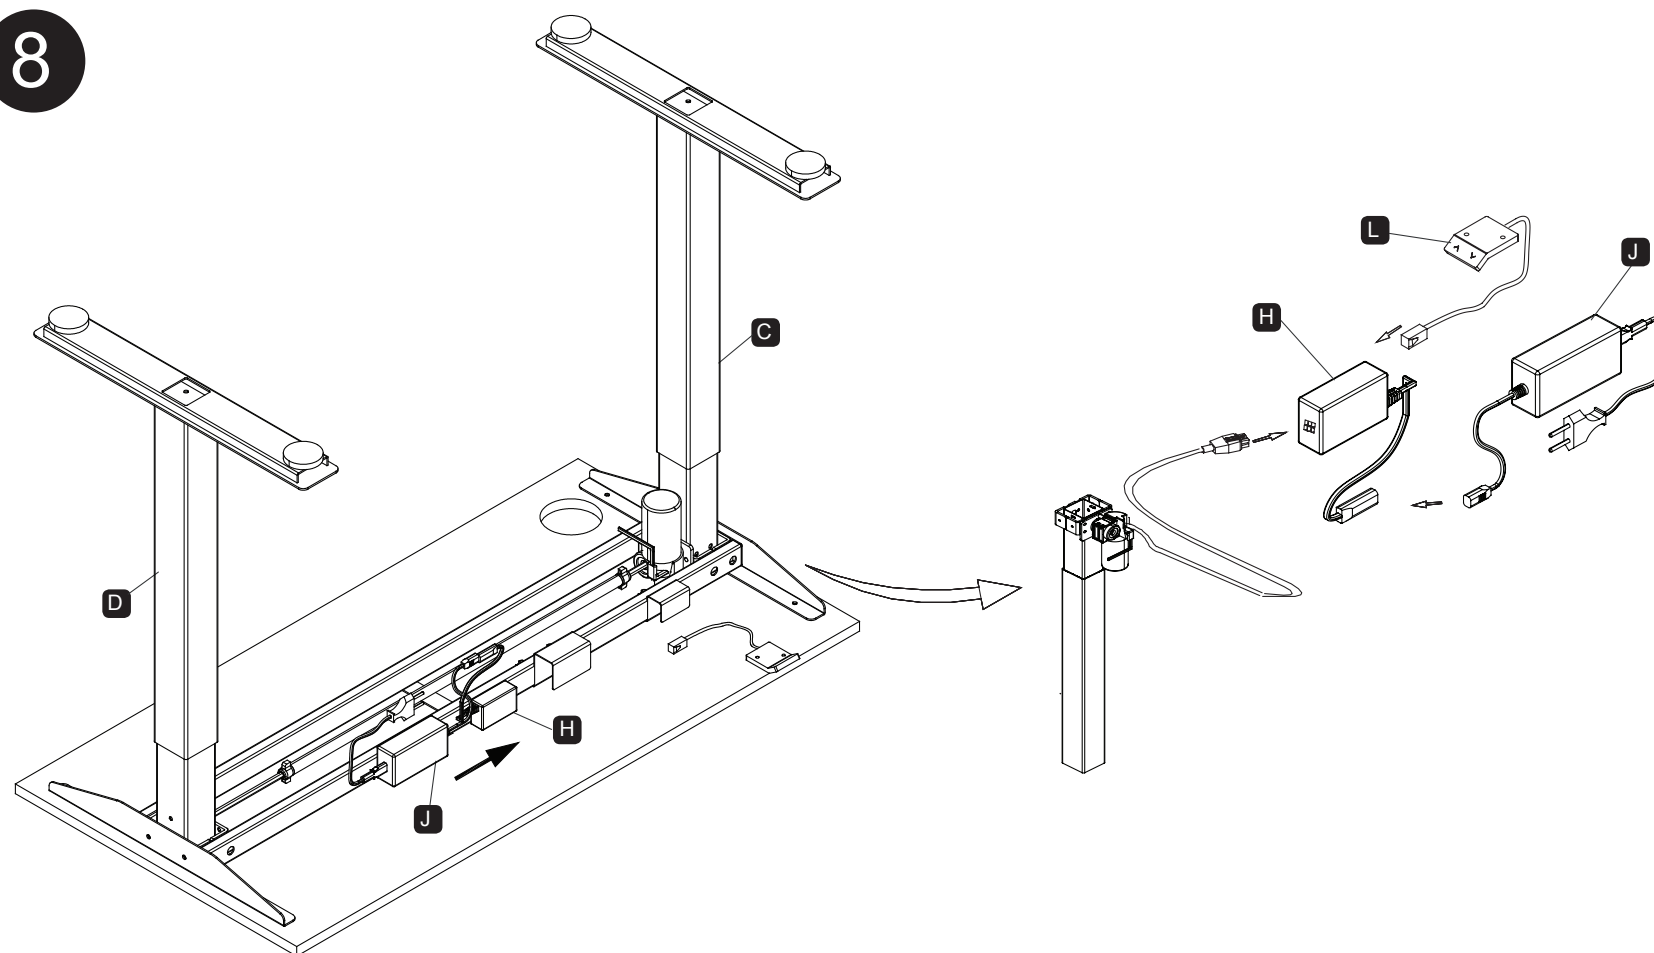

9

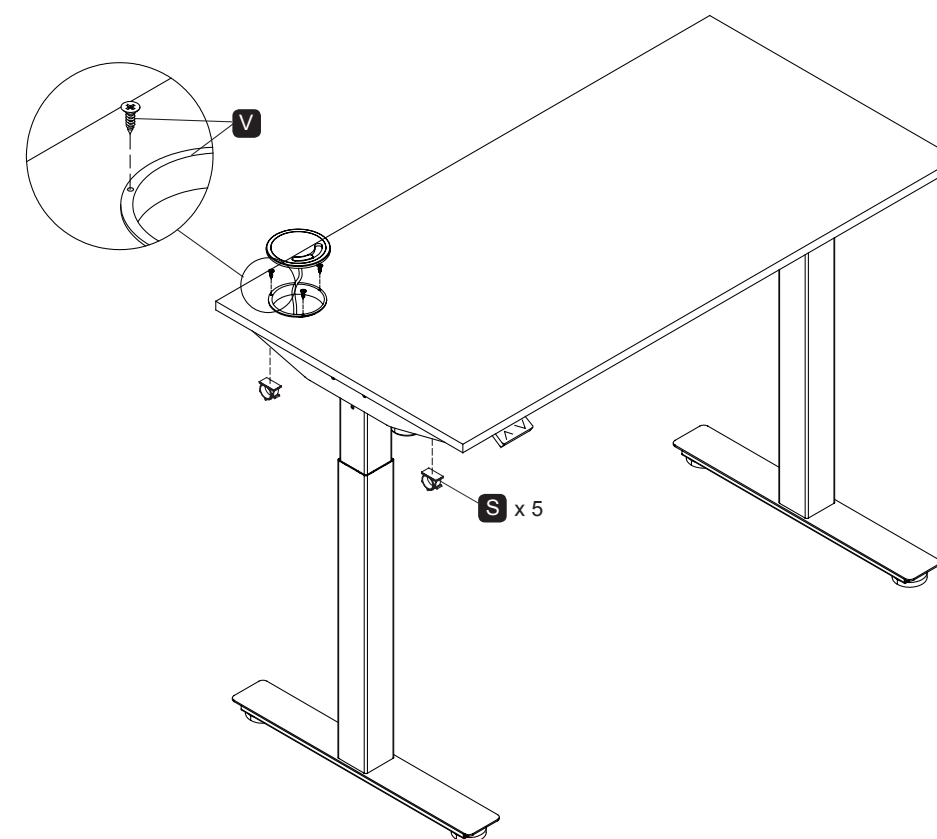

Reset the system if any resistant force blocks the traveling range while the desk is moving up or down. The electronic device will stop the movement.

To reset the system, turn off the power for 2 minutes, then switch back on. Hold the down button for 20 seconds, this will reactivate the height adjustment function.