


aspenhome

Distributed by Furniture Values International, LLC

ITEM NO:I49-344-2 Partner's Desk Top & Side Panel

HARDWARE PACK			
Bolt Flat Washer Lock Washer	7 Pcs 7 Pcs 7 Pcs	Allen Wrench Wood Screw	1 Pc 3 Pcs
COMPONENTS LIST			
Desk top End Panel	1 Pc 1 Pc		

- 1. Put the desk top upside down on a clean and soft surface. Remove the utility drawers from the desk and place aside.
- 2. Align the holes in the end brace of desk top with the insert in the end panel. Attached the end panel to the desk top using 4 bolts, lock washers, flat washers and tighten using an allen wrench.
- 3. set the desk top with end panel upright. Replace the utility drawers.

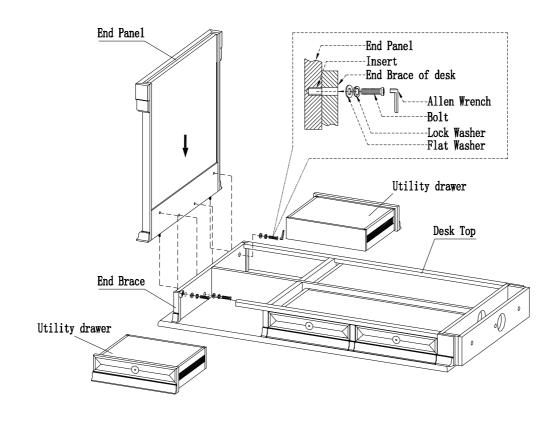


ah

aspenhome.

Distributed by Furniture Values International, LLC

ITEM NO: I49-344-2 Partner's Desk Top & Side Panel

- 1. Remove the fake drawer front on the desk base.
- 2. Align the hole in the front rail of desk base with the insert in the end brace of desk top. Attach the desk top with end panel to the desk base using an Allen wrench and screwdriver to connect bolts (3pcs), lock washers, flat washers and wood screws (3pcs).
- 3. Insert the shelf brackets into the side panels of desk base and place the shelf on.
- 4. Use a screwdriver to adjust the leveler on the desk base if necessary.

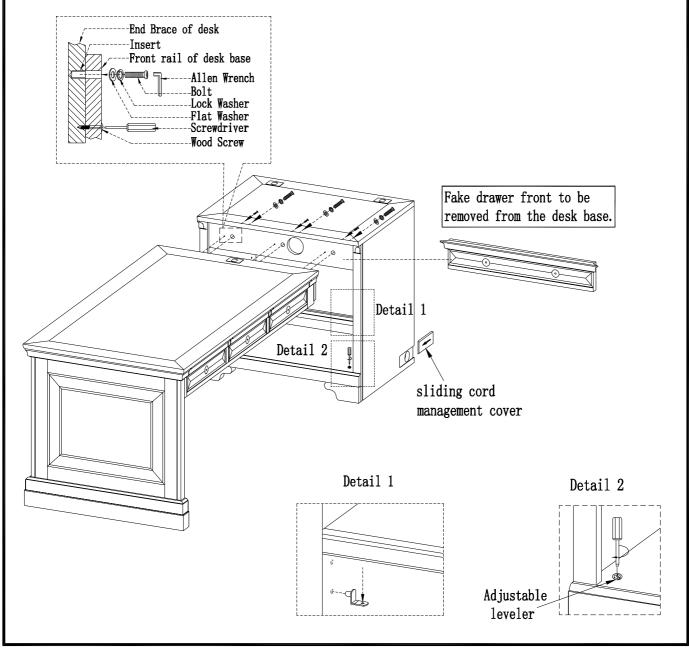



aspenhome.

Distributed by Furniture Values International, LLC

ITEM NO:I49-344-2 Partner's Desk Top & Side Panel

