### MINI-SPLIT SYSTEMS




RESIDENTIAL / COMMERCIAL PRODUCT SPECIFICATIONS

LENNOX)

Bulletin No. 211044 April 2024 Supersedes all previous versions



**Nominal Capacity - 1 Ton** 

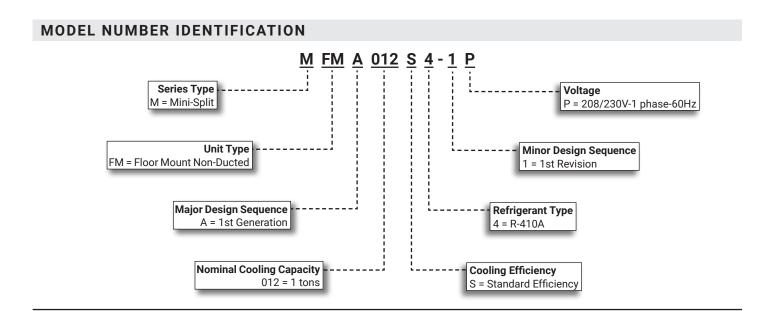

### CONTENTS

Air Throw Data
Approvals And Warranty
Dimensions
Features
Installation Clearances
Model Number Identification.
Optional Accessories - Order Separately
Remote Controller - Furnished
Remote Controller - Optional
Specifications

### APPROVALS AND WARRANTY

### **APPROVALS**

· Indoor units and components UL and CEC bonded for grounding to meet safety standards for servicing

### WARRANTY

- All covered components
- · Limited five years in all applications
- · Accessories and controls Limited one year

NOTE - Refer to Lennox Basic Limited Warranty at <u>www.Lennox.com</u> for additional details.

### **FEATURES**

- Low-sound, three-speed Floor Mount Console model with LED display has a multi-blade fan that distributes air vertically and horizontally with a wide angle sweeping motion
- Installed vertically against the floor/wall
- Swing louver angles to 90°
- **Pre-Heat Function** Delays the operation of the fan until the indoor coil has reached a pre-determined temperature which prevents the discharge of cold air while the system is operating in the "heating" mode
- LED Readout/Infrared Receiver Panel Mounted on unit. LEDs display unit operation status, and codes for maintenance and servicing
- Infrared receiver for use with wireless remote controller (furnished)
- Auto Restart Automatically restores the previous function setting if power is interrupted
- Cooling Override Button on the indoor unit allows a temporary 30 minute override of the system for forced "AUTO" or "COOLING" operation
- Flare Connections Equipped with liquid and gas flare fittings for quick and secure piping
- · Condensate Drain Connection Rear of unit
- Condensate Flex Adaptor Flex adaptor and hose clamps are furnished for drain connection
- Three Speed Fan Fan functions at three speeds: low, medium and high
- · Air Filter Cleanable air filter is furnished as standard

- Hanging Brackets (2) Furnished for installation
- Wireless Remote Controller Furnished as standard, see Page 3

#### OPTIONAL ACCESSORIES

#### **Condensate Pumps**

- Quietly and efficiently removes condensate
- See Optional Accessories Table for available pumps

#### A/C Easy Tee<sup>®</sup> Condensate Cleanout • Condensate drain service port

- Flexible and easy to use with nitrogen, water or shop vac
- Screw cap on top allows easy access to condensate drain line


#### Wired Programmable Remote Controllers

• See Page 6

# **REMOTE CONTROLLER - FURNISHED**

### WIRELESS REMOTE CONTROLLER (RG10B-DCFC)

- Complete remote control of system
- Maximum operating range is 25 ft.
- Operates on two AAA 1.5V batteries (furnished)
- Wireless remote controller holder furnished
- · Holder can be mounted on a wall for easy access
- Mounting screws furnished

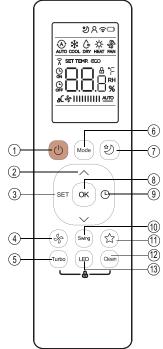

# 1 ON/OFF Button

Turns system on and off

#### UP/DOWN Buttons

 Increase or decrease the indoor temperature in one degree increments (maximum 86°F, minimum 62°F)

NOTE - Temperature cannot be adjusted in FAN mode.

**NOTE** - Press and hold and buttons together for 3 seconds to alternate the temperature display between the °C and °F scale.

### SET Button

- Scrolls through unit operations in this order:
- 1. Follow Me  $\red{A}$

**NOTE** - The selected symbol will flash on the display area. Press the OK button to confirm.

#### FAN Button

- Cycles fan speeds in the following order:
  - $\bullet \text{ AUTO} \to \text{LOW} \to \text{MED} \to \text{HIGH}$
- **NOTE** Holding Fan button down for 2 seconds will activate **Silence** feature.

# 5 TURBO Button

• Enables the unit to reach the preset temperature during cooling or heating operation in the shortest time

# 6 MODE Button

- Select system operation modes
- Press button to cycle through each setting:
  - $\bullet \text{ AUTO} \to \text{COOL} \to \text{DRY} \to \text{HEAT} \to \text{FAN}$
- 7 SLEEP Button

### Sleep

- Enables the system to automatically increase cooling or decrease heating (in 2°F increments) per hour for the first 2 hours, then maintain a steady temperature for 5 hours
- System keeps the final operation mode after 8 total hours of operation



Confirms selected function

### TIMER Button

- Initiates an auto-on or auto-off time sequence
- Press TIMER button to initiate the ON time sequence
- Press Temp. up or down button for multiple times to set the desired time to turn on the unit
- Press TIMER button to initiate the OFF time sequence.
- **NOTE** Each press of the button increases or decreases the time (depending on function) in 30 minute increments up to 10 hours.

Above 10 hours each press of the button will increase or decrease the auto-timed setting by 60 minutes up to 24 hours.

To cancel, set timer to 0.0 or turn remote off and on.

### 10 SWING Button

• Used to stop or start louver auto swing feature

### SHORTCUT Button

Restore the current settings or resume the previous settings




- Start/stop the Self-Clean function
- Unit cleans itself automatically
- NOTE Only available in COOL or DRY modes.
- NOTE Not for MCFA036-048 and MMDB036-048 models.

### LED Button

- Turns the LCD display backlight on the indoor unit on or off
- **NOTE** Press and hold the button for 5 seconds to display the actual room temperature. Press more than 5 seconds to revert back to display set temperature.

#### WIRELESS REMOTE CONTROLLER INDICATORS (RG10B-DCFC)

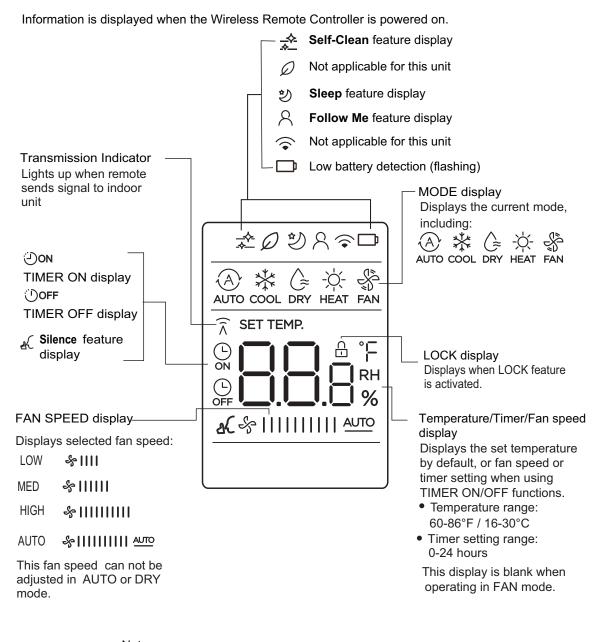

Note: All icons are shown for display purposes only. During actual unit operation, only active icons are displayed.

### **REMOTE CONTROLLER - FURNISHED**

#### WIRELESS REMOTE CONTROLLER OPERATION (RG10B-DCFC)

#### Auto Operation

- 1. Press the MODE button to select Auto.
- 2. Press the **UP/DOWN** button to set the desired temperature.
- 3. Press the ON/OFF button to start the system.

#### Cooling /Heating/Fan Operation

- 1. Press the MODE button to select COOL, HEAT or FAN mode.
- 2. Press the **UP/DOWN** buttons to set the desired temperature.
- 3. Press the **FAN** button to select the fan speed in four steps- Auto, Low, Med or High.
- 4. Press the **ON/OFF** button to start the system.

#### Dehumidifying (DRY) Operation

- 1. Press the MODE button to select DRY mode.
- 2. Press the **UP/DOWN** buttons to set the desired temperature.
- 3. Press the ON/OFF button to start the system.

**NOTE** - Fan speed selection is disabled.

#### Timer ON/OFF Operation

- 1. Press the **TIMER** button. The remote controller shows TIMER ON or TIMER OFF icon
- 2. Press the **TIMER** button again to set desired time. Each time the button is pressed the time increases by 30 minutes between 0 and 10 hours and then by 60 minutes between 10 and 24 hours.
- 3. After setting the **TIMER ON** or **TIMER OFF** there will be a one second delay before the remote controller transmits the signal to the unit. After approximately 2 seconds the set temperature will re-appear on the LCD display window.

#### Silence Operation

1. Press the **FAN** button for more than 2 seconds to activate or disable the Silence function

#### Lock Function

- 1. Press the **TURBO** and **HUMIDITY** buttons together two times in less than one second to lock the Controller to prevent tampering
- 2. Press the **TURBO** and **HUMIDITY** together buttons again for two seconds to unlock the Controller

#### Swing Function

- 1. Press the **Swing** button to activate parallel louver operation. Louvers oscillate up and down automatically. Press and hold the Swing button again to disable.
- **NOTE** Pressing the Swing button multiple times will set the louvers at five different fixed airflow angles.
- 2. Press **Swing** button for 2 seconds to activate upright louver operation. Louvers swing left and right automatically.

### SET BUTTON FUNCTIONS

#### Follow Me

• Allows remote temperature sensing of the room at the remote controller location

### **REMOTE CONTROLLER - OPTIONAL**


### WIRED PROGRAMMABLE CONTROLLER (M0STAT120N-1)



#### FEATURES

- Wired programmable local controller for mini-split indoor units with convenient timed schedules for daily operation
- Weekly timers (2), all days of the week timer, up to 8 scheduled events per day
- · Schedule start time, mode, setpoint, and fan speed
- · Compatible with all indoor units
- Copy/paste function for easy duplication of events to other days
- Built-in system diagnostics
- · 3-1/2 in. back-lit LCD display screen
- Controller uses 4-wire shielded 20 ft. cable (furnished) for easy low voltage connection to the indoor unit
- Adaptor cables are furnished for various indoor unit connections
- **NOTE** Cable for longer lengths must be ordered separately.
- NOTE Maximum cable length is 164 ft..
- Hardware for mounting furnished
- Mounts to standard electrical junction box (not furnished)
- · Lithium battery furnished: CR2032
- Power Supply: 12 VDC
- Dimensions (H x W x D): 4-3/4 x 4-3/4 x 7/8 in.
- Audible tone when a button is pressed (can be disabled)
- Lock function disables buttons to prevents tampering

### DISPLAY

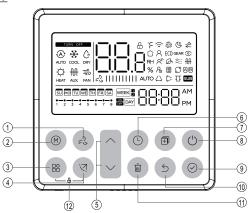

# BUTTONS AND FUNCTIONS

### 1 FAN SPEED Button

Scroll through fan speeds (Auto - Low - Med - High)

#### MODE Button

• Use + and – buttons to scroll through available operation modes (Auto / Cool / Dry / Heat / Fan)

### 3 FUNCTION Button

- Scrolls through unit operations in this order:
- 1. Turbo ද්ථ්
- 2. Sleep 🗷
- 3. Follow Me 🞗

### 4 SWING Button

- Used to stop or start louver auto swing feature (certain models)
- Louvers oscillate up and down automatically. Press and hold the Swing button again to disable.
- Pressing the Swing button multiple times will set the louvers at five different fixed airflow angles.
- Press and hold Swing button for 2 seconds to activate left/right louver operation. Louvers swing left and right automatically.

### 5 UP/DOWN Buttons

- Increase or decrease the indoor temperature in one degree increments (maximum 86°F, minimum 60°F).
- **NOTE** Temperature cannot be adjusted in FAN mode.

#### 6 TIMER Button

· Sets unit for daily or weekly on/off operation

#### 7 COPY Button

· Copy schedules from one day to another

#### 8 POWER Button

• Turn system on and off

#### CONFIRM Button

- · Confirms each step when managing schedules
- **NOTE** Press and hold and **Confirm** Button and the **Arrow Down** button together for 3 seconds to alternate the temperature display between the °F and °C scale.

### BACK Button

Returns to the previous step

#### 11 DAY OFF/DELAY BUTTON

- Disable specific days/schedules of the week
- Delete a specific event

#### 12 LOCK

• Press the **Function** and **Swing** buttons simultaneously to lock the Controller to prevent tampering with settings

#### OPTIONAL ACCESSORIES

#### Extension Cable for Wired Programmable Controller

- 20 ft. cable for easy low voltage connection to the indoor unit
- Extends cable to 40 ft. (12 m) length

### **REMOTE CONTROLLER - OPTIONAL**

#### WIRED PROGRAMMABLE REMOTE CONTROLLER INDICATORS (MOSTAT120N-1)

		⊢°F	F° / C° display
MODE display Displays the current	Temperature display		Room temperature display
mode,including: ④ 🔆 슩 伩 🖽 🕏	Lock display	RH	*Relative humidity display
AUTO COOL DRY HEAT AUX. FAN		$\widehat{}$	Not applicable for this unit
		8	Follow me feature display
		R	*Breeze away display
	COGEAR ③ RH & @ ≋ ∰	8	Delay off display
Ŭ ∰ <b>⇒ !!</b> _	<b></b> % % ⊞ ℑ A ₪	60	Turbo feature display
		ECO	*ECO feature display
SU MO TU WE TH FR SA WEEK		Ø	Purify feature display
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$			Filter reminder display
		ে	SLEEP feature display
Weekly Timer/ ON/Off Timer display	Clock display	GEAR	*GEAR feature display
		<u> </u>	*Breezeless display
FAN SPEED display	」 、 、 *HORIZONTAL SWING	ධ	Rotation display
Displays selected fan	display	⇒≏	Active clean display
speed: LOW c <sup>0</sup>	(> *VERTICAL SWING display	0	*Intelligent eye display
мед <i>c</i> 읺             нідн <i>c</i> 읺	SUB *Secondary Unit	<del>M</del>	*Electric heating display
АUTO с?        АUTO	display	AB	Not applicable for this unit
NOTE			*Certain Models

NOTE: All icons are shown for display purposes only.

During actual unit operation, only active icons are displayed.


SPECIFICATIONS		
	Model No.	MFMA012S4
	Nominal Tons	1
Power Supply - 60 hz - 1 phase		208/230V
Rated load amps		1.07
	Output (W)	20
Room Temperature Range (°F)	Cooling	60 - 90
	Heating	32 - 86
Air Volume - cfm (High/Medium/Low)		365/318/248
Sound Data (dBA) - Low/Medium/High		33/39/43
Piping Connections - Liquid/Gas - o.d flare - in.		1/4 / 1/2
Drain connection o.d in.		5/8
Net/Shipping weights - Ibs.		33 / 42

# **OPTIONAL ACCESSORIES - ORDER SEPARATELY**

Description			Catalog No.	Size 012
	INDOOR UNI	Т		
<sup>1</sup> Diversitech Condensate Pumps with Reservoir	Mini-Split Pump - 4 US gallons per hour, 20 ft. lift - 230V		Y7949	•
	ClearVue Mini™ - 7.9 US gallons per	hour, 35 ft. lift - 120-240V	Y5170	•
<sup>1</sup> Blue Diamond <sup>®</sup> Condensate Pumps with Reservoir	MicroBlue <sup>®</sup> - 1.3 US gallons per	nour, 6 ft. lift - 110-230V	14T74	•
	Sensor Cable Extension - 16 ft.		14T76	•
Little Giant Condensate Pump Kit with Reservoir	······································		Y8794	•
A/C Easy Tee® Condensate Cle	anout		Y7947	•
	CONTROLS			
Wired Programmable Controller M0ST		M0STAT120N-1	24X03	•
Extension Cable for Wired Programmable Controller - 20 ft. M0CTRL64Q-1		Y8738	٠	
Indoor/Outdoor Wiring Cable - 14 Gauge, 4 conductor wire, THHN, 250 ft.		Y2067	•	

<sup>1</sup> Y7949 and 14T74 condensate pumps can be installed inside the indoor units. All other pumps must be installed external to the indoor unit.


### AIR THROW DATA

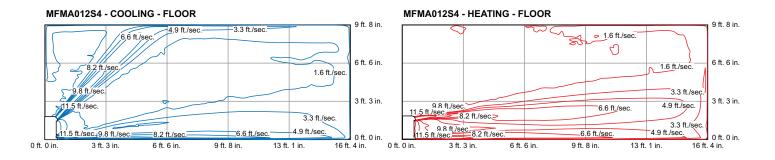


#### DIMENSIONS

#### MFMA012S4

#### MFMA012S4

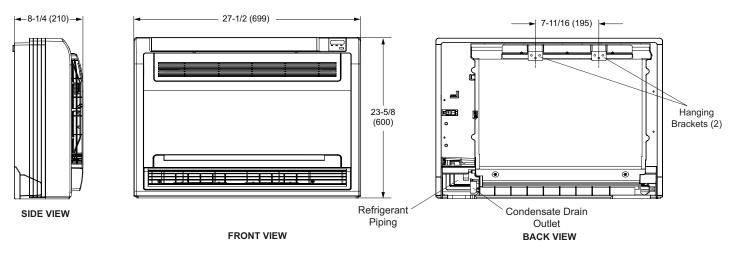

# **INSTALLATION CLEARANCES**

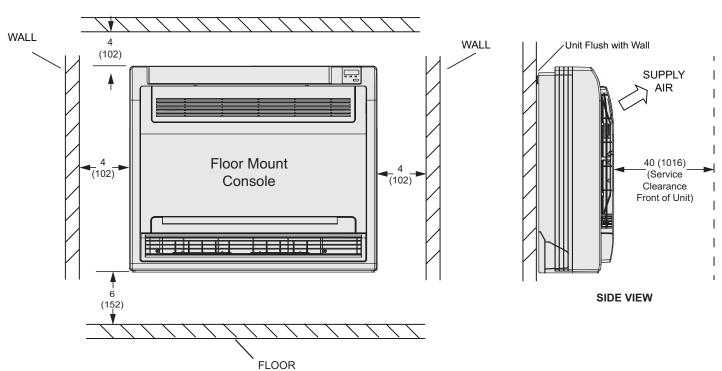

FRONT VIEW

REVISIONS		
Sections	Description of Change	
Approvals and Warranty	Updated Warranty statement.	





Visit us at <u>www.Lennox.com</u> For the latest technical information, <u>www.LennoxPros.com</u> Contact us at 1-800-9-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability. Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury. Installation and service must be performed by a qualified installer and servicing agency. ©2024 Lennox Industries, Inc.