



©2025 Lennox Industries Inc.
Dallas, Texas, USA

INSTALLATION INSTRUCTIONS

Snow Hood

Before you begin installation, read these instructions completely and carefully. Observe all governing codes and ordinances as they may apply. Leave these instructions with the owner.

⚠ IMPORTANT SAFETY NOTICE


To avoid personal injury or property damage, this accessory is to be installed only by a licensed and trained industry professional. The manufacturer will not assume liability for unqualified installers or failure to follow these instructions.

⚠ Warning

For personal safety, disconnect system power before installing this accessory. During installation, if ground wires, screws, straps, clips, or other means of attaching grounding components are removed, they must be returned to their original positions and fastened securely.

Parts Included:

- Back snow hood
- Side snow hood
- Self-tapping stainless screws
- This instruction sheet

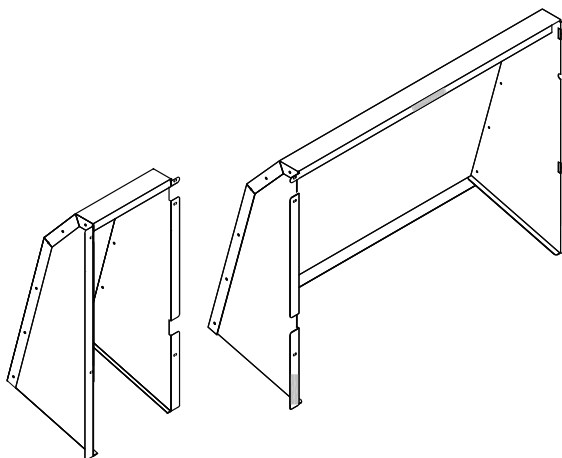

Side Hood Instructions


Step 1:

Remove existing screw(s) from top cover on left side of the outdoor unit.



Step 2:

On 2-, 3-, and 4/5-ton models, align the top edge of the hood with the seam of the top cover. Use self tapping screws for all side hood holes.

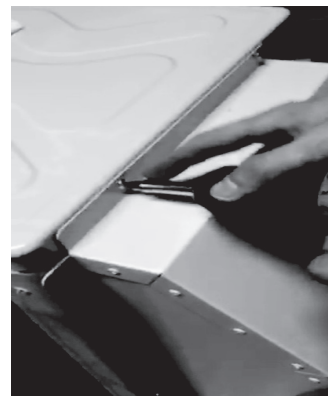



©2025 Lennox Industries Inc.
Dallas, Texas, USA


INSTALLATION INSTRUCTIONS

Snow Hood

Back Hood Instructions


Step 1:

If installed, permanently remove the wire coil guard on the back of the outdoor unit.

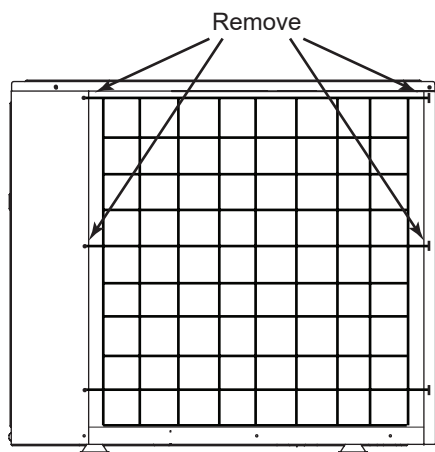

NOTE:

For the 4/5-ton model: On the left side, remove the condenser bracket screws and use them to attach the back snow hood. For the right side, you can either use the existing holes or tap new holes with the self tapping screws.

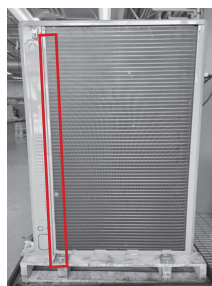

Step 2:

Where applicable, use the existing screws from the wire coil guard to secure the rear hood. Use self-tapping screws through remaining holes.

