




INSTALLER AND SERVICE NOTES

LF25 – Unit Heaters


Terminal Plugs: For units built prior to December 2019, the field removeable terminal plugs for the thermostat and power connections are provided in the bag assembly inside the unit heater. Units built December 2019 and later, the terminal plugs will be installed on the DSI board in the unit. The terminal plugs are now available in a kit, Catalog Number 19R05.

Heat Exchangers: Prior to start-up, use rags or absorbent paper towels to wipe oil off the heat exchanger, burner tray, and other areas that can be reached. As a precaution, open doors and windows and alert people in the building there may be smoke on start-up. Verify heat exchanger orientation through a simple visual inspection. The dimpled portion of the heat exchanger tubes should be on the draft inducer end. If the burners are pointing into the dimpled end of the heat exchanger tubes, please contact Lennox Customer Service at 800-453-6669. Correct and incorrect HX orientations provided below.


Compact model Correct

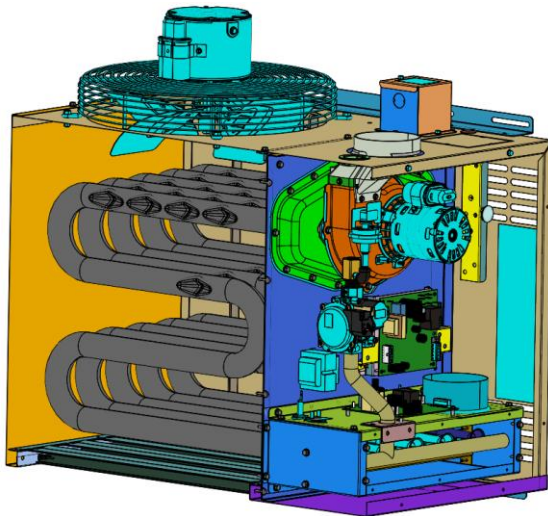


Compact Model Incorrect

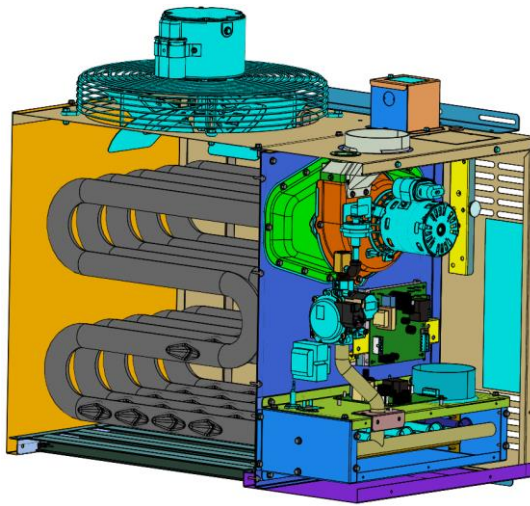


Single Fan Model Correct

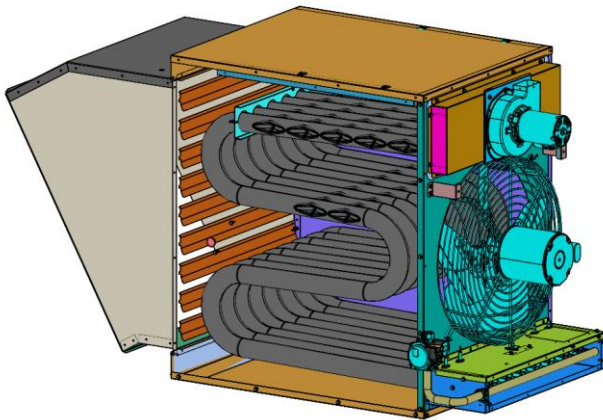

Single Fan Model Incorrect

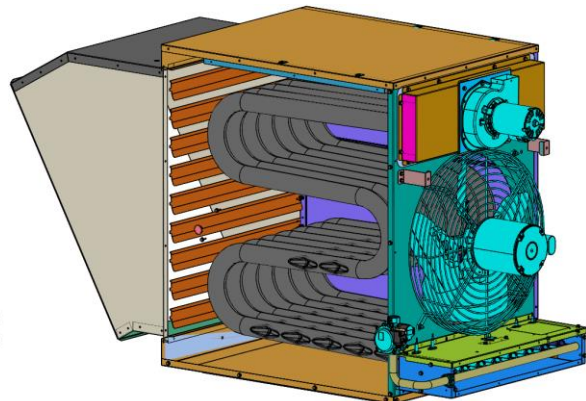

Double Fan Model Correct

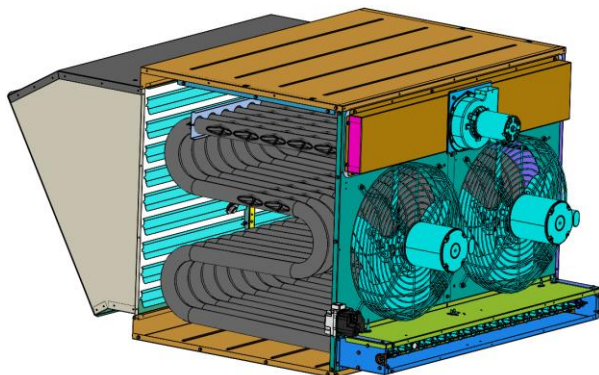

Double Fan Model Incorrect

