



# CBK45UHET

MERIT® Series

Upflow/Horizontal | Constant Torque Motor | TXV Furnished | R-410A / R-454B | 60Hz

RESIDENTIAL  
PRODUCT SPECIFICATIONS (EHB)

2 to 5 Tons

Optional Electric Heat - 4 to 20 kW


**MERIT**<sup>®</sup>  
SERIES



**NOTE - Air Handlers are furnished with a factory installed R-410A expansion valve. As an option, a R-454B expansion valve may be substituted. See page 8.**


**NOTE - See R-454B Refrigerant Conversion Table on page 8 for additional components required for conversion.**

## MODEL NUMBER IDENTIFICATION

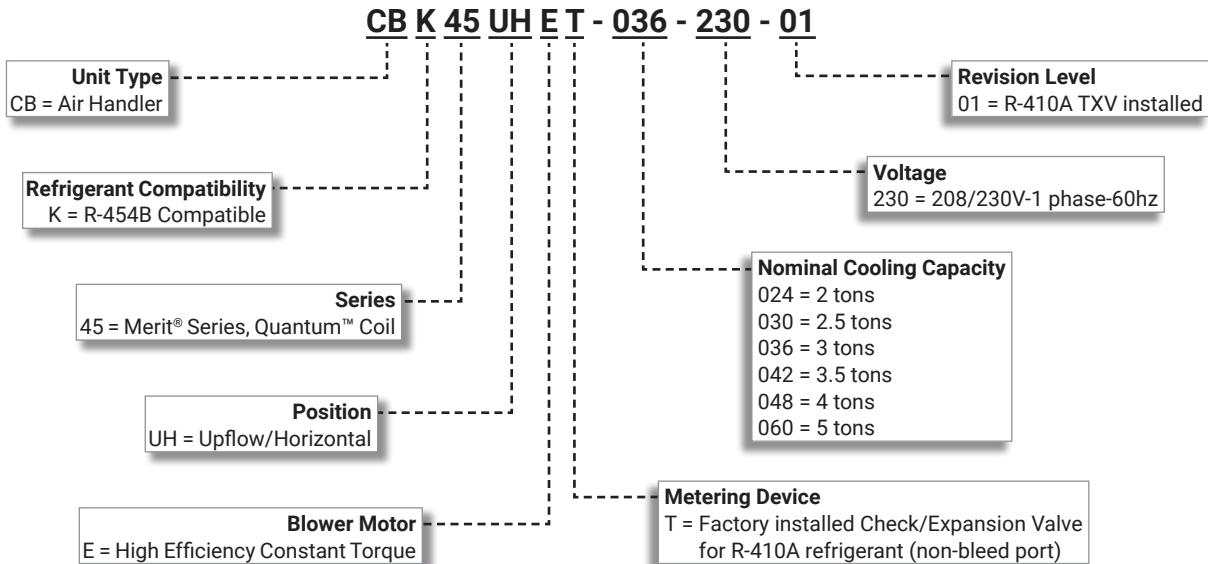

## FEATURE HIGHLIGHTS

1. Quantum™ Coil
2. Refrigerant Line Connections
3. Check and Expansion Valve
4. Power Saver™ Constant Torque Blower Motor
5. Heavy Gauge Steel Cabinet
6. Anti-Microbial Dual Position Drain Pans
7. Air Filter
8. Transformer
9. Electric Heat (option)

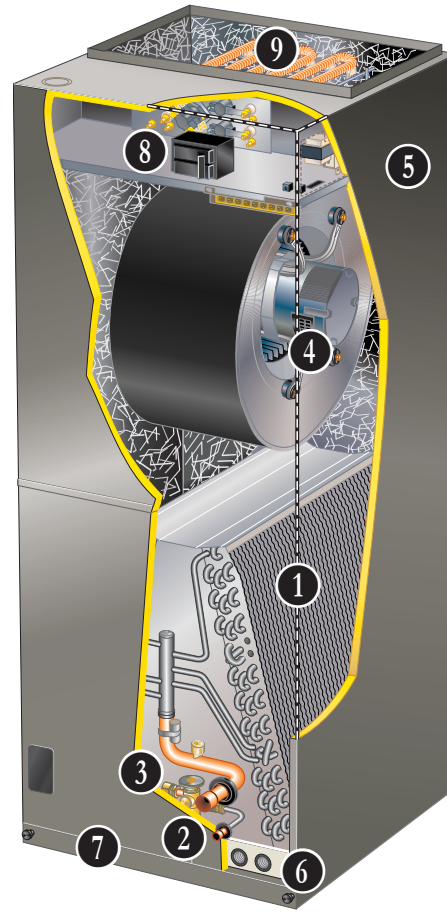

## CONTENTS

Approvals And Warranty . . . . .	3
Blower Data . . . . .	9
Dimensions . . . . .	16
- Accessories . . . . .	18
- Unit - Horizontal Position . . . . .	17
- Unit - Upflow Position . . . . .	16
Electrical Data . . . . .	7
Electric Heat Data . . . . .	11
Features . . . . .	3
Installation Clearances With Electric Heat . . . . .	8
Model Number Identification . . . . .	1
Optional Accessories - Order Separately . . . . .	7
Optional R-454B TXV Substitution . . . . .	8
Replacement Circuit Breakers . . . . .	8
Specifications . . . . .	7

## APPROVALS AND WARRANTY

### APPROVALS

- Tested with matching air conditioners and heat pump units in the Lennox Research Laboratory environmental test room in accordance with AHRI Standard 210/240-2023
- AHRI Certified system match-ups and expanded ratings, visit [www.LennoxPros.com](http://www.LennoxPros.com)
- ETL Listed to US and Canadian safety standards and components within are bonded for grounding to meet safety standards for servicing required by NEC and CEC
- Optional electric heaters are ETL listed and rated in accordance with US Department of Energy (DOE) test procedures and Federal Trade Commission (FTC) labeling regulations
- Blower performance data according to unit tests conducted in Lennox air test chamber
- Approved for installation in manufactured housing and mobile homes
- ISO 9001 Registered Manufacturing Quality System

**NOTE** – Air handlers can be field configured for use with R-454B refrigerant during the initial installation only. Air handlers may not be modified after initial installation.

### WARRANTY

- All covered components
  - Limited five years in residential applications
  - Limited one year in non-residential applications

**NOTE** - Refer to Lennox® Basic Limited Warranty at [www.Lennox.com](http://www.Lennox.com) for additional details.

## FEATURES

### APPLICATIONS

- 2 to 5 ton nominal sizes
- Upflow or horizontal applications

**NOTE** - Downflow applications require optional conversion kit.

- Applicable to expansion valve systems in cooling applications and check and expansion valve systems in heat pump applications
- Wide-range R-410A check and expansion valve is factory installed
- Optional field installed electric heaters available in several sizes for additive heating capacity

### REFRIGERANT SYSTEM

- 1 Quantum™ Coil**
  - Lennox designed and fabricated coil
  - Enhanced aluminum alloy tube/enhanced fin coil for superior corrosion resistance
  - Aluminum tubing, hairpins, distributor and header tubes.
  - Ripple-edged aluminum fins
  - Twin coil construction assembled in a “A” configuration for large surface area
  - Provides excellent heat transfer and low air resistance for maximum efficiency
  - Precise circuiting for uniform refrigerant distribution
  - Lanced fins provide maximum exposure of fin surface to air stream
  - Helical grooved tubing provides superior heat transfer
  - Coil thoroughly factory tested under high pressure to ensure leakproof construction
- 2 Refrigerant Line Connections**
  - Copper refrigerant sweat connections on both liquid and suction lines for easy brazing
  - Lines extend outside of the cabinet for ease of connection
  - See dimension drawings for locations
- 3 R-410A Check and Expansion Valve**
  - For use with R-410A systems
  - Wide range valve with Chatleff style fitting
  - Factory installed on all models, internal to cabinet

## FEATURES

### **R-454B REFRIGERANT CONVERSION**

Additional Components are required for conversion to R-454B Refrigerant:

- Refrigerant Detection System (RDS) Air Handler Sensor Kit
- Refrigerant Detection System (RDS) Non-Communicating Blower Control Board
- R-454B Check and Expansion Valve

#### **Optional Accessories**

##### **Refrigerant Detection System (RDS) Air Handler Sensor Kit**

- Complies with UL 60335-2-40 approved standard
- Required for all systems using R-454B refrigerant
- Consists of Refrigerant Detection System (RDS) sensor, mounting brackets and A2L labeling
- Sensor ensures safe operation for systems equipped with R-454B refrigerant
- Indoor sensor will detect any R-454B refrigerant
- See R-454B Refrigerant Conversion Table on page 8

##### **Refrigerant Detection System (RDS) Blower Control Board Communicating Blower Control Board (Universal)**

- Communicating Blower Control Board and Sensor can be used universally with any Lennox® communicating air handler or any non-communicating 24 volt air handler

##### **Non-Communicating Blower Control Board**

- Non-Communicating Blower Control Board and Sensor can be used with any non-communicating 24 volt air handler

##### **Standard Features**

- Complies with UL 60335-2-40 approved standard
- Required for all systems using R-454B refrigerant
- Connects to the RDS sensor furnished with the RDS Air Handler Sensor Kit
- Supports up to two RDS Sensors (factory setting)
- Used as interface between indoor unit and thermostat to control system
- Ensures safe operation for systems equipped with R-454B refrigerant
- If R-454B refrigerant is detected, the refrigerant detection system will stop compressor and/or heating operation and operate the blower to reduce concentrations in the conditioned space
- Once safe levels are reached the HVAC system will resume normal operation
- Multi-color LED for system status and as an aid in troubleshooting
  - Flashing LED codes for system status (Green/Blue) and diagnosing Sensor errors (Red)
- Alarm relay can trigger an external alarm if R-454B refrigerant is detected

- Zone relay opens all zone dampers (if part of a zoning system) if R-454B refrigerant is detected
- Power is disabled to non-communicating thermostats to prevent demand if R-454B refrigerant is detected
- On system start-up blower will run for five minutes and any thermostat demands are disabled
- Dimensions (H x W x D): 7-7/16 x 7-7/16 x 2-1/2 (189 x 189 x 127 mm)
- See R-454B Refrigerant Conversion Table on page 5

**NOTE** - Refer to the Installation Instructions for additional information.


##### **R-454B Check and Expansion Valve**

- For use with R-454B systems
- Wide range valve with Chatleff style fitting
- Replaces factory installed TXV, internal to cabinet
- See Optional R-454B TXV Substitution table on page 8

#### **BLOWER**

##### **4 Power Saver™ Constant Torque Blower Motor**

- Programmable high efficiency multi-speed blower motor
- By maintaining constant torque output, blower motor can deliver more uniform (but not constant) airflow over the static pressure range
- Programmable multi-speed operation is achieved by the use of an ECM (Electronically Commutated Motor) motor
- Leadless blower motor features simple plug-in connections
- Choice of blower speeds is available
- See blower Data tables
- Blower speed change is easily accomplished by a simple wiring change

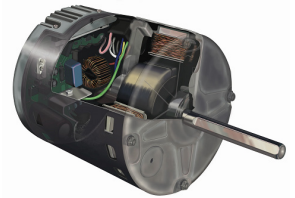

##### **Blower Assembly**

- Each blower is statically and dynamically balanced as an assembly before installation in the unit
- Blower motor is resiliently mounted to blower assembly
- Blower slides out of cabinet for servicing

#### **FILTER**

- 5** • Disposable 1 inch filter is furnished
- Filter rack furnished in cabinet for easy filter installation
- See Specifications tables for filter sizes

## FEATURES

### CONTROLS


#### 6 Transformer

- 24 volt transformer furnished as standard
- Factory installed in the unit control box
- Terminal strip furnished

### Optional Accessories

#### M30 Smart Wi-Fi Thermostat

- Wi-Fi-enabled, electronic 7-day, universal, multi-stage, programmable, touchscreen thermostat
- 4 Heat/2 Cool
- Auto-changeover
- Dual-fuel control with optional outdoor sensor
- Controls dehumidification during cooling mode and humidification during heating mode
- Offers enhanced capabilities including humidification / dehumidification / dewpoint measurement and control, Humiditrol® control, and equipment maintenance reminders
- Easy to read 4.3 in. color touchscreen (measured diagonally)
- LCD display with backlight shows the current and set temperature, time, inside relative humidity, system status (operating mode and schedules) and outside temperature (optional outdoor sensor required)
- Smooth Setback Recovery starts system early to achieve setpoint at start of program period
- Compressor short-cycle protection (5 minutes)
- Up to four separate schedules are available plus Schedule IQ™
- One-Touch Away Mode - A quick and easy way to set the cooling and heating setpoints while away
- Smart Away™ - Uses geo-fencing technology to determine when the homeowner is within a predetermined distance from the home to operate the system when leaving, away and arriving
- Wi-Fi remote monitoring and adjustment through a home wireless network for desktop PCs, laptops and apps for smartphones or tablets
- Smart home automation compatible with Amazon Alexa®, Google Assistant and IFTTT

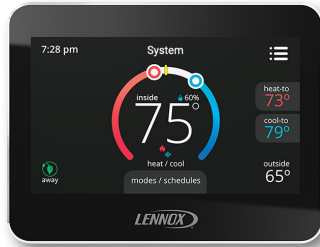

**NOTE** - See the Lennox® M30 Smart Wi-Fi Thermostat Product Specifications document in the Controls section for more information.

#### Remote Outdoor Temperature Sensor

- Used with the Lennox® M30 Smart Thermostat
- Outdoor sensor allows thermostat to display outdoor temperature



#### Thermostat

- Thermostat is not furnished with unit
- See Lennox Price Book or [Lennox Pros](#) for selection

### CABINET

- 7 • Constructed of heavy gauge galvanized steel
- Pre-painted cabinet finish
- Completely insulated with foil faced fiberglass insulation
- Removable panels provide complete service access
- Filter access door for easy filter replacement
- Thumbscrews hold filter door in place
- Electrical inlets provided in sides and top of cabinet
- See dimension drawing for locations
- Plugs in cabinet for drain connections for upflow (left and right) and horizontal applications
- See dimension drawing

#### Low Leakage Cabinet

- All models have less than 2% air leakage and meet ANSI/ASHRAE Standard 193-2010 "Method of Test for Determining the Air Tightness of HVAC Equipment"

#### Upflow/Horizontal Capability (Optional Downflow)

- Shipped for upflow and horizontal right-hand discharge
- May be field converted to horizontal left-hand air discharge by repositioning horizontal drain pan
- Optional downflow kit required for field conversion

#### 8 Anti-Microbial Dual Position Drain Pans

- Anti-Microbial additive resists growth of mold and mildew on drain pan which improves indoor air quality and reduces drain line blockage
- Drain pans designed for upflow or horizontal applications
- Deep, corrosion resistant high temperature engineered polymer drain pans have dual pipe drains
- See dimension drawing

## FEATURES

### **CABINET (Continued)**

#### **Optional Accessories**

##### **Downflow Conversion Kit**

- Required for field conversion to downflow position
- Kit consists of insulated downflow drain pan, insulated drain pan drip shields, coil drip shields, seal plates and support brackets for repositioning coil and drain pan

##### **Horizontal Support Frame Kit**

- Provides support of unit in horizontal applications
- Consists of (2) 1 x 1-1/2 x 32-5/8 in. and (2) 1 x 3 x 53-7/8 in. painted heavy gauge cold rolled steel support channels with assembly and suspending holes
- Bolts and nuts furnished for field assembly
- Suspending rods must be field provided

##### **Side Return Unit Stand (Upflow Only)**

- Raises unit 16 in. above floor for side return air duct connection
- Eliminates need for wooden platform construction
- All aluminum construction
- Two adjustable frames fit all sizes

##### **Wall Hanging Bracket Kit (Upflow Only)**

- Allows unit to be hung on wall at any height
- Consists of heavy-gauge steel support brackets (one for air handler, one for wall mount)
- Screws furnished for fastening one bracket to unit
- Bolts for fastening one bracket to wall are field provided

##### **High Performance Economizer (Commercial Applications Only)**

- Designed for applications requiring outdoor air to be utilized in a commercial HVAC system
- Allows the entry of fresh outdoor air for free cooling, reducing the requirement for mechanical cooling
- Heavy gauge galvanized steel cabinet lined with thick fiberglass insulation
- Mixed air sensor, outdoor air sensor and 24VAC transformer furnished
- Approved for California Title 24 building standards
- ASHRAE 90.1-2010 compliant
- See separate Product Specifications document for additional information and available control and sensor options

### **OPTIONAL ELECTRIC HEAT**

- 9 • ETL listed
- Field install internal to unit cabinet
- Available in several kW sizes
- See Electric Heat tables
- Helix wound nichrome heating elements exposed directly in air stream resulting in instant heat transfer, low element temperatures and long service life
- Each element equipped with accurately located limit control with fixed temperature off setting and automatic reset
- Thermal sequencer relay brings elements on and off line, in sequence and equal increments, with time delay between each
- Heating control relay(s) furnished as standard
- Factory assembled with controls installed and wired
- Electric heat control wiring plugs into mating connector on air handler unit

#### **Circuit Breaker (CB) Models**

- All "CB" model heaters are equipped with circuit breakers for overload and short circuit protection
- Factory wired and mounted on electric heat unit
- Current sensitive and temperature actuated
- Manual reset
- Flexible plastic circuit breaker cover protects circuit breaker in areas with high humidity or unconditioned areas to prevent nuisance tripping
- Circuit breakers qualify as disconnect means at unit in many areas, eliminate the need for field provided disconnect
- Consult local electrical code in your area

#### **Optional Accessories**

##### **Single-Point Power Source Control Box**

- Control Box may be used with optional electric heat when single power supply is connected to multi-circuit electric heat
- Field installs external to the unit cabinet on either side or top
- Constructed of heavy gauge steel, baked enamel finish, pre-punched mounting holes, electrical inlet knockouts, and terminal strip
- Removeable cover provides easy access
- Dimensions (H x W x D) - 7 x 7 x 4 in.

<b>SPECIFICATIONS</b>				
Size		<b>024</b>	<b>030</b>	<b>036</b>
<b>Nominal Tonnage</b>		2	2.5	3
<b>Refrigerant Type</b>		R-410A	R-410A	R-410A
<b>Connections</b>	Liquid line (OD) sweat - in.	3/8	3/8	3/8
	Suction line (OD) sweat - in.	3/4	3/4	7/8
	Condensate drain (FPT) - in.	(2) 3/4	(2) 3/4	(2) 3/4
<b>Indoor Coil</b>	Net face area - ft. <sup>2</sup>	3.77	4.72	5.66
	Tube diameter - in.	3/8	3/8	3/8
	Rows	3	3	3
	Fins - in.	15	15	15
<b>Blower</b>	HP	1/2	1/2	1/2
	Wheel nominal diameter x width - in.	10 x 8	10 x 8	10 x 8
	Air volume range - cfm	203 - 1054	406 - 1341	422 - 1523
<sup>1</sup> <b>Filters</b>	Size - in.	15 x 20 x 1	15 x 20 x 1	18 x 20 x 1
<b>Shipping Data - lbs.</b>		127	133	169
<b>ELECTRICAL DATA</b>				
	Line voltage data (Volts-Phase-Hz)	208/230-1-60	208/230-1-60	208/230-1-60
<sup>2</sup>	Maximum overcurrent protection (MOCP) amps (unit)	15	15	15
<sup>3</sup>	Minimum circuit ampacity (MCA) (unit)	5.1	5.1	5.1
	Blower Motor Full Load Amps	4.1	4.1	4.1

<b>SPECIFICATIONS</b>				
Size		<b>042</b>	<b>048</b>	<b>060</b>
<b>Nominal Tonnage</b>		3.5	4	5
<b>Refrigerant Type</b>		R-410A	R-410A	R-410A
<b>Connections</b>	Liquid line (OD) sweat - in.	3/8	3/8	3/8
	Suction line (OD) sweat - in.	7/8	7/8	7/8
	Condensate drain (FPT) - in.	(2) 3/4	(2) 3/4	(2) 3/4
<b>Indoor Coil</b>	Net face area - ft. <sup>2</sup>	5.66	6.13	7.08
	Tube diameter - in.	3/8	3/8	3/8
	Rows	3	3	3
	Fins - in.	15	15	15
<b>Blower</b>	HP	3/4	1	1
	Wheel nominal diameter x width - in.	12 x 10	12 x 10	12 x 10
	Air volume range - cfm	568 - 1656	1110 - 1895	830 - 1980
<sup>1</sup> <b>Filters</b>	Size - in.	18 x 20 x 1	18 x 20 x 1	18 x 20 x 1
<b>Shipping Data - lbs.</b>		169	179	190
<b>ELECTRICAL DATA</b>				
	Line voltage data (Volts-Phase-Hz)	208/230-1-60	208/230-1-60	208/230-1-60
<sup>2</sup>	Maximum overcurrent protection (MOCP) amps (unit)	15	15	15
<sup>3</sup>	Minimum circuit ampacity (MCA) (unit)	8	9.5	9.5
	Blower Motor Full Load Amps	6	7.6	7.6

<sup>1</sup> Disposable filter.

<sup>2</sup> HACR type circuit breaker or fuse.

<sup>3</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

<b>OPTIONAL ACCESSORIES - ORDER SEPARATELY</b>		
Description	<b>024, 030</b>	<b>036, 042, 048, 060</b>
M30 Smart Wi-Fi Thermostat	<b>15Z69</b>	<b>15Z69</b>
Remote Outdoor Temperature Sensor	<b>X2658</b>	<b>X2658</b>
Downflow Conversion Kit	<b>Y9658</b>	<b>Y9659</b>
Electric Heat	See Electric Heat Data Tables on page 11	
Horizontal Support Frame Kit	<b>56J18</b>	<b>56J18</b>
Side Return Unit Stand (Upflow Only)	<b>45K32</b>	<b>45K32</b>
Single-Point Power Source Control Box (for Electric Heat)	<b>21H39</b>	<b>21H39</b>
Wall Hanging Bracket Kit (Upflow Only)	<b>45K30</b>	<b>45K30</b>
High Performance Economizer (Commercial Only)	<b>10U53</b>	<b>10U53</b>

## R-454B REFRIGERANT CONVERSION - ORDER SEPARATELY

Description	Order No.	
Refrigerant Detection System (RDS) Coil Sensor Kit	<b>27J27</b>	
Refrigerant Detection System (RDS) Blower Control Board	Any Lennox® Communicating Air Handler <u>or</u> any Non-Communicating 24V Air Handler (Universal)	<b>27A03</b>
	Any Non-Communicating 24V Air Handler	<b>27A02</b>

NOTE - Communicating Blower Control Board and Sensor can be used universally with Lennox® communicating air handler or any non-communicating 24 volt air handler.

Non-Communicating Blower Control Board and Sensor can be used with any non-communicating 24 volt air handler.

NOTE - Order R-454B Expansion Valve separately.

### OPTIONAL R-454B TXV SUBSTITUTION

**NOTE** - Additional components are required for R-454B Conversion. See Optional Accessories table.

Size	Order Number
024	<b>26Z70</b>
030	<b>26Z70</b>
036	<b>26Z71</b>
042	<b>26Z72</b>
048	<b>26Z72</b>
060	<b>26Z72</b>

### REPLACEMENT CIRCUIT BREAKERS

Voltage	Description	Order Number
208/240V - 1 Phase	25 amp, 2 pole	<b>41K13</b>
	30 amp, 2 pole	<b>17K70</b>
	35 amp, 2 pole	<b>72K07</b>
	40 amp, 2 pole	<b>49K14</b>
	45 amp, 2 pole	<b>17K71</b>
	50 amp, 2 pole	<b>41K12</b>
	60 amp, 2 pole	<b>17K72</b>

### INSTALLATION CLEARANCES WITH ELECTRIC HEAT

Cabinet	0 inch (0 mm)
To Plenum	0 inch (0 mm)
To Outlet Duct	0 inch (0 mm)
Floor	0 inch (0 mm)
Service / Maintenance	See Note #1

<sup>1</sup> Front service access - 24 inches (610 mm) minimum.

NOTE - If cabinet depth is more than 24 inches (610 mm), allow a minimum of the cabinet depth plus 2 inches (51 mm).

## BLOWER DATA

### CBK45UHET-024 PERFORMANCE

External Static Pressure in. w.g.	Air Volume / Watts at Various Blower Speeds									
	Tap 1		Tap 2		Tap 3		Tap 4		Tap 5	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.10	676	64	820	107	1015	180	1015	180	1054	194
0.20	612	71	780	114	981	188	981	188	1020	203
0.30	514	77	752	120	953	195	953	195	987	212
0.40	448	83	712	126	922	204	922	204	958	219
0.50	400	86	678	133	899	210	899	210	940	226
0.60	337	92	598	142	865	219	865	219	902	235
0.70	270	100	535	147	831	224	831	224	881	241
0.80	203	103	495	153	799	237	799	237	833	248

NOTE - All air data measured external to unit with dry coil and 1 inch non-pleated air filter in place.  
Electric heaters have no appreciable air resistance.

### CBK45UHET-030 PERFORMANCE

External Static Pressure in. w.g.	Air Volume / Watts at Various Blower Speeds									
	Tap 1		Tap 2		Tap 3		Tap 4		Tap 5	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.10	775	87	999	160	1132	219	1132	219	1341	346
0.20	731	94	965	168	1099	229	1099	229	1309	357
0.30	690	100	936	175	1068	237	1068	237	1289	364
0.40	647	106	899	184	1041	245	1041	245	1259	376
0.50	565	115	870	191	1014	254	1014	254	1239	385
0.60	522	118	833	197	985	261	985	261	1197	389
0.70	474	125	797	208	957	269	957	269	1168	395
0.80	406	132	715	218	928	278	928	278	1139	403

NOTE - All air data measured external to unit with dry coil and 1 inch non-pleated air filter in place.  
Electric heaters have no appreciable air resistance.

### CBK45UHET-036 PERFORMANCE

External Static Pressure in. w.g.	Air Volume / Watts at Various Blower Speeds									
	Tap 1		Tap 2		Tap 3		Tap 4		Tap 5	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.10	865	94	1303	250	1415	312	1415	312	1523	386
0.20	812	104	1268	261	1381	325	1381	325	1492	399
0.30	747	113	1234	271	1352	336	1352	336	1462	411
0.40	674	119	1199	283	1316	348	1316	348	1434	423
0.50	620	125	1153	295	1285	360	1285	360	1403	434
0.60	565	131	1117	306	1238	377	1238	377	1363	452
0.70	484	138	1047	323	1202	386	1202	386	1315	456
0.80	422	144	1004	326	1134	396	1134	396	1281	467

NOTE - All air data measured external to unit with dry coil and 1 inch non-pleated air filter in place.  
Electric heaters have no appreciable air resistance.

## BLOWER DATA

### CBK45UHET-042 PERFORMANCE

External Static Pressure in. w.g.	Air Volume / Watts at Various Blower Speeds									
	Tap 1		Tap 2		Tap 3		Tap 4		Tap 5	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.10	982	132	1446	390	1560	473	1560	473	1656	569
0.20	923	140	1413	402	1526	488	1526	488	1624	581
0.30	866	148	1362	411	1500	498	1500	498	1594	591
0.40	812	153	1357	420	1469	510	1469	510	1563	602
0.50	745	162	1325	429	1437	520	1437	520	1543	613
0.60	686	169	1292	438	1413	530	1413	530	1505	615
0.70	642	176	1257	448	1345	543	1345	543	1456	613
0.80	568	185	1221	458	1335	544	1335	544	1417	612

NOTE - All air data measured external to unit with dry coil and 1 inch non-pleated air filter in place.  
Electric heaters have no appreciable air resistance.

### CBK45UHET-048 PERFORMANCE

External Static Pressure in. w.g.	Air Volume / Watts at Various Blower Speeds									
	Tap 1		Tap 2		Tap 3		Tap 4		Tap 5	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.10	1277	187	1524	279	1733	395	1773	426	1899	512
0.20	1234	197	1480	295	1697	410	1741	443	1867	530
0.30	1190	208	1442	307	1661	424	1704	460	1837	544
0.40	1145	217	1400	321	1629	437	1678	472	1806	559
0.50	1099	229	1348	332	1597	449	1645	486	1775	574
0.60	1011	243	1323	344	1552	466	1612	500	1745	588
0.70	934	252	1284	356	1519	478	1577	514	1710	604
0.80	896	258	1212	372	1482	491	1546	525	1680	616
0.90	845	272	1129	385	1451	502	1509	539	1644	632

NOTE - All air data measured external to unit with dry coil and 1 inch non-pleated air filter in place.  
Electric heaters have no appreciable air resistance.

### CBK45UHET-060 PERFORMANCE

External Static Pressure in. w.g.	Air Volume / Watts at Various Blower Speeds									
	Tap 1		Tap 2		Tap 3		Tap 4		Tap 5	
	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts	cfm	Watts
0.10	1147	144	1673	387	1826	496	1903	553	2010	630
0.20	1085	155	1630	402	1791	512	1876	566	1976	642
0.30	1035	164	1596	415	1762	525	1843	583	1947	656
0.40	1006	171	1563	428	1732	538	1815	596	1912	672
0.50	954	180	1526	443	1704	551	1782	613	1883	683
0.60	825	194	1495	455	1669	567	1750	627	1851	701
0.70	783	199	1464	467	1637	582	1722	641	1821	715
0.80	739	208	1436	477	1602	597	1691	655	1776	717
0.90	687	219	1406	488	1583	604	1643	656	1745	722

NOTE - All air data measured external to unit with dry coil and 1 inch non-pleated air filter in place.  
Electric heaters have no appreciable air resistance.

**ELECTRIC HEAT DATA**

**CBK45UHET-024 | SINGLE PHASE**

	Electric Heat Model Number	Input			Blower Motor Full Load Amps	<sup>2</sup> Minimum Circuit Ampacity	<sup>3</sup> Maximum Overcurrent Protection
		Volt	kW	<sup>1</sup> Btuh			
<b>4 kW</b>	ECB45-4 (27A08) Terminal Block ECB45-4CB (27A12) 30A Circuit Breaker	208	3.0	10,250	4.1	23	<sup>4</sup> 25
		220	3.4	11,450	4.1	24	<sup>4</sup> 25
		230	3.7	12,550	4.1	25	<sup>4</sup> 25
		240	4.0	13,650	4.1	26	30
<b>5 kW</b>	ECB45-5 (27A09) Terminal Block ECB45-5CB (27A13) 30A Circuit Breaker	208	3.6	12,300	4.1	27	30
		220	4.0	13,800	4.1	28	30
		230	4.4	15,000	4.1	29	30
		240	4.8	16,400	4.1	30	30
<b>7.5 kW</b>	ECB45-7.5 (27A10) Terminal Block ECB45-7.5CB (27A14) 45A Circuit Breaker	208	5.6	19,200	4.1	39	<sup>4</sup> 40
		220	6.3	21,500	4.1	41	45
		230	6.9	23,500	4.1	43	45
		240	7.5	25,600	4.1	44	45
<b>10 kW</b>	ECB45-10 (27A11) Terminal Block ECB45-10CB (27A15) 60A Circuit Breaker	208	7.2	24,600	4.1	48	<sup>4</sup> 50
		220	8.0	27,500	4.1	51	60
		230	8.8	30,000	4.1	53	60
		240	9.6	32,700	4.1	55	60

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

<sup>1</sup> Electric heater capacity only - does not include additional blower motor heat capacity.

<sup>2</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

<sup>3</sup> HACR type breaker or fuse.

<sup>4</sup> **Bold indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size shown. See table on page 8.**

## ELECTRIC HEAT DATA

## CBK45UHET-030 | SINGLE PHASE

Electric Heat Model Number	Input			Blower Motor Full Load Amps	<sup>2</sup> Minimum Circuit Ampacity		<sup>3</sup> Maximum Overcurrent Protection		Single Point Power Source	
	Volt	kW	<sup>1</sup> Btuh		Ckt 1	Ckt 2	Ckt 1	Ckt 2	<sup>2</sup> Minimum Circuit Ampacity	<sup>3</sup> Maximum Overcurrent Protection
<b>4 kW</b> ECB45-4 (27A08) Terminal Block ECB45-4CB (27A12) 30A Circuit Breaker	208	3.0	10,250	4.1	23	---	<b>425</b>	---	---	---
	220	3.4	11,450	4.1	24	---	<b>425</b>	---	---	---
	230	3.7	12,550	4.1	25	---	<b>425</b>	---	---	---
	240	4.0	13,650	4.1	26	---	30	---	---	---
<b>5 kW</b> ECB45-5 (27A09) Terminal Block ECB45-5CB (27A13) 30A Circuit Breaker	208	3.6	12,300	4.1	27	---	30	---	---	---
	220	4.0	13,800	4.1	28	---	30	---	---	---
	230	4.4	15,000	4.1	29	---	30	---	---	---
	240	4.8	16,400	4.1	30	---	30	---	---	---
<b>7.5 kW</b> ECB45-7.5 (27A10) Terminal Block ECB45-7.5CB (27A14) 45A Circuit Breaker	208	5.6	19,200	4.1	39	---	<b>440</b>	---	---	---
	220	6.3	21,500	4.1	41	---	45	---	---	---
	230	6.9	23,500	4.1	43	---	45	---	---	---
	240	7.5	25,600	4.1	44	---	45	---	---	---
<b>10 kW</b> ECB45-10 (27A11) Terminal Block ECB45-10CB (27A15) 60A Circuit Breaker	208	7.2	24,600	4.1	48	---	<b>450</b>	---	---	---
	220	8.0	27,500	4.1	51	---	60	---	---	---
	230	8.8	30,000	4.1	53	---	60	---	---	---
	240	9.6	32,700	4.1	55	---	60	---	---	---
<b>12.5 kW</b> ECB45-12.5CB (27A16) (1) 50A and (1) 25A Circuit Breaker	208	9.4	32,000	4.1	43	19	<b>445</b>	<b>420</b>	62	70
	220	10.5	35,800	4.1	45	20	<b>445</b>	<b>420</b>	65	70
	230	11.5	39,200	4.1	47	21	50	25	68	70
	240	12.5	42,600	4.1	49	22	50	25	70	70
<b>15 kW</b> ECB45-15CB (27A17) (1) 60A and (1) 25A Circuit Breaker	208	10.8	36,900	4.1	48	22	<b>450</b>	25	70	70
	220	12.1	41,300	4.1	51	23	60	25	74	80
	230	13.2	45,100	4.1	53	24	60	25	77	80
	240	14.4	49,100	4.1	55	25	60	25	80	80

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

<sup>1</sup> Electric heater capacity only - does not include additional blower motor heat capacity.

<sup>2</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

<sup>3</sup> HACR type breaker or fuse.

<sup>4</sup> Bold indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size shown. See table on page 8.

## ELECTRIC HEAT DATA

## CBK45UHET-036 | SINGLE PHASE

Electric Heat Model Number	Input			Blower Motor Full Load Amps	<sup>2</sup> Minimum Circuit Ampacity		<sup>3</sup> Maximum Overcurrent Protection		Single Point Power Source	
	Volt	kW	<sup>1</sup> Btuh		Ckt 1	Ckt 2	Ckt 1	Ckt 2	<sup>2</sup> Minimum Circuit Ampacity	<sup>3</sup> Maximum Overcurrent Protection
<b>4 kW</b> ECB45-4 (27A08) Terminal Block ECB45-4CB (27A12) 30A Circuit Breaker	208	3.0	10,250	4.1	23	---	<b>425</b>	---	---	---
	220	3.4	11,450	4.1	24	---	<b>425</b>	---	---	---
	230	3.7	12,550	4.1	25	---	<b>425</b>	---	---	---
	240	4.0	13,650	4.1	26	---	30	---	---	---
<b>5 kW</b> ECB45-5 (27A09) Terminal Block ECB45-5CB (27A13) 30A Circuit Breaker	208	3.6	12,300	4.1	27	---	30	---	---	---
	220	4.0	13,800	4.1	28	---	30	---	---	---
	230	4.4	15,000	4.1	29	---	30	---	---	---
	240	4.8	16,400	4.1	30	---	30	---	---	---
<b>7.5 kW</b> ECB45-7.5 (27A10) Terminal Block ECB45-7.5CB (27A14) 45A Circuit Breaker	208	5.6	19,200	4.1	39	---	<b>440</b>	---	---	---
	220	6.3	21,500	4.1	41	---	45	---	---	---
	230	6.9	23,500	4.1	43	---	45	---	---	---
	240	7.5	25,600	4.1	44	---	45	---	---	---
<b>10 kW</b> ECB45-10 (27A11) Terminal Block ECB45-10CB (27A15) 60A Circuit Breaker	208	7.2	24,600	4.1	48	---	<b>450</b>	---	---	---
	220	8.0	27,500	4.1	51	---	60	---	---	---
	230	8.8	30,000	4.1	53	---	60	---	---	---
	240	9.6	32,700	4.1	55	---	60	---	---	---
<b>12.5 kW</b> ECB45-12.5CB (27A16) (1) 50A and (1) 25A Circuit Breaker	208	9.4	32,000	4.1	43	19	<b>445</b>	<b>420</b>	62	70
	220	10.5	35,800	4.1	45	20	<b>445</b>	<b>420</b>	65	70
	230	11.5	39,200	4.1	47	21	50	25	68	70
	240	12.5	42,600	4.1	49	22	50	25	70	70
<b>15 kW</b> ECB45-15CB (27A17) (1) 60A and (1) 25A Circuit Breaker	208	10.8	36,900	4.1	48	22	<b>450</b>	25	70	70
	220	12.1	41,300	4.1	51	23	60	25	74	80
	230	13.2	45,100	4.1	53	24	60	25	77	80
	240	14.4	49,100	4.1	55	25	60	25	80	80

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

<sup>1</sup> Electric heater capacity only - does not include additional blower motor heat capacity.

<sup>2</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

<sup>3</sup> HACR type breaker or fuse.

<sup>4</sup> Bold indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size shown. See table on page 8.

**ELECTRIC HEAT DATA**

**CBK45UHET-042 | SINGLE PHASE**

Electric Heat Model Number	Input			Blower Motor Full Load Amps	<sup>2</sup> Minimum Circuit Ampacity		<sup>3</sup> Maximum Overcurrent Protection		Single Point Power Source	
	Volt	kW	<sup>1</sup> Btuh		Ckt 1	Ckt 2	Ckt 1	Ckt 2	<sup>2</sup> Minimum Circuit Ampacity	<sup>3</sup> Maximum Overcurrent Protection
<b>4 kW</b> ECB45-4 (27A08) Terminal Block ECB45-4CB (27A12) 30A Circuit Breaker	208	3.0	10,250	6.0	26	---	30	---	---	---
	220	3.4	11,450	6.0	27	---	30	---	---	---
	230	3.7	12,550	6.0	27	---	30	---	---	---
	240	4.0	13,650	6.0	28	---	30	---	---	---
<b>5 kW</b> ECB45-5 (27A09) Terminal Block ECB45-5CB (27A13) 30A Circuit Breaker	208	3.6	12,300	6.0	29	---	30	---	---	---
	220	4.0	13,800	6.0	30	---	30	---	---	---
	230	4.4	15,000	6.0	31	---	<b>435</b>	---	---	---
	240	4.8	16,400	6.0	33	---	<b>435</b>	---	---	---
<b>7.5 kW</b> ECB45-7.5 (27A10) Terminal Block ECB45-7.5CB (27A14) 45A Circuit Breaker	208	5.6	19,200	6.0	41	---	45	---	---	---
	220	6.3	21,500	6.0	43	---	45	---	---	---
	230	6.9	23,500	6.0	45	---	45	---	---	---
	240	7.5	25,600	6.0	47	---	<b>450</b>	---	---	---
<b>10 kW</b> ECB45-10 (27A11) Terminal Block ECB45-10CB (27A15) 60A Circuit Breaker	208	7.2	24,600	6.0	51	---	60	---	---	---
	220	8.0	27,500	6.0	53	---	60	---	---	---
	230	8.8	30,000	6.0	55	---	60	---	---	---
	240	9.6	32,700	6.0	58	---	60	---	---	---
<b>12.5 kW</b> ECB45-12.5CB (27A16) (1) 50A and (1) 25A Circuit Breaker	208	9.4	32,000	6.0	45	19	<b>445</b>	<b>420</b>	64	70
	220	10.5	35,800	6.0	47	20	50	<b>420</b>	67	70
	230	11.5	39,200	6.0	49	21	50	25	70	70
	240	12.5	42,600	6.0	51	22	<b>460</b>	25	73	80
<b>15 kW</b> ECB45-15CB (27A17) (1) 60A and (1) 25A Circuit Breaker	208	10.8	36,900	6.0	51	22	60	25	73	80
	220	12.1	41,300	6.0	53	23	60	25	76	80
	230	13.2	45,100	6.0	55	24	60	25	79	80
	240	14.4	49,100	6.0	58	25	60	25	83	90

NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

<sup>1</sup> Electric heater capacity only - does not include additional blower motor heat capacity.

<sup>2</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

<sup>3</sup> HACR type breaker or fuse.

<sup>4</sup> **Bold indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size shown. See table on page 8.**

**ELECTRIC HEAT DATA**

**CBK45UHET-048 | CBK45UHET-060 | SINGLE PHASE**

Electric Heat Model Number	Input			Blower Motor Full Load Amps	<sup>2</sup> Minimum Circuit Ampacity		<sup>3</sup> Maximum Overcurrent Protection		Single Point Power Source	
	Volt	kW	<sup>1</sup> Btuh		Ckt 1	Ckt 2	Ckt 1	Ckt 2	<sup>2</sup> Minimum Circuit Ampacity	<sup>3</sup> Maximum Overcurrent Protection
<b>4 kW</b> ECB45-4 (27A08) Terminal Block ECB45-4CB (27A12) 30A Circuit Breaker	208	3.0	10,250	7.6	28	---	30	---	---	---
	220	3.4	11,450	7.6	29	---	30	---	---	---
	230	3.7	12,550	7.6	29	---	30	---	---	---
	240	4.0	13,650	7.6	30	---	30	---	---	---
<b>5 kW</b> ECB45-5 (27A09) Terminal Block ECB45-5CB (27A13) 30A Circuit Breaker	208	3.6	12,300	7.6	31	---	<b>435</b>	---	---	---
	220	4.0	13,800	7.6	32	---	<b>435</b>	---	---	---
	230	4.4	15,000	7.6	33	---	<b>435</b>	---	---	---
	240	4.8	16,400	7.6	35	---	<b>435</b>	---	---	---
<b>7.5 kW</b> ECB45-7.5 (27A10) Terminal Block ECB45-7.5CB (27A14) 45A Circuit Breaker	208	5.6	19,200	7.6	43	---	45	---	---	---
	220	6.3	21,500	7.6	45	---	45	---	---	---
	230	6.9	23,500	7.6	47	---	<b>450</b>	---	---	---
	240	7.5	25,600	7.6	49	---	<b>450</b>	---	---	---
<b>10 kW</b> ECB45-10 (27A11) Terminal Block ECB45-10CB (27A15) 60A Circuit Breaker	208	7.2	24,600	7.6	53	---	60	---	---	---
	220	8.0	27,500	7.6	55	---	60	---	---	---
	230	8.8	30,000	7.6	57	---	60	---	---	---
	240	9.6	32,700	7.6	60	---	60	---	---	---
<b>12.5 kW</b> ECB45-12.5CB (27A16) (1) 50A and (1) 25A Circuit Breaker	208	9.4	32,000	7.6	47	19	50	<b>420</b>	66	70
	220	10.5	35,800	7.6	49	20	50	<b>420</b>	69	70
	230	11.5	39,200	7.6	51	21	<b>460</b>	25	72	80
	240	12.5	42,600	7.6	53	22	<b>460</b>	25	75	80
<b>15 kW</b> ECB45-15CB (27A17) (1) 60A and (1) 25A Circuit Breaker	208	10.8	36,900	7.6	53	22	60	25	75	80
	220	12.1	41,300	7.6	55	23	60	25	78	80
	230	13.2	45,100	7.6	57	24	60	25	81	90
	240	14.4	49,100	7.6	60	25	60	25	85	90
<b>20 kW</b> ECB45-20CB (27A18) (1) 60A and (1) 50A Circuit Breaker	208	14.4	49,200	7.6	53	43	60	<b>445</b>	96	100
	220	16.1	55,000	7.6	55	46	60	50	101	110
	230	17.6	60,100	7.6	57	48	60	50	105	110
	240	19.2	65,500	7.6	60	50	60	50	110	110


NOTE - Circuit 1 Minimum Circuit Ampacity includes the Blower Motor Full Load Amps.

<sup>1</sup> Electric heater capacity only - does not include additional blower motor heat capacity.


<sup>2</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements. Use wires suitable for at least 167°F.

<sup>3</sup> HACR type breaker or fuse.

<sup>4</sup> **Bold indicates that the circuit breaker on "CB" circuit breaker models must be replaced with size shown. See table on page 8.**

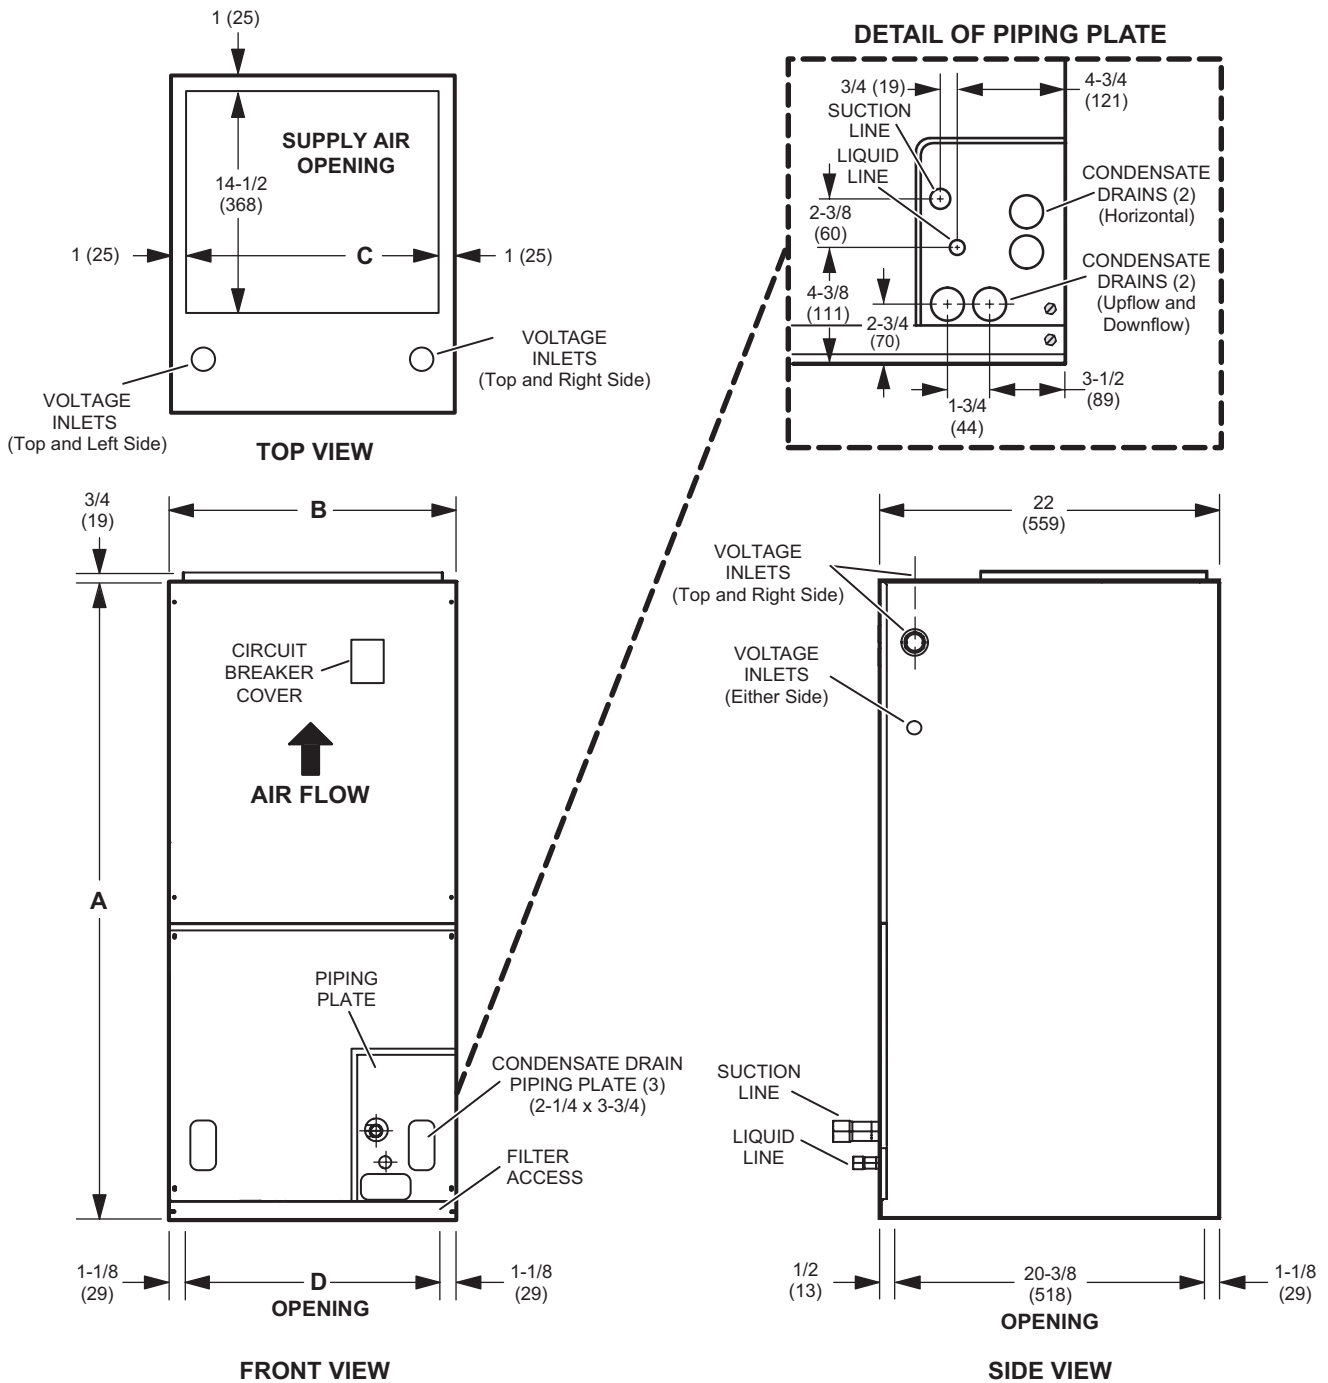


Dimensions	024		030		036, 042		048		060	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
<b>A</b>	45-1/2	1156	47	1194	53-5/8	1362	55	1397	59-3/4	1518
<b>B</b>	18-1/2	470	18-1/2	470	21-1/2	546	21-1/2	546	21-1/2	546
<b>C</b>	16-1/2	419	16-1/2	419	19-1/2	495	19-1/2	495	19-1/2	495
<b>D</b>	16-1/4	413	16-1/4	413	19-1/4	489	19-1/4	489	19-1/4	489

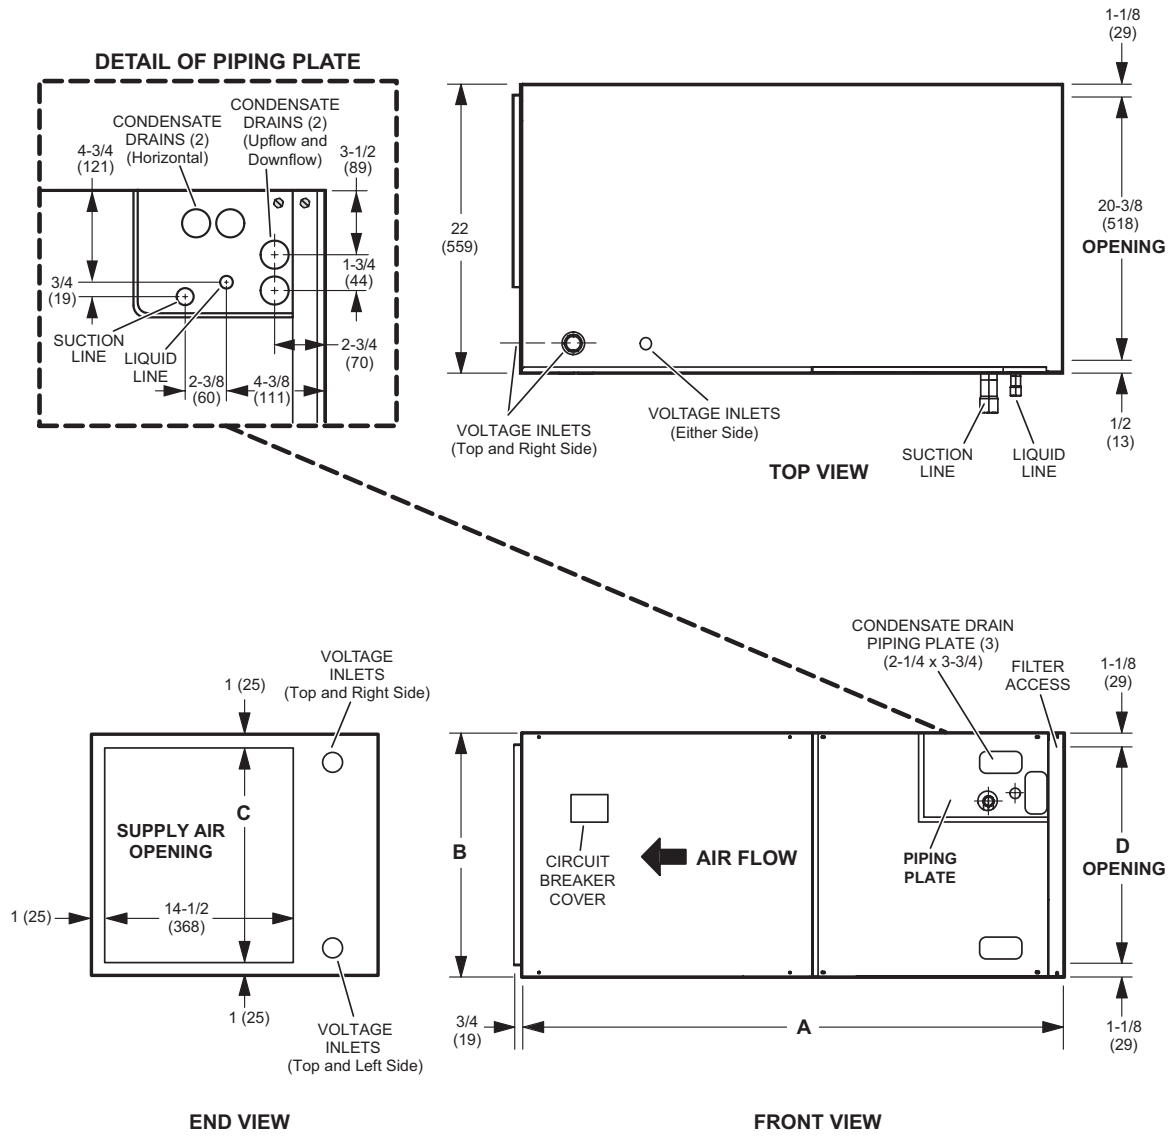


Dimensions	024		030		036, 042		048		060	
	in.	mm	in.	mm	in.	mm	in.	mm	in.	mm
<b>A</b>	45-1/2	1156	47	1194	53-5/8	1362	55	1397	59-3/4	1518
<b>B</b>	18-1/2	470	18-1/2	470	21-1/2	546	21-1/2	546	21-1/2	546
<b>C</b>	16-1/2	419	16-1/2	419	19-1/2	495	19-1/2	495	19-1/2	495
<b>D</b>	16-1/4	413	16-1/4	413	19-1/4	489	19-1/4	489	19-1/4	489

HORIZONTAL SUPPORT FRAME KIT

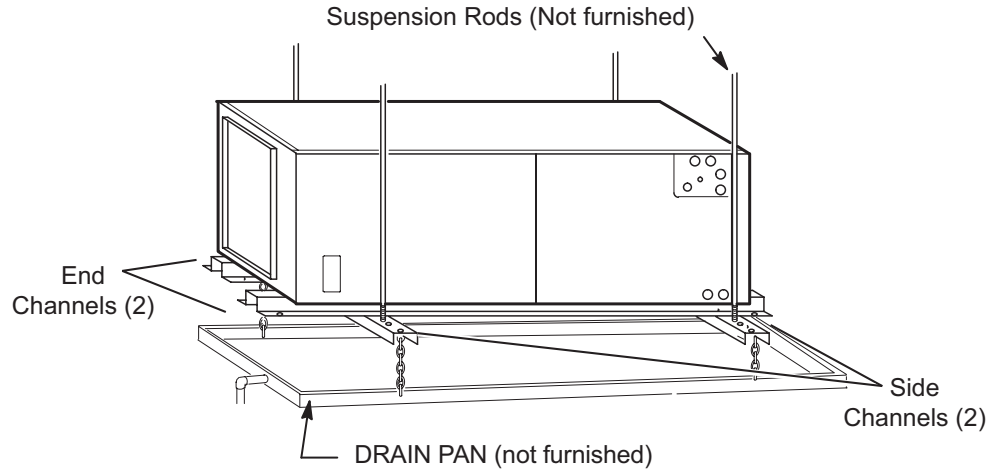

Includes (2) 1 x 1-1/2 x 32-5/8 in. side channels and (2) 1 x 3 x 53-7/8 in. end channels.

SIDE RETURN UNIT STAND  
(Upflow Only)

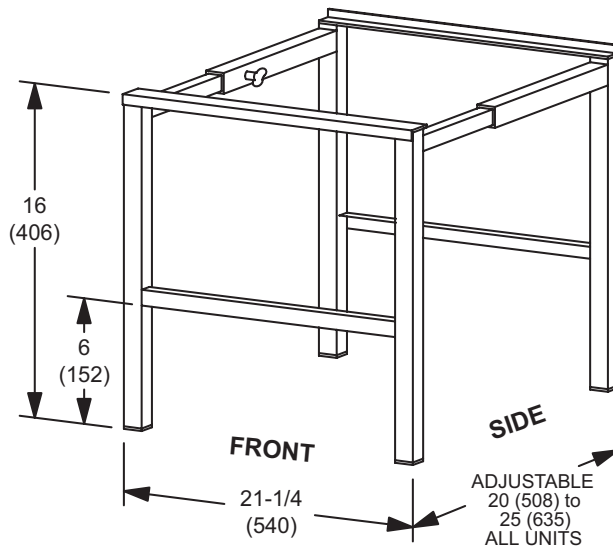

Visit us at [www.Lennox.com](http://www.Lennox.com)

For the latest technical information, [www.LennoxPros.com](http://www.LennoxPros.com)

Contact us at 1-800-9-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability. Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury. Installation and service must be performed by a qualified installer and servicing agency.