

Workman FP Stryder Adjustability

The Workman FP Stryder is designed to allow 1/4" incremental adjustability. One end of the crossbar has 3/4" intervals while the opposite end of the crossbar has 1/2" intervals as shown in the below pictures.

In order to adjust to within a 1/4" of the I-beam we recommend setting the coarse adjustment first followed by the fine adjustment.



3/4" interval (Coarse)



1/2" interval (Fine)

