

# CONGRATULATIONS ON YOUR NEW OSTER® BLEND ACTIVE PORTABLE BLENDER!

We know you are busy, but that shouldn't mean your health takes the back seat, which is why we created the Blend Active Portable Blender. Whether you are out exploring the world, moving up at work, or improving at the gym, you can create a healthy meal or drink anytime, anywhere!

## FIRST USE

- 1 Fully charge the unit using the USB charger until the notification light is solid  
*NOTE: Charge time is approx. 2 hours, but can vary depending on power source.*
- 2 Add dish soap with warm water to the cup and run one blending cycle (reference How To section)
- 3 Rinse the cup and allow to dry

## TIPS

### Frozen fruits are the best way to chill your drink!

The blade slices through frozen berries, bananas and tropical fruits! These foods are rich in vitamins and nutrients and will help to create a drink at the perfect temperature. Frozen fruits will give a better result than ice, but if ice is necessary, crush it up first!

### Enjoy the little things!

The Blend Active Portable Blender is small enough to fit into your cup holder, purse or gym bag. With that in mind, keep your ingredients smaller to achieve the perfect consistency. Fruit should not be larger than ½ inch.

### Shake it upside down!

Gently shaking the cup in different directions while blending will help to achieve a more consistent blend.

**NOTE:** Some models include an additional drinking lid that is BPA-free and dishwasher-safe. The drinking lid should be twisted onto the cup after you have finished blending, for easier portability.

## HOW TO USE YOUR NEW BLEND ACTIVE



- 1 Fill the cup with your favorite ingredients

*IMPORTANT: Do not exceed max fill line.*




- 2 Twist the blending lid onto cup, aligning the dots located on the lid and cup



- 3 Double click start button to begin blending

- 4 Flip cup upside down

*TIP: As the cup blends, flip it right side up and upside down. This will help you get a more even blend!*

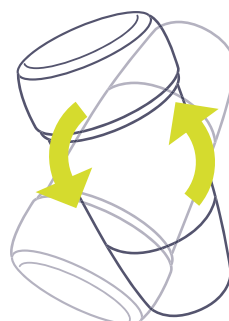

- 5 Once blending is complete, turn right side up and remove lid

*NOTE: Blender will stop after 30 seconds. To stop early, click the start button once.*



## ENJOY!



## RECIPES

Add all ingredients to your Blend Active Portable Blender. Fit blending lid completely onto the cup. **Double click to start blending**, shaking the unit during the blending process.

### CLASSIC BERRY SMOOTHIE

1/2 cup yogurt  
1/2 cup frozen mixed berries  
Milk of choice to max fill line



### STRAWBERRY PROTEIN SHAKE

1 scoop vanilla protein powder  
1/3 cup frozen strawberries  
Coconut water to max fill line

### TROPICAL SMOOTHIE

1/3 cup chopped pineapple  
1/3 frozen mango  
1/3 cup vanilla yogurt  
Coconut water to max fill line



## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

1. Read all instructions before using this product.
2. To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
3. This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities. Keep the appliance and its cord out of reach of children.
4. Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
5. Never leave appliance unattended when in use.
6. The use of attachments, including canning jars, not recommended or sold by the manufacturer may cause fire, electric shock or injury.
7. Do not use outdoors or for commercial purposes.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
9. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
10. Blades are sharp. Handle carefully, especially when removing the blades from the container, emptying the container and during cleaning.
11. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
12. Always hold container while operating the appliance. If the container should turn when the motor is turned ON, switch appliance OFF immediately and tighten the container in the threaded bottom.
13. Always operate blender with cover in place. Always wait until all moving parts have stopped before removing any lid or cover.
14. Do not blend hot liquids.
15. Do not use appliance for other than intended use. Misuse can cause injuries. Always use appliance on a dry, stable, level surface. Never fill beyond the MAX fill line.

**For containers with no lids or vents (when inserted in the blender), such as personal Blend and Go containers:**

16. Do not blend carbonated, hot or boiling liquids and ingredients, as this may create pressure buildup. Only blend non-carbonated liquids and ingredients that are at room temperature or cooler. If the container is warm to the touch, allow to cool before opening.
17. Do not use the blender for longer than 1 minute at a time to avoid heat and pressure buildup. Allow to cool for 1 minute between cycles.

## SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

### POWER CORD INSTRUCTIONS:

A short charging cable is provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.

- a. The longer cable should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over unintentionally.

Do not pull, twist or otherwise abuse the charging cable.

Do not wrap the charging cable around the main body of the blender during or after use.

### BATTERY INSTRUCTIONS:

- a. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

### NOTIFICATION LIGHTS:

<b>Solid light</b>	Full charge or blending
<b>Flashing light continuously</b>	Charging
<b>Flashing light after double clicking the button</b>	Lid not fully closed
<b>Flashing light for 5s</b>	Battery drained or unit jammed
<b>No light</b>	Unit off

### CLEANING & MAINTENANCE

**CAUTION:** Blades are sharp. Handle carefully.

- CAREFULLY open the cup by rotating the blending lid counter clockwise.
- All parts, except the blending lid, are dishwasher-safe. All parts can also be hand-washed with warm, soapy water. Rinse well and dry.
- Reassemble the blender for storage. Leave the blending lid open a gap so no odors are retained.

**CAUTION:** Never submerge the blending lid in a liquid.

**CAUTION:** Do not place the blending lid in the dishwasher, microwave or freezer. Do not blend hot liquids.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

### 1 YEAR WARRANTY

For additional information on your Oster® Blend Active Portable Blender and detailed warranty information, visit us at [www.oster.com](http://www.oster.com) or call us at **1-800-334-0759**.

# Oster®



# BLEND ACTIVE

## QUICK START GUIDE

[www.oster.com](http://www.oster.com) | Models: BLSTPP

\*additional colors available