
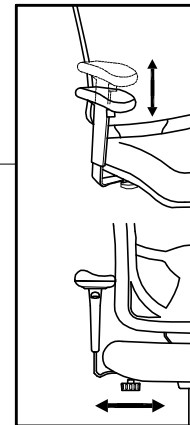
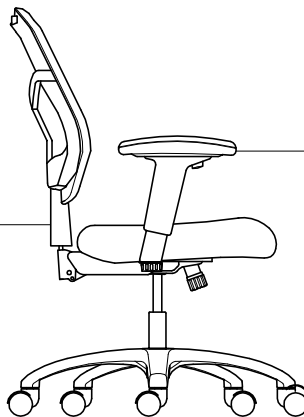


**ADJUSTMENTS**



**Ratchet Back Height Adjustment**

To raise the back, slowly lift the back up until you hear a series of 4 to 5 clicks. Each click represents a position where the back will lock into place. To lower the back, raise the back all the way up until tension is released - the back will then return to the lowest position without stopping. Raise back up to desired position.

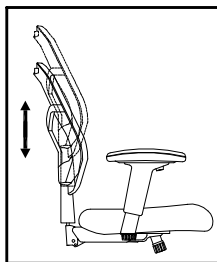

**ARM HEIGHT ADJUSTMENT**  
- Push the button under the arm pad and move the arm up or down. Release button to set the height.

**ARM WIDTH ADJUSTMENT**  
- Loosen the bolt under the arm bracket and move the arm inward or outward. Tighten bolt after reaching desired position.

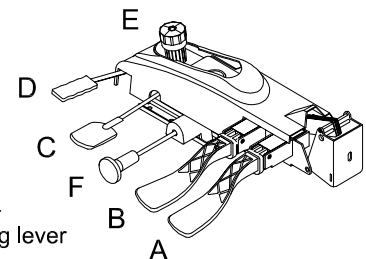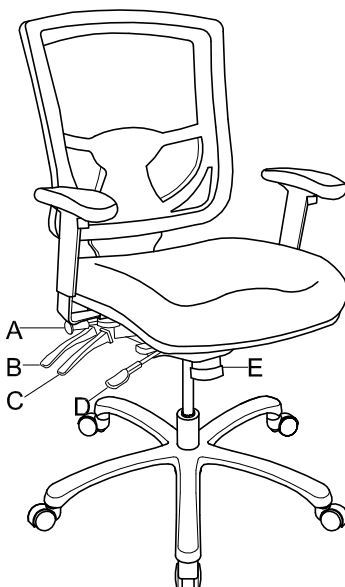

**MECHANISM ADJUSTMENTS:**

- (A) Adjust back angle by pushing lever upward or downward.
- (B) For combination seat / back angle adjustment with infinite lock, push upward or downward.
- (C) For seat height adjustment, push lever upward or downward.
- (D) Forward tilt lever  
\*While seated, lift lever B and then lean back to activate locking mechanism;  
\*Pull lever D backward to allow seat to tilt forward - or - push lever D forward to straighten seat;  
\*To lock in desired position, push lever B downward.
- (E) Turn tension control knob clockwise to increase tension and counter - clockwise to decrease tension.
- (F) Pull lever out to allow seat to slide forward or backward. Release lever to lock in position.

**CUSTOMER SERVICE HOTLINE**  
800-626-6060

**Warnings**

1. This product should be used by only one person at a time.
2. Do not use this chair unless all bolts, screws and knobs are securely tightened.
3. Dispose of packing material properly. Do not use the plastic cover as a head covering. It may cause suffocation.
4. Do not use the chair as a stepladder.
5. Use this chair for its intended purpose only.
6. Save Allen Wrench. Check and tighten all bolts, screws and knobs every 3-6 months; ensure they are fully tightened to ensure stability.