



CS8500 Commercial Programmable Touchscreen Thermostat

Bulletin No. 210787

May 2024

Supersedes All previous versions

COMMERCIAL PRODUCT SPECIFICATIONS

The CS8500 is a commercial, electronic, 7-day, multi-stage, programmable, touchscreen thermostat.

Models are available with or without CO₂ sensing capabilities.


All thermostat models are only used with commercial rooftop units equipped with the Lennox® CORE Control System.

Compatible with CORE and BACnet control protocols for on-site temporary setpoint adjustment (+/- four degrees) and temporary occupancy override.

CO₂ models can be used to control Lennox' premium rooftop unit Demand Control Ventilation features based on CO₂ setpoints and conditions stored in the CORE Unit Controller parameters.

Thermostats also feature enhanced capabilities including remote temperature sensing, dehumidification and control, economizer control and custom reminders.

- Easy to read 4.3 in. color screen (measured diagonally)
- LCD display with backlight shows the current and set temperature, time, inside relative humidity, system status (operating mode, schedules and occupancy) and outside temperature
- Menu-driven programming guides user through the scheduling process showing only necessary information on each screen
- Touchscreen interaction
- Ergonomic design
- Scheduled occupancy control (economizer operation) for fresh air ventilation
- Designed specifically for commercial applications to satisfy fresh air ventilation needs
- Remote Indoor Temperature Sensing with up to nine averaging sensors (indoor temperature sensors must be ordered separately)
- Built-in Relative Humidity Sensor
- Built-in Occupancy Sensor input connections
- Real-time clock keeps time during power failures and automatically updates to daylight savings
- Two user-editable Custom Reminders and a Routine System Checkup reminder
- Up to three separate schedules for individual days of the week, week/weekend (5/2) or all 7-days the same with up to 4 time periods per day
- Performance Report displays the number of hours each month the system has been operating (with Local Scheduling Function set to ON)
- Temporarily override a program schedule as by temperature
- Smooth Setback Recovery starts system early to achieve setpoint at start of program period

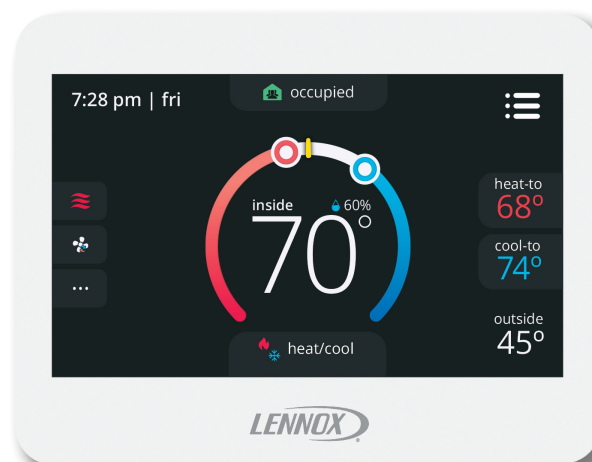

4 Heat / 4 Cool Multi-Stage For Rooftop Units Equipped with the Lennox® CORE Control System

Features	2
Installer Settings	6
Specifications	8
User Settings	2

- Outside temperature display shows current outside temperature
- Permanent memory storage of programs
- Wallplate furnished

WARRANTY

- Limited two years

NOTE - Refer to Lennox Equipment Limited Warranty certificate included with unit for specific details.

APPROVALS

- ASHRAE and IECC Compliant
- Factory preset program settings conform to EPA ENERGY STAR® recommended setpoints


APPLICATIONS

- Fully programmable thermostat provides precise comfort control and easy programmability
- Provides temperature control for packaged gas/electric and electric/electric for up to 4 heat / 4 cool multi-stage systems

FEATURES

USER SETTINGS

HOME SCREEN

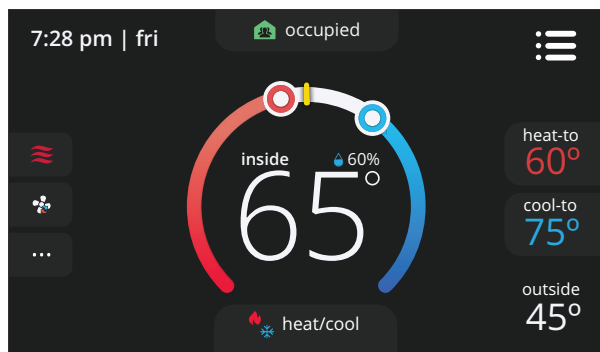

Touch blank screen to turn on the backlight.

Temperature Settings

- Large display of current inside temperature setpoint (°F or °C)
- Heating and Cooling Setpoint Indicators on the round animated temperature band
- Current cooling setpoint temperature Button (cool-to)
- Current heating setpoint temperature Button (heat-to)

Touching the heat or cool setpoint indicators on the round temperature band, or touching the **heat-to** or **cool-to** buttons displays the heat or cool menu screens.

A tilde symbol ~ appearing under the heat-to or cool-to buttons indicates that the system is offline.

Current Room Temperature

- Yellow bar on temperature band indicates actual room temperature

Current Outside Temperature

- Displays current outside temperature in °F or °C

Time/Date Display

- Displays current time and day (supports daylight savings time changes)

Occupied/Unoccupied

- Displays Occupied or Unoccupied status

If an optional occupancy sensor is installed the thermostat will automatically change the status. NOTE - Occupancy sensor must be field provided.

Humidity Display

- Displays current inside relative humidity above current indoor temperature

Mode



- Displays current system operating mode below current indoor temperature (heat/cool or schedule)

System Status Icons

(left side of home screen and status screen)

Owner and Technician
(Home Screen and Status Screen)

Only Visible When Enabled

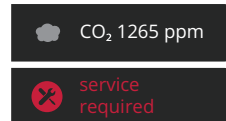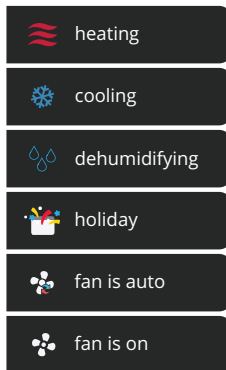

Up to four status icons can be displayed at one time on the left side of the screen.

Menu Button

Touch to display **menu** screen. See page 3.

A red circle with a number on the menu button indicates an active notification. Touch **Menu > Notifications** to view status screen.

Heat Menu Screen (not shown)

On the Home Screen, touching the heat setpoint indicators on the round temperature band, or touching the **heat-to** button displays the heat menu screen.

- Heating setpoint display
- Heating Setpoint Indicator on the round temperature band
- Plus (+) and Minus (–) buttons
- Home button (return to Home Screen)

Touch the red heat setpoint indicator on the round temperature band, or touch the **plus** or **minus** buttons to change the heating setpoint in one degree increments.

Cool Menu Screen (not shown)

On the Home Screen, touching the cool setpoint indicators on the round temperature band, or touching the **cool-to** button displays the cool menu screen.


- Cooling setpoint display
- Cooling Setpoint Indicator on the round temperature band
- Plus (+) and Minus (–) buttons
- Home button (return to Home Screen)

Touch the blue cool setpoint indicator on the round temperature band, or touch the **plus** or **minus** buttons to change the cooling setpoint in one degree increments.

FEATURES

USER SETTINGS

MENU SCREEN

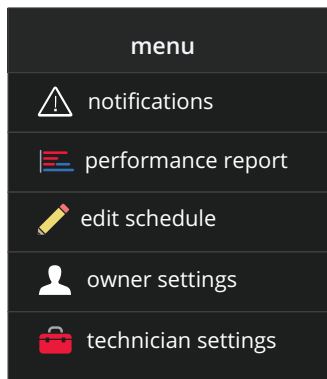

Touch each item to display the selected screen.


Touch left side of screen to return to the Home Screen.

NOTIFICATIONS

Displays system operating system and service reminder messages

Touch the status icon on the left side of the Home Screen to view the Notifications Screen.


PERFORMANCE REPORT SCREEN

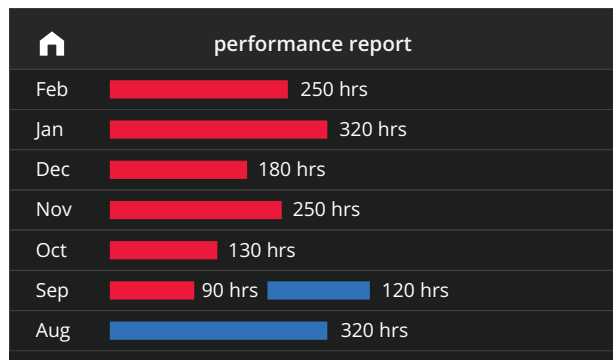

Displays the number of hours each month the system has been operating in heating mode (red) or cooling mode (blue) in an easy-to-read graph.

Local Scheduling Function must be set to On for Performance Reports. See page 6.

EDIT SCHEDULES SCREEN

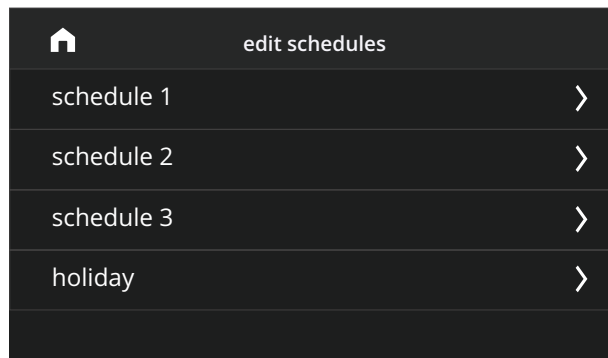


- Schedule 1
- Schedule 2
- Schedule 3
- Holiday

Touch a Schedule to edit. The Select Days screen will appear. See page 4 .

FEATURES


USER SETTINGS

SELECT DAYS SCREEN

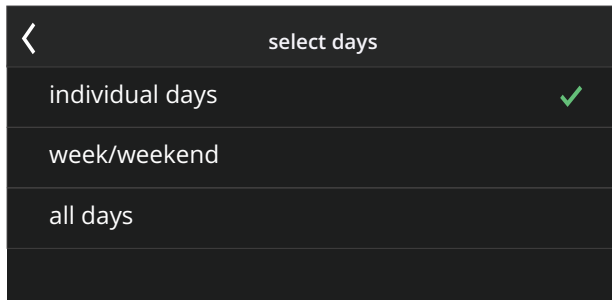

Individual Days

- Select Individual Days (mon, tue, wed, thu, fri, sat, sun)

 Touch to edit. A checkmark indicates which days are active.


Week/Weekend (5/2)

- Select 5/2 Days (mon, tues, wed, thu, fri) and (sat, sun)


All Days

- Select all seven days


Select Periods

 Time period options are the same for Individual Days, 5/2 Days and All Days.


- Four time periods per day (1st, 2nd, 3rd, 4th)
- Default settings:
 - 1st period - 6:00 am
 - 2nd period - 6:00 pm
 - 3rd period - 8:00 pm
 - 4th period - 10:00 pm


 Touch the time bar to set the start time for each period using the **set time** window.

- Cool-To, default 78°F (adjustable 48 to 99°F)
- Heat-To, default 70°F (adjustable 45 to 90°F)


 Use Plus (+) and Minus (–) buttons to adjust heating and cooling settings.

- Occupied/Unoccupied, default occupied


 Touch the pencil tool in each period screen to rename the period, delete a period or cancel editing.

 Use the **keyboard** tool to rename a schedule or time period (maximum 30 characters).


Select Holidays

 Allows setting schedules for specific holidays (during unoccupied "Non-Work Days"). Has the same programming features as regular schedules.

- Add day

 Set holiday date (dd/mm/yyyy) using calendar tool.


Override Schedule (not shown)

 During a scheduled time period, touching either the setpoint indicator on the temperature band or the heat-to or cool-to button on the Home Screen will initiate a temporary override. A temporary override screen is displayed and an override icon is displayed on the Home Screen. Preset 1 or 2 hours or HOLD until the next scheduled time period. Displays the schedule hold on the home screen and the time it expires. Touch "X" to cancel override and return to current schedule.

FEATURES

USER SETTINGS

OWNER SETTINGS SCREEN

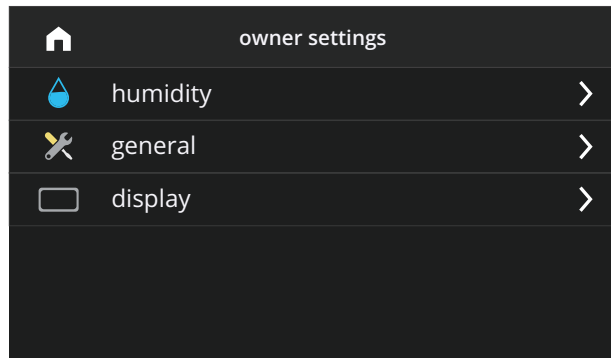


Humidity


- Slider to adjust humidity setting
 - Default 45% (adjustable 5 to 95% relative humidity)

General


- About (thermostat and service information)
 - Thermostat Information
 - Model Number
 - Serial Number
 - Hardware Revision
 - Software Revision
 - Contractor Information
 - Name
 - Address
 - Phone
 - Email
 - Website

 Technician can input their contact information during technician setup using the keyboard tool (maximum 30 characters per entry).

- Screen Lock (Prevents tampering with thermostat settings, 3-digit security code)
 - Off (unlocked, no security)
 - ON (locked, prevents tampering with the thermostat)


 Technician can change 3-digit security code in the Technician Settings Screen.

- Language
 - English (default)
 - Français
 - Español
- Date & Time
 - 12 or 24 Hour setting
 - Daylight Savings - Enable or Disable (default)
 - Set Time
 - Set Date


 Date and Time can be set using the **set date** screen.

Display

- Show Outdoor Temperature (on/off)
- Screen Options
 - Screen Brightness

 Slide control allows screen brightness adjustment (20 to 100%).


- Screen Saver options
 - Screen goes black when not in use
 - Screen brightness dims when not in use

 Slide control allows screen brightness dimming adjustment (20 to 100%).

- Temperature Scale
 - Fahrenheit - °F (default)
 - Celsius - °C

Fan


- On
- Auto


 Only available in Standalone or Smart Hub enabled modes (enabled in Technician settings).

FEATURES


INSTALLER SETTINGS

TECHNICIAN SETTINGS SCREEN

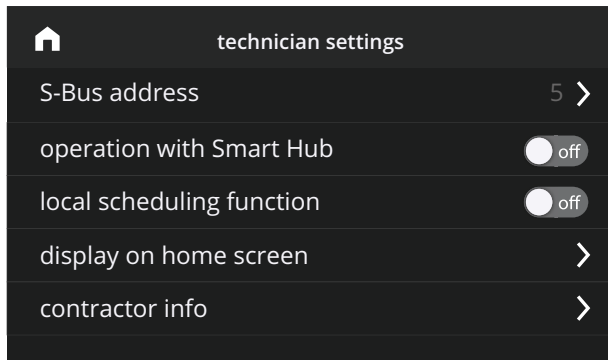


 Technician must input 3-digit security code to access settings.


- S-Bus Address (up to 31)
- Plus (+) and Minus (–) buttons

 Use Plus (+) and Minus (–) buttons to set S-Bus address. Must match setting on the CORE Unit Controller.


- Operation With Smart Hub
 - On/Off (default Off)

 Must be On to operate with CORE Unit Controller.


- Local Scheduling Function
 - On/Off

 When set to “On” thermostat controls schedules. When set to “Off” CORE Unit Controller controls schedules.


- Display on Home Screen (default Off)
 - CO₂ value (CO₂ model) (On/Off)
 - RTU Function State (On/Off)
 - Service Required Alert (On/Off)

 **NOTE** - Refer to the Installation Instructions for complete information about parameter settings for CORE-equipped rooftop units and BACnet controls.


- Contractor Information
 - Name
 - Address
 - Phone
 - Email
 - Website


 Technician can input their contact information during technician setup using the keyboard tool (maximum 30 characters).

- Temperature Sensor Configuration
 - Internal Temperature Sensor (default)
 - External Temperature Sensor(s)
 - Number of External Temperature Sensor(s) (use **Plus (+)** and **Minus (–)** buttons to select 1 to 9)
 - Type of External Sensor (select 10k or 11k)

 Touch to edit. A checkmark indicates which sensors are active.

- Offsets
 - Internal Temperature Sensor Offset (°F)
 - External Temperature Offset (°F)
 - 0°F (default), adjustable (–5 to 5°F).
 - Humidity Offset (%)
 - 0% (default), adjustable (–10 to 10%)
 - CO₂ Sensor Offset (CO₂ model)
 - 0% (default), adjustable –10 to +10 ppm


 External Temperature Offset is only available if External Temperature Sensor(s) is configured above.

 Touch the **plus** or **minus** buttons to change settings.


- Reminders
 - Custom Reminder 1
 - Custom Reminder 2
 - User defined reminders can be a custom text message (up to 20 alphanumeric characters)
 - 1 Day, 1 Week, 1 Month, 3 Month, Custom date

 Touch to edit reminder title, set date and time.


- Routine System Checkup

 Touch to set date and time.


- Reset to Factory Defaults
 - Reset All Settings
 - Reset Owner Settings
 - Reset Technician Settings
 - Reset Reminders
 - Reset Schedule

 An alert screen confirms reset action.

- Change Owner Pin

 Technician can input a new 3-digit security code for the owner using the number pad screen.













- RTU Fan On/Auto User Control
 - On/Off (default On)

 When set to On, RTU Fan is displayed on the Home Screen and Fan Setting Option is displayed on the Owner Settings Menu.

FEATURES



Technician Status Icons (technician status screen)

Technician
(Technician Status Screen)

 comm. status errors detected	 F.A.T cooling
 comm. status connected	 F.A.T dehumidifying
 comm. status offline	 RTU fault state fault detected
 occupied warmup	 RTU fault state zero faults
 occupied cool-down	 CS fault state fault detected
 F.A.T heating	 CS fault state zero faults

Legend:

- CS - Thermostat
- F.A.T. - Fresh Air Temperature
- RTU - Rooftop Unit

 Touch the Technician icon  on the Home Screen to display the Technician Status Screen. Touch each icon for detailed information. Also see additional icons that are displayed on page 2.

FEATURES

SPECIFICATIONS

Order Numbers:

24K55

24K53 (With CO₂ Sensing)

Temperature Setting Range

- Cooling - 48 to 99°F
- Heating - 45 to 90°F

Humidity Settings

- Operating range - 5 to 95% relative humidity (dehumidification)
- Accuracy - $\pm 5\%$

CO₂ Sensing (CO₂ Model)

- Operating range - 0 to 2000 ppm
- Accuracy - ± 40 ppm

Power Supply

- 24VAC (18 to 30VAC maximum), 50/60Hz

Clock Accuracy

- ± 10 minutes per year

Terminals

- R - 24VAC
- T (qty. 2) - External Indoor Temperature Sensor
- OC (qty. 2) - Occupancy Sensor
- CM- (minus) - SysBus Communication
- CM+ (plus) - SysBus Communication
- C - Common 24VAC

Dimensions

- Thermostat (H x W x D) - 3-5/16 x 4-5/16 x 7/8 in. (84 x 110 x 22 mm)
- Wallplate (W x H) - 5-3/4 x 4-1/2 in. (146 x 114 mm)

Backup

- Non-volatile memory maintains all programming in the event of a power outage

Optional Accessories

Indoor Room Sensors

Remote non-adjustable, wall mount


- 10k - 47W37
- 11k - 94L61
- Up to nine of the same type indoor (room) sensors may be connected in parallel for averaging

NOTE - Refer to installation instructions for additional details.

- Uses standard two-wire thermostat wire
- Indoor (room) sensor wiring can be sized from 16 to 22 AWG depending on the application
- The maximum length of wire from the thermostat to the room sensor is 300 feet

Sysbus Network Thermostat Cable (Yellow)

NOTE - Twisted Pair wire is required for thermostat wiring.

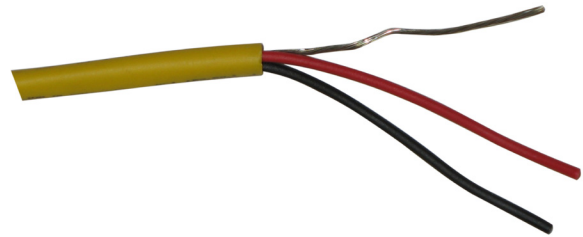

- 27M19 - 500 ft. box
- 94L63 - 1000 ft. box
- 68M25 - 2500 ft. roll
- Twisted pair 100% shielded communication cable
- Twisted pair - Red and Black
- 22 AWG, yellow jacket, rated at 75°C, 300V
- Plenum rated
- Insulation - Low smoke PVC
- NEC, CMP

Occupancy Sensor

NOTE - Must be field provided.

REVISIONS

Sections	Description of Change
Document	Removed “Not for Heat Pump” disclaimer.



Visit us at www.Lennox.com
For the latest technical information, www.LennoxCommercial.com
Contact us at 1-800-4-LENNOX