COMPONENTS

(A) Top Panel -1pc

(B) Back Panel -1pc

(C) Left Side Panel -1pc

(D) Right Side Panel -1pc

(E) Center Panel -1pc

(F) Bottom Panel -1pc

(G) Shelf Panel -2pcs

HARDWARE & TOOLS

(H) Cam Post-27pcs

(I) Wood Dowel Ø8*30mm-15pcs

(J) Cam Lock-27pcs

(K) Cam Sticker-27pcs

Tools Required for Assembly

(L) Shelf Support -9pcs

(M) M8 Leveler-6pcs

Philips Screw Driver for
(H) Cam Post (J) Cam Lock

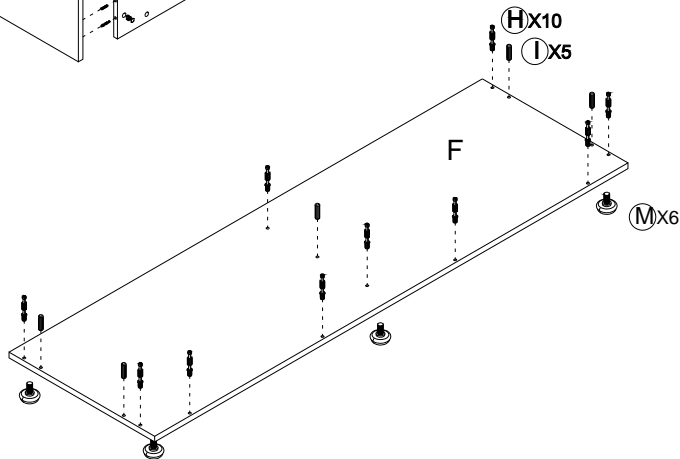## INSTRUCTIONS - Do not use power tools to assemble
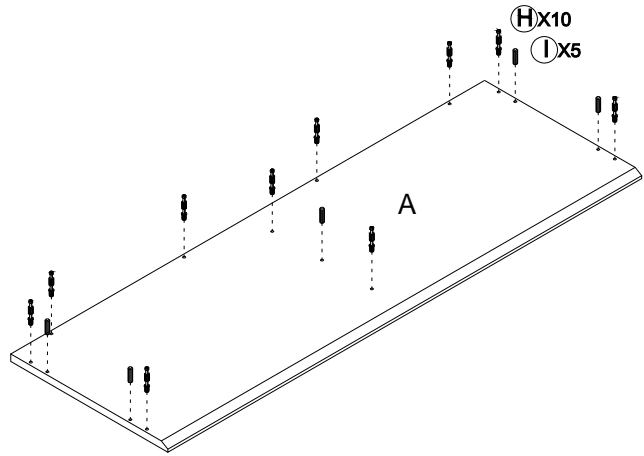
STEP 1

(H) X6
(I) X5

(J) X6
(K) X6

C

E

B

D

STEP 2

(H) X10
(I) X5

F

(M) X6
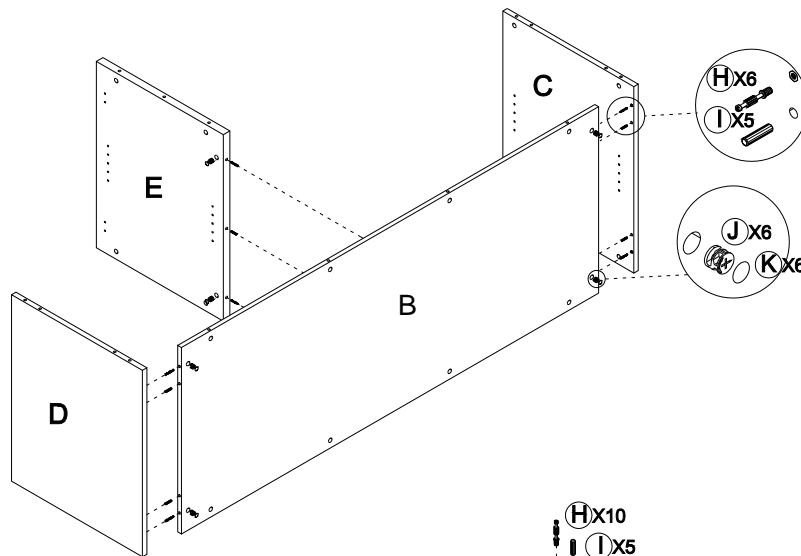
INSTRUCTIONS

STEP 3

STEP 4

H X10
I X5

A
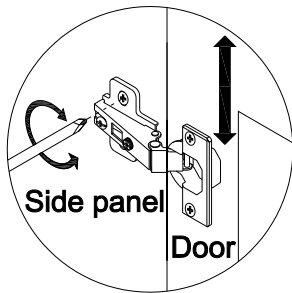
J X10
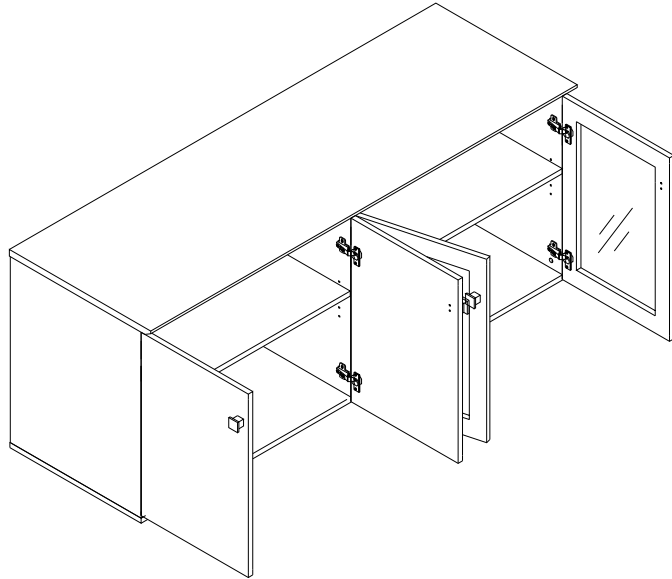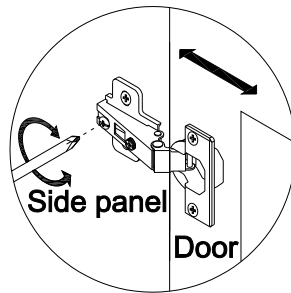K X10

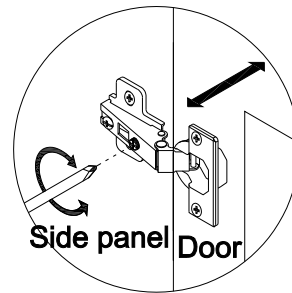STEP 5

STEP 6

G

G

J X10
K X10

L X8
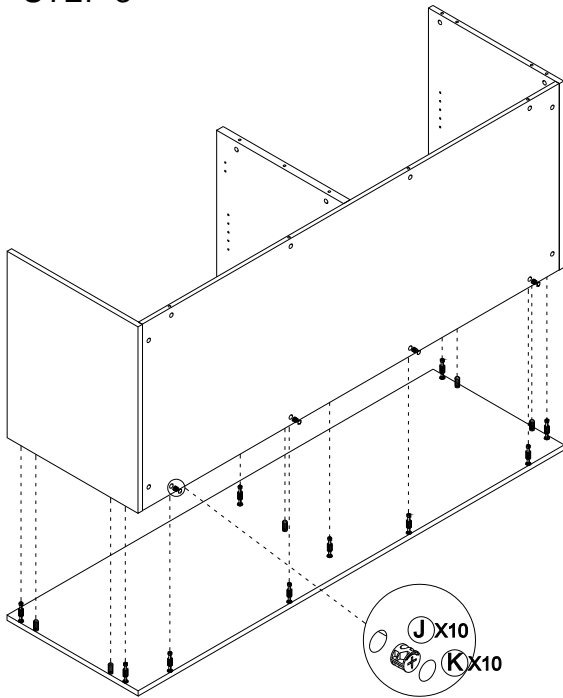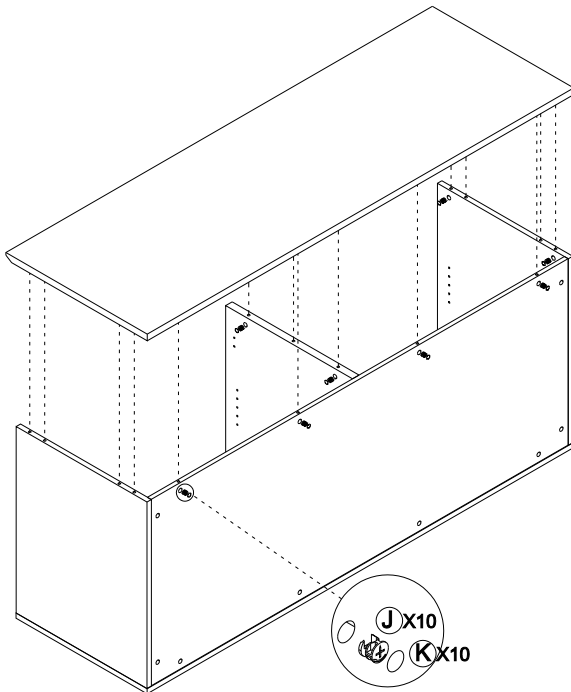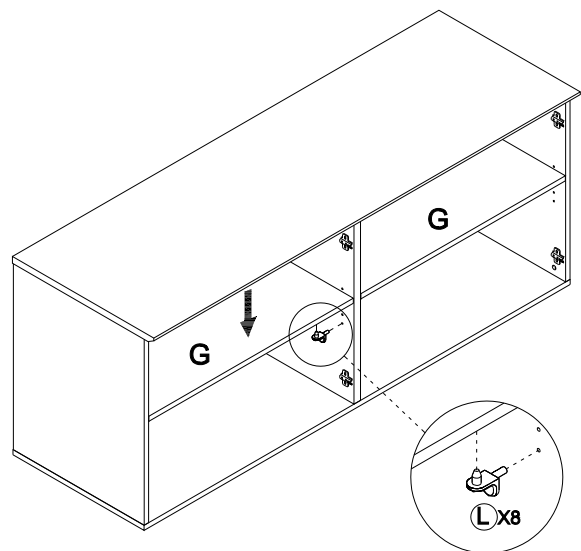
INSTRUCTIONS

STEP 7

ADJUSTMENT HEIGHT

ADJUSTMENT DEPTH

ADJUSTMENT GAP

Side panel

Door

Side panel

Door

Side panel

Door