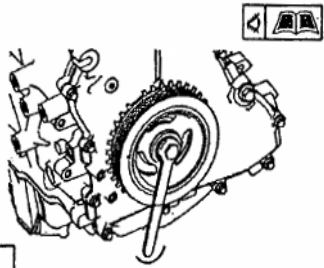
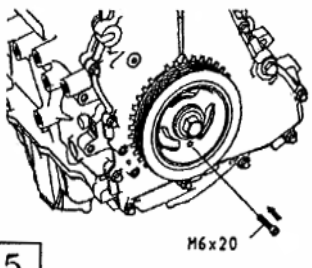
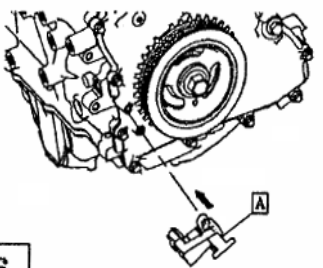
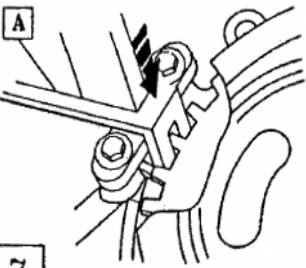
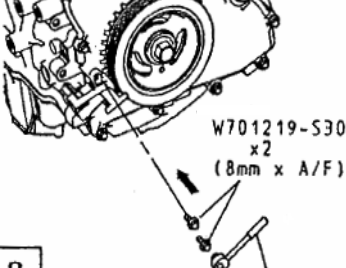
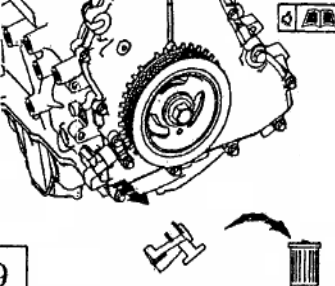
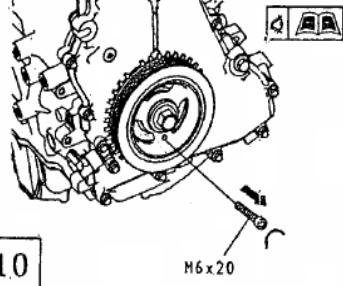
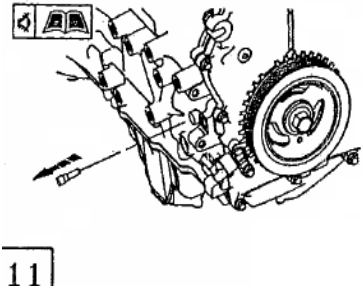

-Crank Sensor Installation Instructions -Sensor de Cigüenal Instrucciones de Montaje -Capteur de Vilbrequin Notice de Montage	-Special tool from FORD # 303-507 -Herramienta especial de FORD # 303-507 -Outil special de FORD # 303-507	-Remove sensor -Quitar sensor -Retirez la sensor		-Insert tool 303-507 -Aplicar herramienta 303-507 -Mettez en place l'outil 303-507
				
-Rotate engine to stop -Girar el motor hasta el tope -Fates tourner le moteur jusqu'a la butee	-Insert M6x20 bolt -Aplicar tornillo M6x20 -Mettez vis M6x20	-Install sensor -Aplicar sensor -Mettez en place capteur		
				
-Remove plastic tool and dispose -Quitar y eliminar la herramienta de plastico -Retirez l'outil en plastique puis mettez-le au rebut	-Remove bolt -Quitar el tornillo -Retirez la vis	-Remove tool 303-507 -Quitar herramienta 303-507 -Retirez l'outil 303-507		