



GLOVE DISPLAY RETAIL SET UP INSTRUCTIONS


1.) START WITH REMOVING ALL COMPONENTS FROM SHIPPER.

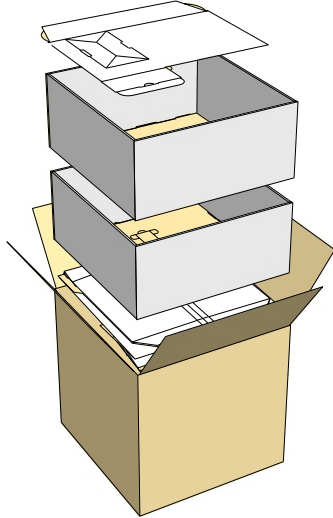


2.) [A] UNFOLD BASE AT BREAK DOWN SCORES. [B] SQUARE UP BASE.

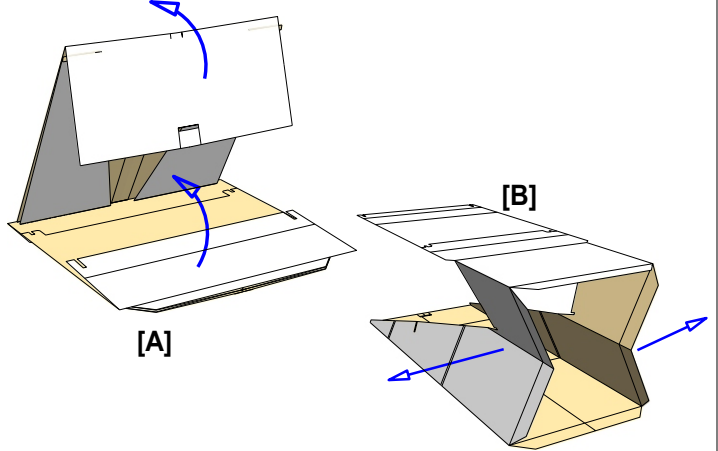


3.) [A] FOLD BOTTOM FLAPS. [B] FOLD SHELF AND LOCK BOTTOM OF PANEL. [C] LOCK TOP OF PANEL.

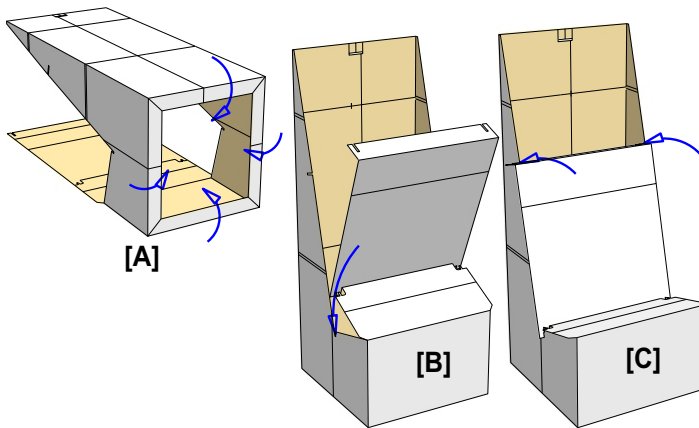

4.) [A] PLACE TRAYS ON BASE. [B] LOCK TOP TRAY'S TAB INTO THE BASE.

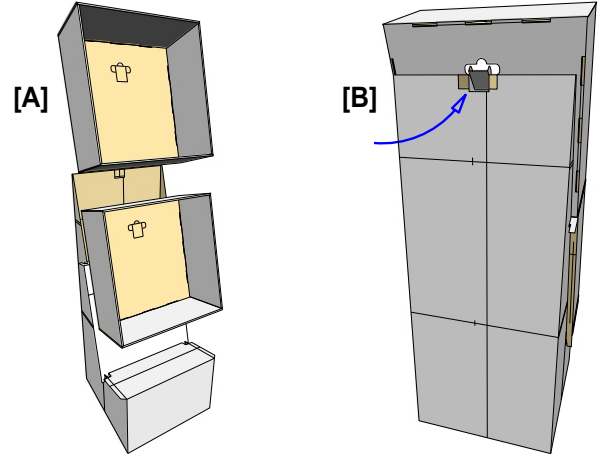

5.) [A] SQUARE HEADER BACK PANEL. [B] TUCK TOP PANEL. [C] LOCK TOP PANEL AND FOLD BOTTOM FLAPS.

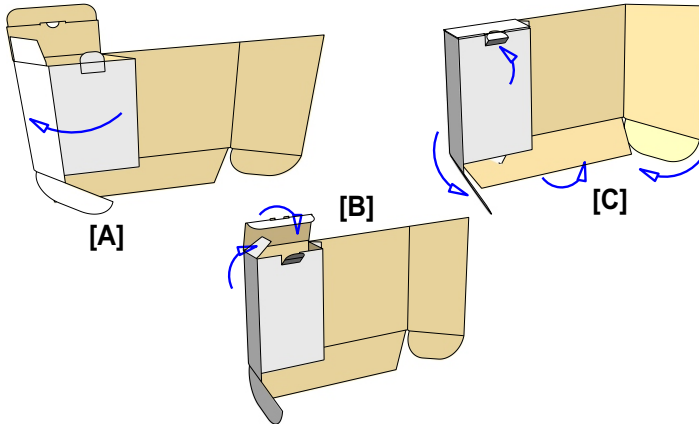

6.) [A] TAB HEADER INTO TOP TRAY SLOTS. [B] FOLD HEADER FLAPS. [C] COMPLETED DISPLAY.

