

## installation and operation instructions

### ⚠ WARNING

THESE INSTRUCTIONS MUST BE READ CAREFULLY BY ALL PERSONS WHO HAVE OR WILL HAVE THE RESPONSIBILITY FOR USING OR SERVICING THE PRODUCT. Like any complex piece of equipment, this kit from MSA will perform as designed only if it is used and serviced according to the instructions. OTHERWISE, IT COULD FAIL TO PERFORM AS DESIGNED, AND PERSONS WHO RELY ON THIS PRODUCT COULD SUSTAIN SERIOUS PERSONAL INJURY OR DEATH.

The warranties made by MSA with respect to the product are voided if the product is not installed, used, and serviced according to the instructions. Please protect yourself and your employees by following the instructions. Please read and observe the WARNINGS and CAUTIONS inside. For any additional information relative to use or repairs. Call 1-800-MSA-2222 during regular working hours.

### INSTRUCTIONS FOR USE


The Quik-Chek Adapter allows quantitative fit tests to be performed on a pressure demand Ultra Elite Firehawk facepiece by only trained and qualified personnel. Special probed facepiece are not required.

### ⚠ WARNING

Do NOT use the Quik-Chek adapter on a facepiece in hazardous atmospheres. The Quik-Chek adapter is for quantitative facepiece fit testing ONLY and is not NIOSH approved for use in a hazardous atmospheres. Failure to follow this warning can result in serious personal injury or death.

### INSTALLING THE QUIK-CHEK ADAPTER TO THE FACEPIECE

1. Remove the suction cup from the clip if it is attached. Insert the end of the tube with the clip through the spokes of the spider valve in the facepiece. Carefully pull the tube through.
2. Push the Quik-Chek Adapter into the inlet of the facepiece. Check to make sure the spider valve and the inhalation check valve are in place.
3. Attach the suction cup to the clip. Moisten the surface of the suction cup and attach it to the inside surface of the lens so that it is positioned between the nose and mouth.
4. Don the facepiece. Place a finger over the end of the tubing connector and perform a facepiece tightness test as described in the appropriate respirator instructions.
5. Once the respirator has passed the above test, it is ready for quantitative fit testing. Attach the in-mask sampling line from the fit-test measuring device to the tubing connector and proceed with the testing.

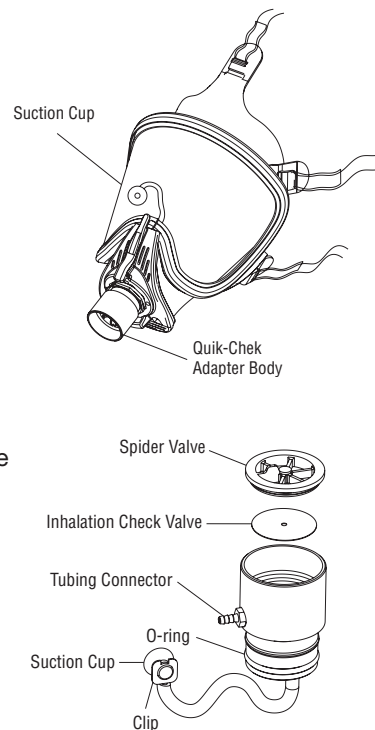

### TO REMOVE THE QUIK-CHEK ADAPTER

Take off facepiece. Detach the suction cup from the facepiece. Remove the Quik-Chek Adapter from the facepiece and carefully pull the tube out of the facepiece. Check the facepiece's inhalation check valve and the spider valve for any damage. If they are damaged, replace the valves before using the facepiece.



For More Information: Call (1-800-MSA-2222) or Visit Our Website at ([www.MSAnet.com](http://www.MSAnet.com))



Be Sure.  
Choose MSA.

MINE SAFETY APPLIANCES COMPANY  
PITTSBURGH, PENNSYLVANIA, U.S.A. 15230