

# Carrier Latch-Spring Lockwasher Installation


These instructions apply only to the AirFrame™ Carrier and Harness assembly manufactured from May 2004 through December 2004. The AirFrame can be distinguished from other units by its large side handles.

1. Remove the cylinder from the carrier and unlatch the cylinder band at the cylinder sizing tab, opposite the latch mechanism. *(as always, be sure to wear safety glasses)*

2. If there is a gap between the latch-springs, continue with step 3. If there is no gap, continue with step 4.



3. Slide the latch-springs together. Note: Sliding the latch-springs together may require the use of both hands or pliers.

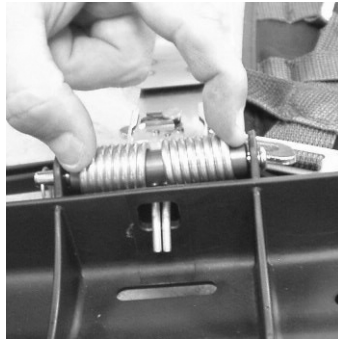

4. Slide the lockwasher (P/N 10062951) over the latch-spring "legs".



5. Lift the latch-spring "legs" slightly with a prybar or channel locks.



6. Slowly tip the backplate away from you and allow the lockwasher to fall into the backplate slot. The washer should now be trapped between the carrier and the spring mechanism.

7. Re-attach the cylinder band to the adjustment tab on the opposite side of the carrier.



For More Information: Call (1-800-MSA-2222) or Visit Our Website at ([www.MSAnet.com](http://www.MSAnet.com))



Be Sure.  
Choose MSA.

MINE SAFETY APPLIANCES COMPANY  
PITTSBURGH, PENNSYLVANIA, U.S.A. 15230