




# Assembly Instructions MODEL NO.:SL7136CER Credenza w/Corner ext. /Right

LO2/02-09

CONC10	CONC11	DOWEL	GLIDE	TUN013LB	TUN018SC	TUN015BG	FLAT BRACKET	PLASTIC CAP	PLASTIC CAP
A Cam Lock Pin 18Pcs+2Pcs	B Cam Lock 18Pcs+2Pcs	C Dowel 12Pcs+2Pcs	D Glide 5Pcs	E L-Bracket 4Pcs	F Screw #4*5/8" 42Pcs+3Pcs	G Grommet 1Pcs	H Flat Bracket 2Pcs	I DEEP CAMLOCK CAP 10Pcs+1Pcs	J CAMLOCK CAP 8Pcs+1Pcs

## STEP1

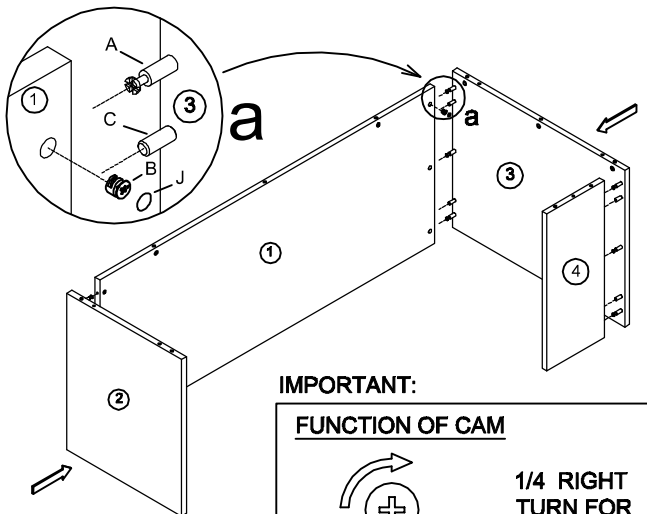

IMPORTANT:


### FUNCTION OF CAM



1/4 RIGHT  
TURN FOR  
LOCKING


MAKE SURE THE ARROW IS POINTING UPWARDS  
BEFORE INSERTING INTO THE PANEL'S HOLE.

## STEP2

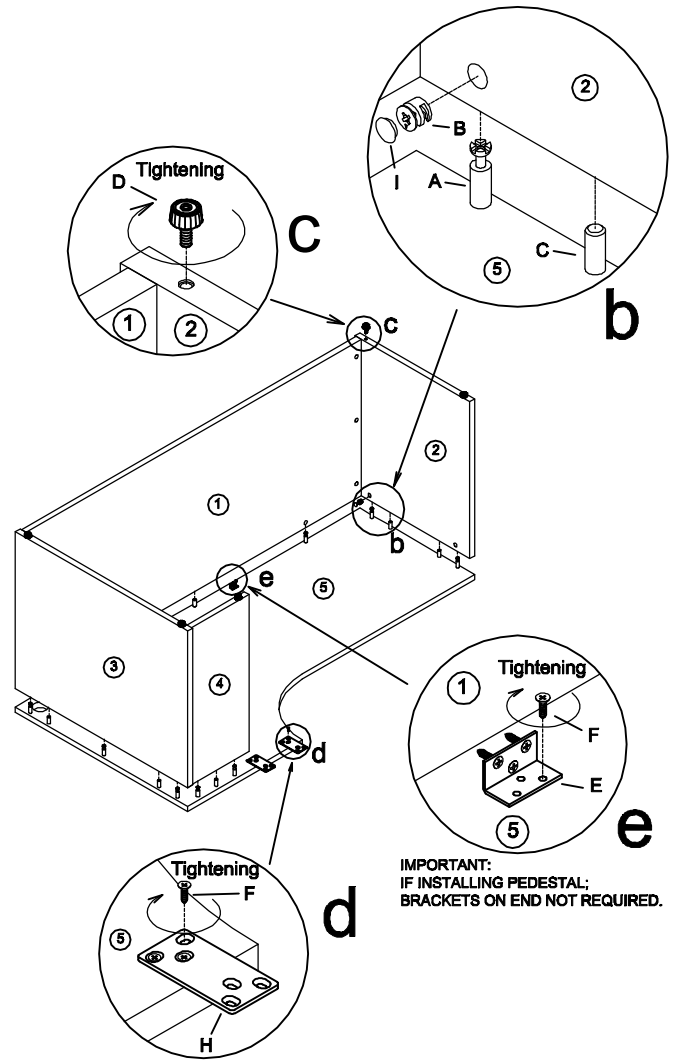

IMPORTANT:  
IF INSTALLING PEDESTAL;  
BRACKETS ON END NOT REQUIRED.

## STEP3

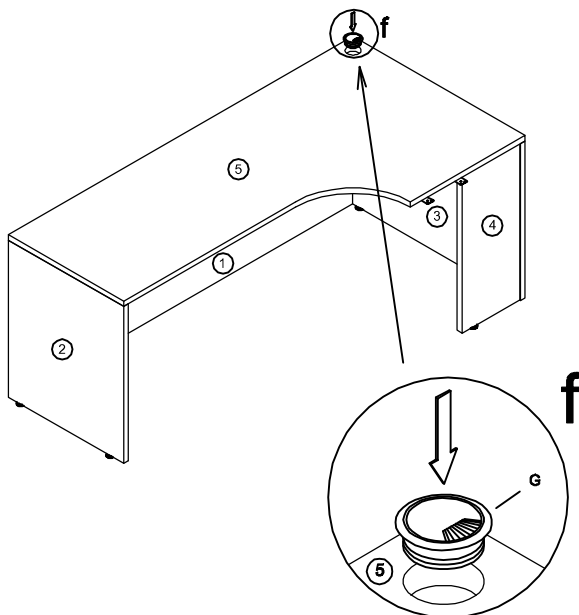

### IMPORTANT NOTE:

- It is advisable to assemble unit on a carpet to avoid scratch.
- Check to be sure that you have all parts and hardware.
- Don't tighten all screws/bolts until all completely assembled.
- It is recommended to require 2 persons to complete the assembling.