



Congratulations on the purchase of your new *Signature Series* product!

COMPONENTS

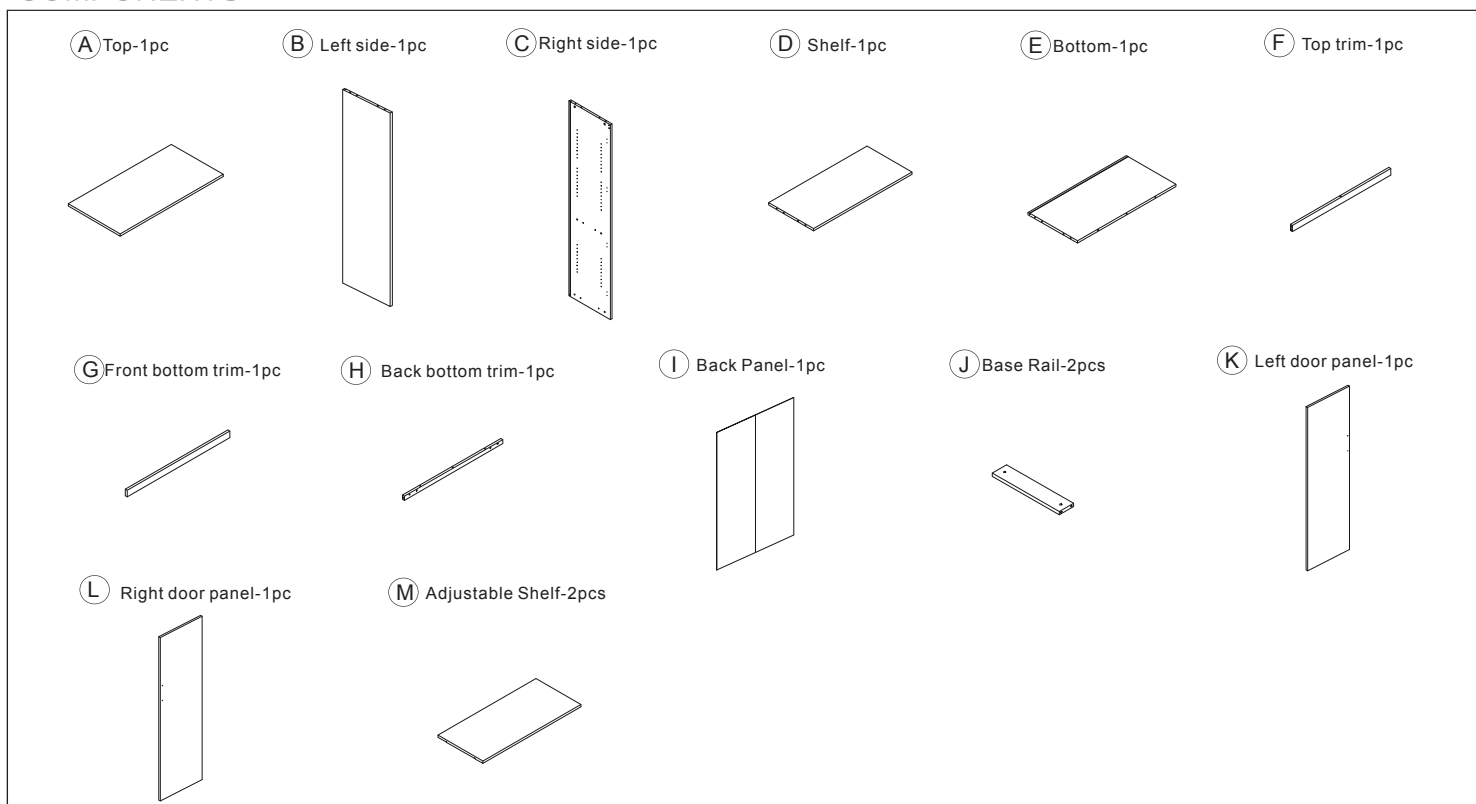


HARDWARE & TOOLS

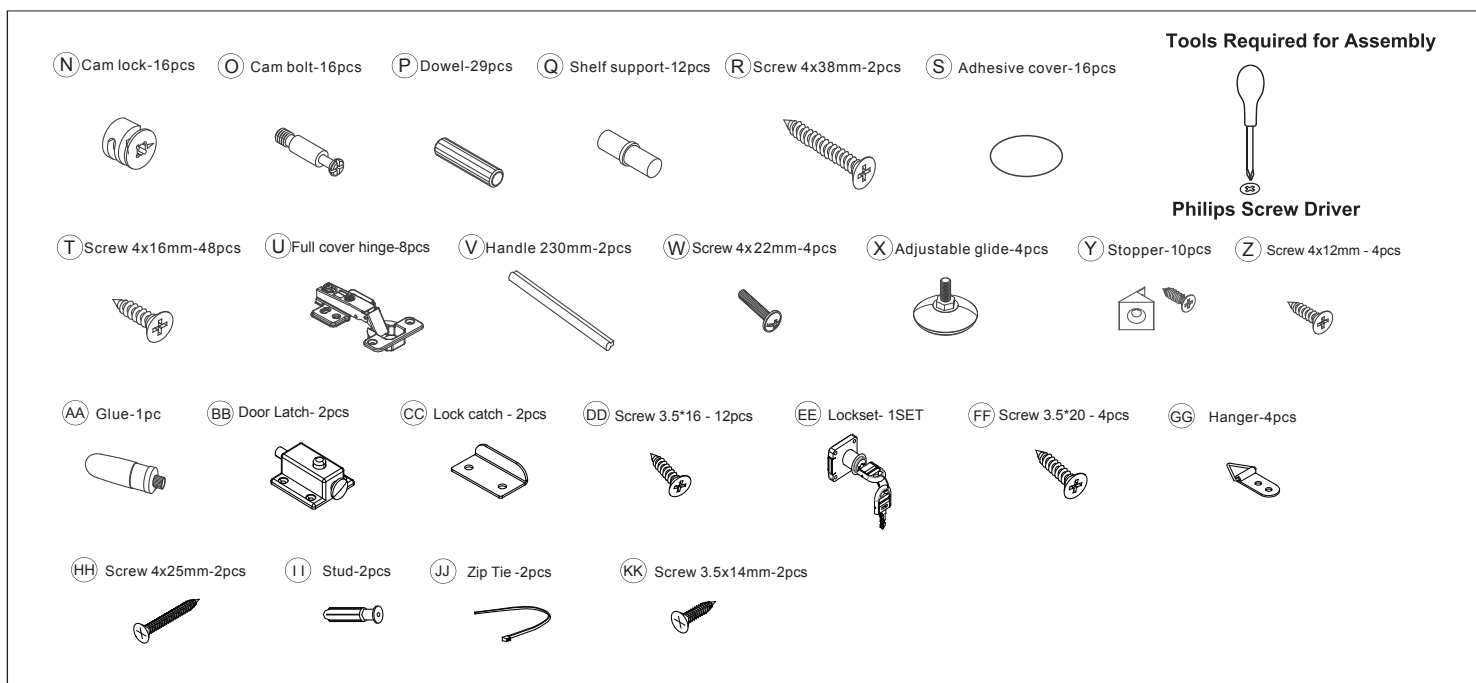


Congratulations on the purchase of your new *Signature Series* product!

INSTRUCTIONS


STEP 1

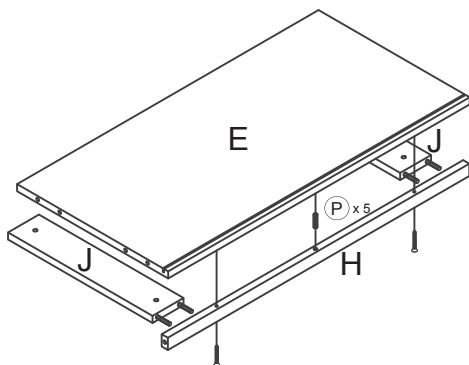

STEP 2

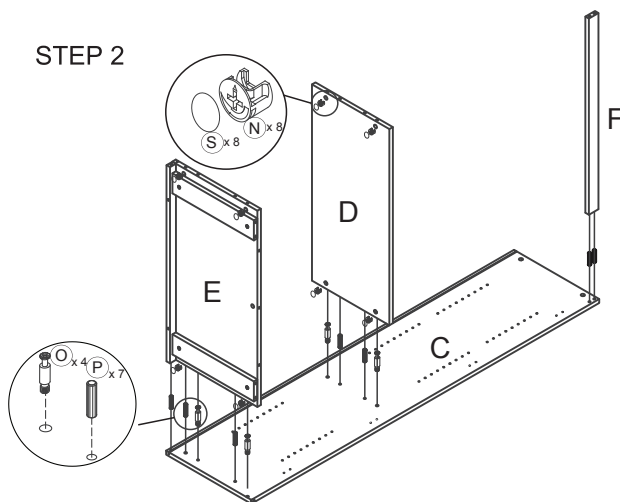


STEP 3

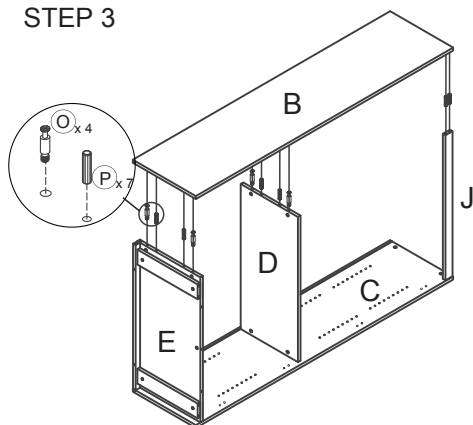


STEP 4


Turn to upright position.

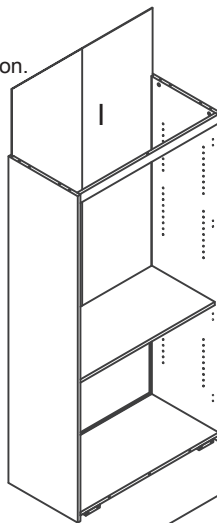


STEP 5

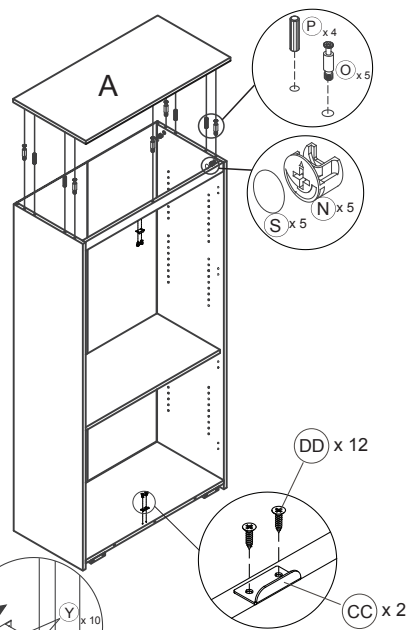

STEP 6

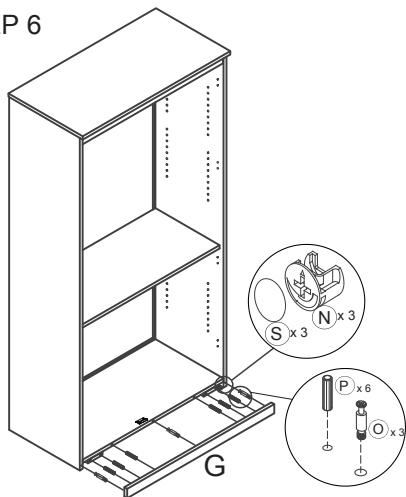

STEP 7

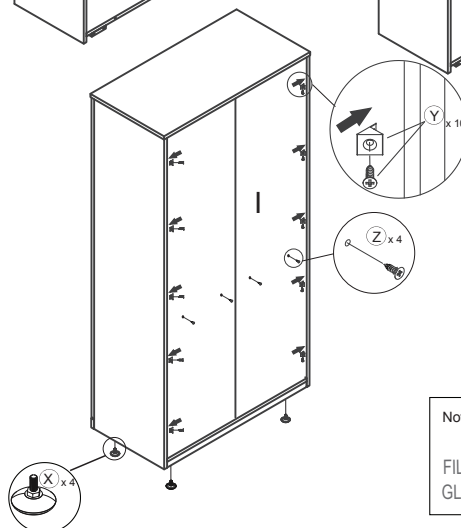

Note:




FILL WOOD DOWEL HOLE HALF WAY WITH GLUE FOR A STRONGER CONNECTION

Congratulations on the purchase of your new *Signature Series* product!


INSTRUCTIONS

STEP 8

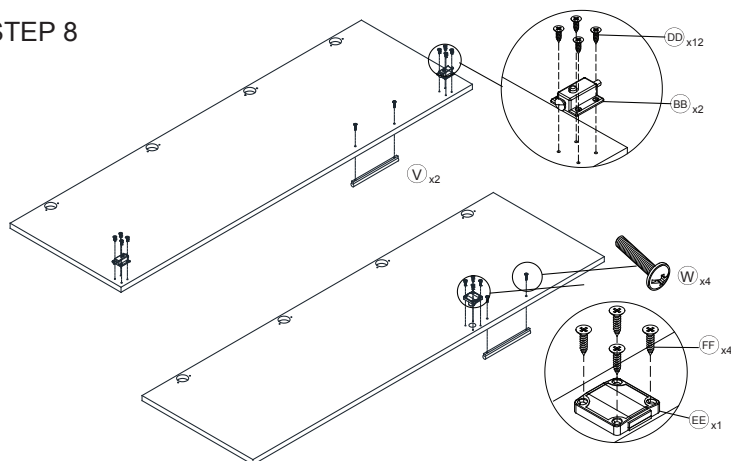


STEP 9

circular hole oval hole

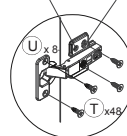


STEP 10

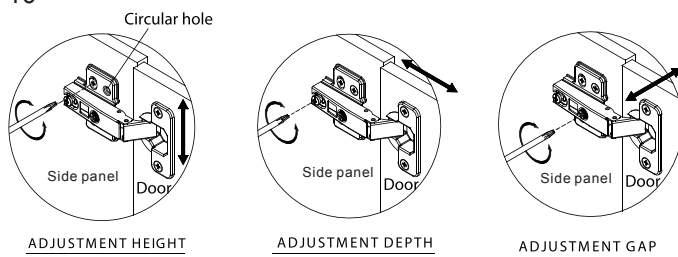


After properly adjusted, use screw T to fix the hinge into the circular hole.

STEP 11

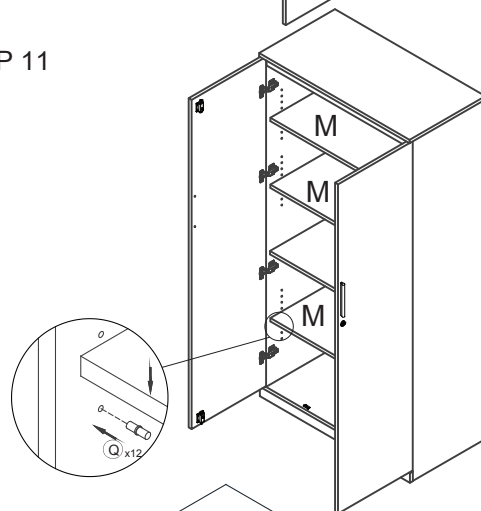

STEP 12

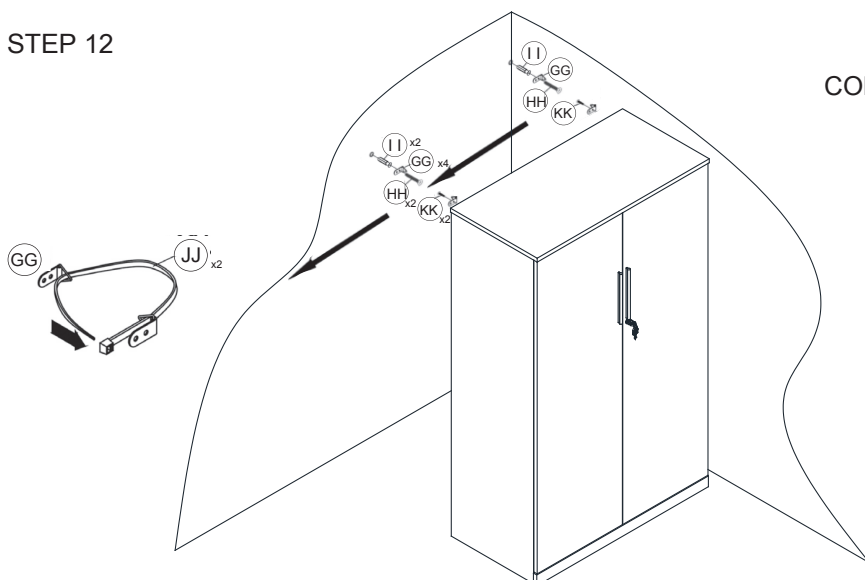

COMPLETED

