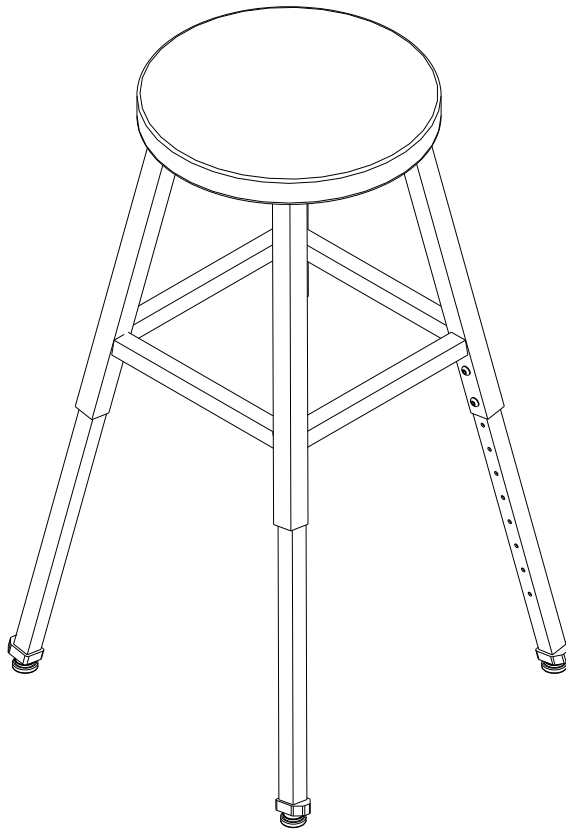





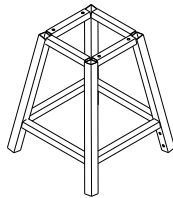



#34419 Adjustable Height Stool

Gray Frame w/Natural Wood Finish



Assembly Instructions

Part	Drawing	Description	Qty	Part	Drawing	Description	Qty
P1		Seat	1 EA	<div><div>Hardware List</div><div><div><div>A</div><div></div><div>Socket Screw M6X8mm</div><div>8 EA</div></div><div><div>A1</div><div></div><div>Socket Hd Screw M6X35mm</div><div>4 EA</div></div><div><div>B</div><div></div><div>Allen Wrench</div><div>1 EA</div></div><div><div>C</div><div></div><div>Lock Washer 6mm</div><div>8 EA</div></div></div></div>			
P2		Upper Leg Frame	1 EA				
P3		Lower Leg Insert	4 EA				

Assembly Diagram

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

- 1.) Identify and Separate all the Parts and Hardware.
- 2.) Place the Wood Seat (P-1) with the insert nuts facing up. Attach Upper Leg Frame (P-2) to the Wood Seat (P-1) using 4 Screws (A1) as shown in illustration #1.
(Finger tighten only)

Illustration # 1

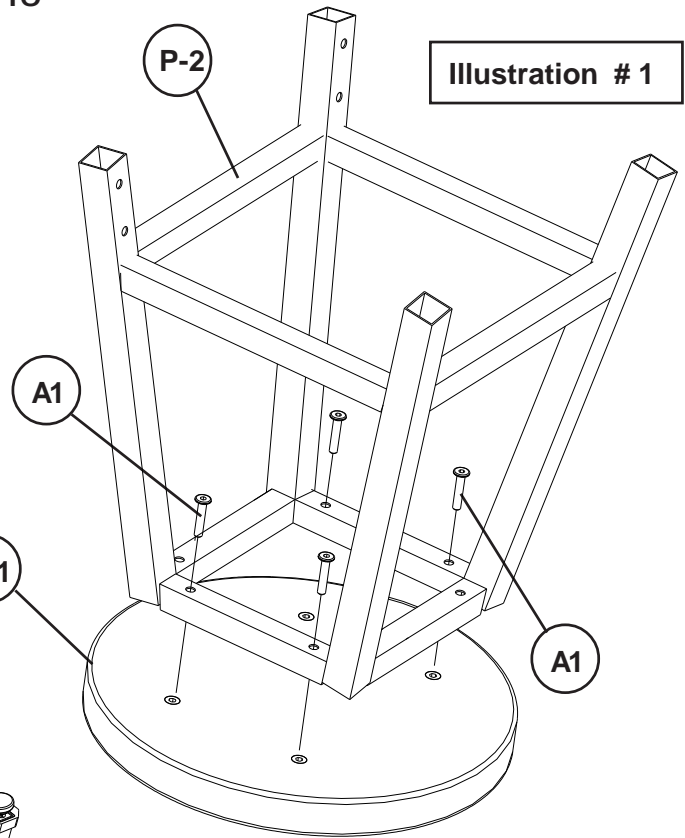
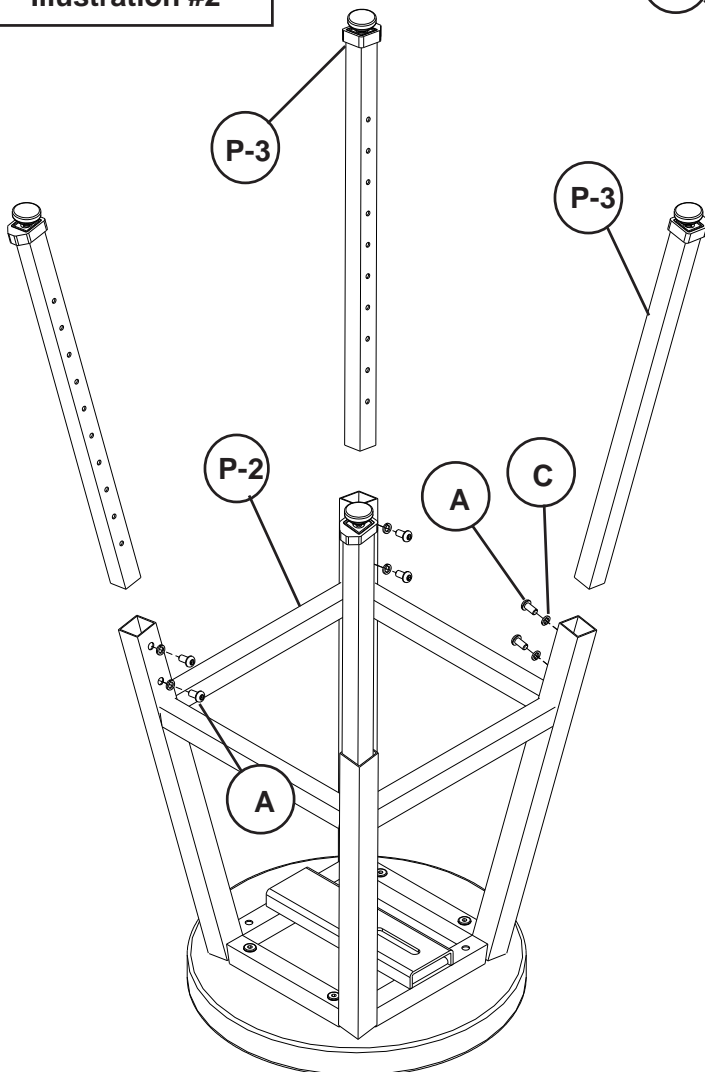


Illustration #2



- 3.) Slide 4 Lower Leg Inserts (P-3) into the Upper Leg Frame (P-2). Secure at desired height using 8 Screws (A) and 8 Lock Washers (C) as shown in illustration #2.

- 4.) Tighten all the screws at this time using Allen Wrench (B).