






National Business
Furniture

Holloway Collection

ASSEMBLY INSTRUCTIONS

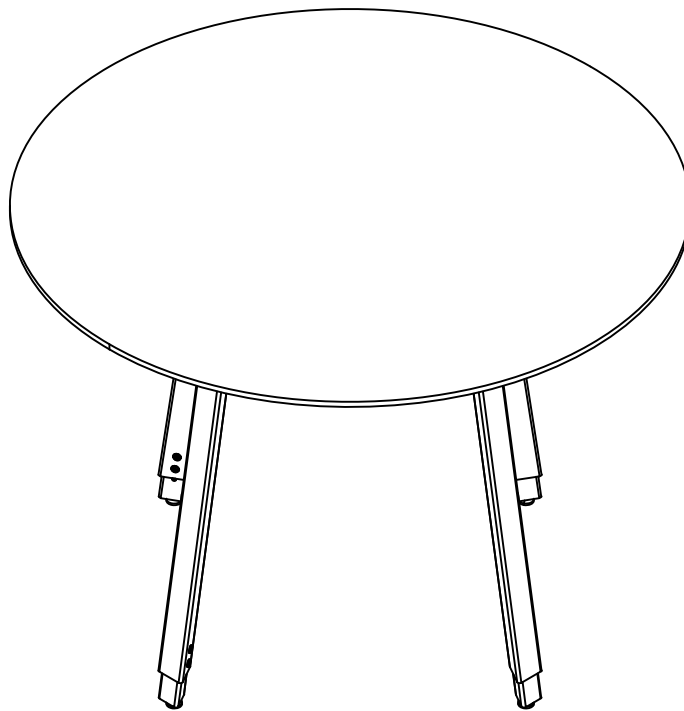





Assembly HARDWARE			
S/N	PICTURE	NAME	TOTAL QTY
A		CAM SCREW M6*10	16+1(SPARE)
B		SELF-TAPPING SCREW Ø3*19	8+1(SPARE)
C		WRENCH	1PCS




Part List

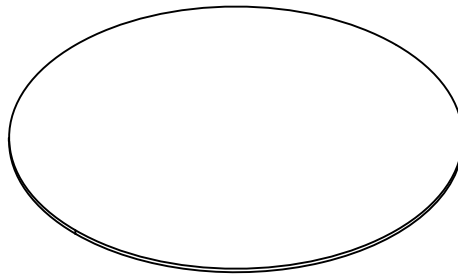

Desk top

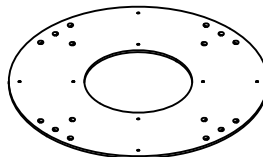


Round metal plate

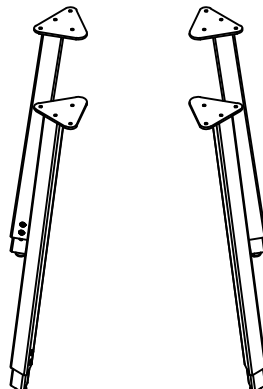

Legs



1. Install the round plate to 4 legs using "A" cam screw. 4pcs screw for each leg.
A(16X)

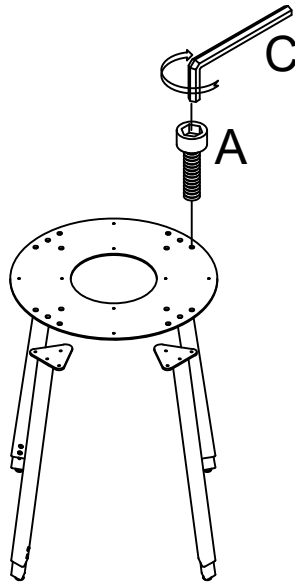

2. Install the round top on the plate using "B" self-tapping screw.
B(8X)

