


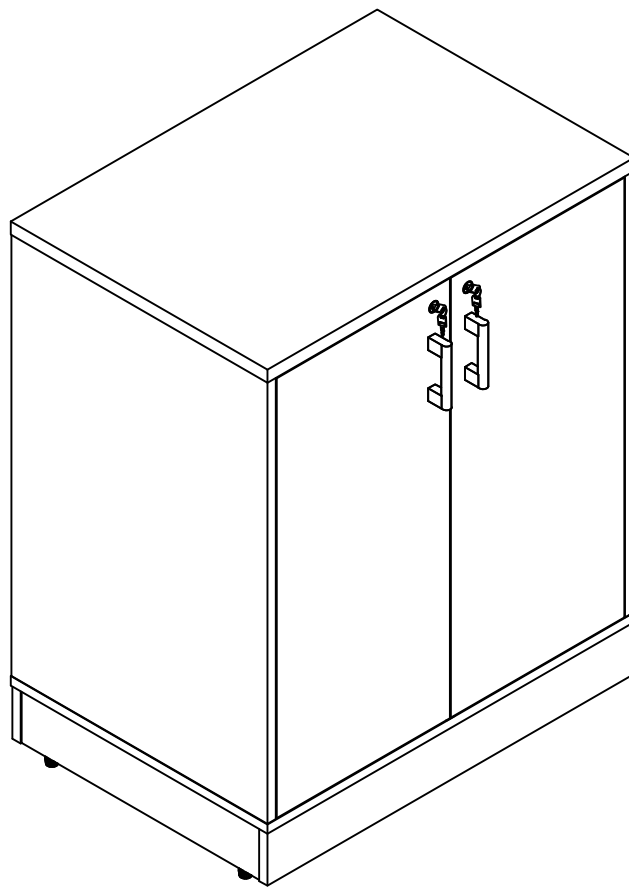




Assembly HARDWARE

S/N	PICTURE	NAME	TOTAL QTY	REMARK
A		CAM SCREW	22+1(SPARE)	
B		KLIX CAM	22+1(SPARE)	
C		CAM COVER STICKER	22+1(SPARE)	use cam covers to cover any klix cam screws
D		WOOD DOWEL	18+1(SPARE)	
E		LEVELER	4	
F		SHELF PEG	8+1(SPARE)	
G		HINGE	4PCS	
H		LOCK	2PCS	
I		Connector for rail	2PCS	
J		HANGING RAIL	1PCS	
K		Handle With Screws	2PCS	


PARTS LIST

- ① TOP PANEL
- ② LEFT SIDE PANEL
- ③ RIGHT SIDE PANEL
- ④ BOTTOM PANEL
- ⑤ BACK PANEL
- ⑥ BASE SUPPORT
- ⑦ CENTER PANEL
- ⑧ DOOR (2)
- ⑨ SHELF (2)

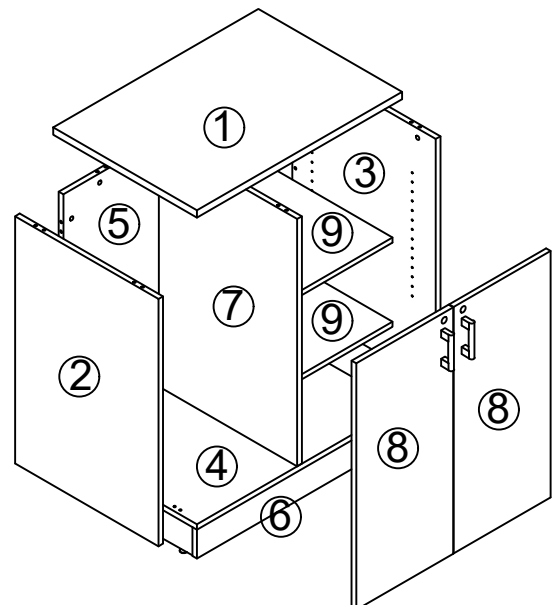




1. INSTALL THE "E" LEVELERS ON THE BOTTOM OF BASE SUPPORT ⑥.
E(4x)

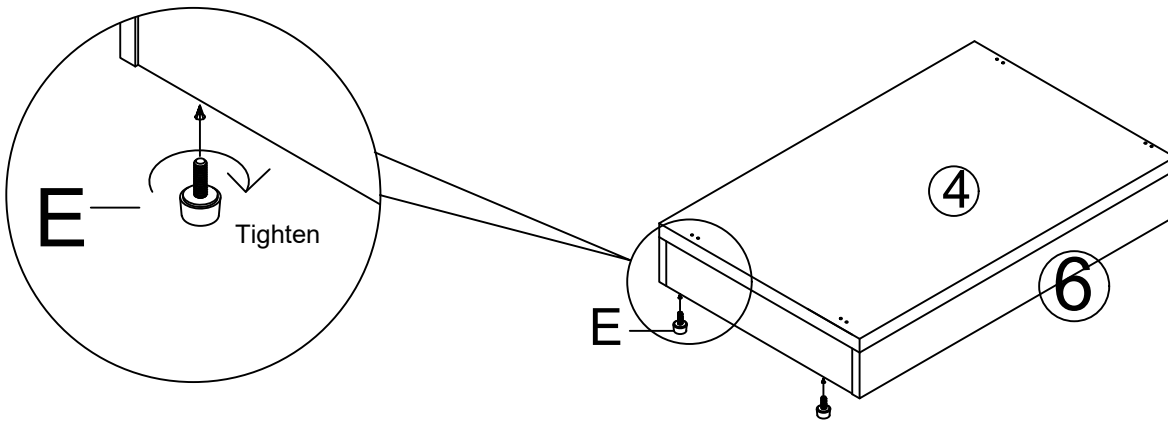

2. INSTALL "A" CAM SCREWS AND "D" DOWELS INTO BACK PANEL ⑤. INSERT
"B" KLIX CAMS INTO CENTER PANEL ⑦ . CONNECT PANEL ⑤ TO ⑦ .
TIGHTEN.

A (2x)
B (2X)
D(3X)

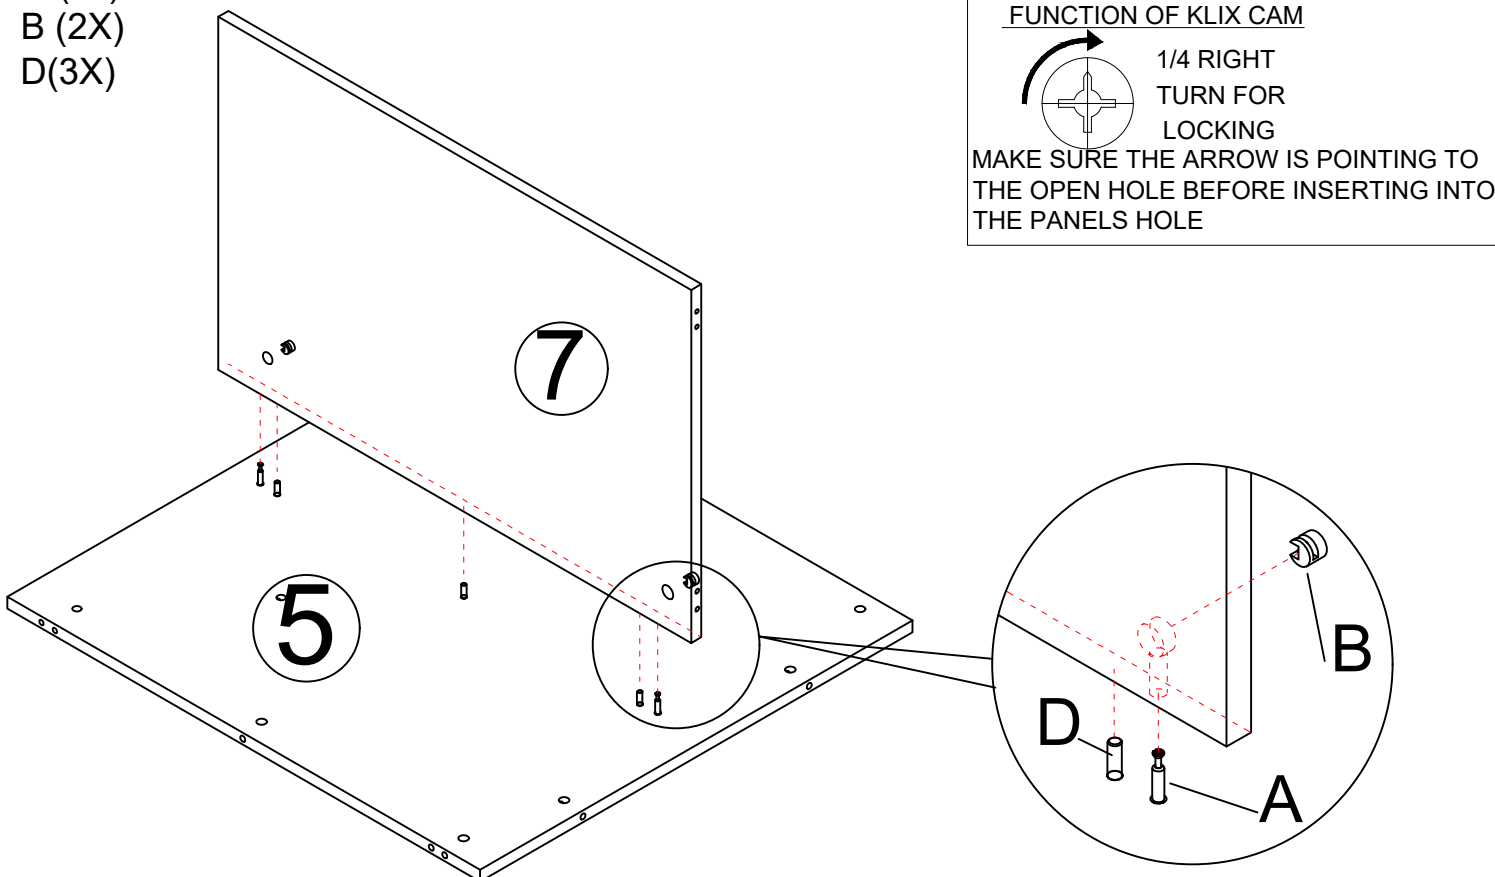




3. INSTALL "A" CAM SCREWS AND "D" DOWELS ON SIDE PANELS ② . INSTALL "B" KLIX CAMS INTO BACK PANEL ⑤. THEN CONNECT ② TO ⑤ ,TIGHTEN. DO THE SAME STEP TO CONNECT ③ TO ⑤.

A(4X)

B(4X)

D(6X)

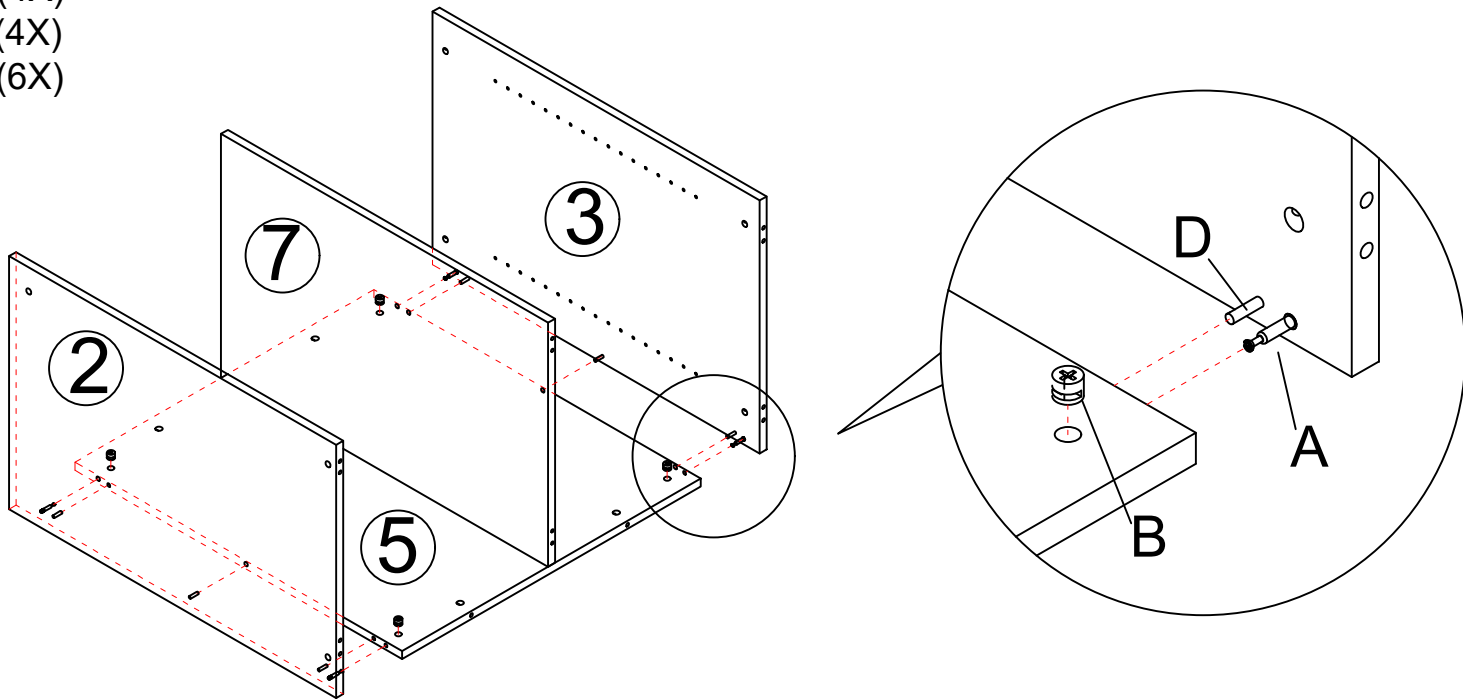


4. INSTALL "A" CAM SCREWS AND "D" DOWELS ON ON BOTTOM PANEL④. INSTALL "B" KLIX CAMS ON PANEL ② ③ ⑤ ⑦ . THEN CONNECT ④ TO ② ③ ⑤ ⑦, TIGHTEN. REPEAT STEP TO CONNECT ① TO ② ③ ⑤ ⑦.

A(12X)

B(12X)

D(12X)

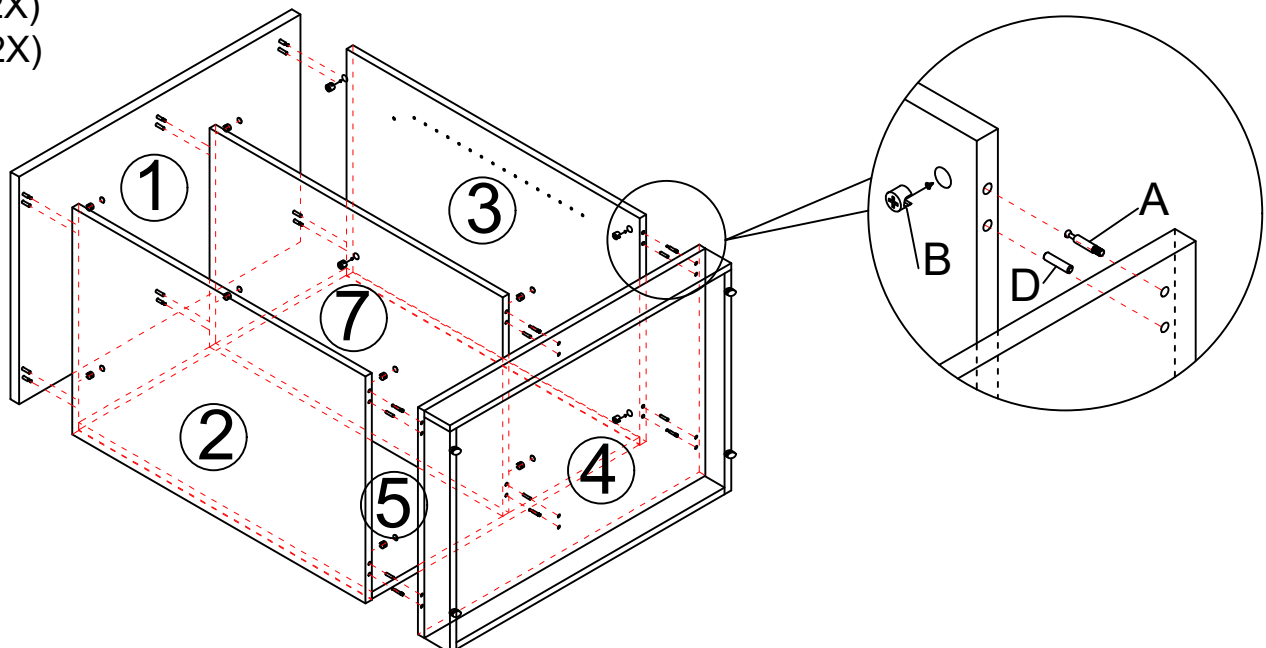




5. INSTALL "J" HANGING RAIL TO PANEL ② & ⑦ USING "I" CONNECTORS.


J(1x)

I(2x)

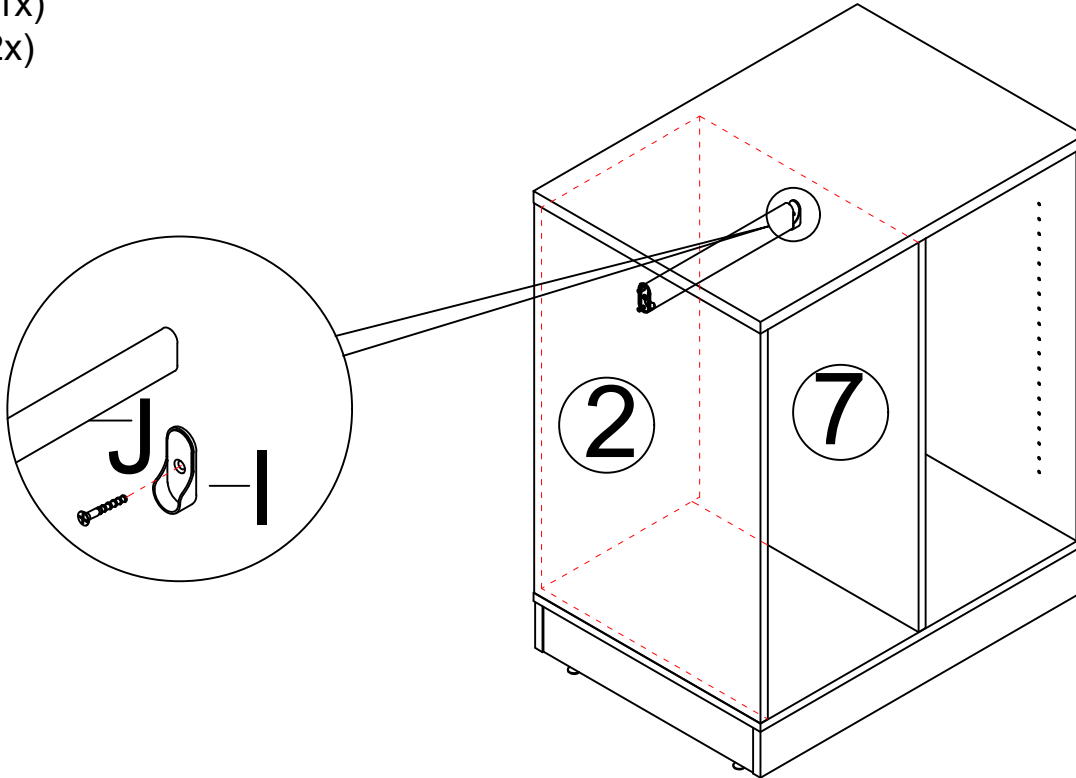

6. INSTALL "F" SHELF PEGS ON PANELS ③ & ⑦. THEN PLACE SHELVES ⑨ INSIDE ON "F" SHELF PEGS.



F(8X)

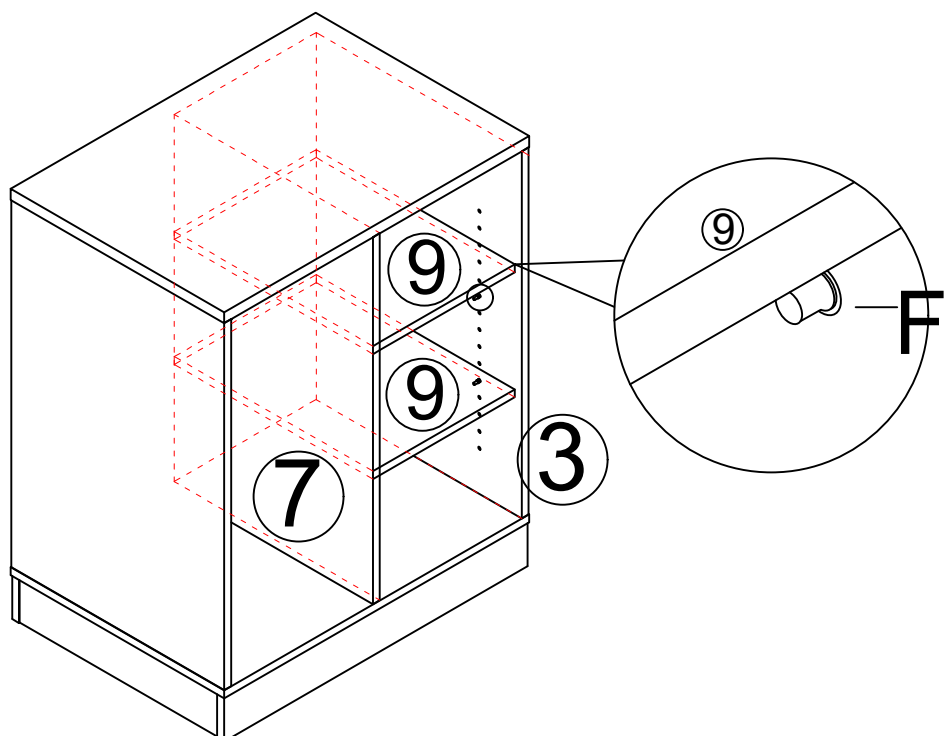




7. INSTALL "G" HINGES ON THE INSIDE OF DOORS ⑧ , 2 PER DOOR, ATTACH DOOR ⑧ TO PANELS ② AND ③, ADJUST AS NEEDED SEE BOX.
G (4x)

To adjust doors

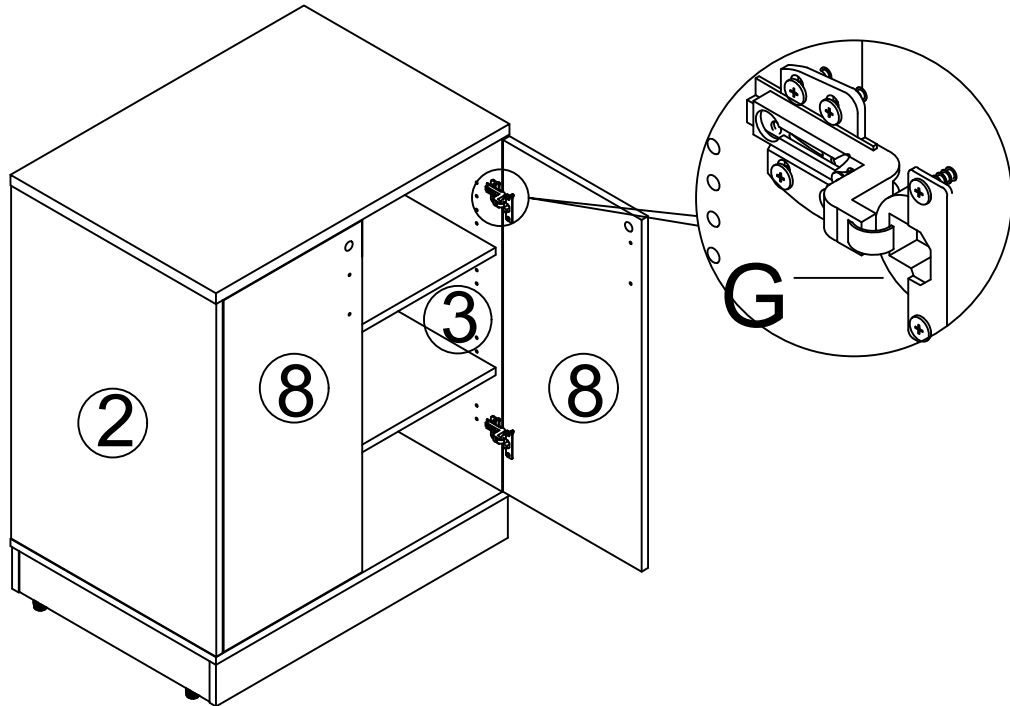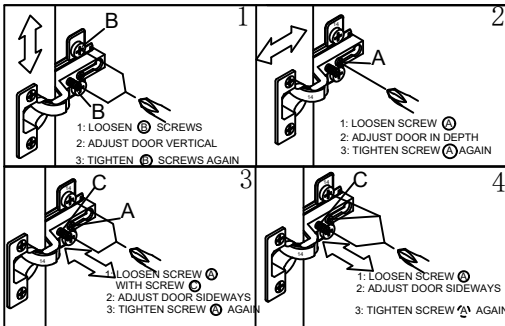


8. INSTALL "K" HANDLES ON OUTSIDE OF DOORS ⑧. ONE PER DOOR.
K (2x)

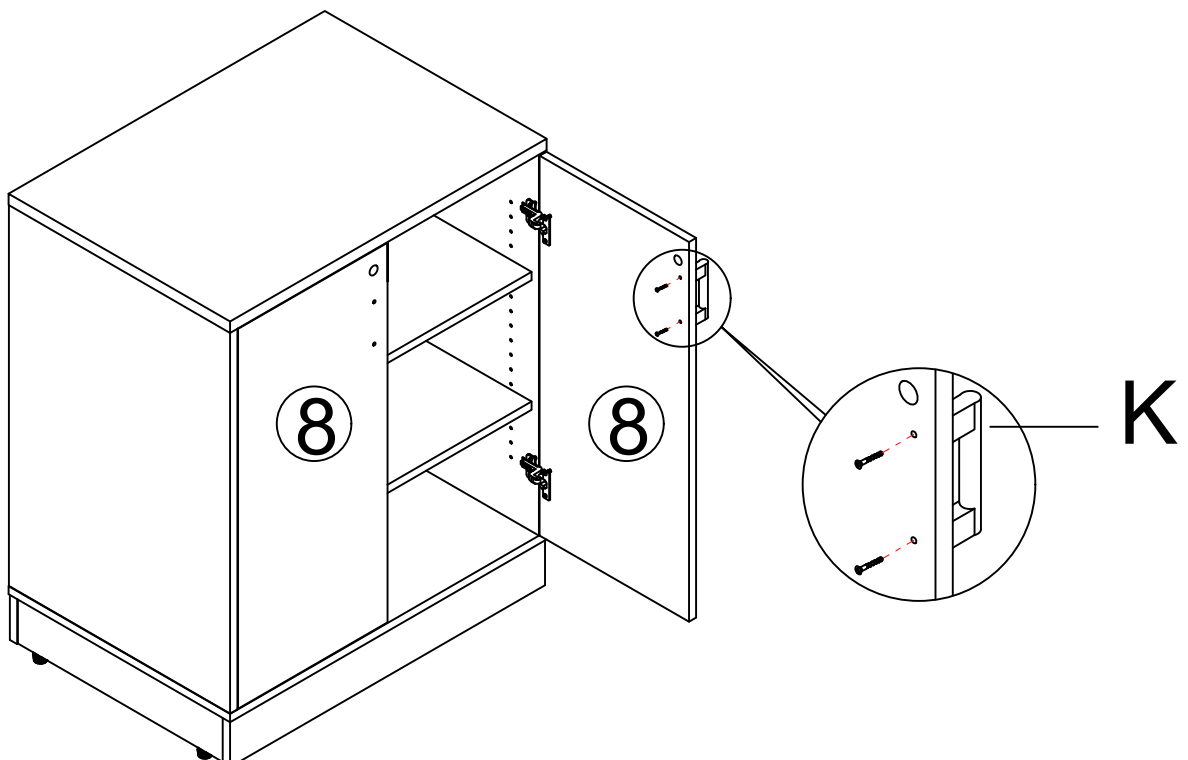




9. INSTALL LOCKS ON DOOR ⑧ AND UNDERSIDE OF TOP ①. ONE PER DOOR.
H(2x)

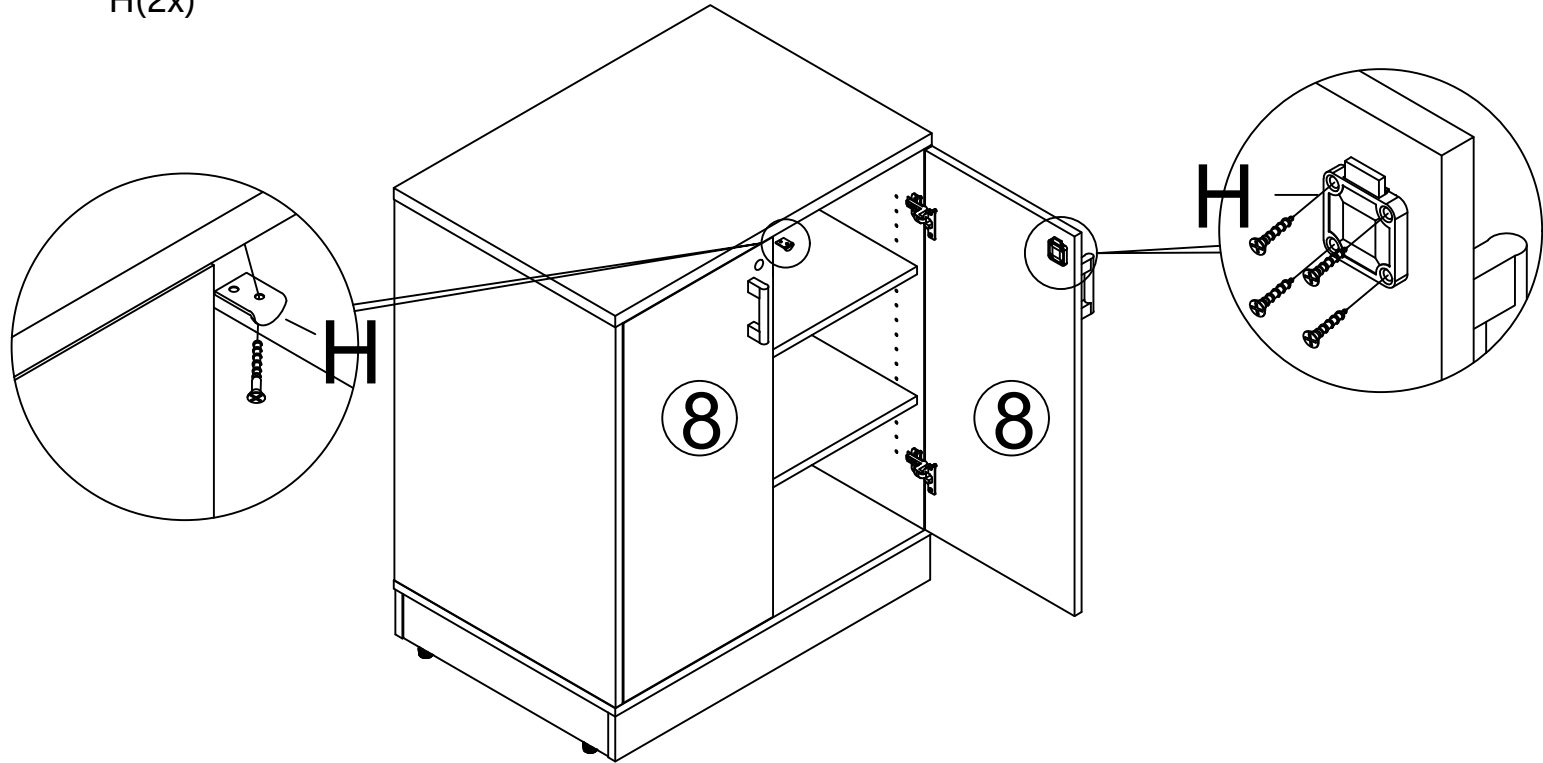

10. USE "C" CAM COVERS STICKERS TO COVER ALL EXPOSED KLIX CAMS.
C (21x)

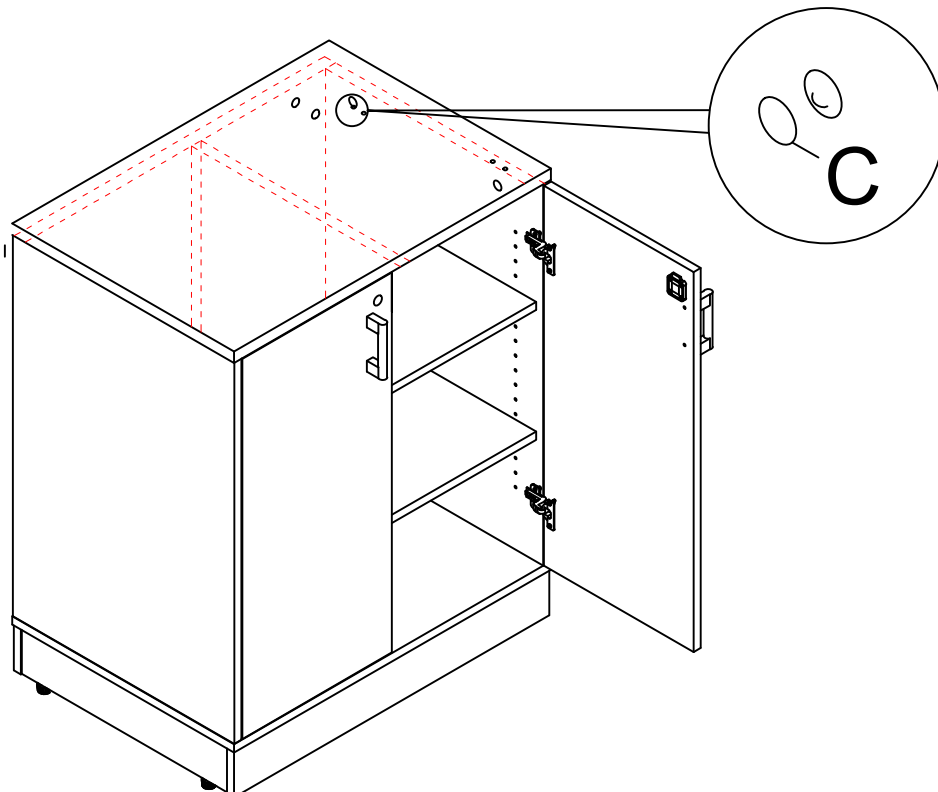



11. COMPLETED

