




National Business
Furniture

At Work- 60" x 24"
72" x 24"
72" x 30"

Table without Modesty Panel Assembly Instructions


COMPONENTS

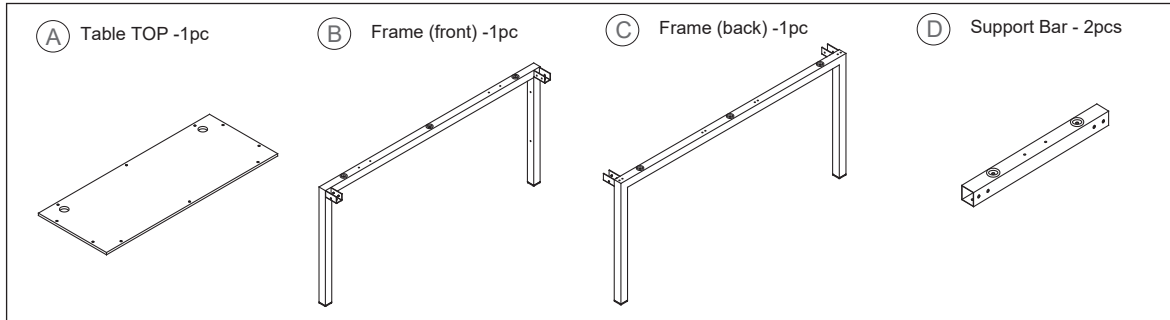

(YH) Plastic Washer
- 10pcs



HARDWARE & TOOLS

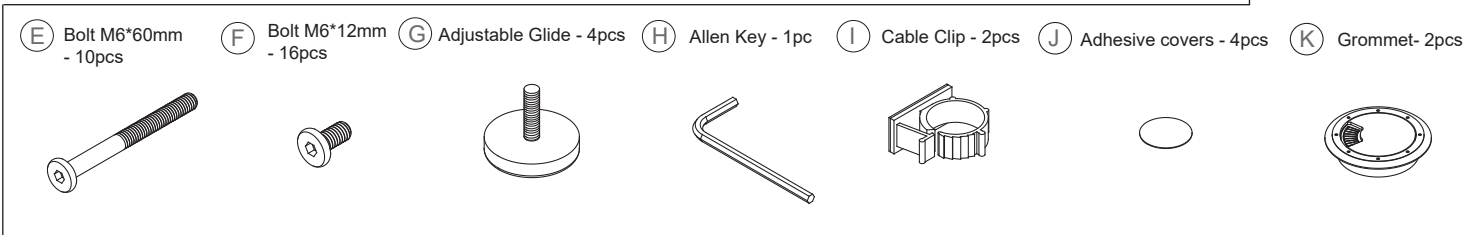

INSTRUCTIONS

STEP 1


Note: Do not tighten screws until all screws have been hand-started.

STEP 2

Peel off the film of (YH) Washers



Stick washers within metal rings on the frame, assuring that holes line up.

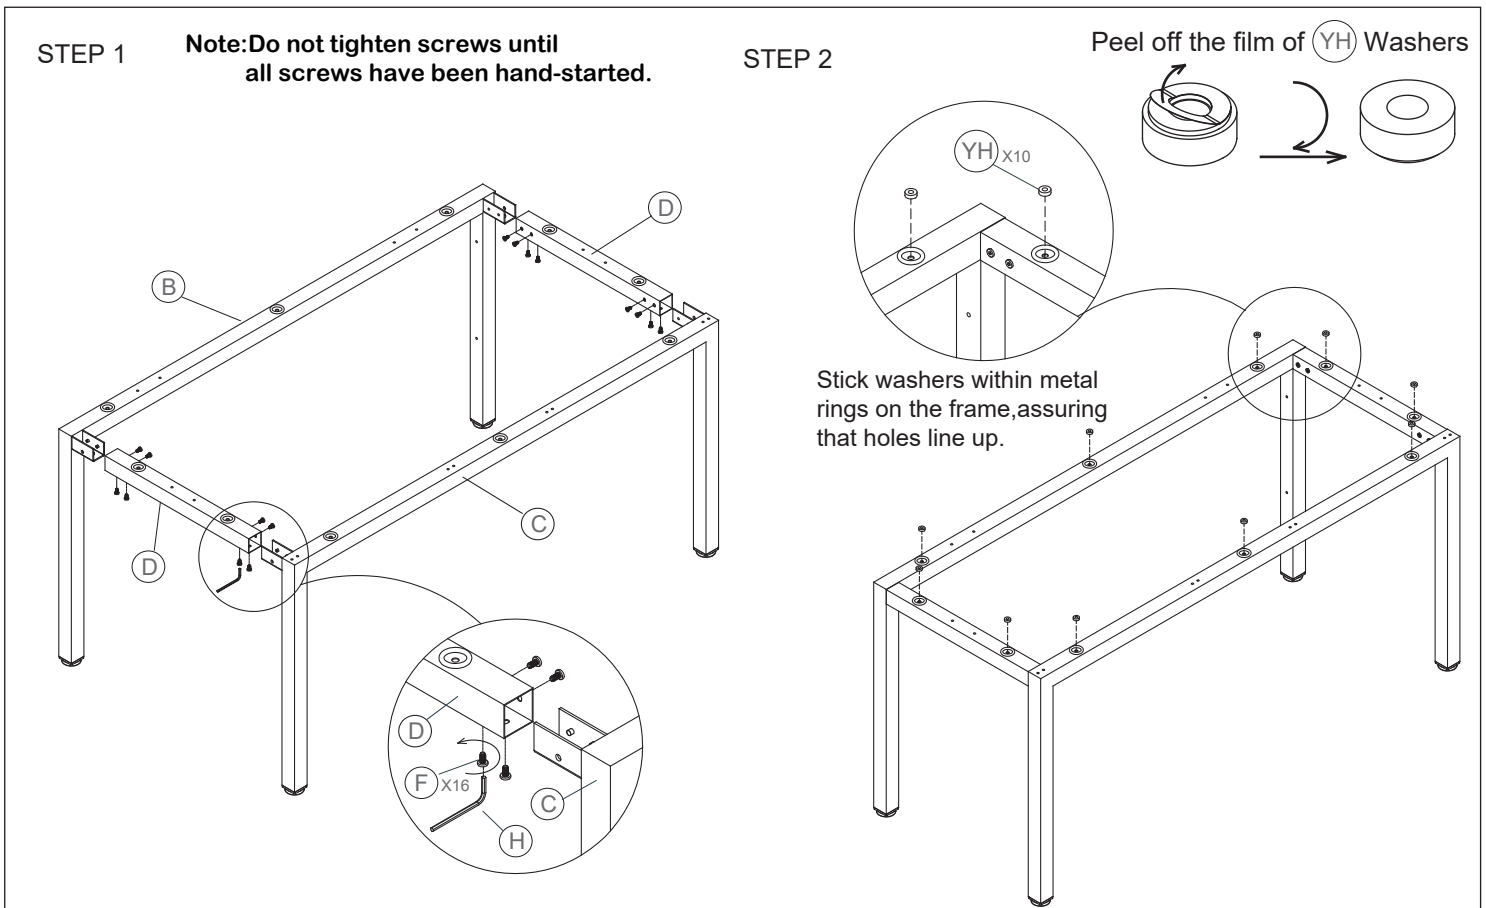



National Business
Furniture

At Work- 60" x 24"

72" x 24"

72" x 30"


Table without Modesty Panel Assembly Instructions

INSTRUCTIONS


STEP 3

NOTE


If you purchase the Frosted Glass Privacy Panel, make sure to install the metal bracket, from the panel hardware kit, to the station before assembling the desk top.

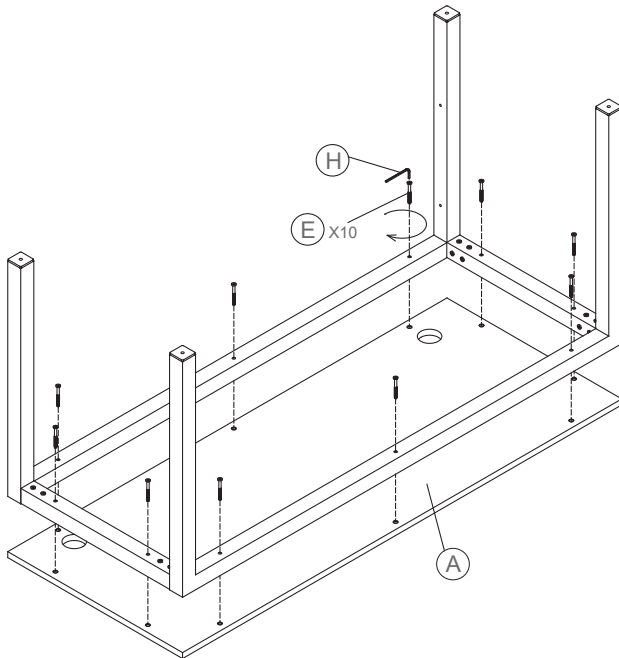

STEP 4

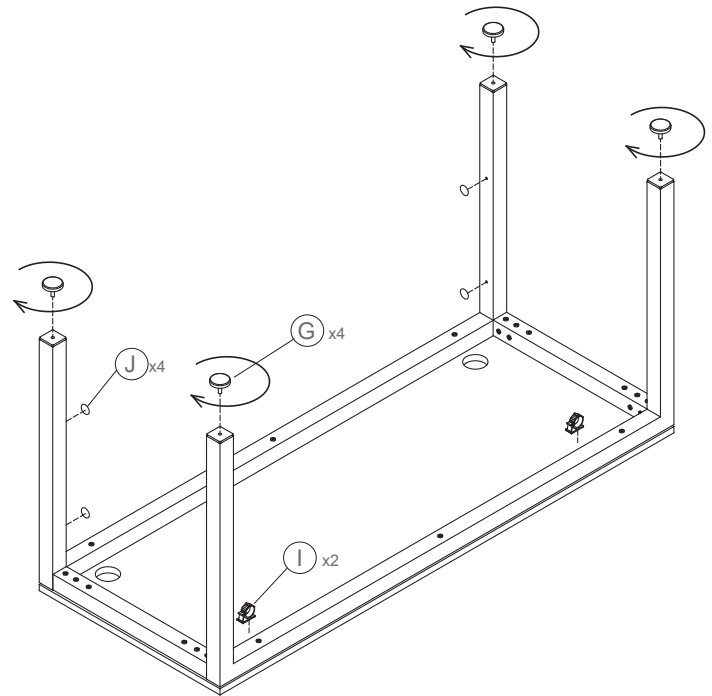

STEP 5

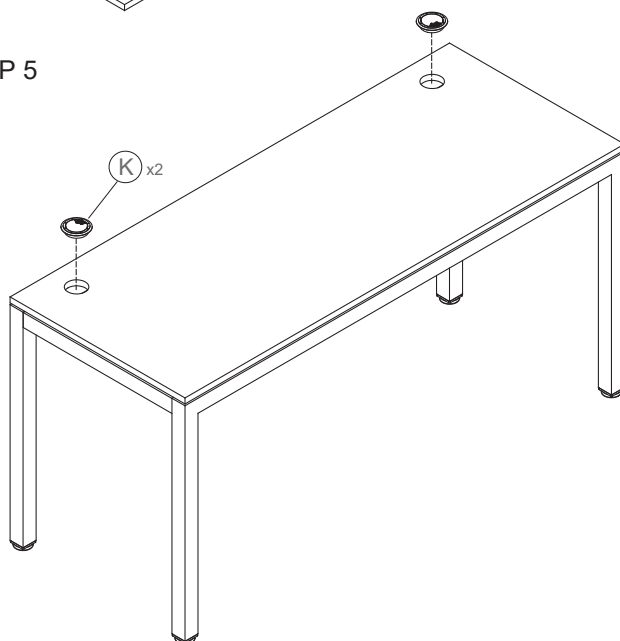





At Work- Return for 60" L Desk

Assembly Instructions

COMPONENTS

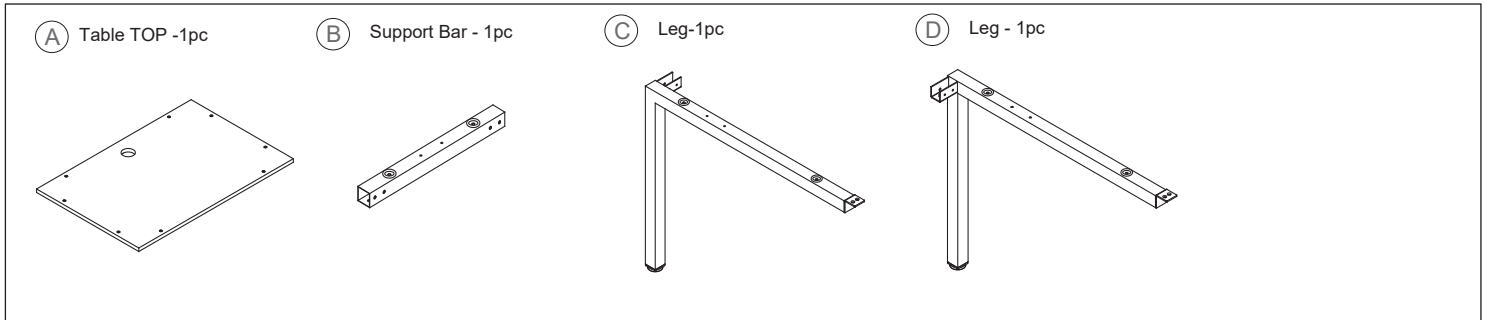


HARDWARE & TOOLS

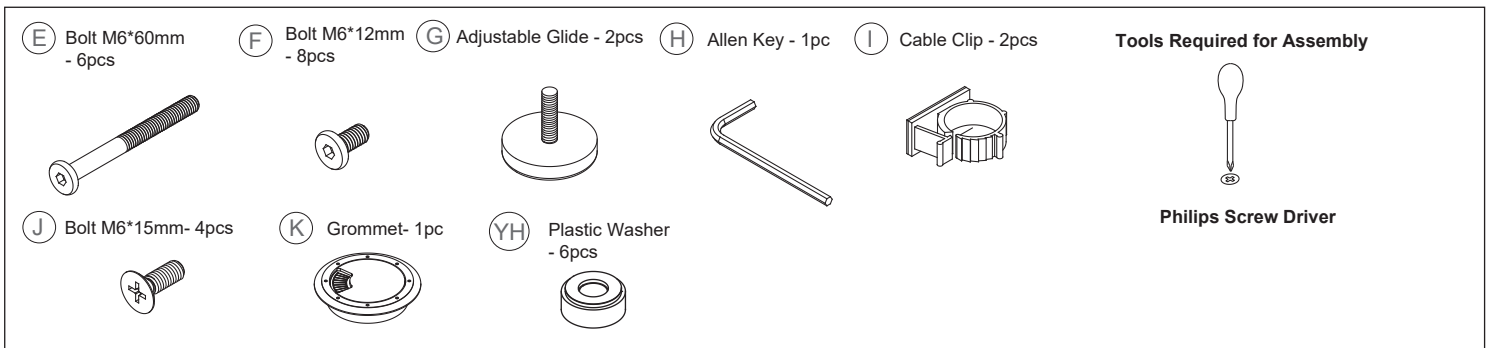

INSTRUCTIONS

Note: To create an "L"-shape desk, build both return and main desk frames before adding tops. See step 3.

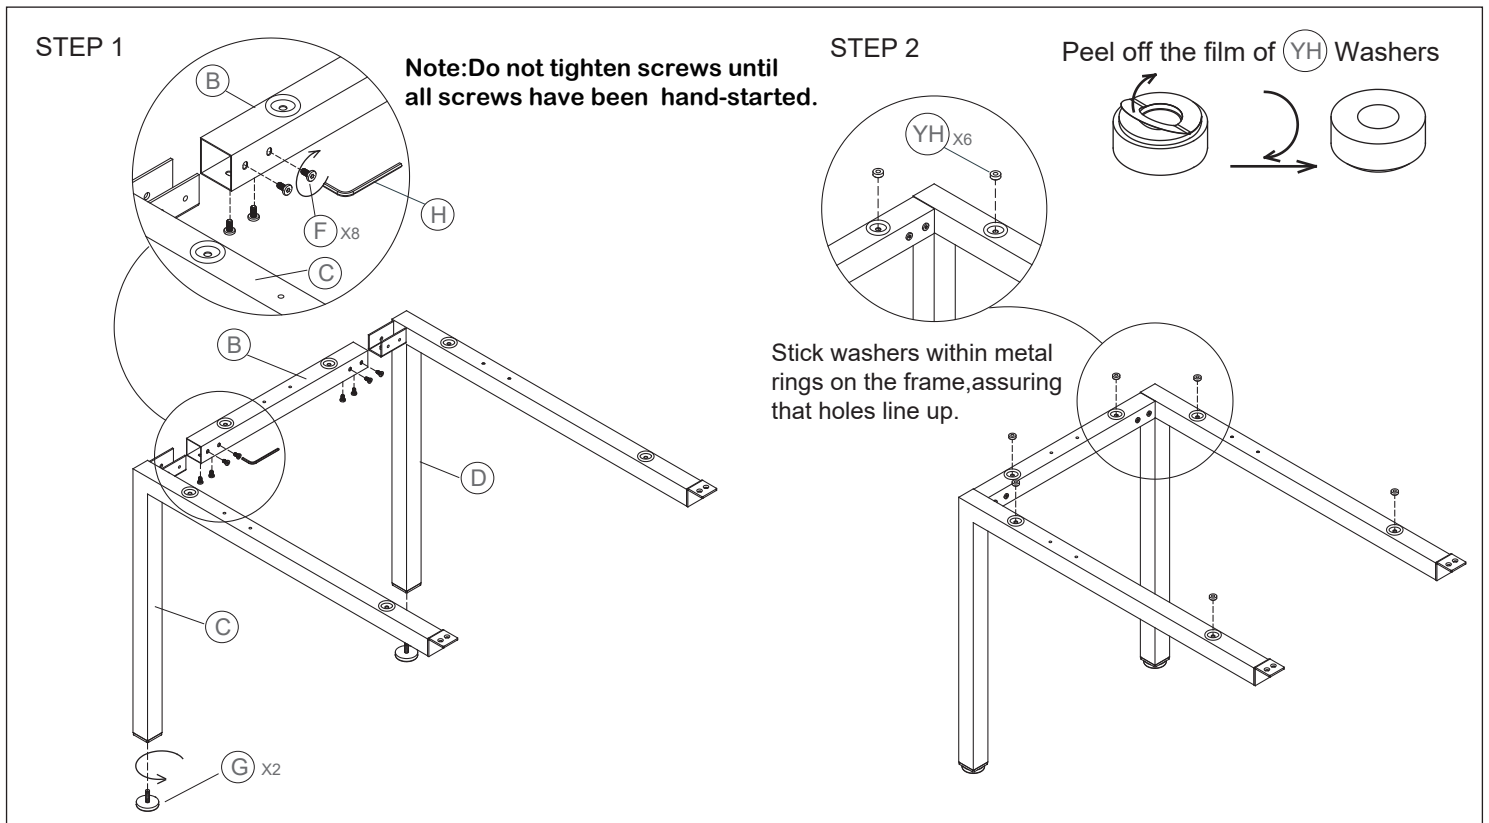




At Work- Return for 60" L Desk Assembly Instructions

INSTRUCTIONS


STEP 3

Return at right

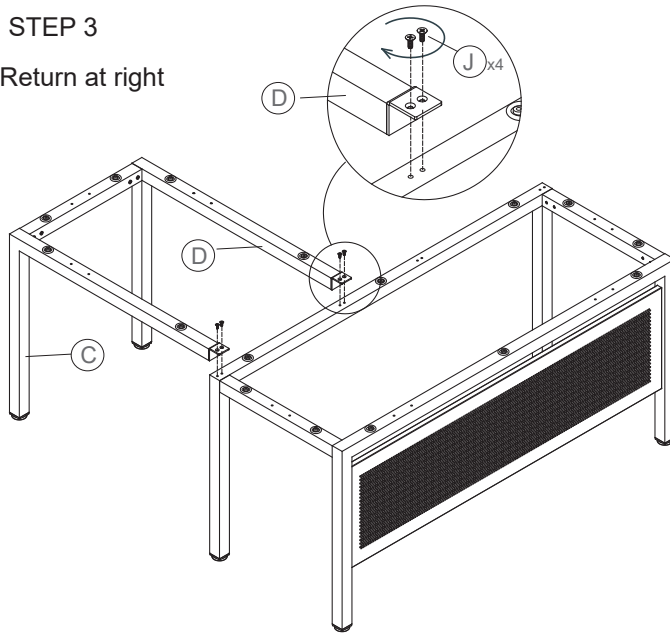


Return at left

OR

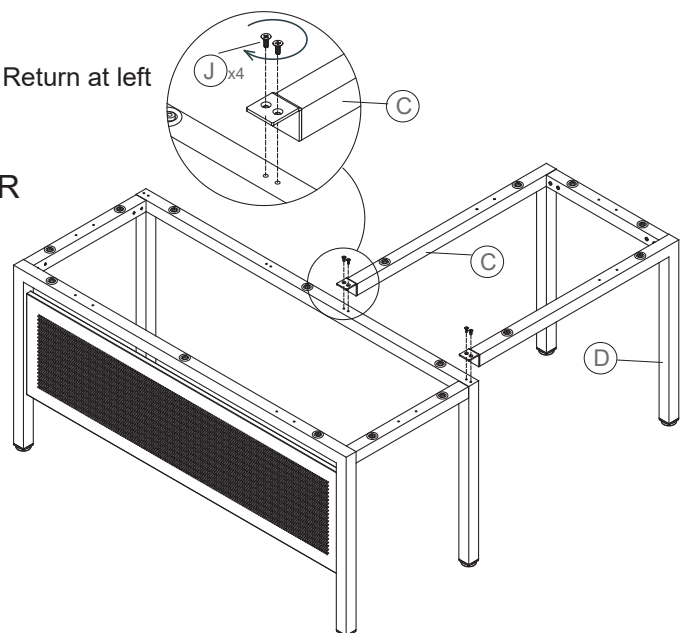


STEP 4

Return at right

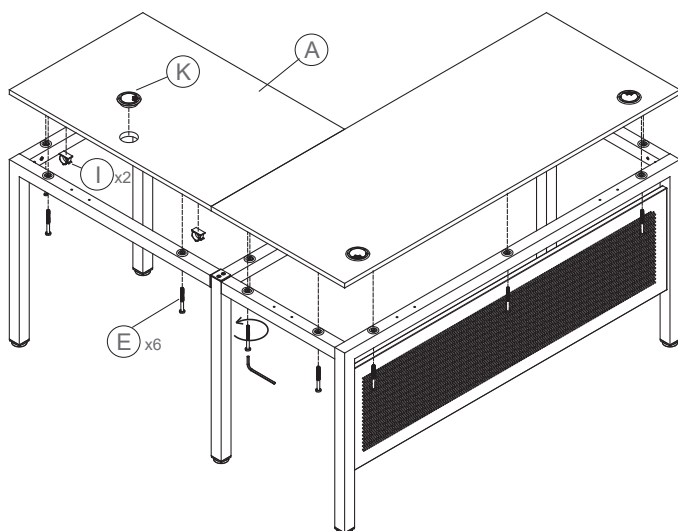

Return at left

OR

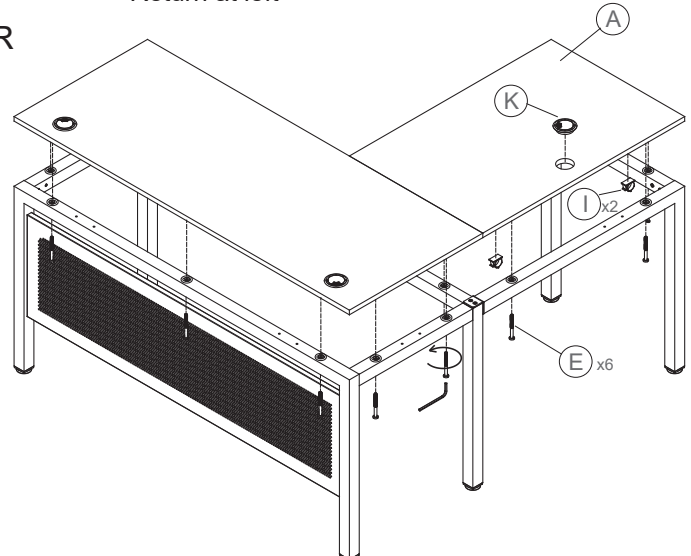




At Work- Return for 60" L Desk


Assembly Instructions

INSTRUCTIONS

Return at right

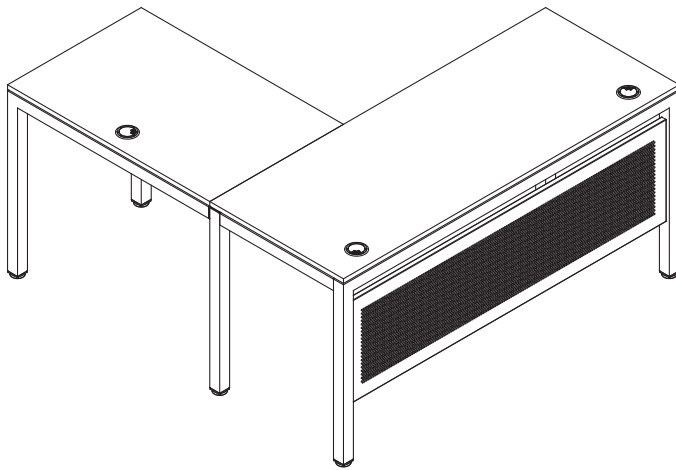

Return at left

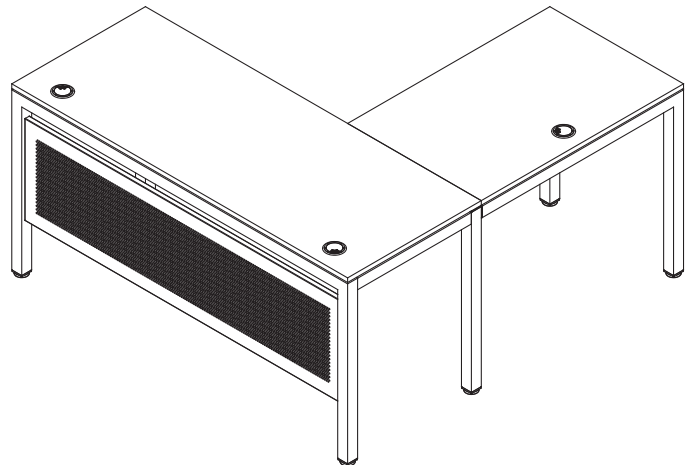

COMPLETED




National Business
Furniture

At Work- Metal Modesty Panel for 60" Table

Assembly Instructions


COMPONENTS

- (A) Modesty panel -1pc

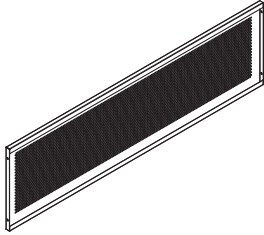


HARDWARE & TOOLS

- (B) Bolt M6*12mm - 4pcs
(C) Allen Key - 1pc



INSTRUCTIONS

STEP 1

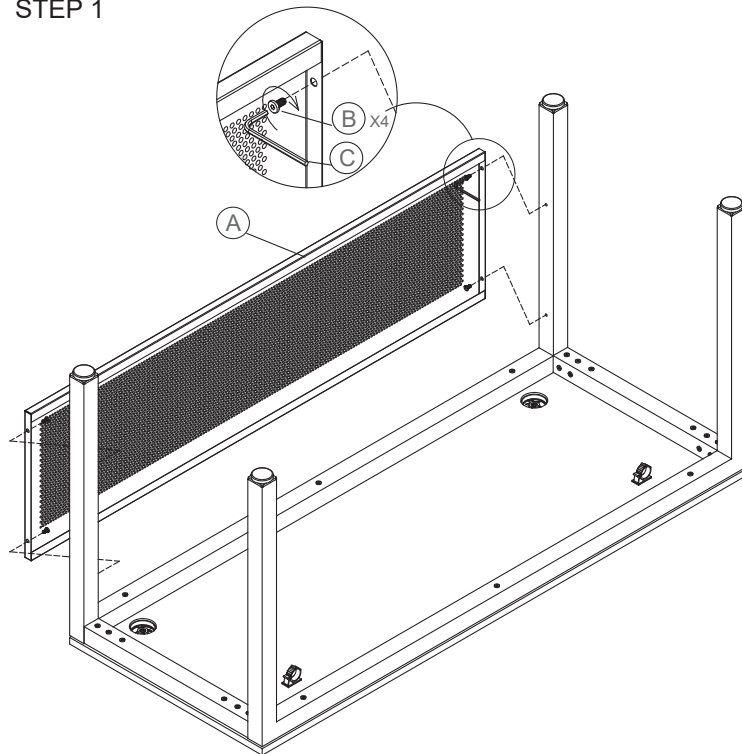

COMPLETED

