



National Business
Furniture


Rivet- 60/66/72" Top And Base

Assembly Instructions


COMPONENTS



HARDWARE & TOOLS

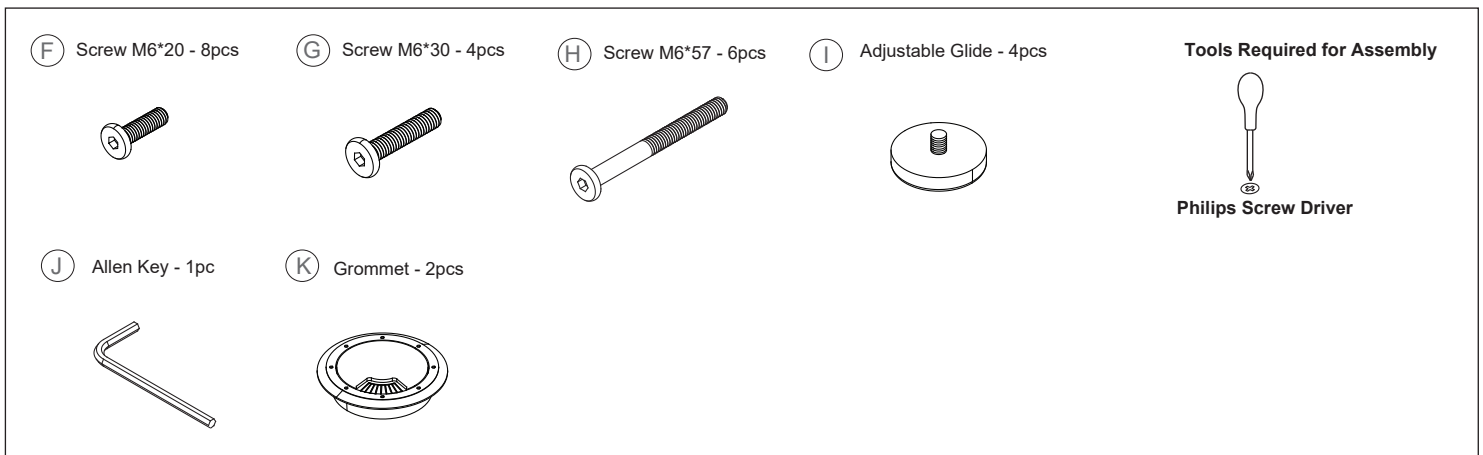

INSTRUCTIONS

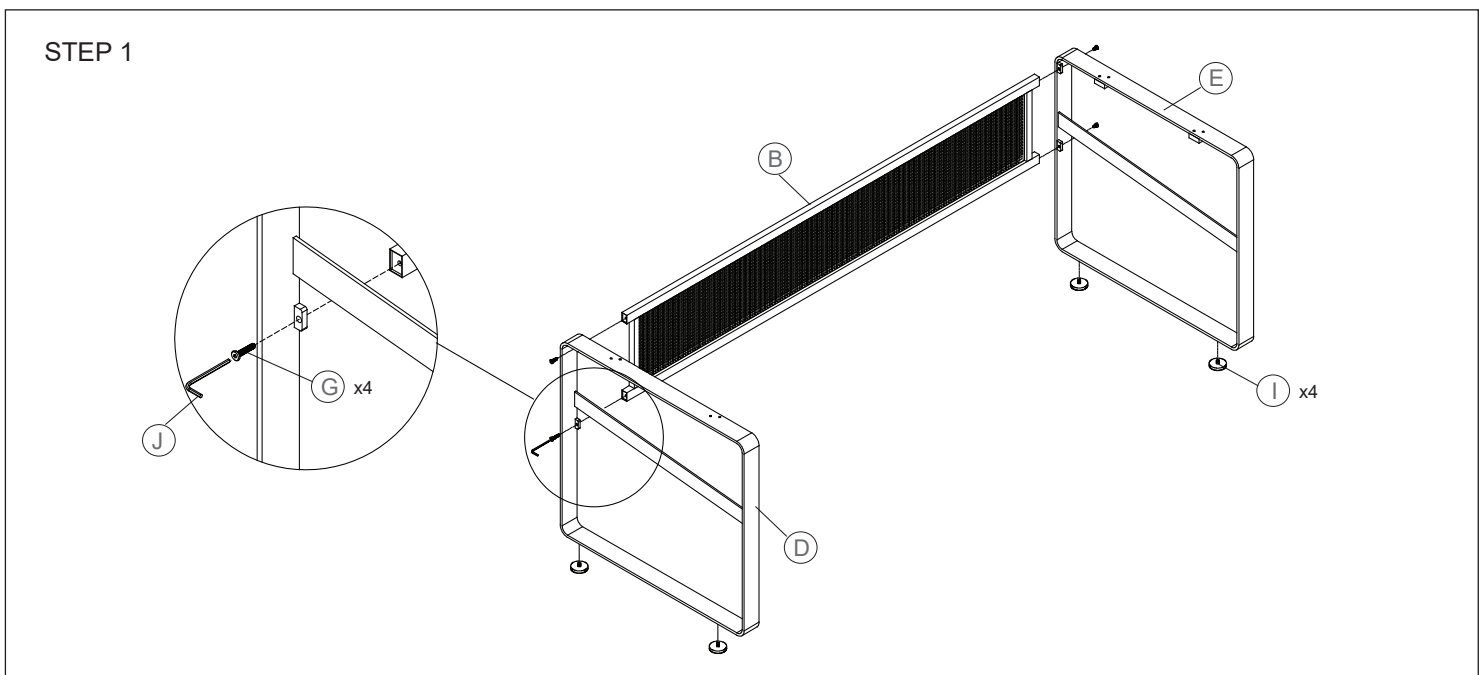




National Business
Furniture

Rivet- 60/66/72" Top And Base


Assembly Instructions

INSTRUCTIONS

STEP 2

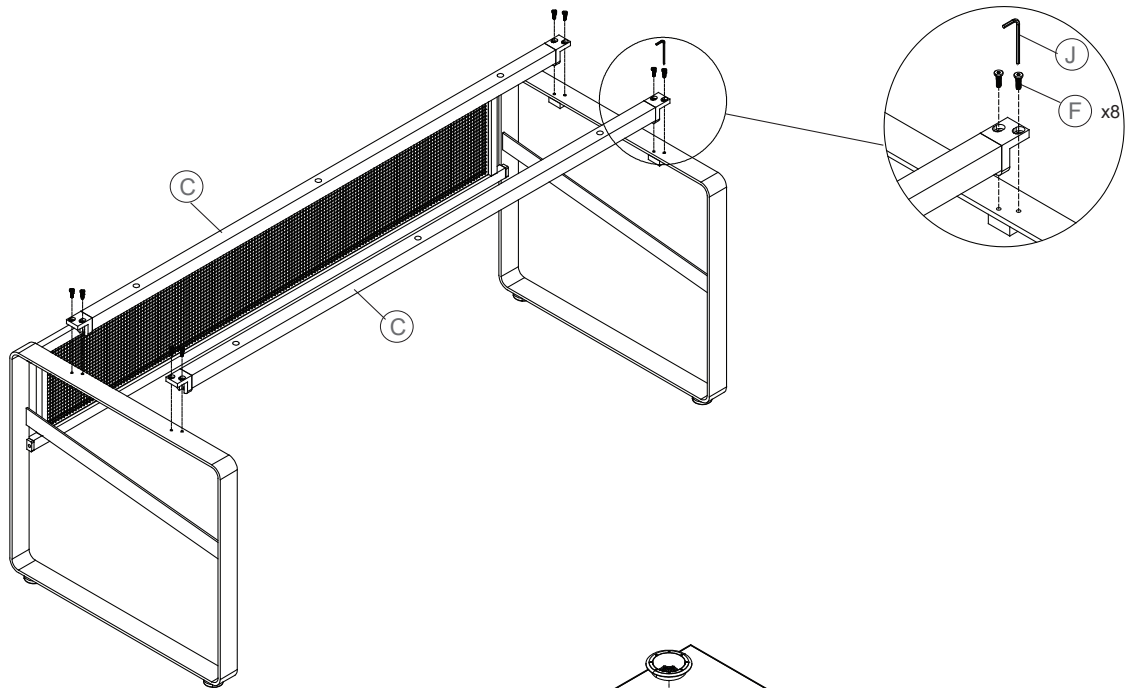

STEP 3

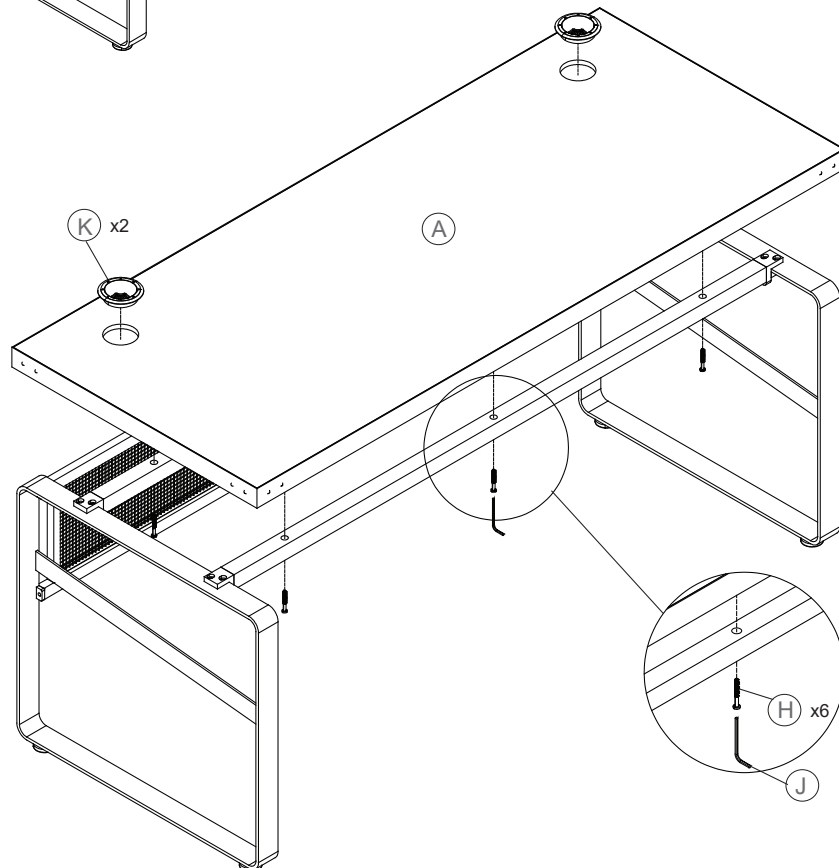





Rivet- 72" Low Credenza

Assembly Instructions

COMPONENTS

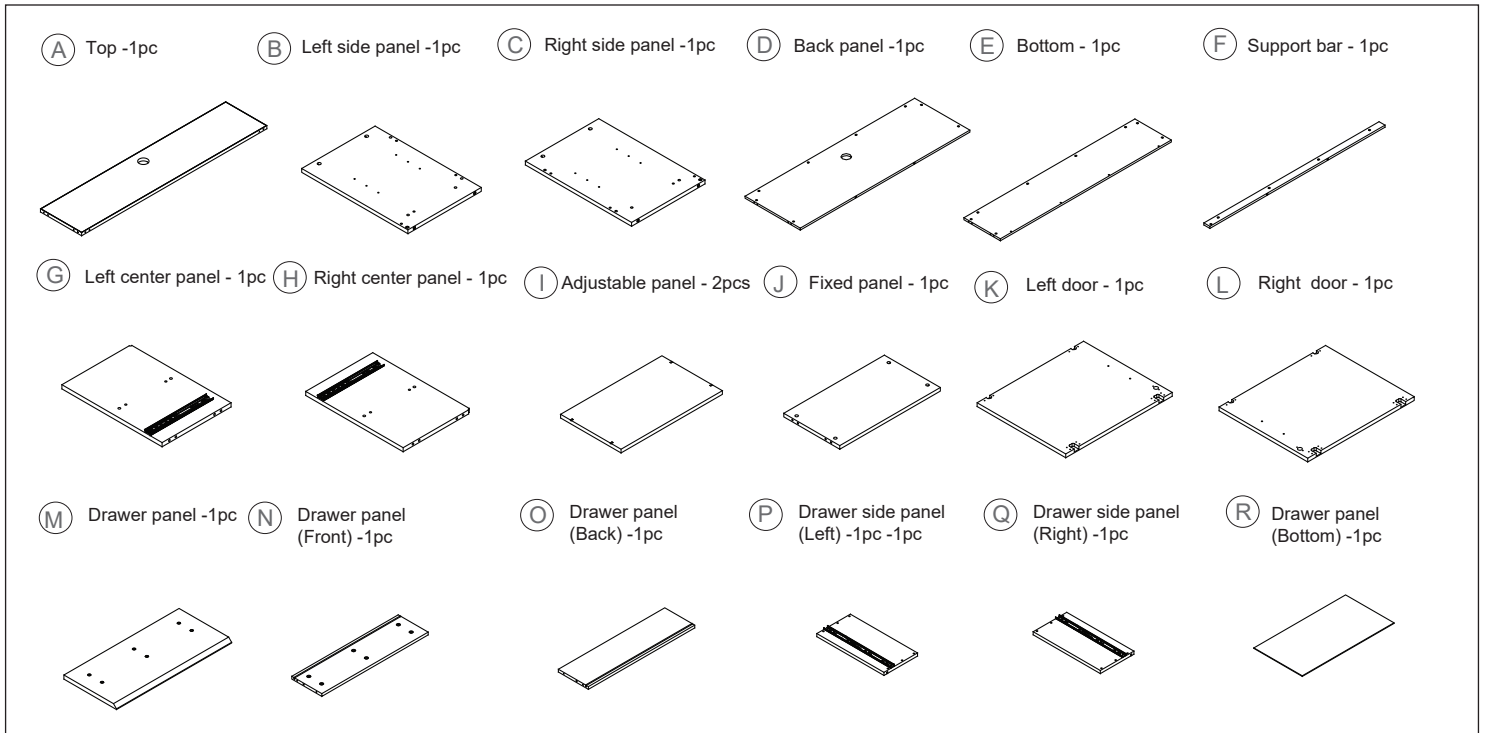

HARDWARE & TOOLS

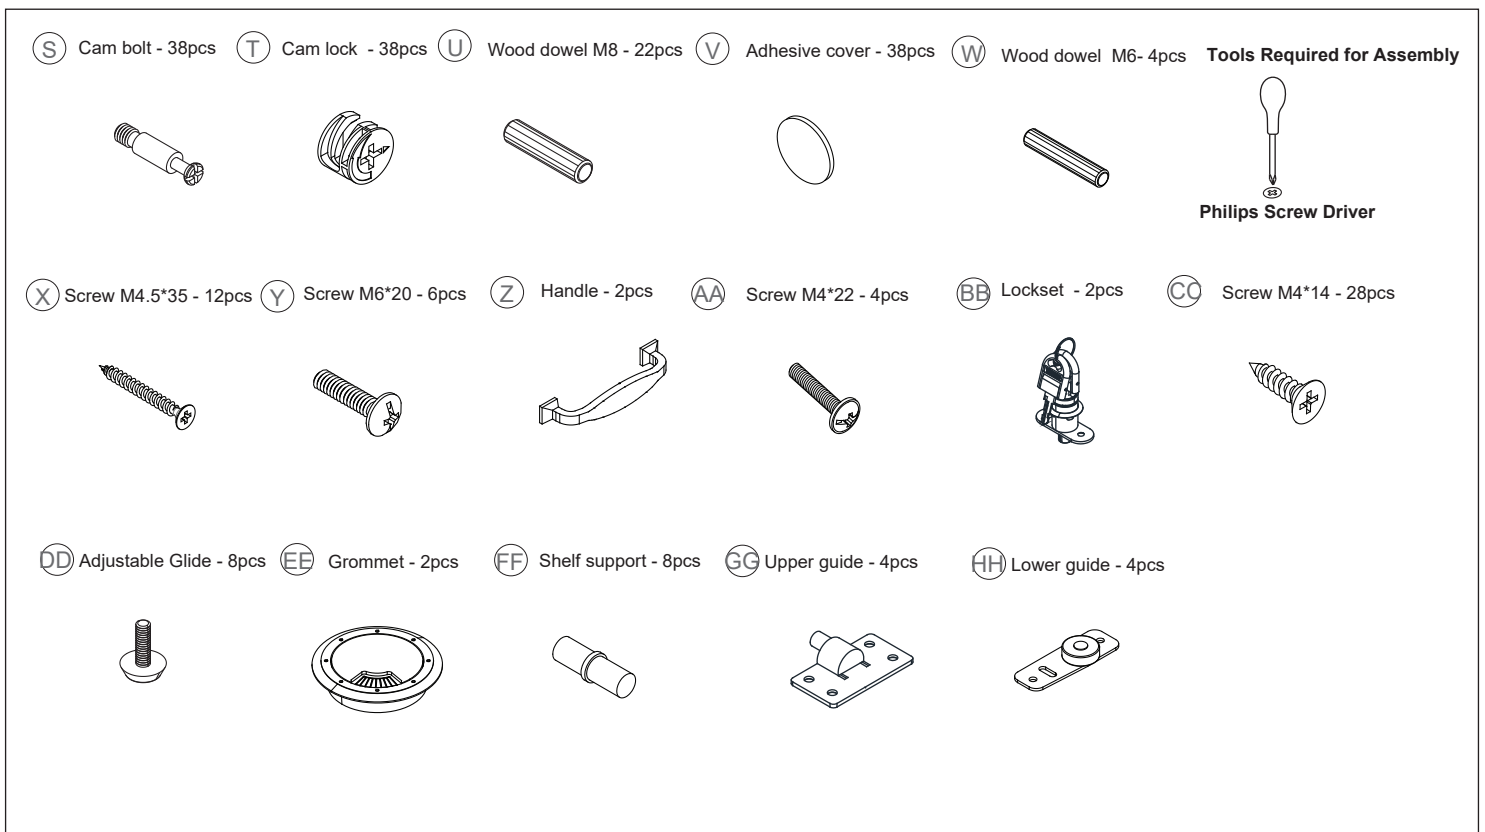




Rivet- 72" Low Credenza



Assembly Instructions

INSTRUCTIONS

STEP 1

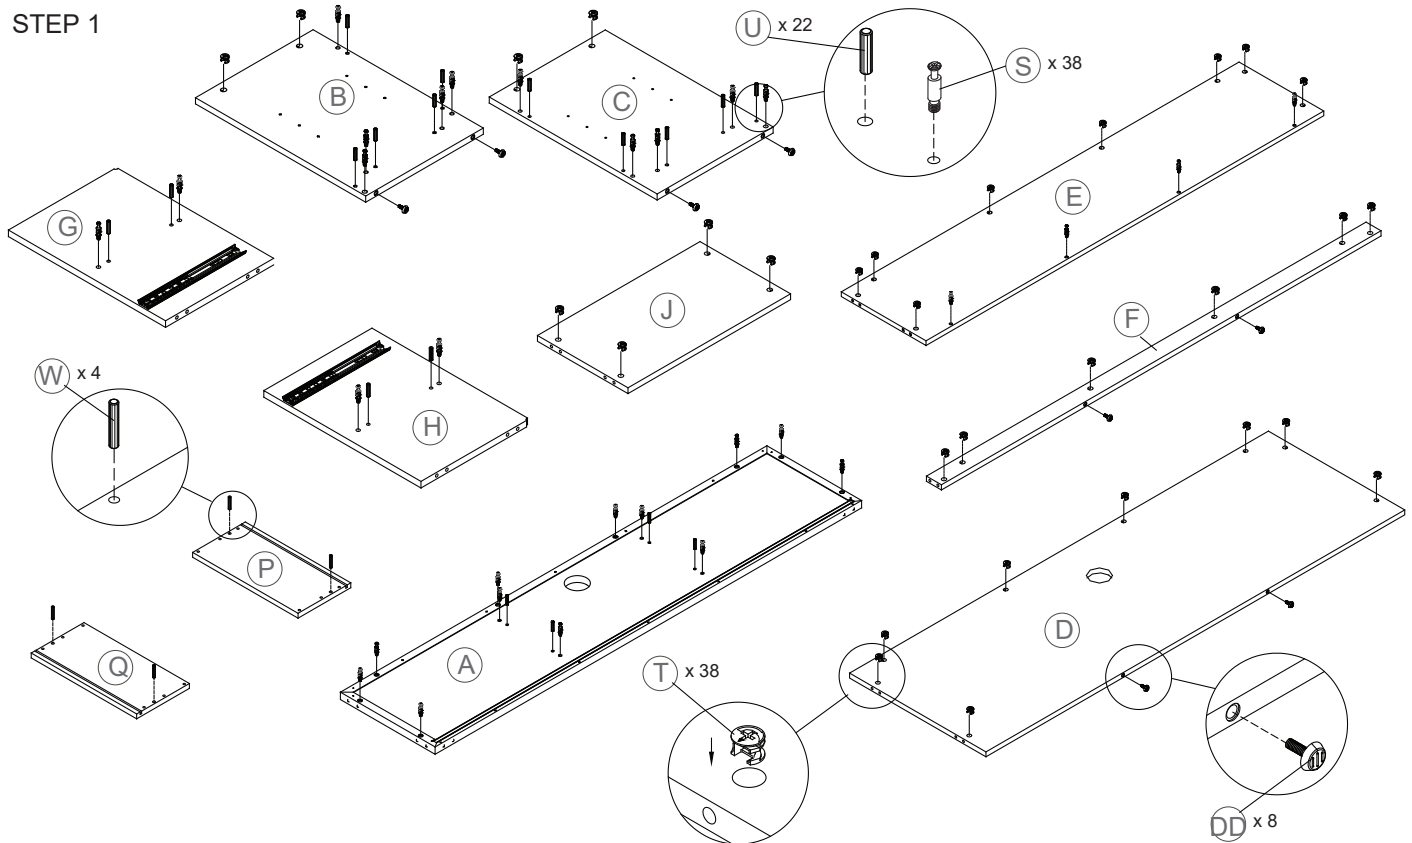

STEP 2

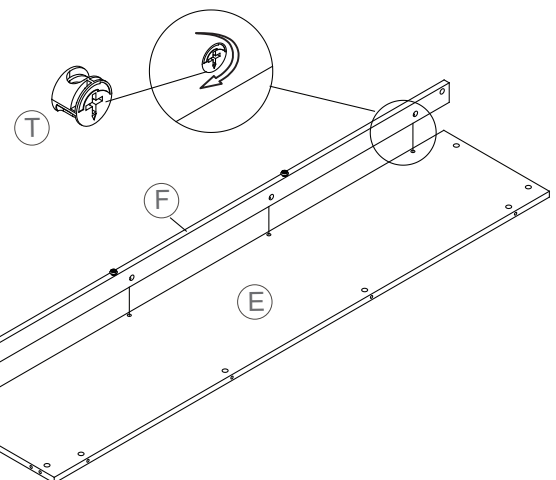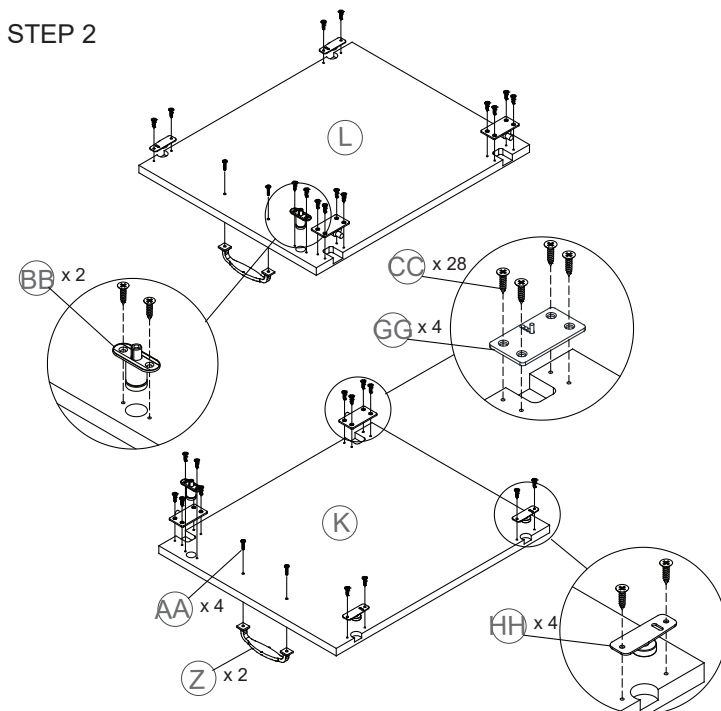




Rivet- 72" Low Credenza


Assembly Instructions

INSTRUCTIONS


STEP 4

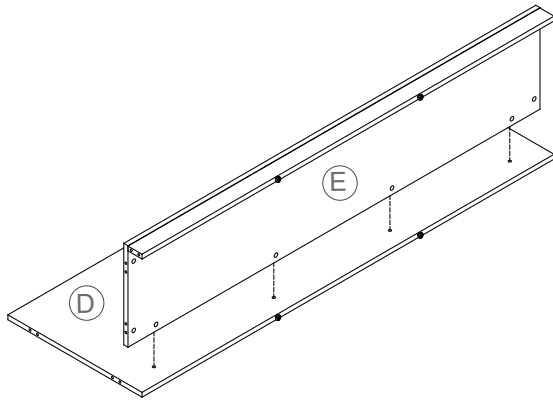


STEP 5

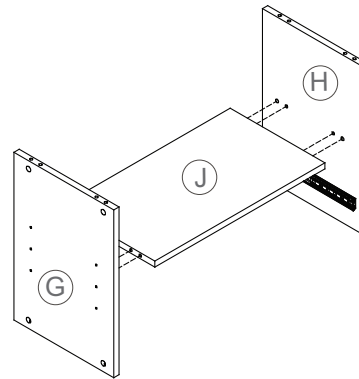


STEP 6

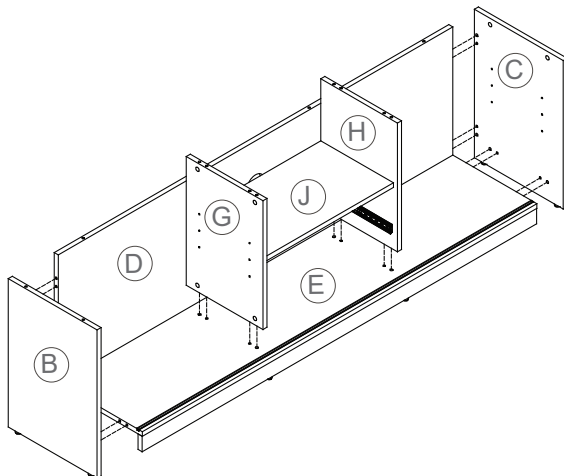


STEP 7

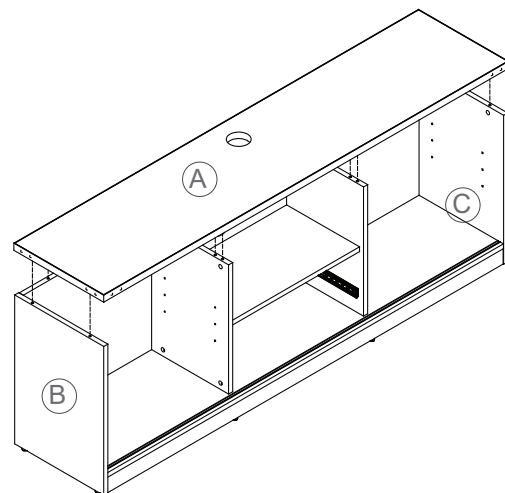

STEP 8

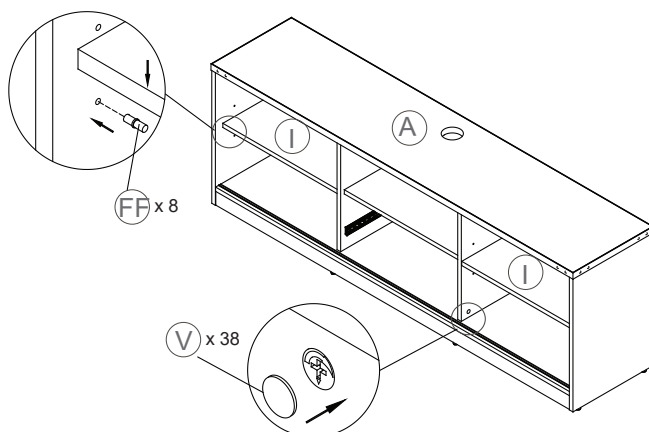

STEP 9

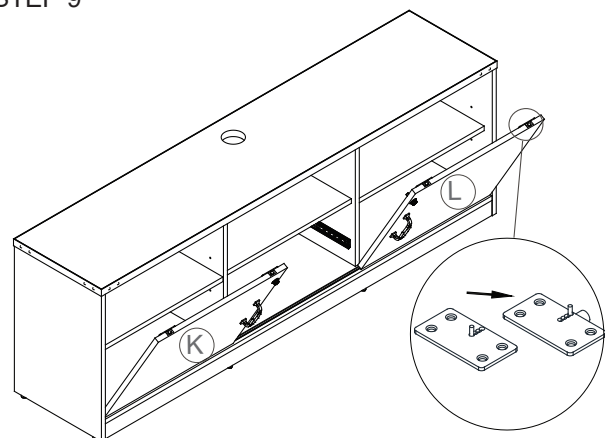

Please push out the top glide lever of the door panel,
When installing the top panel.
The cap brake on the top panel can be fine-tuned to control the door panel.




Rivet- 72" Low Credenza


Assembly Instructions

INSTRUCTIONS

STEP 10

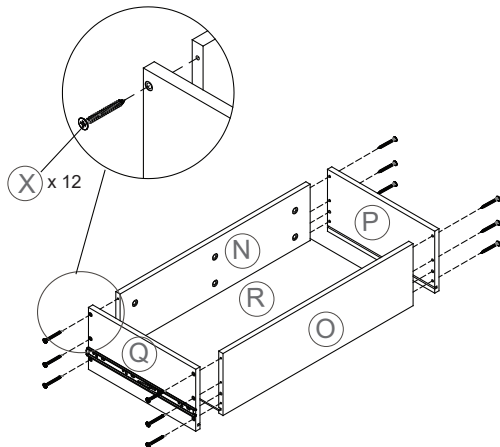

STEP 11

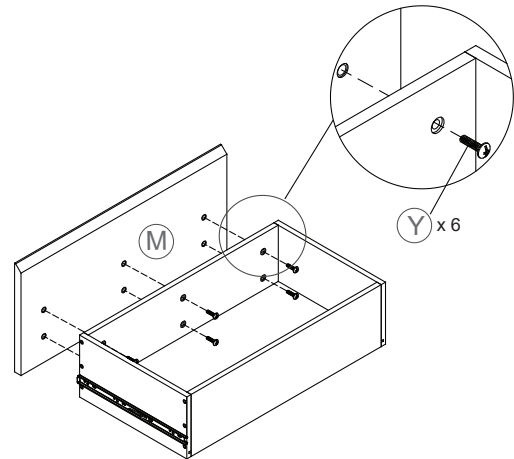

STEP 12

