



National Business  
Furniture


## Rivet- 60/66/72" Top And Base

### Assembly Instructions


#### COMPONENTS



#### HARDWARE & TOOLS

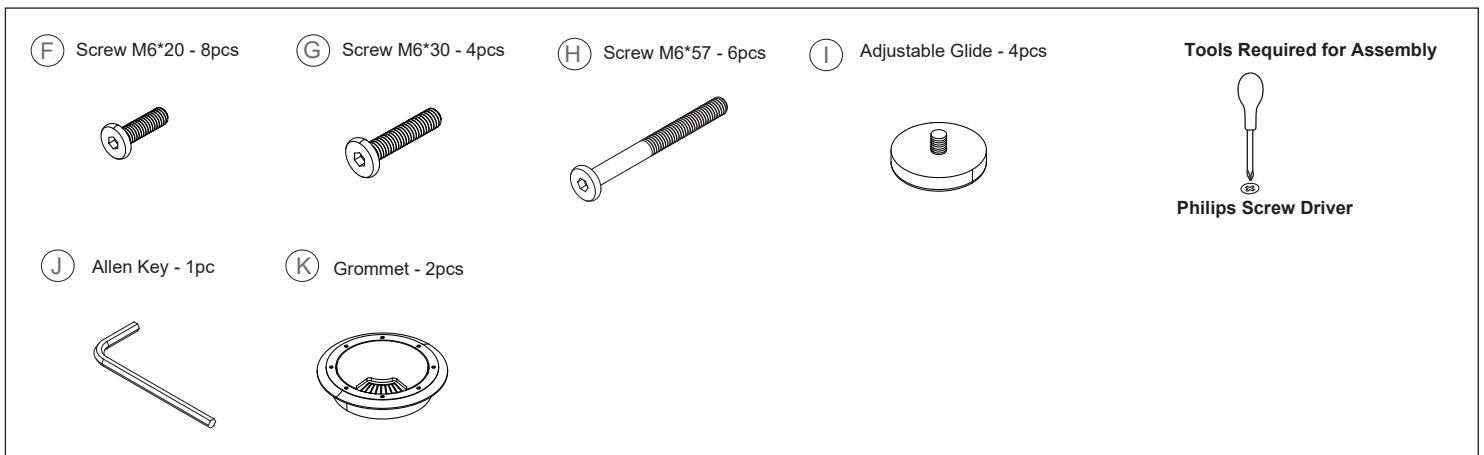

#### INSTRUCTIONS

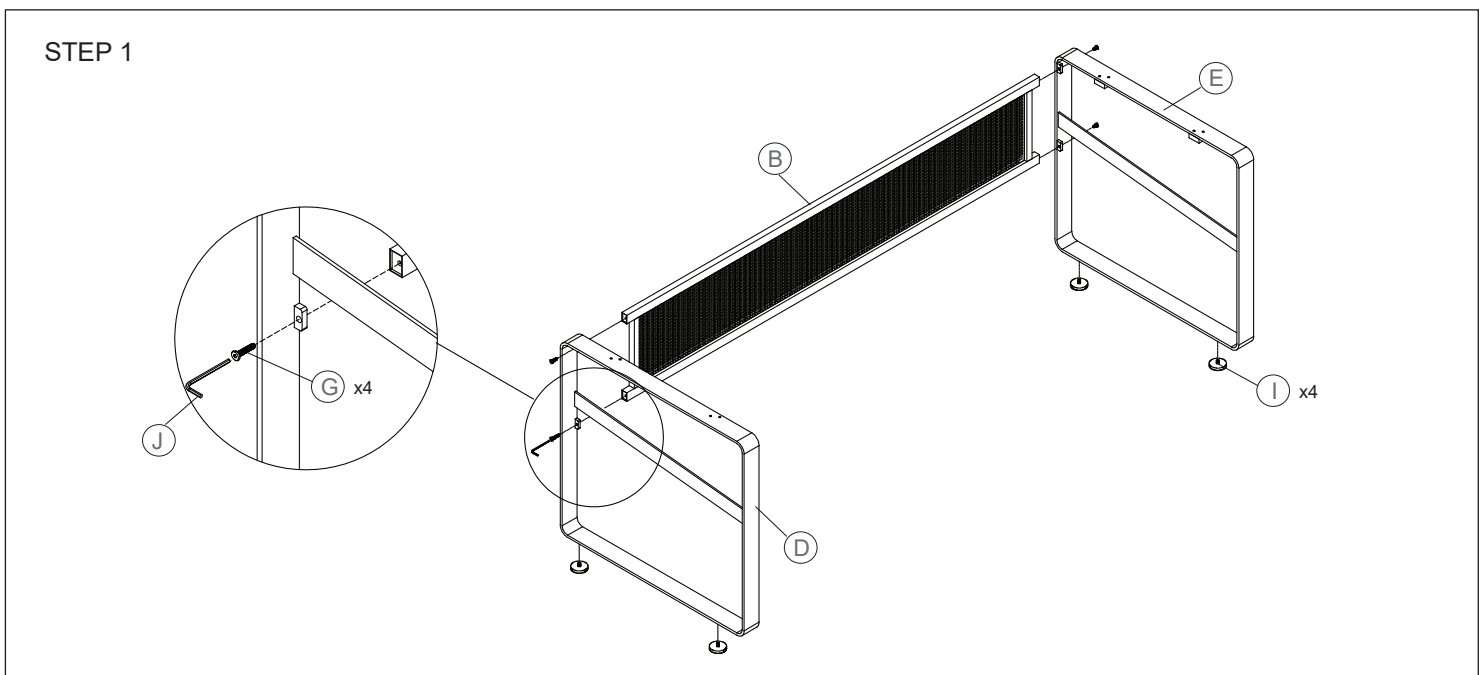




National Business  
Furniture

## Rivet- 60/66/72" Top And Base


Assembly Instructions

### INSTRUCTIONS

#### STEP 2

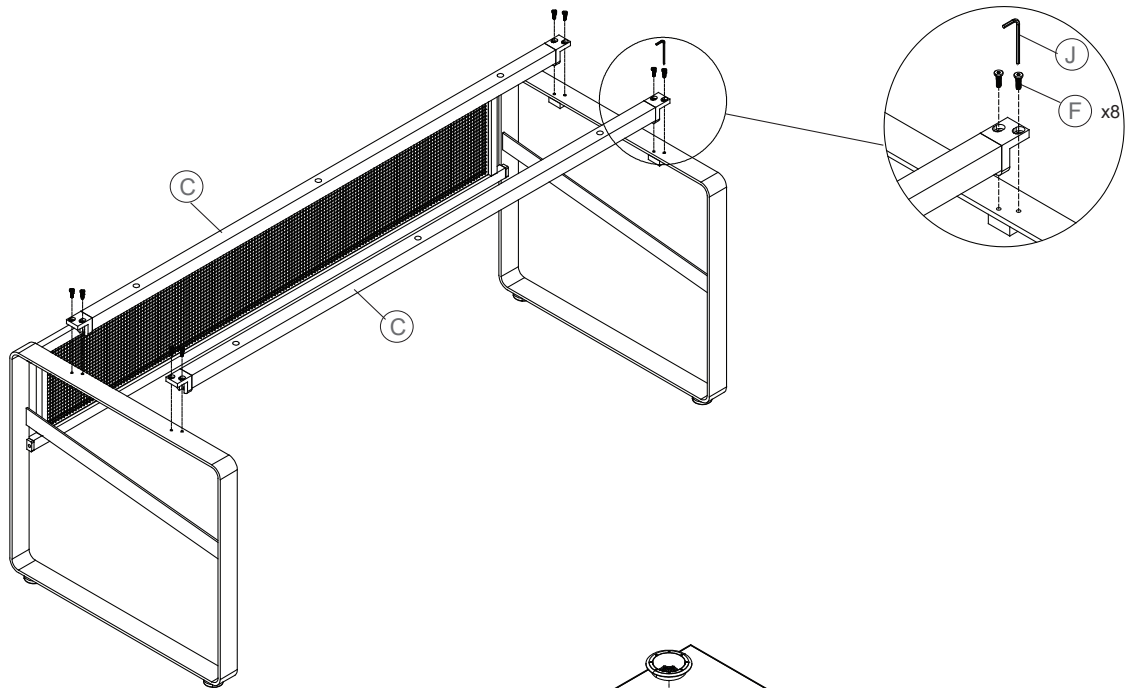

#### STEP 3

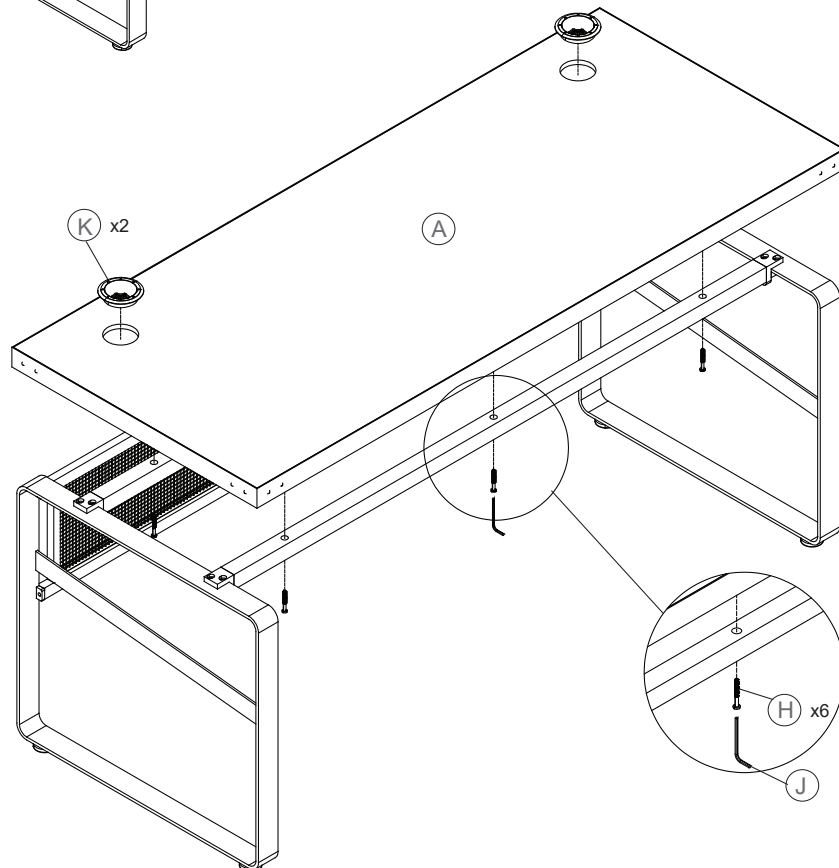





## Rivet- 72" Low Credenza

### Assembly Instructions

#### COMPONENTS

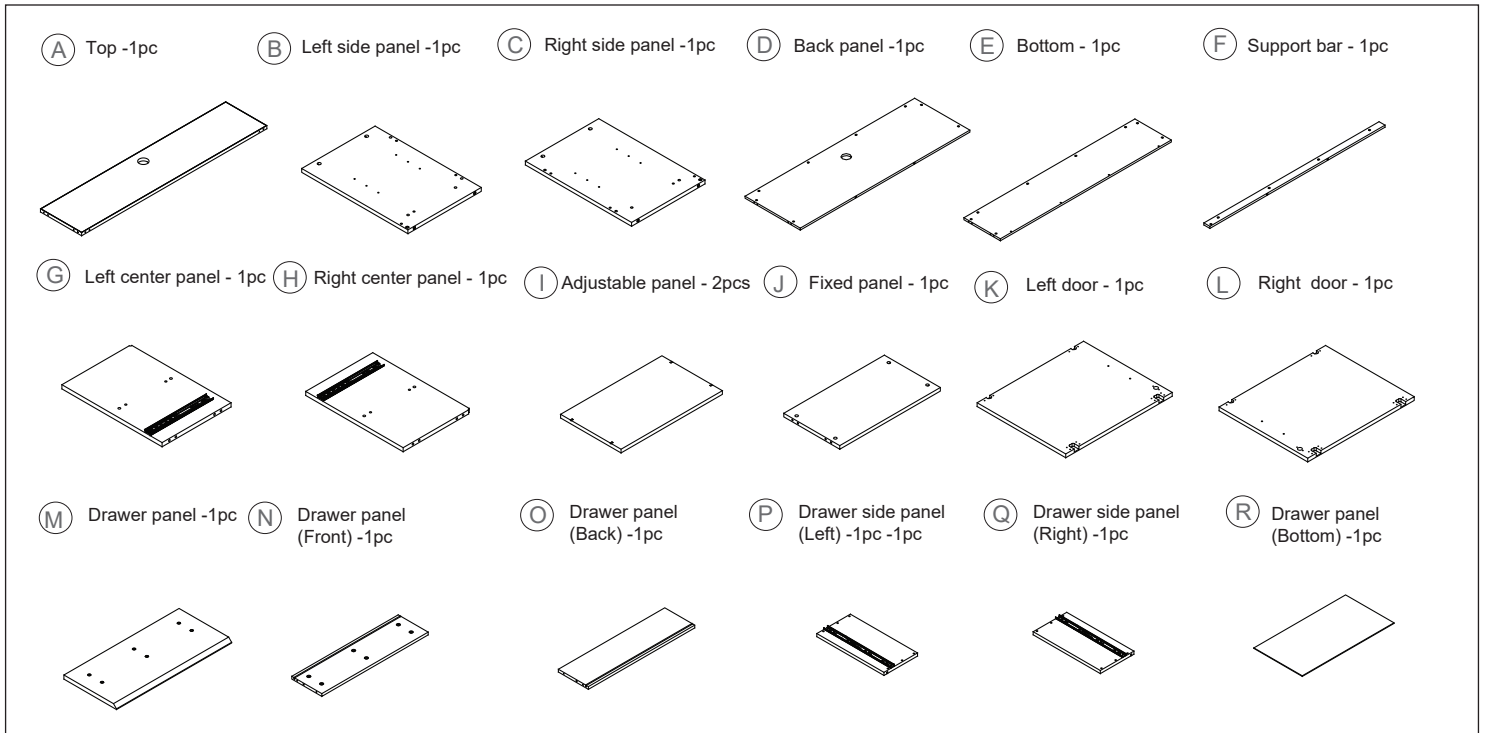

#### HARDWARE & TOOLS

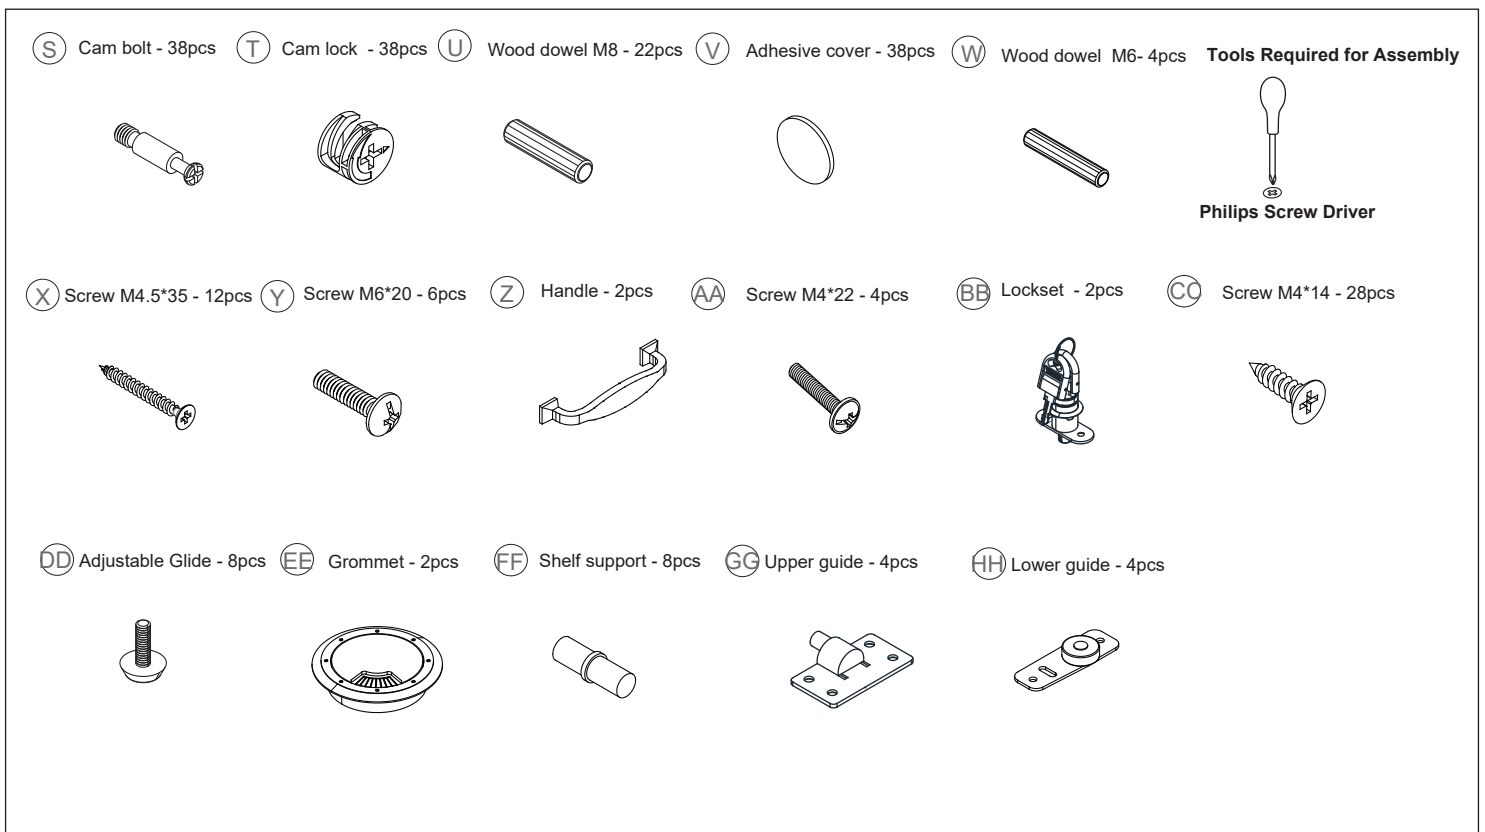




## Rivet- 72" Low Credenza



### Assembly Instructions

#### INSTRUCTIONS

##### STEP 1

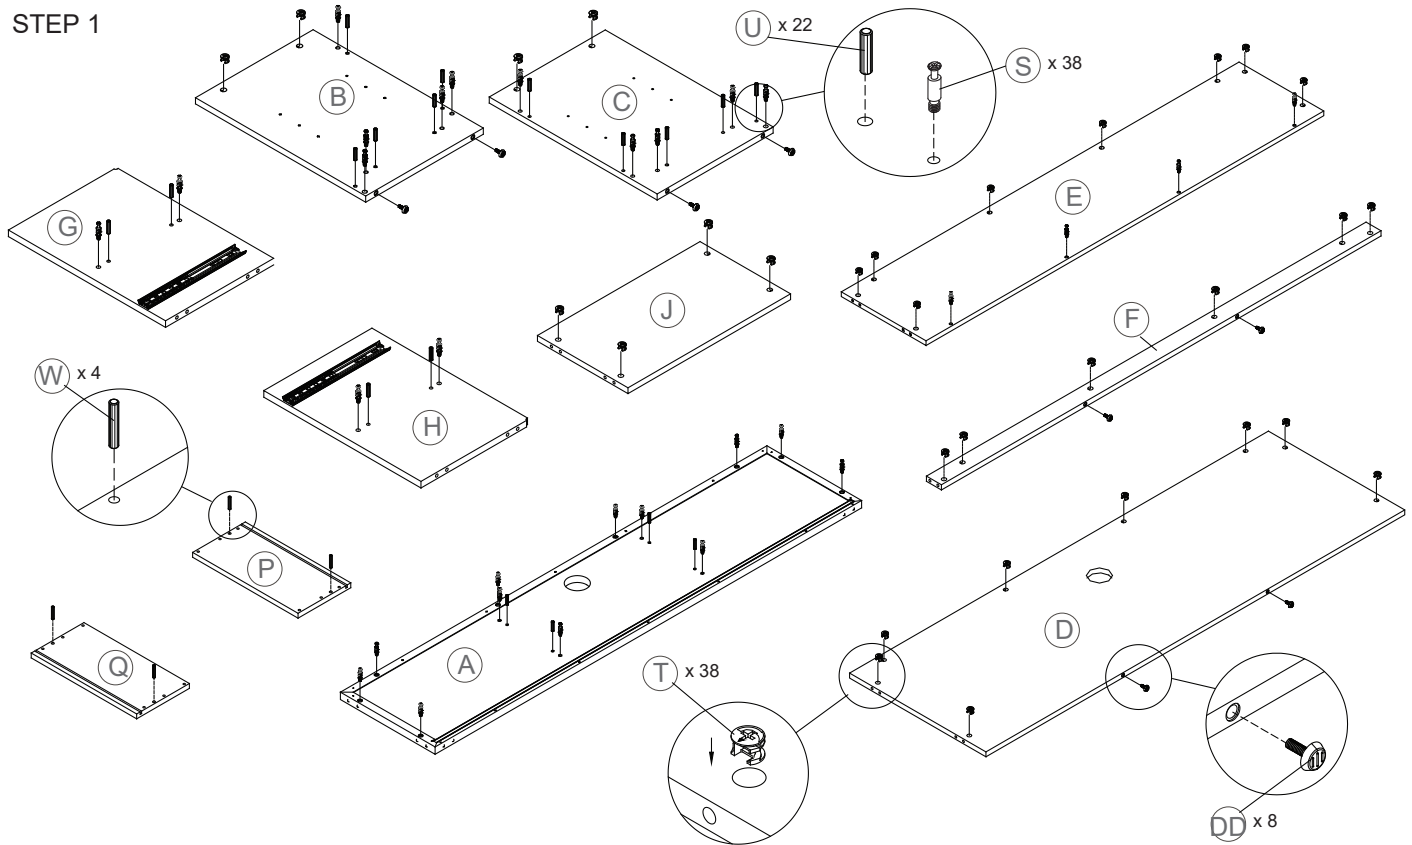

##### STEP 2

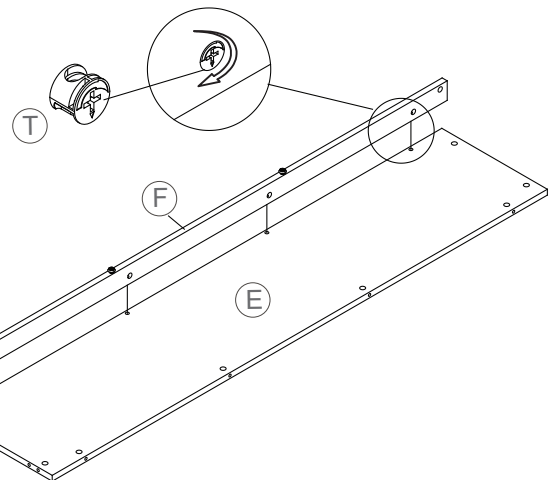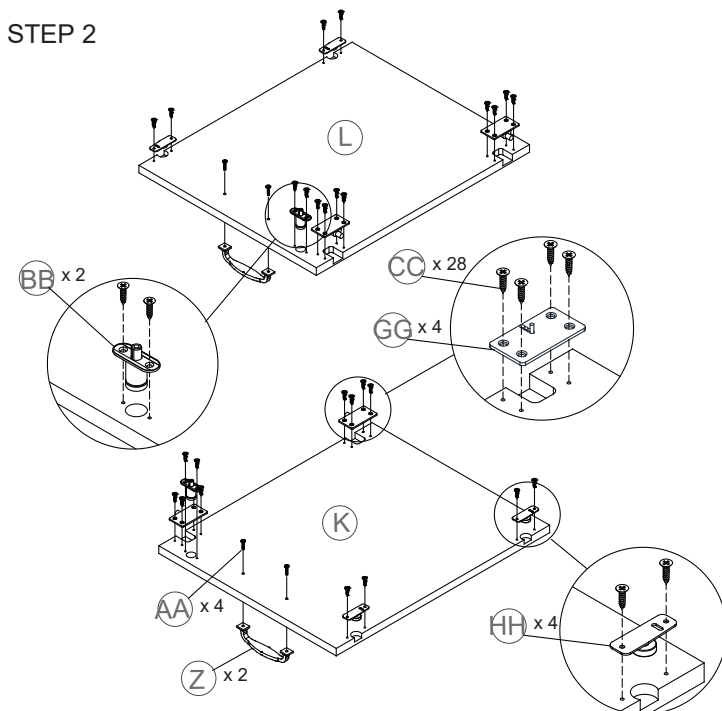




## Rivet- 72" Low Credenza


### Assembly Instructions

#### INSTRUCTIONS


STEP 4

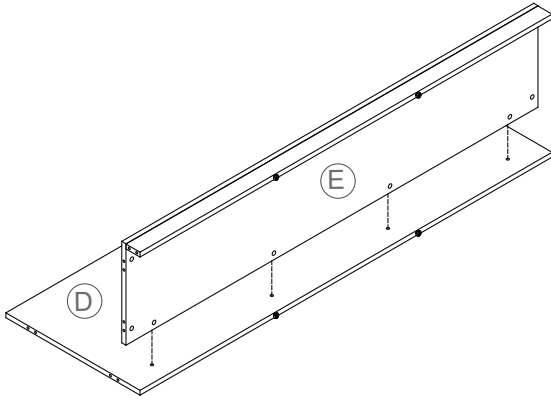


STEP 5

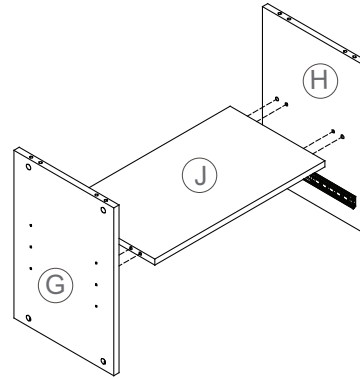


STEP 6

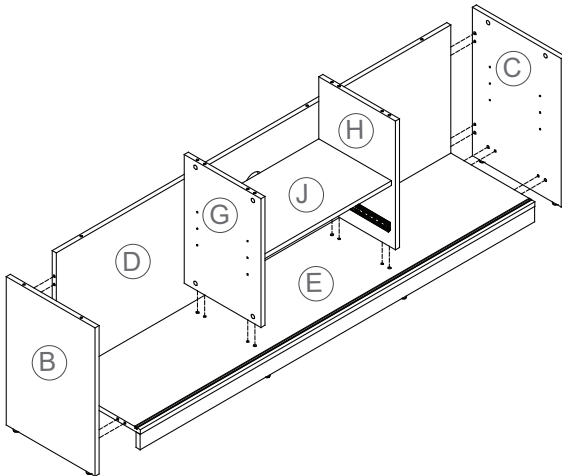


STEP 7

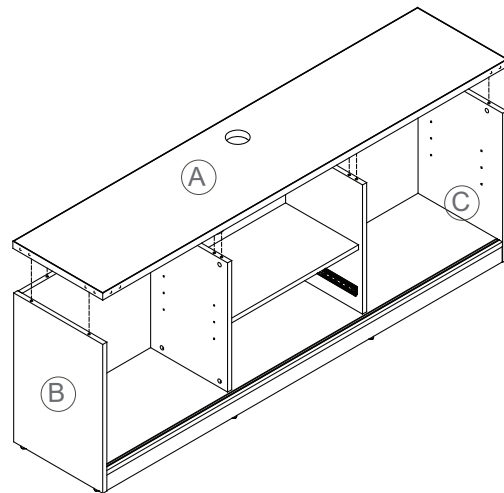

STEP 8

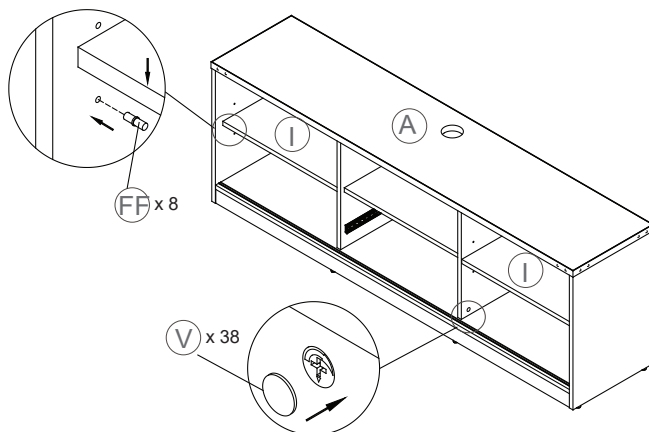

STEP 9

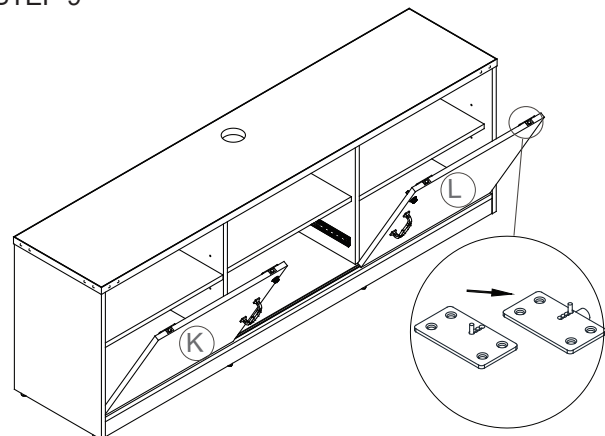

Please push out the top glide lever of the door panel,  
When installing the top panel.  
The cap brake on the top panel can be fine-tuned to control the door panel.




## Rivet- 72" Low Credenza


### Assembly Instructions

#### INSTRUCTIONS

##### STEP 10

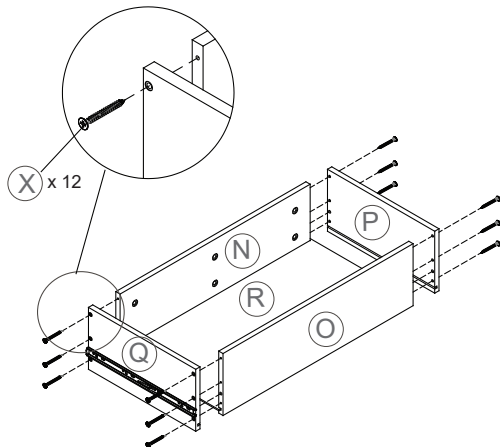

##### STEP 11

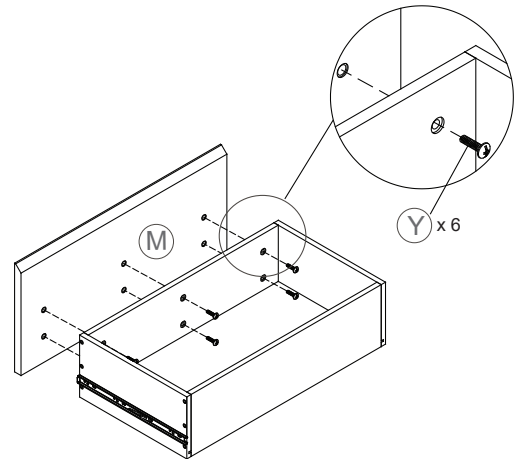

##### STEP 12

