




National Business
Furniture

At Work- 48" x 24" Table without Modesty Panel

Assembly Instructions


COMPONENTS

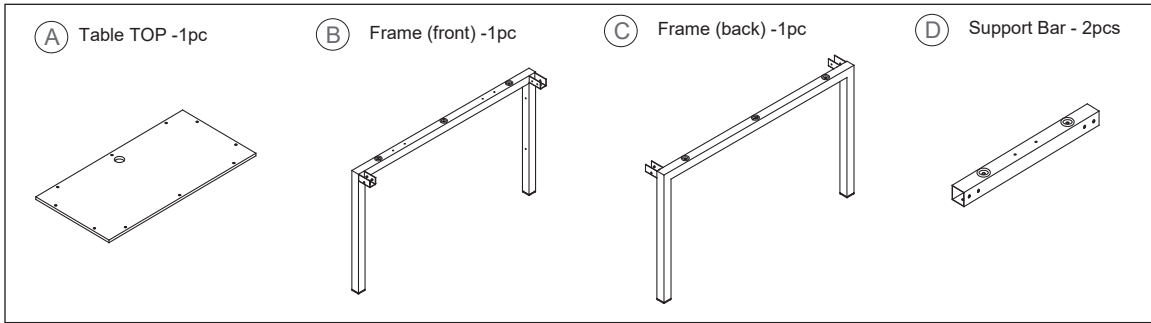

(YH) Plastic Washer
- 10pcs




HARDWARE & TOOLS

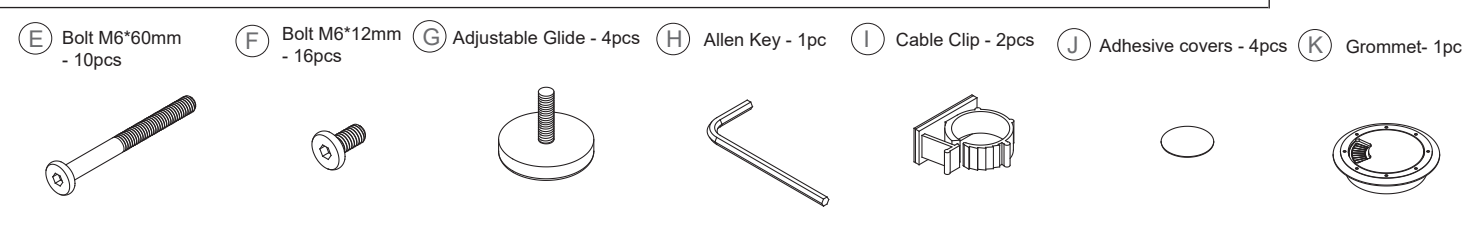

INSTRUCTIONS

STEP 1

Note: Do not tighten screws until all screws have been hand-started.

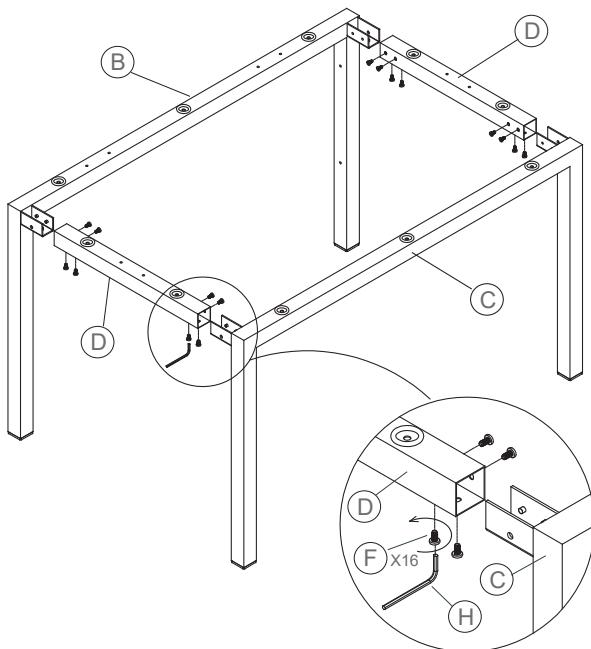


STEP 2

Peel off the film of (YH) Washers



Stick washers within metal rings on the frame, assuring that holes line up.

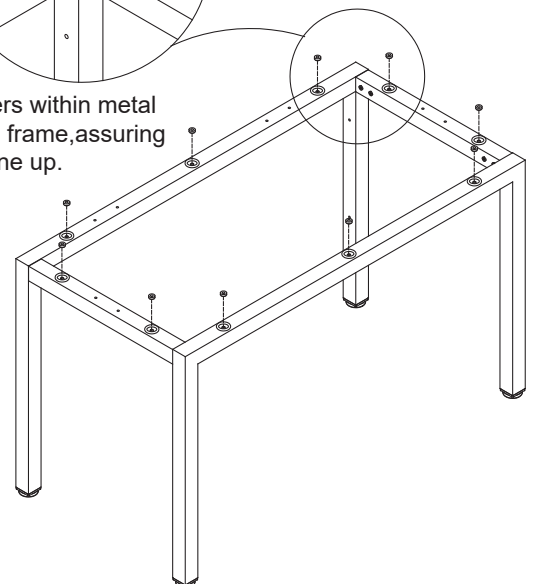



At Work- 48" x 24" Table without Modesty Panel


Assembly Instructions

INSTRUCTIONS


STEP 3

NOTE


If you purchase the Frosted Glass Privacy Panel, make sure to install the metal bracket, from the panel hardware kit, to the station before assembling the desk top.

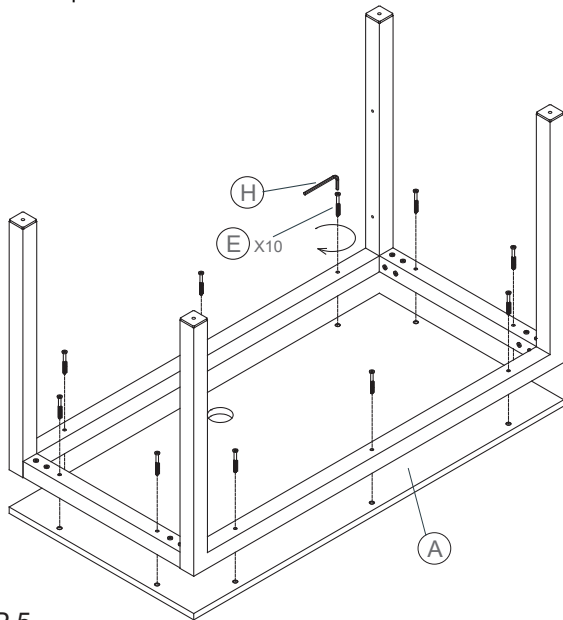

STEP 4

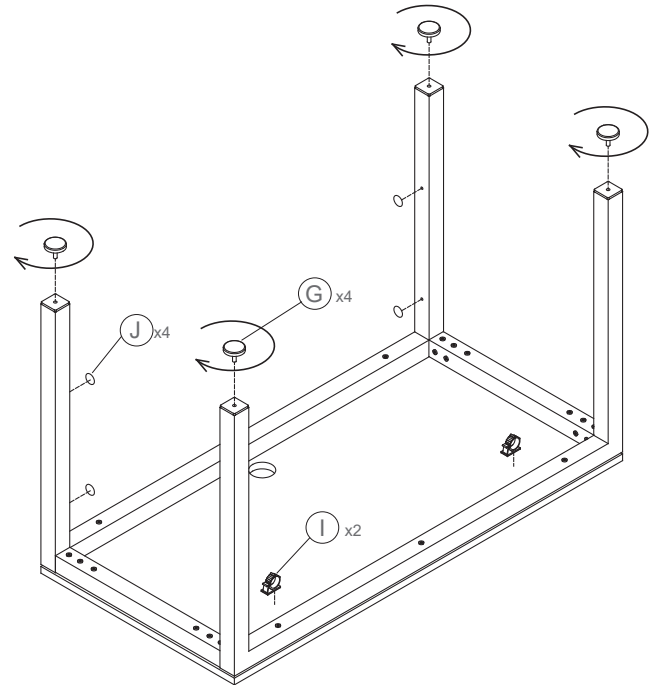

STEP 5

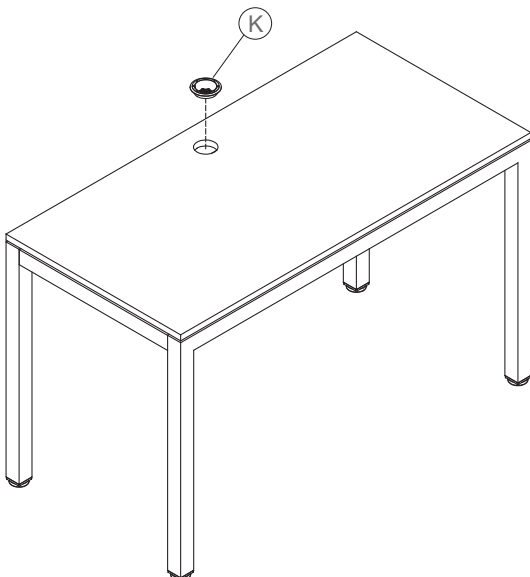




National Business
Furniture

At Work- Metal Modesty Panel for 48" Table

Assembly Instructions

COMPONENTS

- (A) Modesty panel -1pc

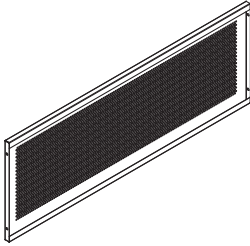


HARDWARE & TOOLS

- (B) Bolt M6*12mm - 4pcs
(C) Allen Key - 1pc



INSTRUCTIONS

STEP 1

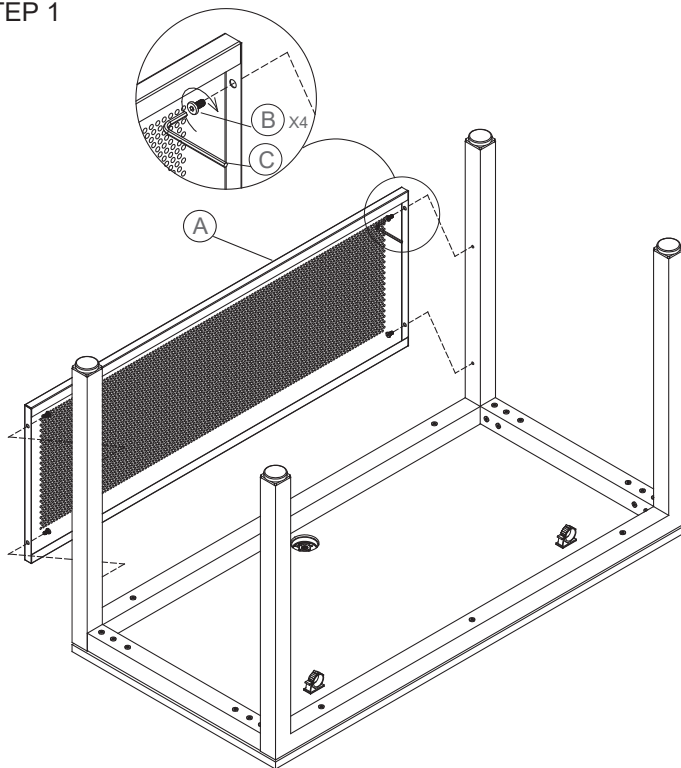

COMPLETED

