




National Business
Furniture


At Work- Storage Cabinet 72" H

Assembly Instructions

COMPONENTS

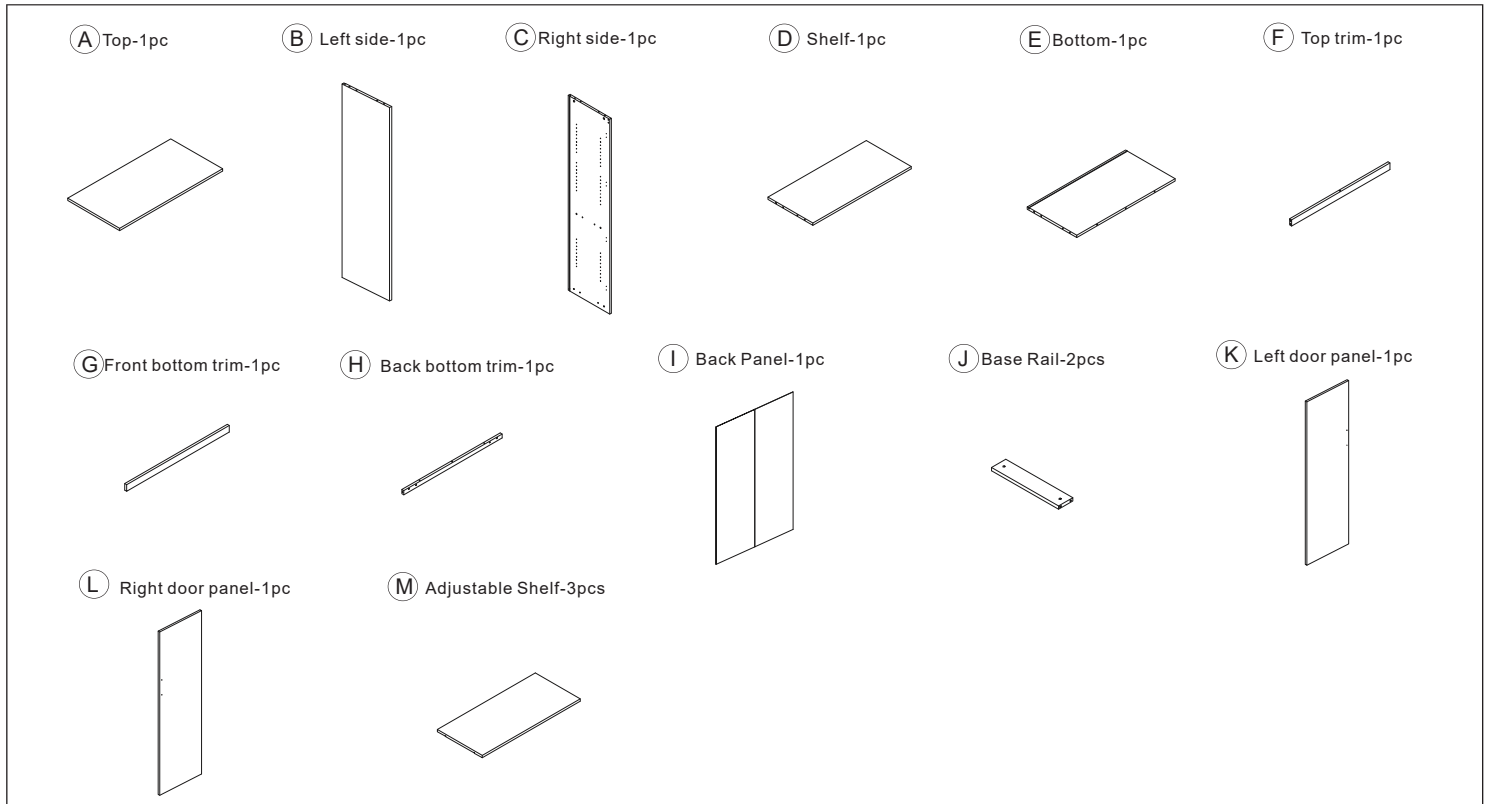

HARDWARE & TOOLS

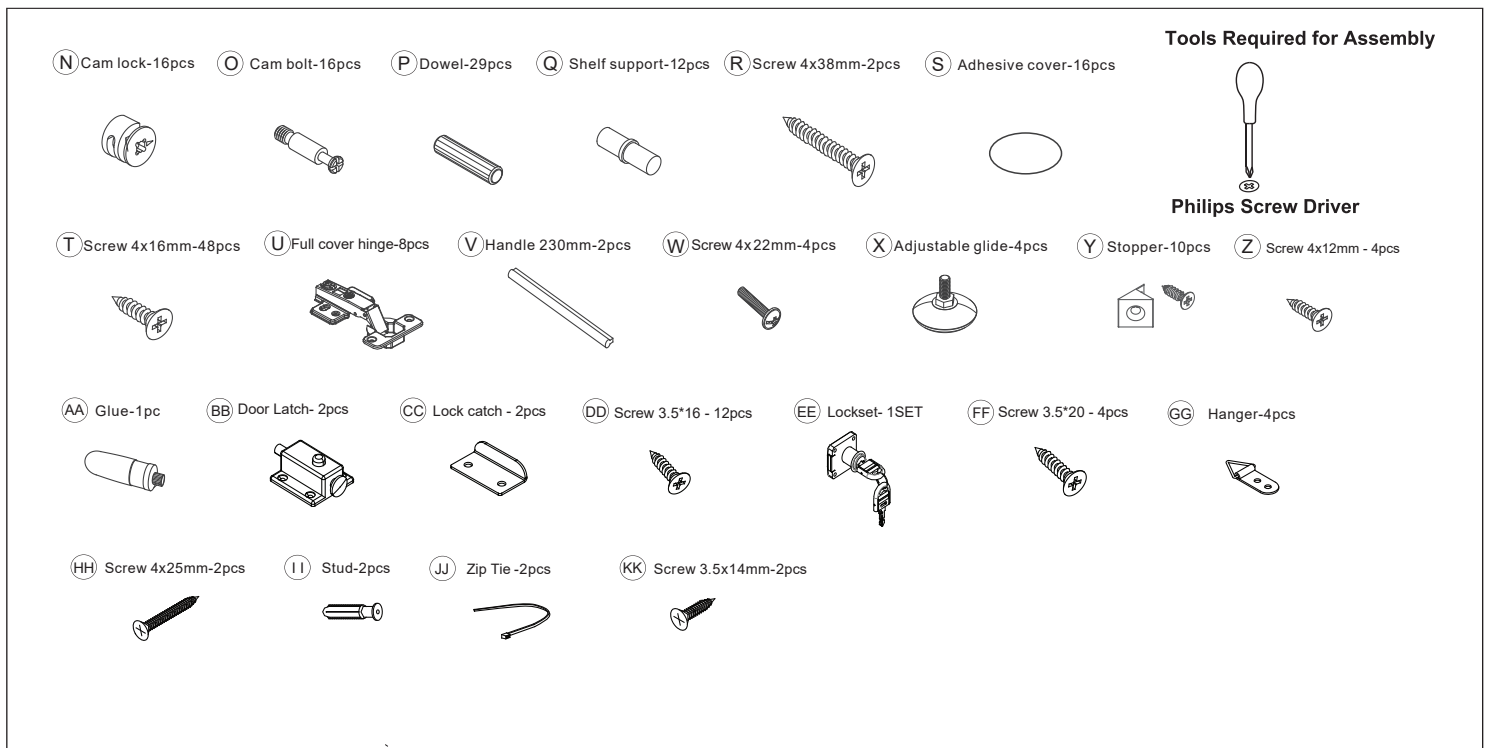




National Business
Furniture

At Work - Storage Cabinet 72" H


Assembly Instructions

INSTRUCTIONS


STEP 1

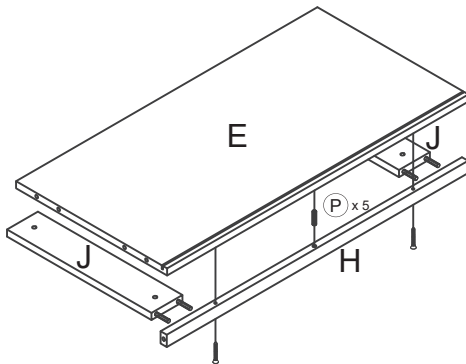

STEP 2

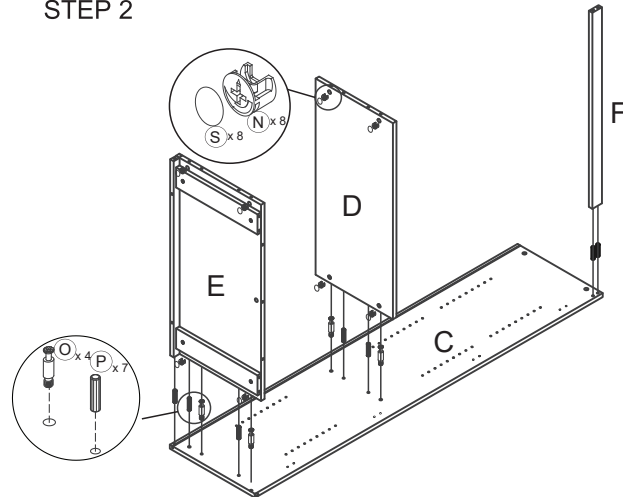


STEP 3

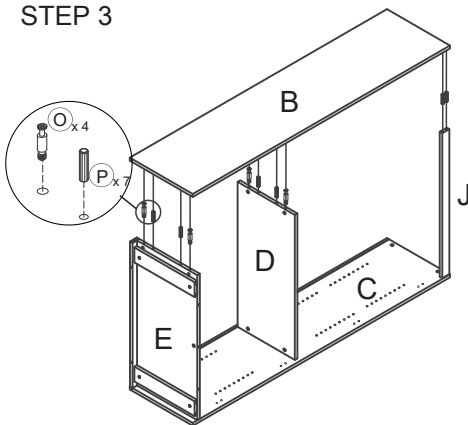


STEP 4


Turn to upright position.

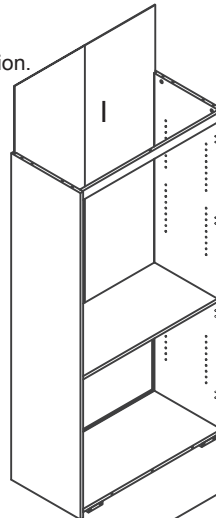


STEP 5

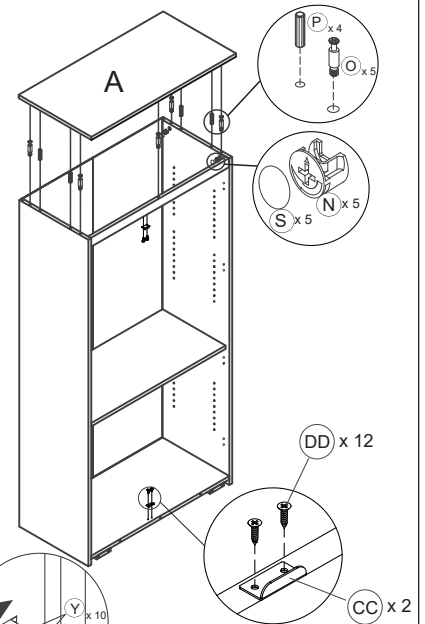

STEP 6

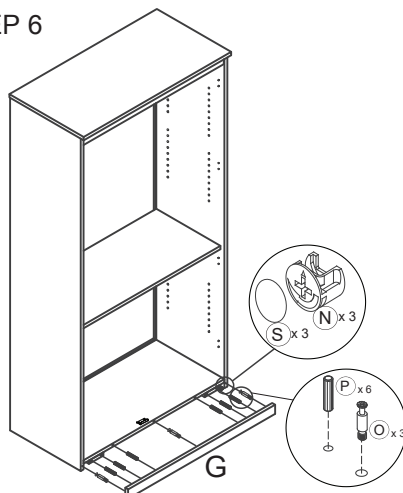

STEP 7

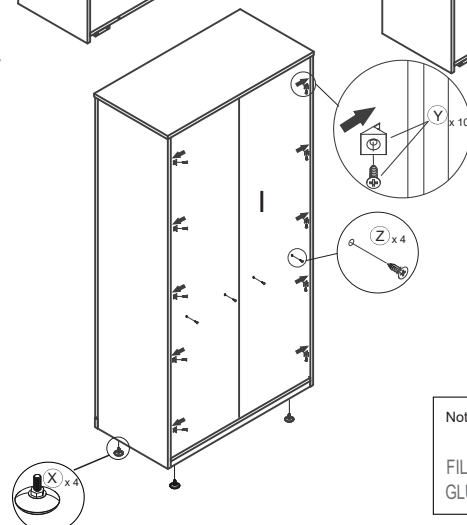

Note:

FILL WOOD DOWEL HOLE HALF WAY WITH
GLUE FOR A STRONGER CONNECTION




At Work - Storage Cabinet 72" H


Assembly Instructions

INSTRUCTIONS

STEP 8

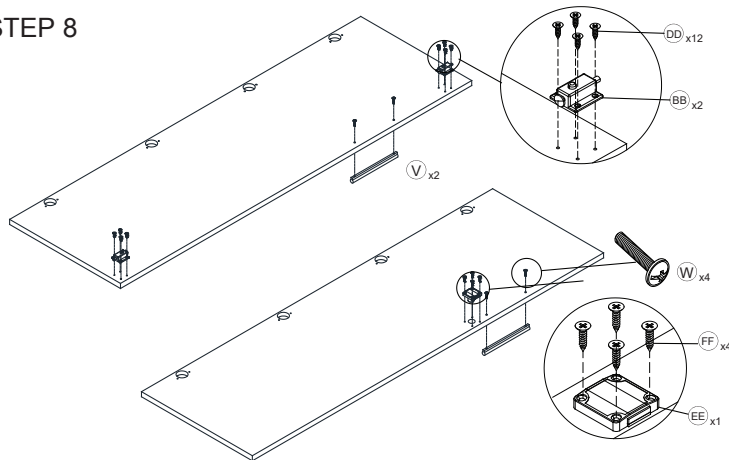


STEP 10

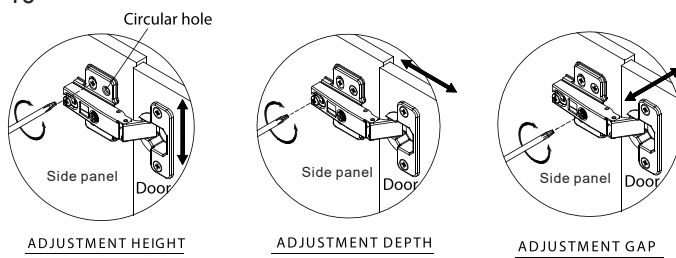


After properly adjusted, use
screw T to fix the hinge into
the circular hole.


STEP 12

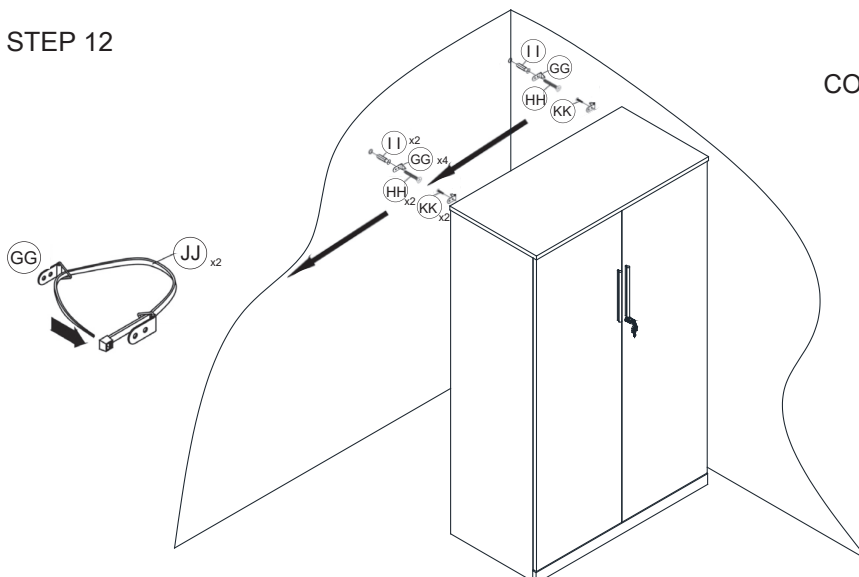

STEP 9

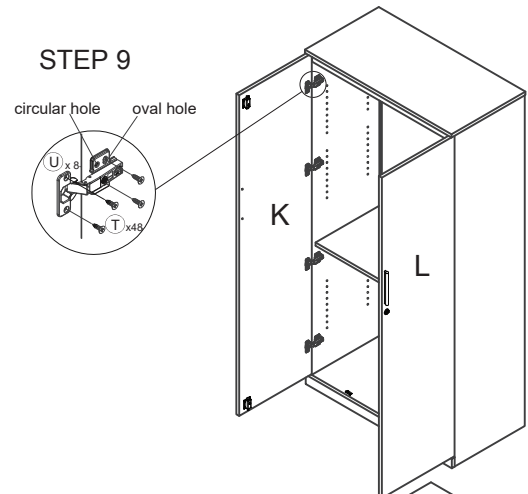

STEP 11

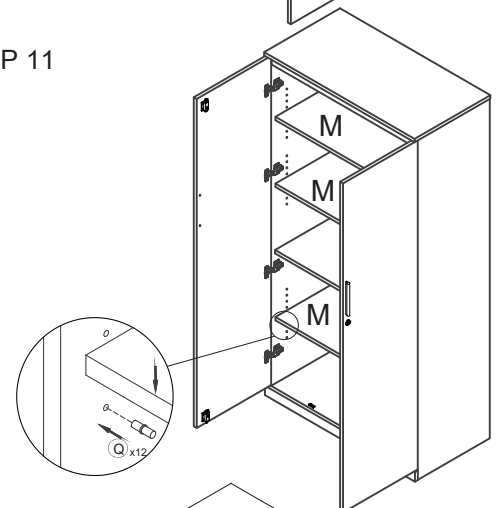

COMPLETED

