




At Work- Buffet Credenza


Assembly Instructions

COMPONENTS


Parts in carton A

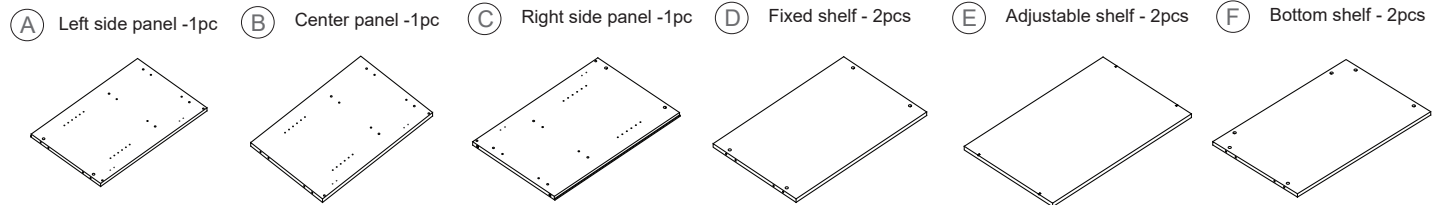

Parts in carton B

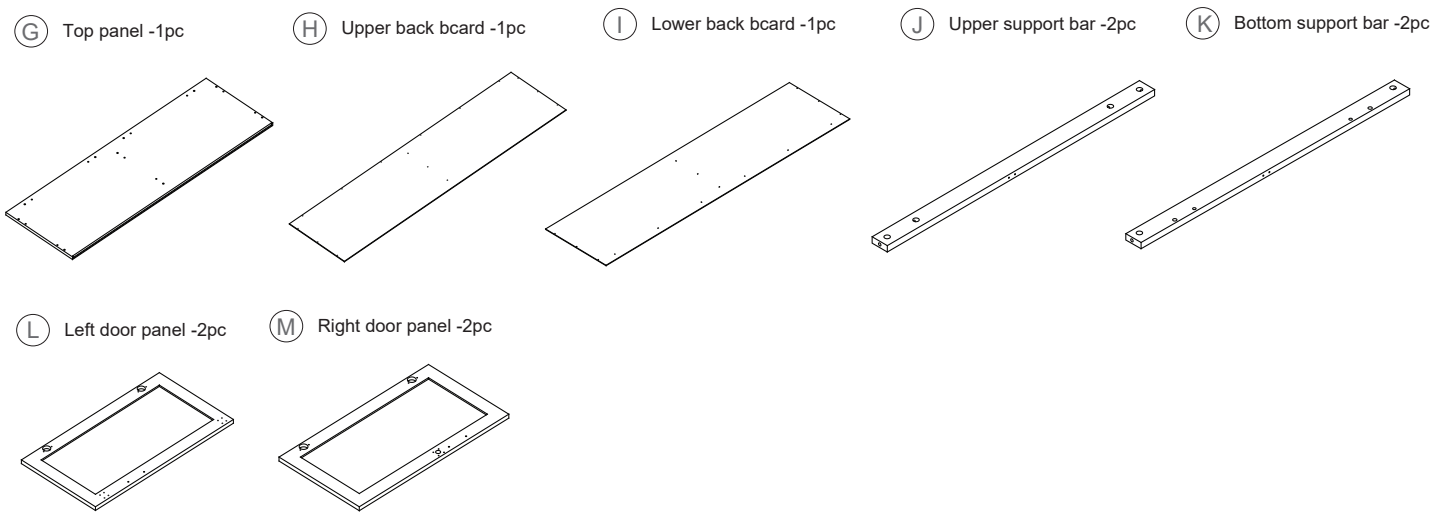

HARDWARE & TOOLS

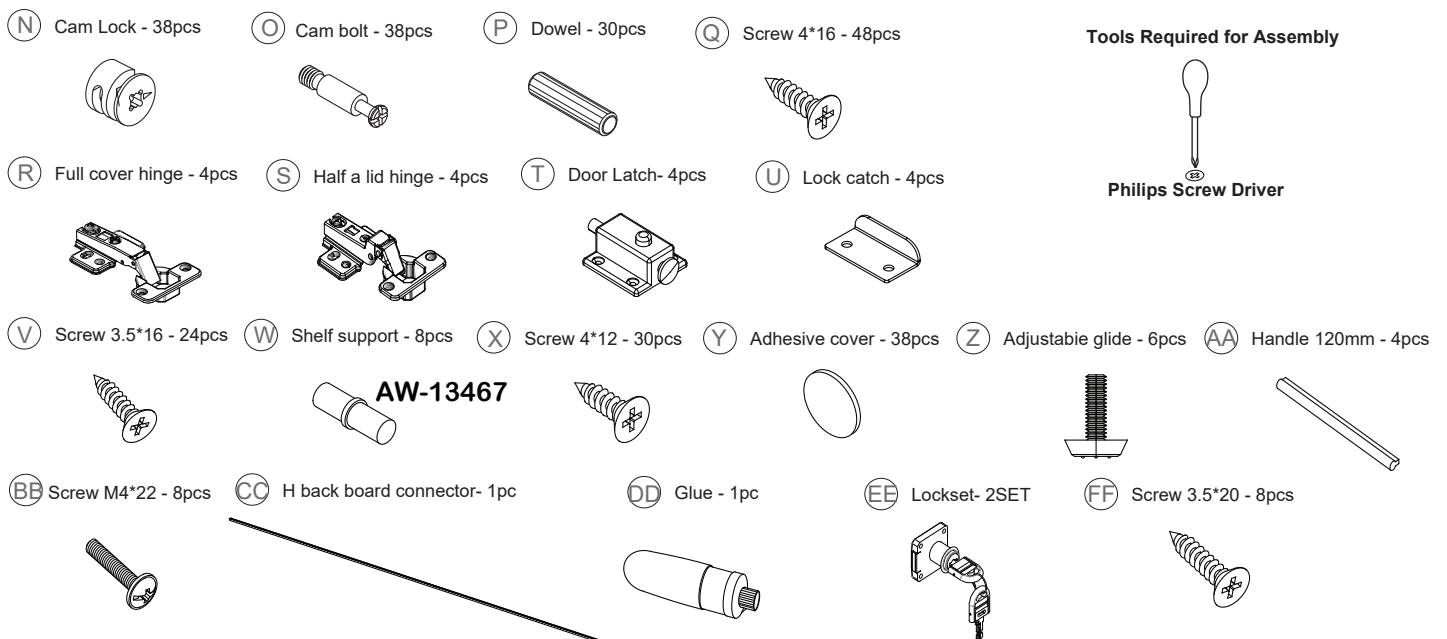




At Work- Buffet Credenza


Assembly Instructions

INSTRUCTIONS


STEP 1

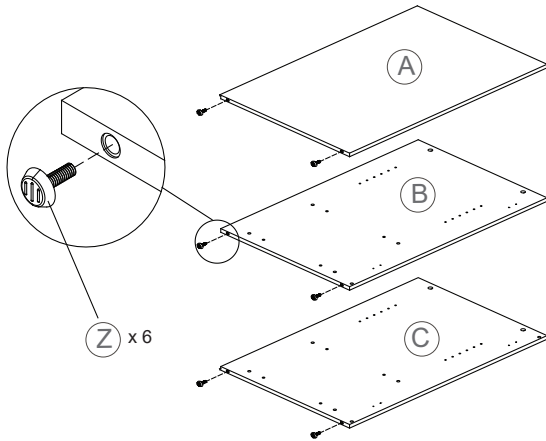


STEP 2

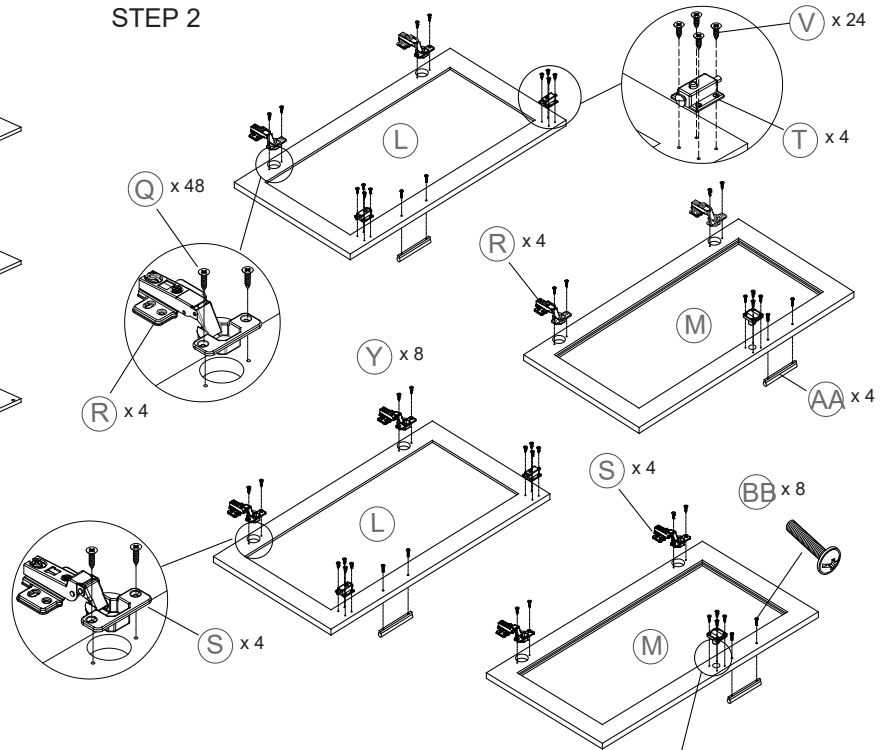


STEP 3

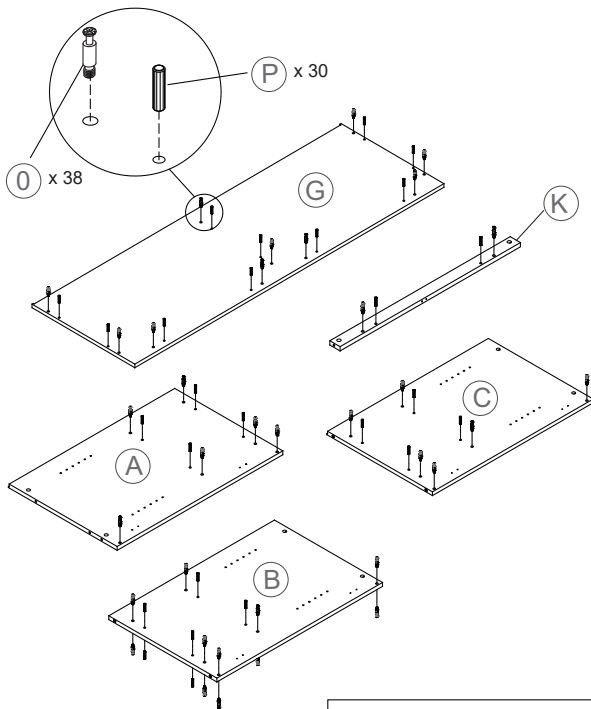

STEP 4

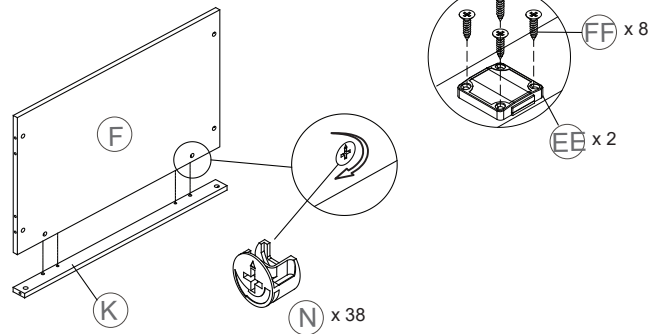

STEP 5

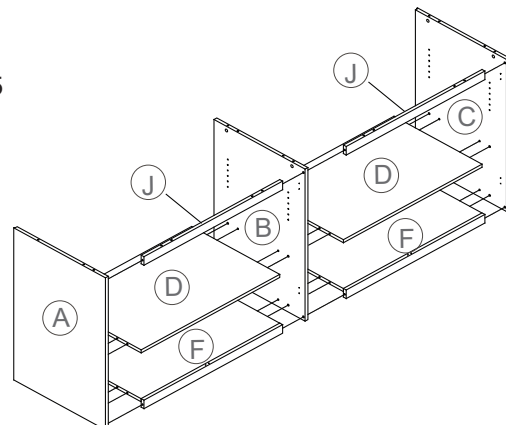

FILL WOOD DOWEL HOLE HALF WAY WITH
GLUE FOR A STRONGER CONNECTION




At Work- Buffet Credenza


Assembly Instructions

INSTRUCTIONS


STEP 6

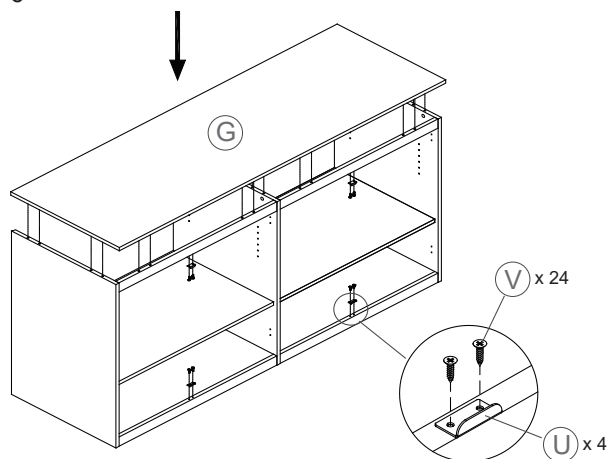


STEP 7

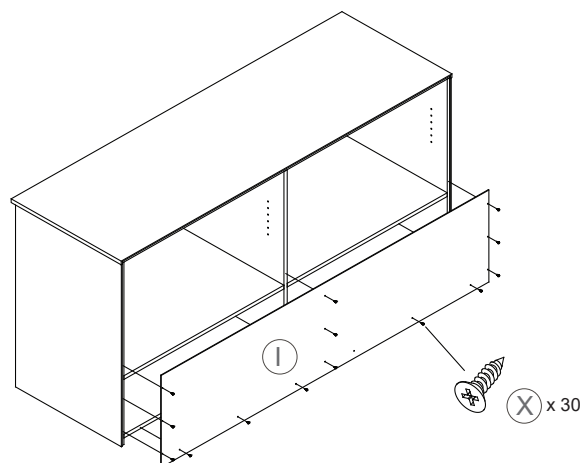


STEP 8

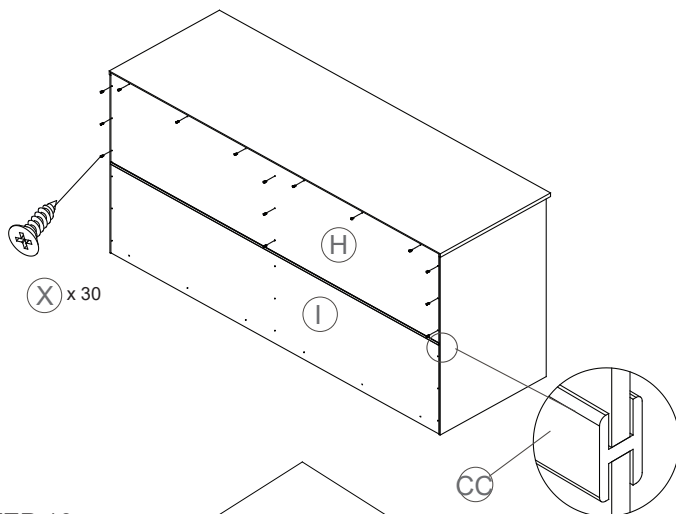


STEP 9

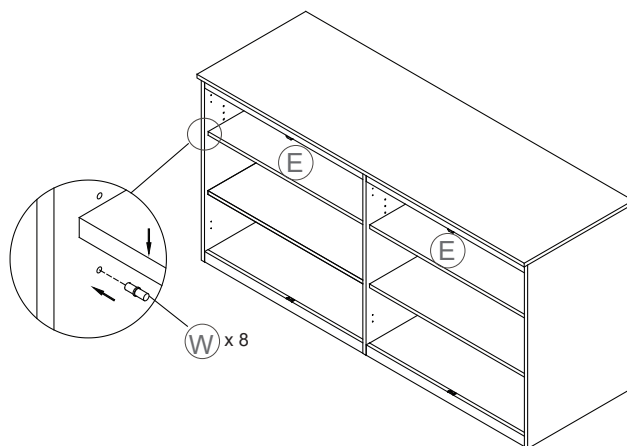

STEP 10

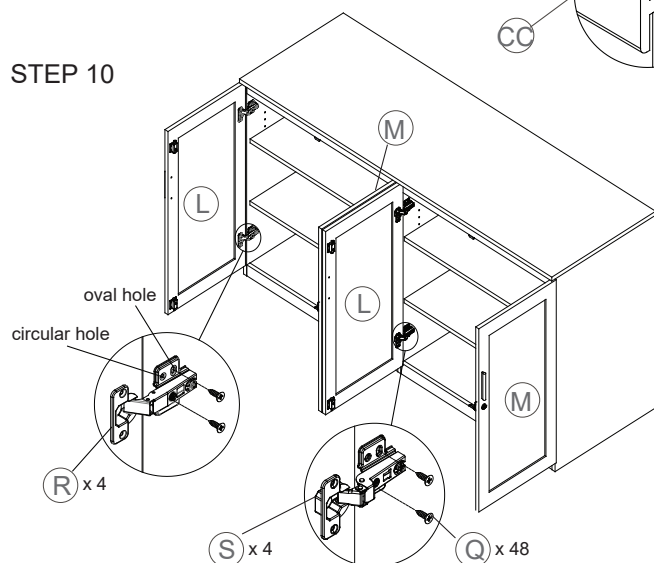

STEP 11

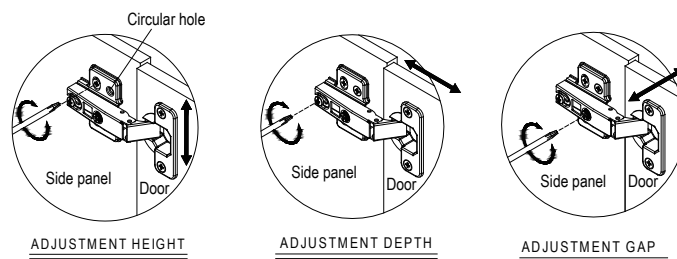

When adjustment height is OK,
Then use screw Q to fix the hinge
in the circular hole



At Work- Buffet Credenza

Assembly Instructions

INSTRUCTIONS

STEP 12

