


## Storage Cabinet Assembly Instructions

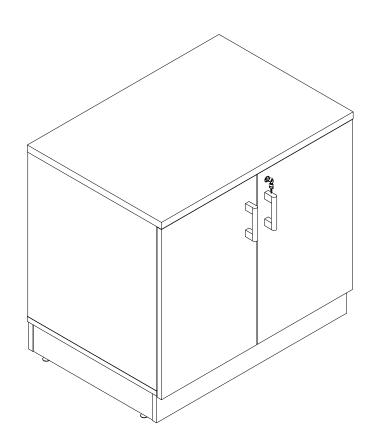





Assembly HARDWARE				
S/N	PICTURE	NAME	TOTAL QTY	REMARK
А		CAM SCREW	18+2(SPARE)	
В		KLIX CAM	18+2(SPARE)	
С	0	CAM COVER STICKER	18+2(SPARE)	use cam covers to cover any klix cam screws
D		WOOD DOWEL	12+2(SPARE)	
E		LEVELER	4+1(SPARE)	
F	Ø	SHELF PEG	4+1(SPARE)	
G	1111	HINGE	4PCS	
Н		LOCK	1PCS	
I		LATCH	1PCS	
J	<b>⊗_10000</b>	Handle With Screws	2PCS	
K		Ø4*35Screw	4PCS	

## **PART LIST**

- 1 TOP PANEL
- 2 LEFT SIDE PANEL
- **3 RIGHT SIDE PANEL**
- **4** BASE PANEL
- **5** BACK SUPPORT
- **6** BASE SUPPORT
- $\bigcirc$  SHELF
- 8 DOOR(2)

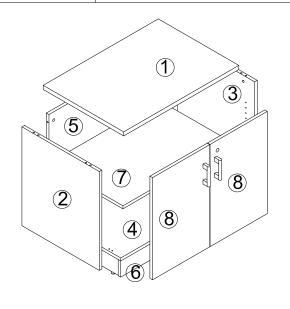


1. INSTALL THE "E" LEVELERS ON THE BOTTOM OF BASE SUPPORT 6. E(4x)

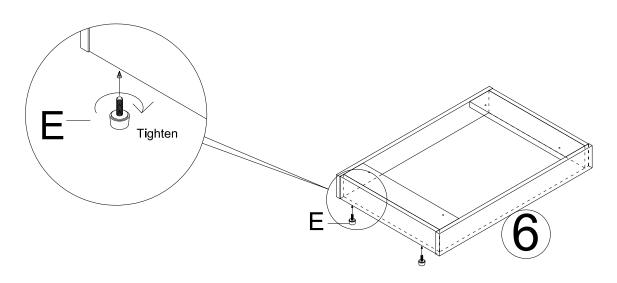

A (6x)

B (6X)

D(4X)

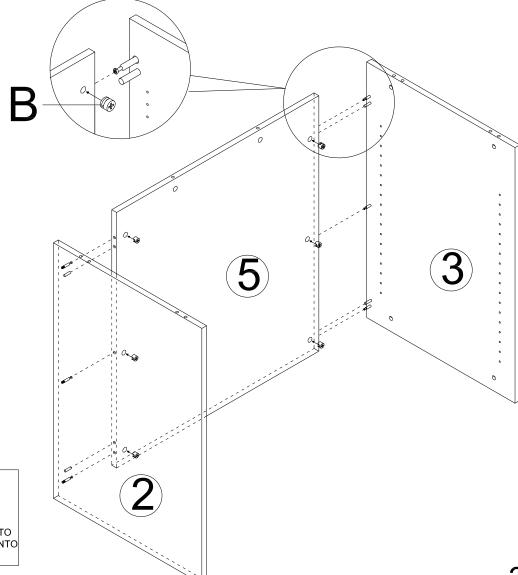


IMPORTANT:




3

3. INSTALL "A" CAM SCREWS AND "D" DOWELS ON UNDERSIDE OF TOP 1 & BOTTOM PANEL 4 .


A(12x) D(8X)

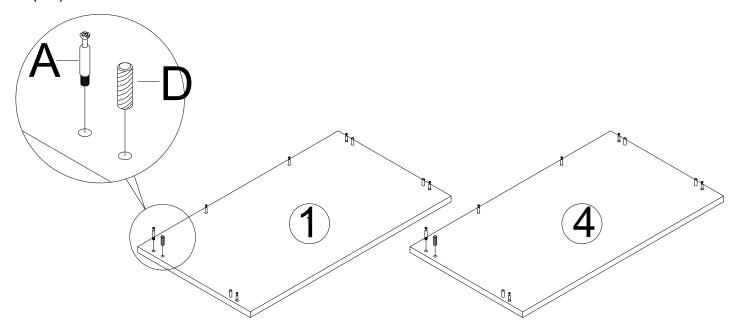


4. INSTALL "B" KLIX CAMS INTO SIDE PANELS ② ③ & ⑤. THEN CONNECT BOTTOM PANEL ④ TO ② ③ & ⑤. TIGHTEN. REPEAT STEP TO CONNECT TOP

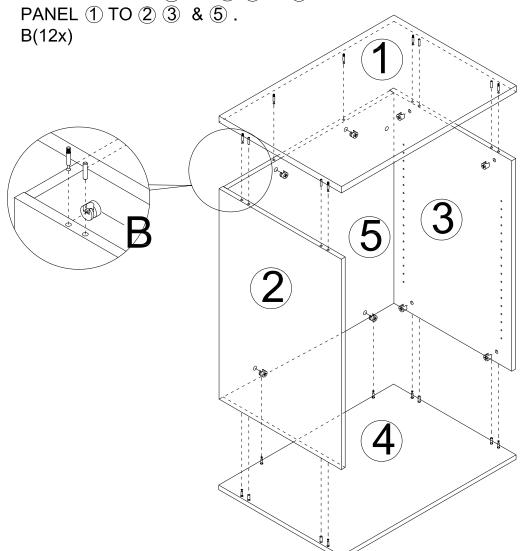


5. CONNECT BASE SUPPORT 6 TO BOTTOM PANEL 4 USING "G" SCREWS. G(4X)

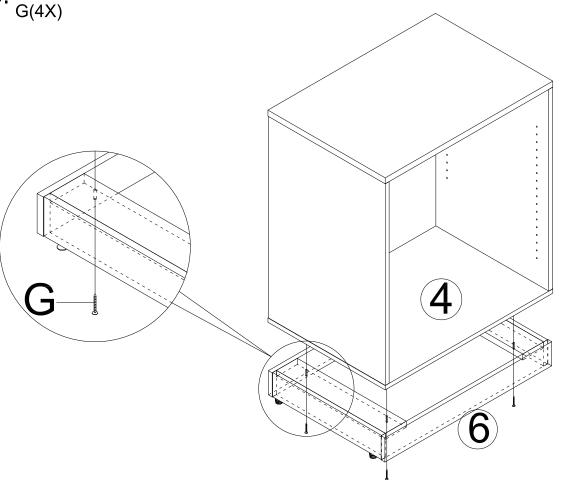


6. INSERT "F" SHELF PEGS INTO SIDE PANELS ② AND ③ . SET SHELF ⑦ ON TOP OF PEGS. F(4X)

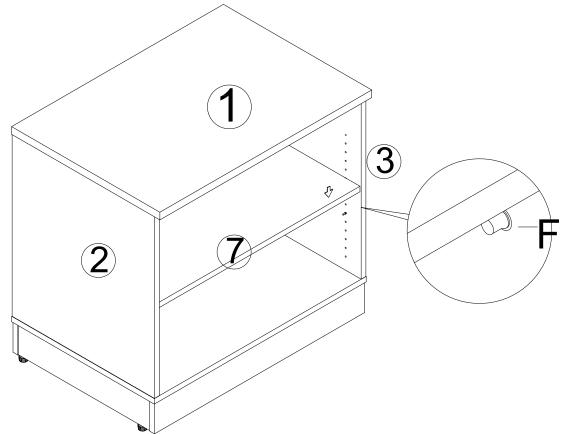


7. INSTALL "G" HINGES ON INSIDE OF DOOR 8, 2 PER DOOR. ATTACH HINGE TO INSIDE OF SIDE PANELS 2 AND 3, ADJUST AS NEEDED. SEE BOX. G(4X)

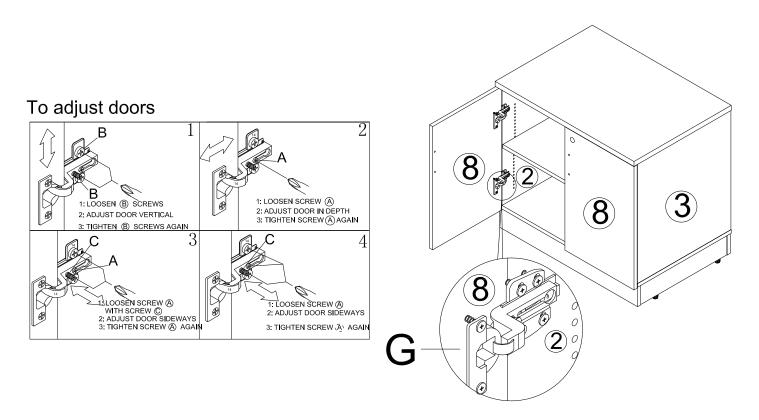


8. INSTALL "J" HANDLES ON DOOR 8. ONE PER DOOR. J(2x)

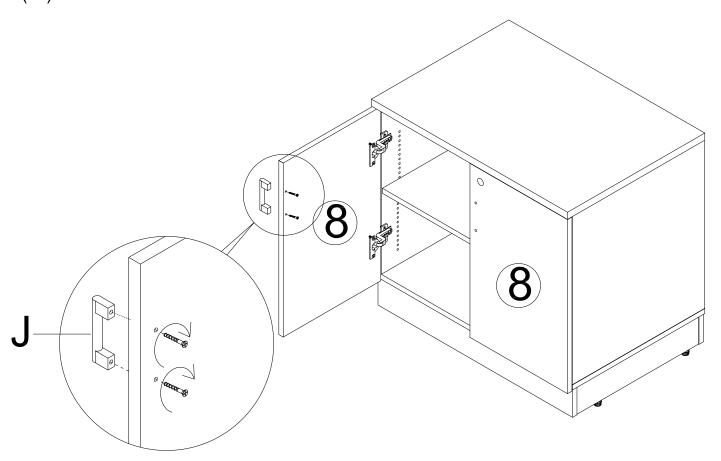


9. INSTALL "I" LATCH ON THE UNDERSIDE OF TOP ① AND ON INSIDE OF LEFT FACING DOOR ⑧.( DOOR ATTACHED TO PANEL②) I (1x)

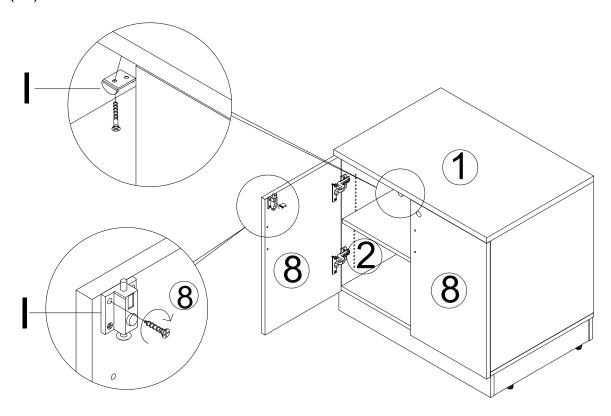

10. INSTALL "H" LOCK UNDER TOP ① & ON INSIDE OF RIGHT FACING DOOR ⑧.( DOOR ATTACHED TO PANEL③)
H(1X)

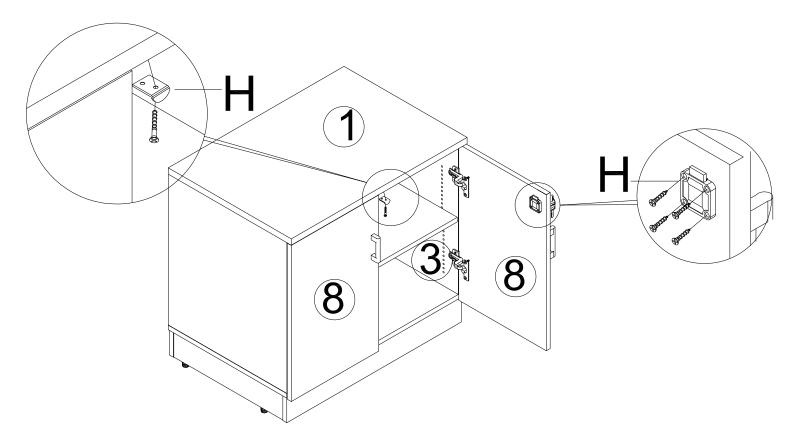

11. USE "C" CAM COVERS STICKERS TO COVER ALL EXPOSED KLIX CAMS. C (18x)

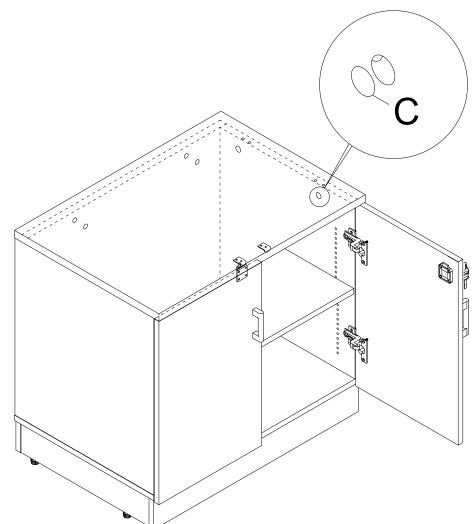

## 12. COMPLETED

