






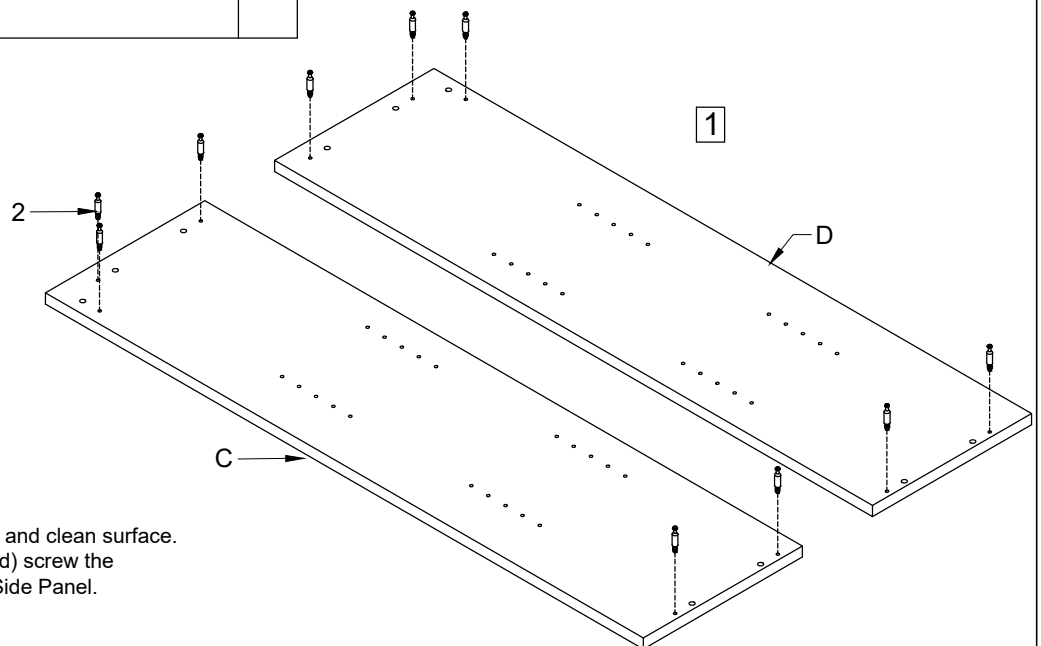




SETUP INSTRUCTIONS IMTR310 HUTCH

No	Parts List		Qty
A		Top Panel	1
B		Bottom Panel	1
C		Side Panel Left	1
D		Side Panel Right	1
E		Shelf	2
F		Top Rail	1
G		Back Board	1

No	Hardware List	Qty
1	Camlock: Nut Ø15x15 mm	13
2	Camlock: Pin Ø6x11, Ø7x28 mm	13
3	Screw Ø4x20 mm Panhead	16
4	Shelf Support Pin L-Shaped	8
5	Screw Ø4x15 mm, CSK	8
6	Felt Foam	4
7	Anti-Tip Restraint Hardware	1



1

Lay the Side Panel (C,D) on a smooth and clean surface.
Using a Philip Screwdriver (not included) screw the
Camlock Pin (2) into the holes on the Side Panel.

CARING FOR YOUR FURNITURE


- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes are not necessary. Should you choose to use polishes, test in an inconspicuous area first.
- Using solvents of any kind on your furniture may damage your furniture finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Use a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Direct sunlight may damage wood finishes.
- Extreme temperature and humidity changes can cause warping, shrinking and splitting of wood furniture. It is best to keep furniture in a climate controlled room.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.



SETUP INSTRUCTIONS IMTR310 HUTCH


2

Locate the Top Panel (A) and insert the Camlock Nut (1) into the holes as indicated making sure the arrows are pointing outwards.
Using a Philip Screwdriver (not included) screw the Camlock Pin (2) into the holes on the Side Panel.

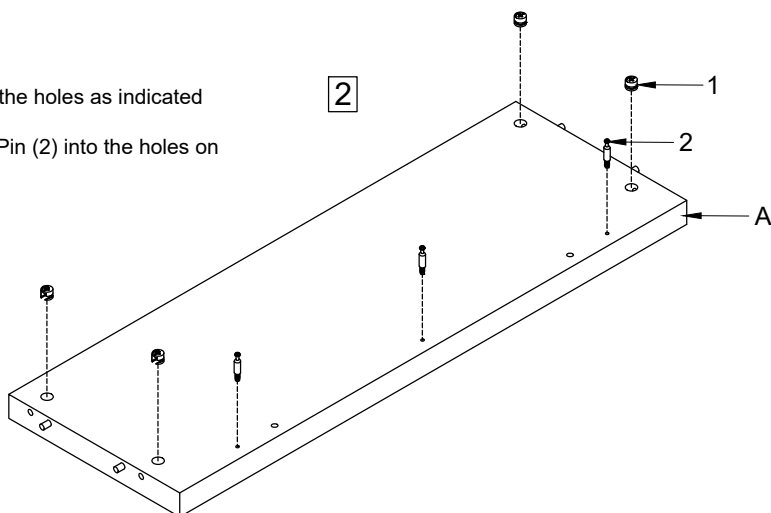


3

Insert the Camlock Nut (1) into the holes as indicated making sure the arrows are pointing outwards.
Attach the Top Rail (F) to the Top Panel (A) and turn the Nut clockwise to secure the two parts together.

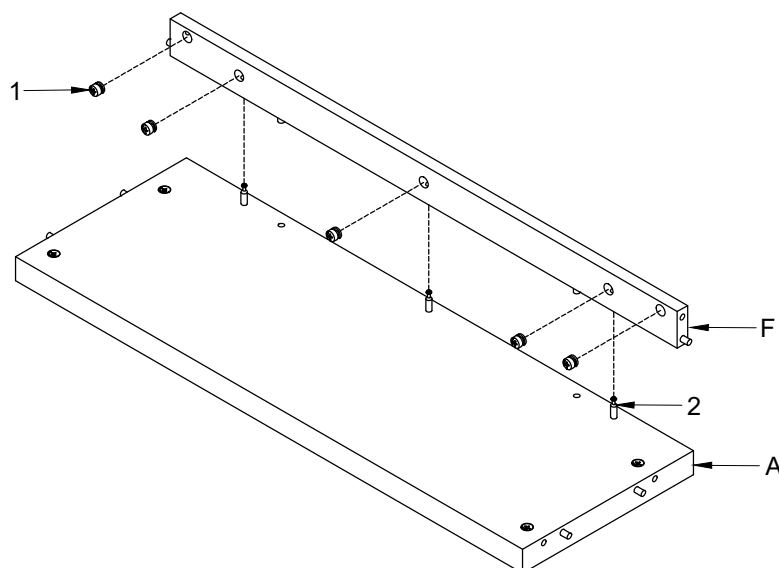

4

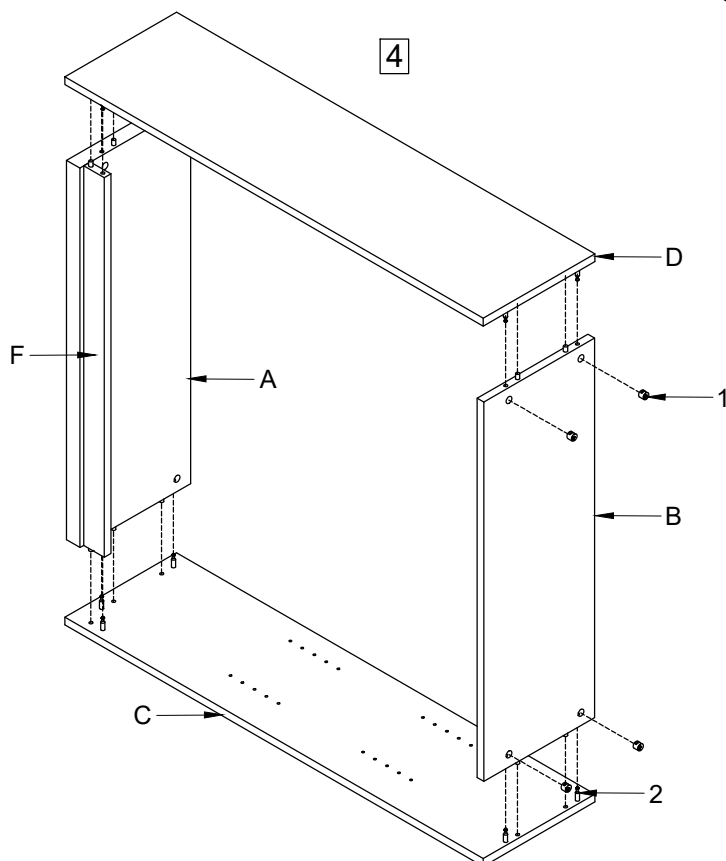

4

Insert the Camlock Nut (1) into the holes on the Bottom Panel (B) as indicated making sure the arrows are pointing outwards.
Attach assembled Top Panel (A) and Top Rail (F) and Bottom Panel (B) on the Side Panel Left (C).
Cover the other side with the Side Panel Right (D) and turn the Nut (1) clockwise to secure all the parts together.




SETUP INSTRUCTIONS IMTR310 HUTCH

5


Turn the assembled Hutch so that it is facing down.

Locate the Back Board (G) and place it over the back of the Hutch making sure the edges are about 2 to 3 mm away from the edges of the Hutch. Use the Screws (3) to secure the Back Board (G) to the Hutch.

Raise the assembled Hutch upright.

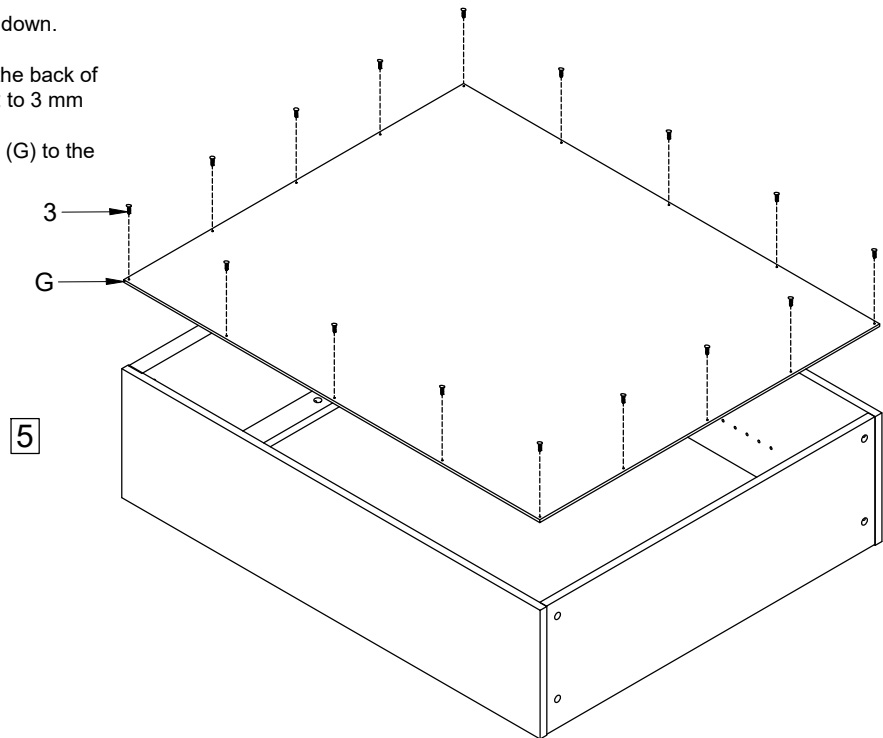

6

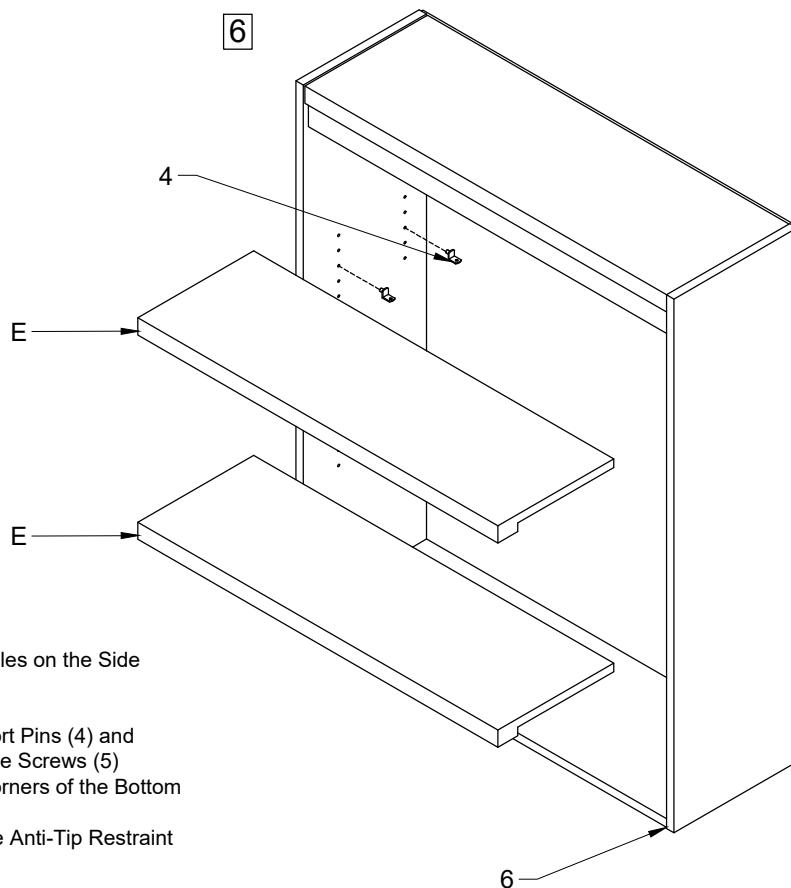

6

Put in the Shelf Support Pins (4) into the holes on the Side Panels (C,D) at desired height.

Put in the Shelves (E) onto the Shelf Support Pins (4) and screw the Shelves from the bottom using the Screws (5). Tape the Felt Foam (6) below at the four corners of the Bottom Panel (B).

Please secure the Hutch to the wall with the Anti-Tip Restraint Hardware (7).