

SM720R SETUP INSTRUCTIONS

FIGURE 1

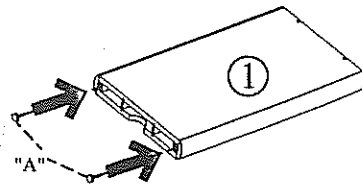


FIGURE 2

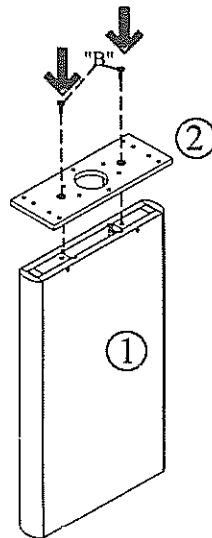


FIGURE 3

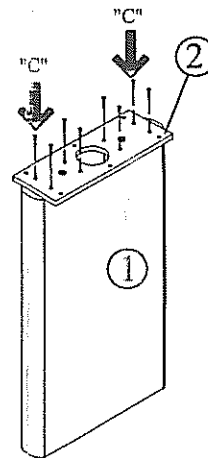


FIGURE 4

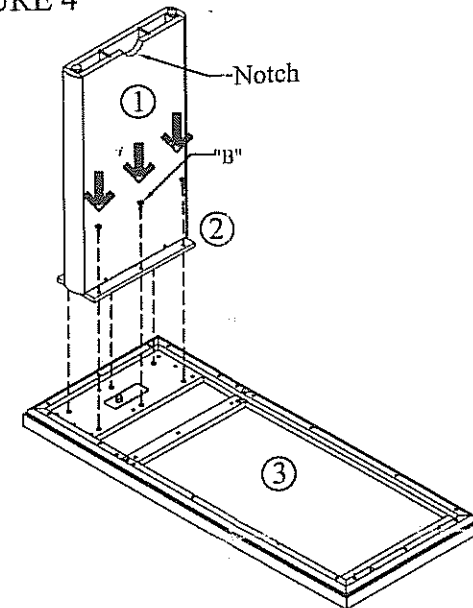


FIGURE 5

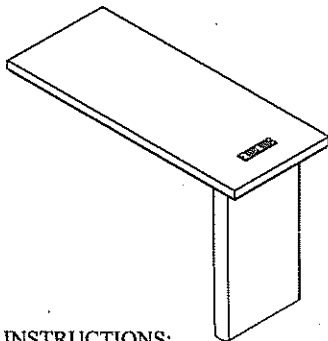


FIGURE 6


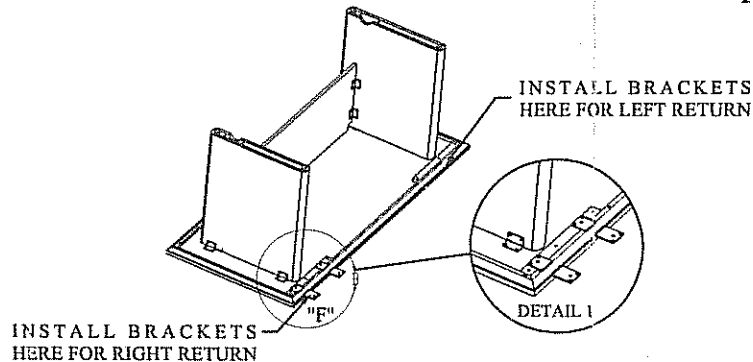


FIGURE 7

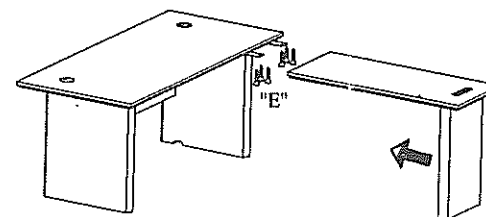

INSTRUCTIONS:

1. Unpack all from box.
2. Install HEX HEAD LEVELER (A) (Fig.1).
3. Install SUPPORT (2) using two BOLT 1/4-20mm X 30 mm (B).(Fig.2)
4. Install eight DRYWALL 6 X 1 1/4" (D) to attach to the LEG (Fig.3)
5. Place the top (3) face down on a soft surface (can use the protective foam) (Fig.4)
6. Place the LEG (1), referencing the circular notch, as shown (Fig.4).
7. Secure the LEG (1) to the TOP (3) using SIX BOLT 1/4-20mm X 30mm (B) (Fig.4)
8. Place Wire Management Clips where convenient. (G).
9. FOR RETURN INSTALLATION OPTION Mount two (2) Brackets ("F") to the DESK Top using six (6) 1-1/4" Phil screws ("E") (Fig. 6. Detail 1)
10. Position the Return onto the brackets mounted in the step (7) and secure using six 1-1/4" Phil screw ("E") (Fig.7.)

No:		Hardware List SM720R	Qty
A		HEX HEAD LEVELER	2
B		BOLT 1/4-20 mm X 30mm	8
C		4mm ALLEN WRENCH	1
D		DRYWALL 6 X 1 1/4"	8
E		#8 X 1 1/4 PHIL RND WASHER SCREW	12
F		RETURN BRACKET	2
G		WIRE MANAGEMENT CLIP	2