


**NOTE:**  
Instructions demonstrate a Left Handed Return


## UNIVERSAL LIFT RETURN DESK SETUP INSTRUCTIONS

**NBF** SIGNATURE  
— SERIES —


800-558-1010 | www.NBF.com

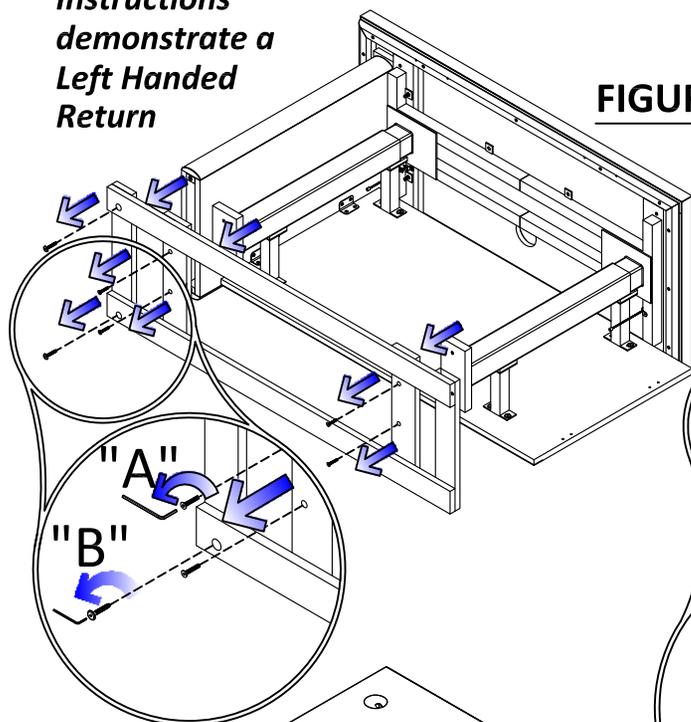


**FIGURE 1**

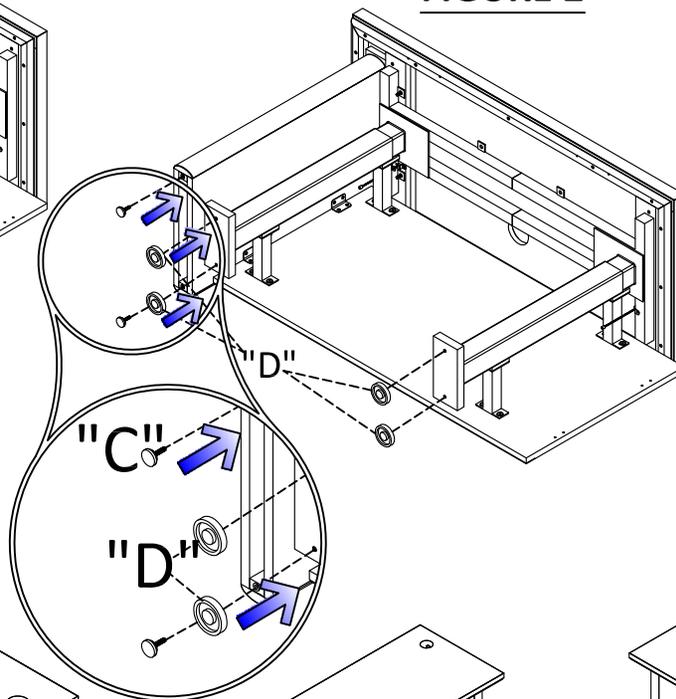

**FIGURE 2**

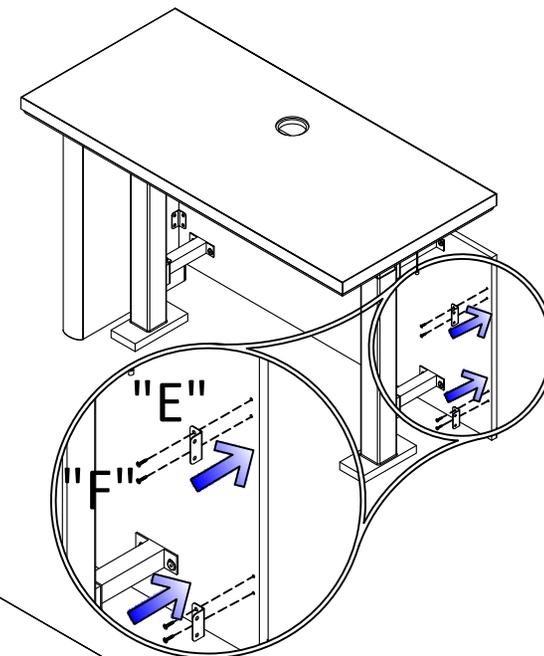

**FIGURE 3**

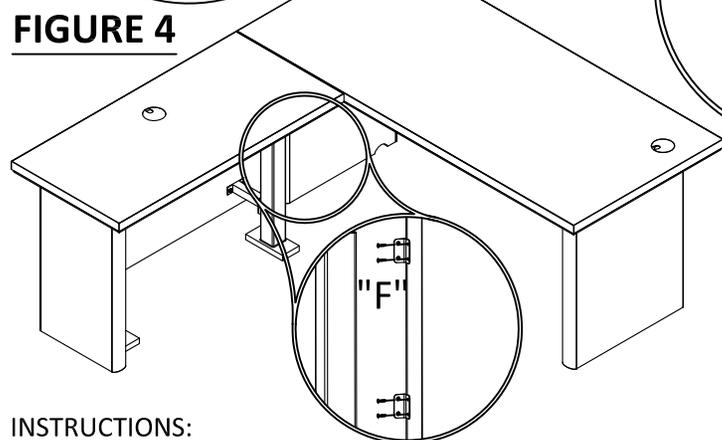

**FIGURE 4**

**Left Handed**

**Right Handed**

**INSTRUCTIONS:**

1. Unpack all components from the box, protect your unit by placing it on a soft surface to avoid scratching.
2. Remove the frame using ALLEN WRENCH BIG ("A") and SMALL ("B") [FIGURE 1]
3. Install two small levelers ("C") and four big levelers ("D") as shown. [FIGURE 2]
4. Mount two L-BRACKETS ("E") onto the Modesty panel using pre-drilled pilot holes with four SCREWS ("F"). [FIGURE 3].
5. Connect unit to desk by attaching with the four remaining SCREWS ("F") [FIGURE 4].
6. Move the Control Panel to the right or left side, per your preference, guided with the pre-drilled pilot holes.
7. Use Wire Management Straps where convenient. ("G").
8. Add grommet. ("H").

**NOTE: WRENCH ("I") is supplied if connecting rod loosens in use or shipment.**

TOOLS REQUIRED: Phillips Screwdriver

No:	Hardware List	Qty
A	ALLEN WRENCH BIG	1
B	ALLEN WRENCH SMALL	1
C	SMALL LEVELER	2
D	BIG LEVELER	4
E	BRACKET	2
F	SCREW	8
G	WIRE MANAGEMENT STRAP	2
H	GROMMET	1
I	WRENCH	1