





COMPONENTS

IDT7230HA / IDT6030HA

A Top Panel-1pc



B Modesty Panel-1pc

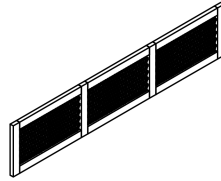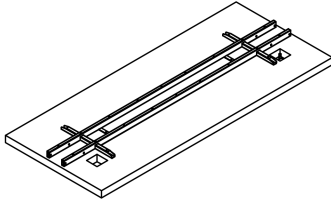

IDBHAB

C Left Base Leg-1pc

D Right Base Leg-1pc

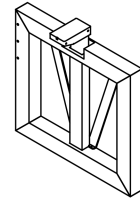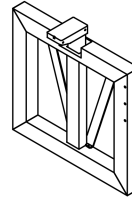

HARDWARE & TOOLS

E Cam Post-5pcs

F Wood Dowel
Ø8*30mm-3pcs

G Cam Lock-5pcs

H Screw
M6X15mm-5pcs

Tools Required for Assembly



I Screw
Ø6X33mm-8pcs


J Cam Sticker-5pcs

K Mntg Bracket
50*30*2mm-2pcs

L Screw
Ø4X20mm-9pcs

Philips Screw Driver for

E Cam Post G Cam Lock



L Allen Screw M4X20mm



M Allen Wrench 4mm-1pc

N Allen Wrench 5mm-1pc

P Wire Management Tray-2pc

NOTE:

Hardware is packed with
carton IDT7230HA



HARDWARE & TOOLS

R Control Box
-1pc




S Controller-1pc

T Power cord
-1pc

U Screw
Ø5X20mm-3pcs

V Screw
Ø4X14mm-3pcs

Tools Required for Assembly



NOTE:

Hardware is packed with
carton ALCB2 / ALCB3.


Philips Screw Driver for

U Screw Ø5X20mm

V Screw Ø4X14mm

INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts

STEP 1



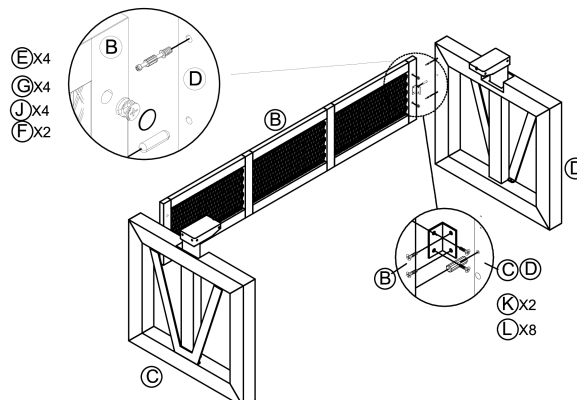




INSTRUCTIONS - Do not use power tools to assemble



STEP 2

Install the Top (A) to the Legs(C,D) by Screw (I);

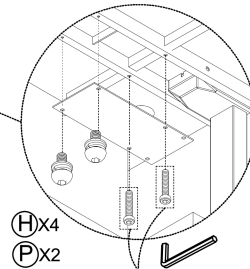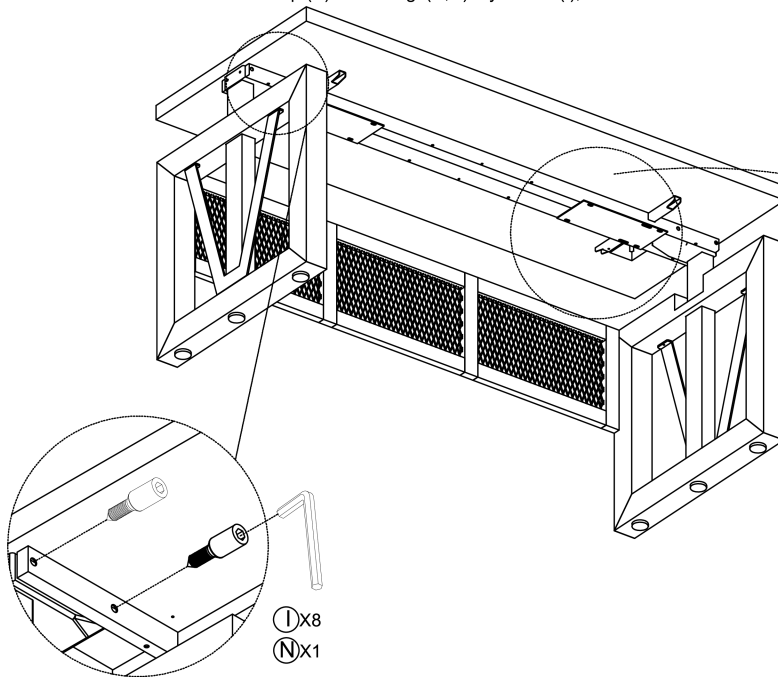

(H) X4
(P) X2
Uninstall the Frame Mounting
Screws, Qty 2, with Wrench (N).
Install Wire Management
Tray (P) to Frame using
Screws (H) and Wrench (M).
Re-install Frame Screws thru
Wire Management Tray.


STEP 3

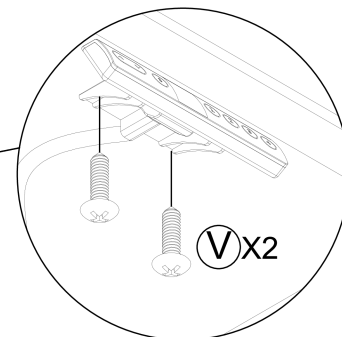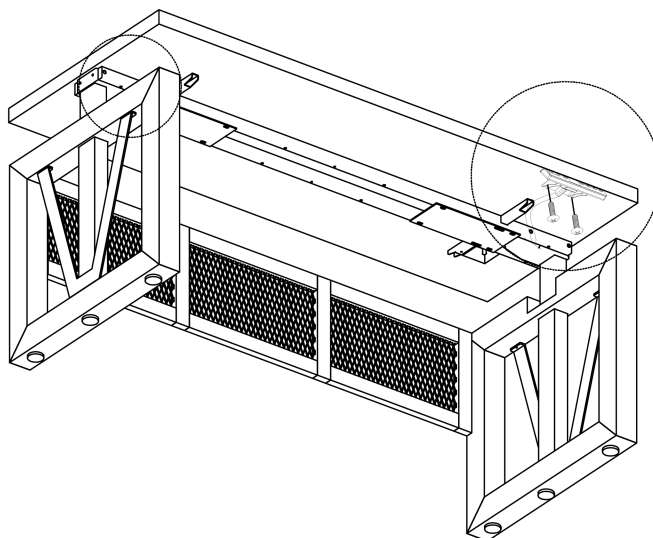



INSTRUCTIONS - Do not use power tools to assemble

STEP 4

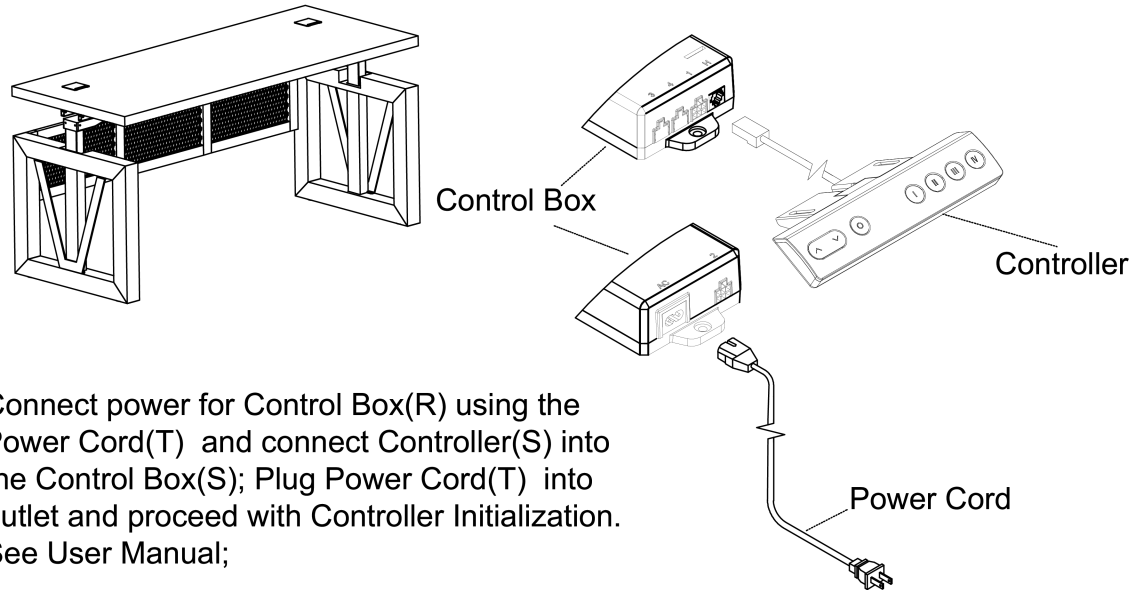



INSTRUCTIONS



Make sure no obstacles are in the desk's path.


Make sure the desktop is not touching any walls.



Make sure all cords are appropriate length to accommodate the change in height.

IMPORTANT: You must INITIALIZE the desk prior to first use.

Controller Initialization- Press and hold the Down button on the controller until the desk reaches its lowest height, slightly raises, and stops. Release the down button, your desk is now ready for use. (Following the "USER MANUALS" to use your desk)

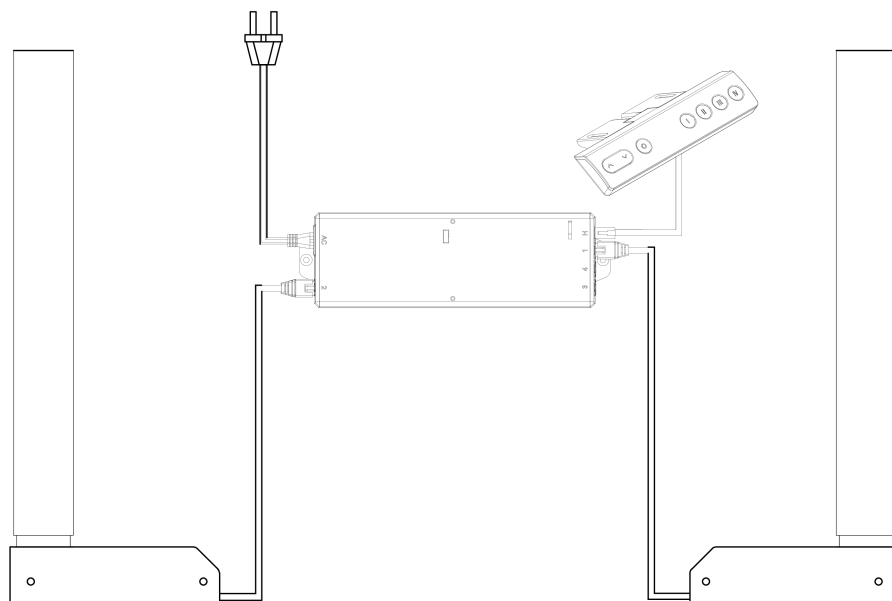

TROUBLESHOOTING

If the table is not functioning properly it may need to be reset.

Unplug the power cord for 20 seconds.

Plug the power cord back in and follow the RESET procedures.


If the error message persists after the reset procedure, please contact your dealer.

If the height between the legs exceeds 1.5 inches, stop the reset procedure, please contact your dealer.


COMPONENTS

IRT4820HA

A Top Panel-1pc

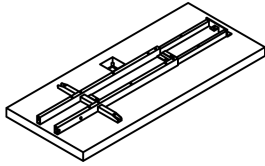

B Modesty Panel-1pc

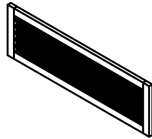

IRBHAB

C Base Leg-1pc



HARDWARE & TOOLS

D Cam Post-3pcs



E Wood Dowel
Ø8*30mm-2pcs



F Cam Lock-3pcs



G Screw
M6X15mm-10pcs



H Screw
Ø6X33mm-5pcs




Tools Required for Assembly



I Cam Sticker-3pcs




J Mntg Bracket
50*30*2mm-4pcs



K Screw
Ø4X16mm-29pcs



L Allen Wrench
4mm-1pc



M Allen Wrench
5mm-1pc



Philips Screw Driver for

D Cam Post


F Cam Lock

K Screw Ø4X16mm


R Screw Ø5x20mm

S Screw Ø5x45mm

N Wire Management
Tray-2pc



P Mntg Bracket
120*50*3mm-2pcs



R Screw
Ø5x20mm-3pcs



S Screw
Ø5x45mm-4pcs





NOTE:

Hardware is packed with
carton **IRT4820HA**


INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

STEP 1 - Install Right Side

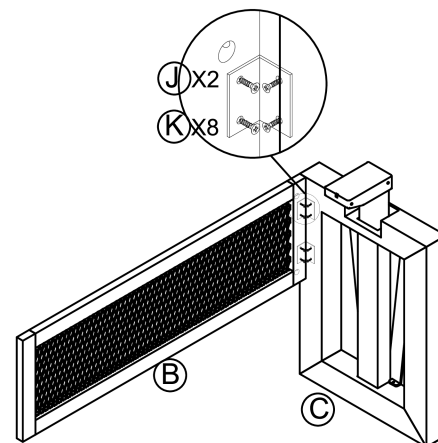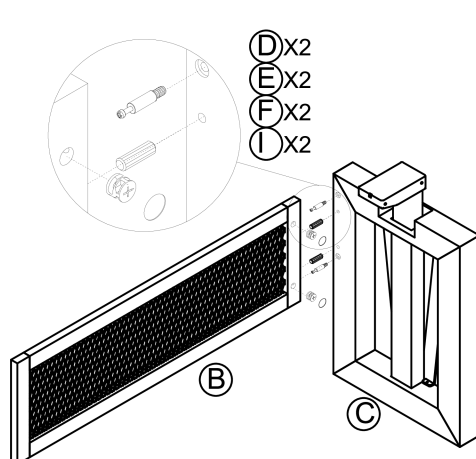


INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

STEP 2

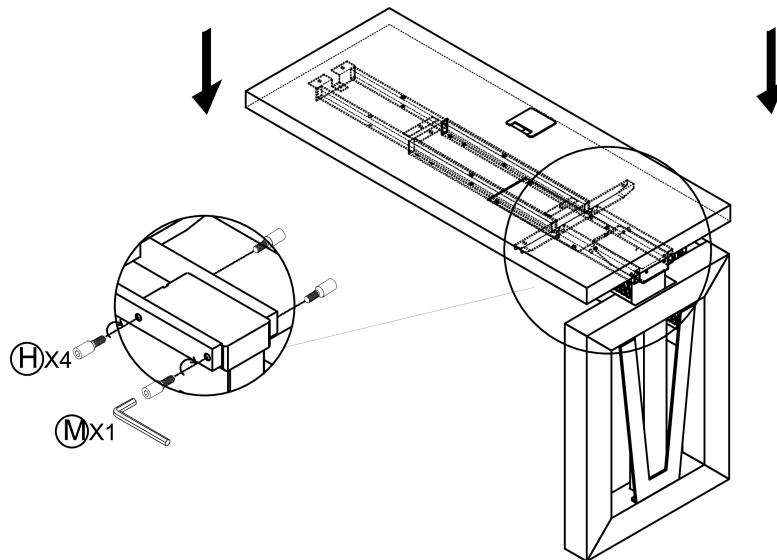


STEP 3

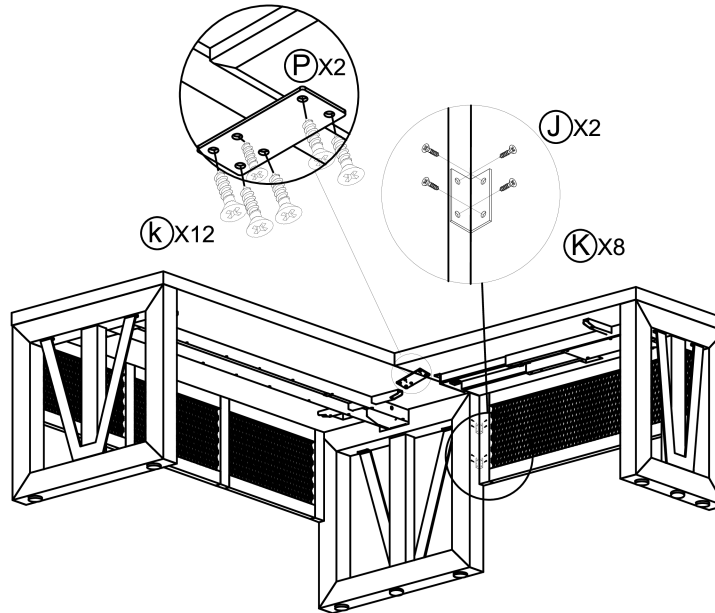


INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

STEP 4

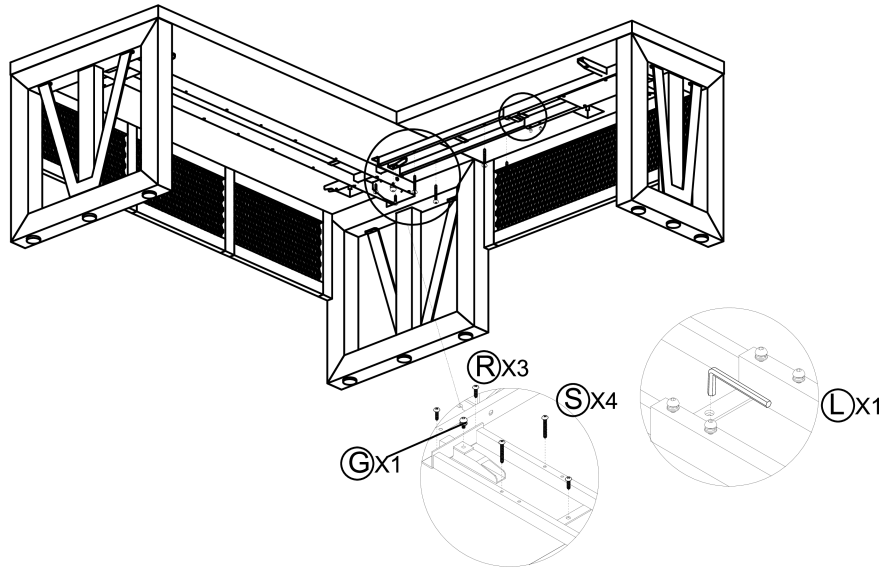

STEP 5

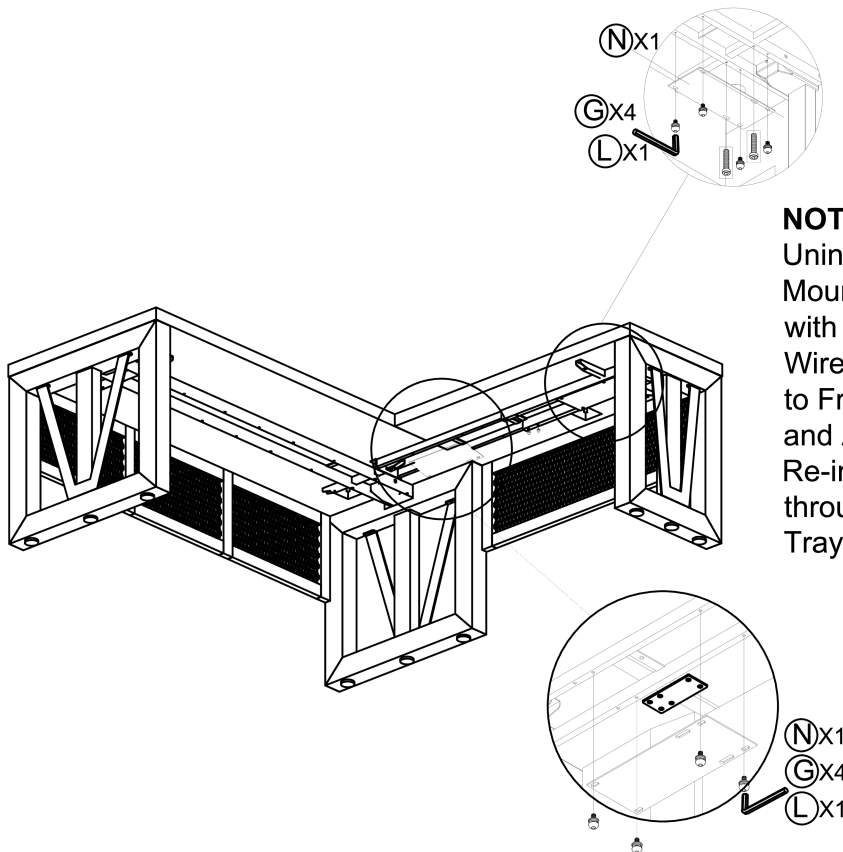


NOTE:

Uninstall the Frame Mounting Screws, Qty 2, with Allen Wrench (L). Install Wire Management Tray (N) to Frame using Screws (G) and Allen Wrench (L). Re-install Frame Screws through Wire Management Tray.



INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.


COMPLETED

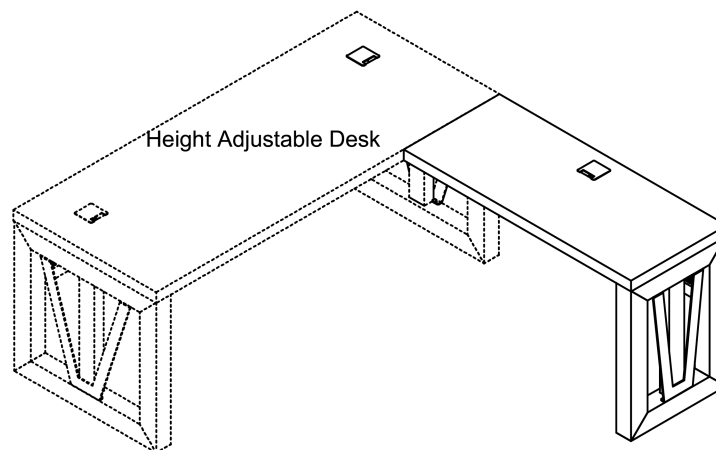


INSTRUCTIONS

Uninstall the Philips Screws and Allen Screws of the mounting frame, total Qty 4, with Allen Wrench (L) and tools, then turn around 180° and using screws install the mounting frame to other pre-drilled holes underside the height adjustable return top.


STEP 1 - Install Left Side

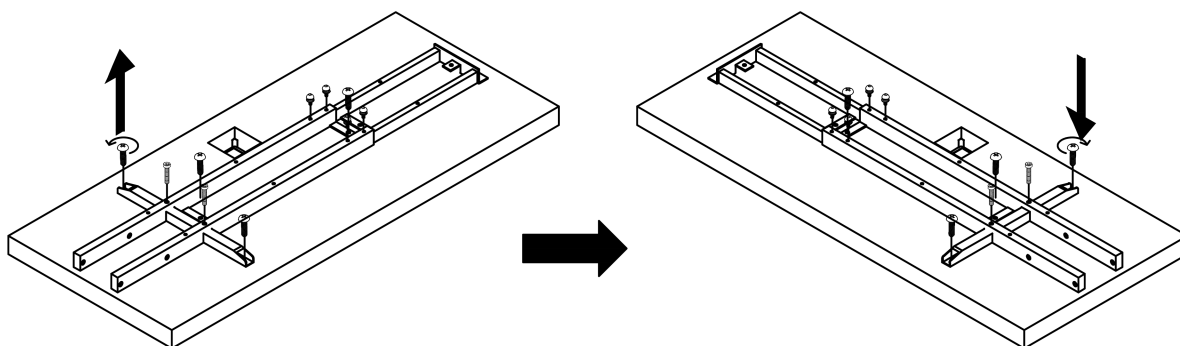


STEP 2

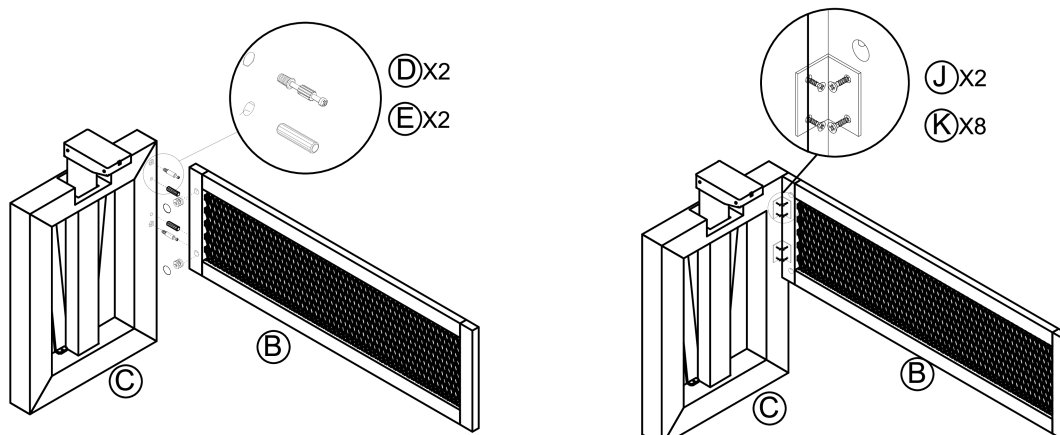


STEP 3

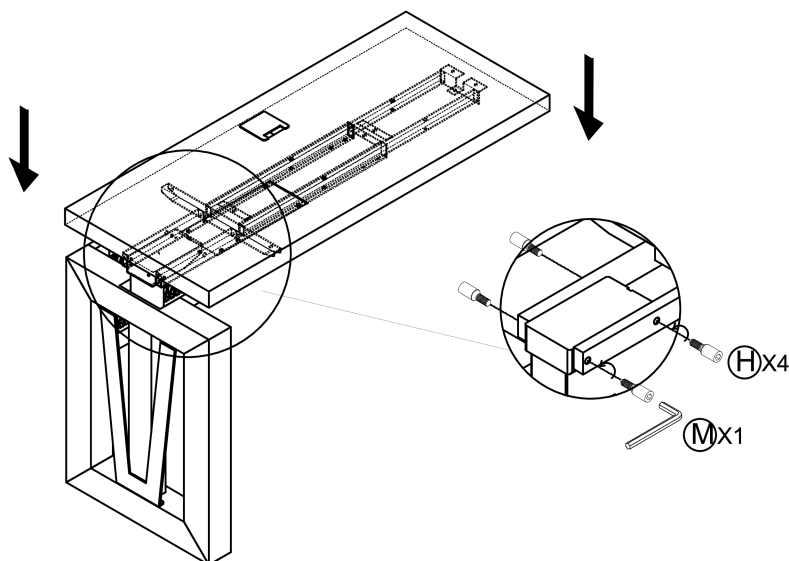

STEP 4

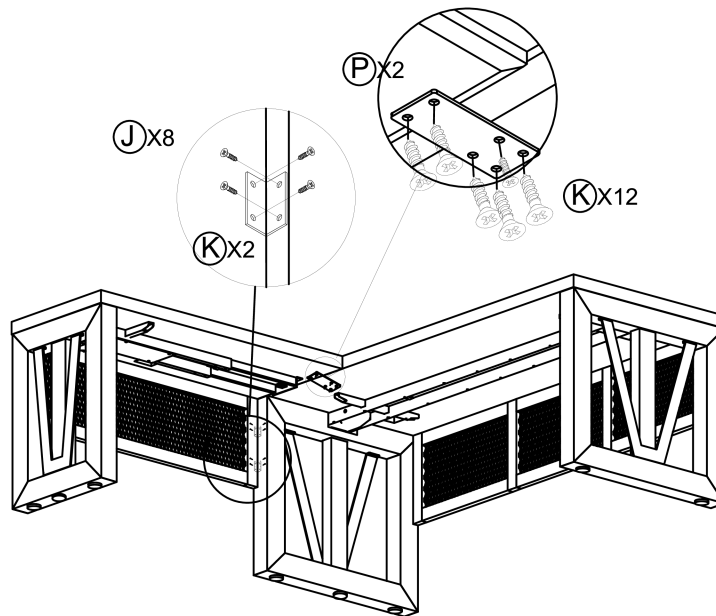


STEP 5

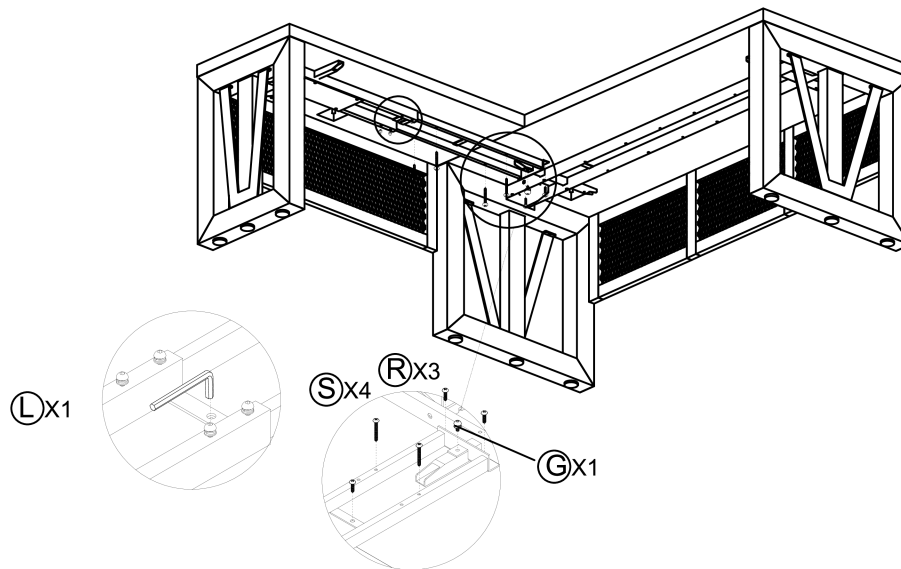




STEP 6

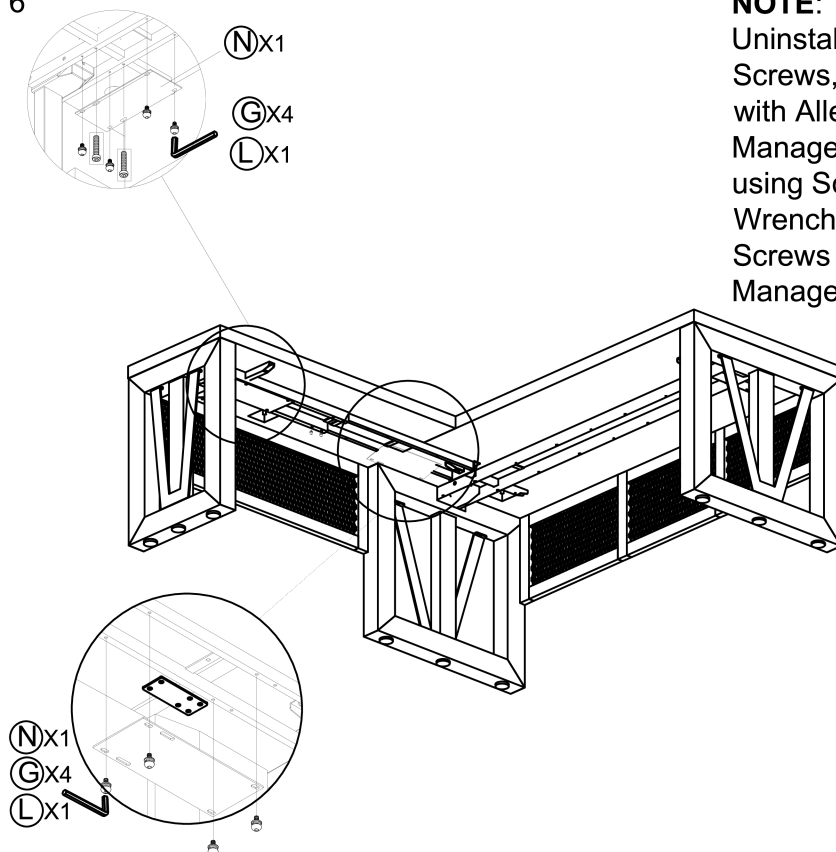

NOTE:

Uninstall the Frame Mounting Screws, Qty 2, with Allen Wrench (L). Install Wire Management Tray (N) to Frame using Screws (G) and Allen Wrench (L). Re-install Frame Screws through Wire Management Tray.

COMPLETED

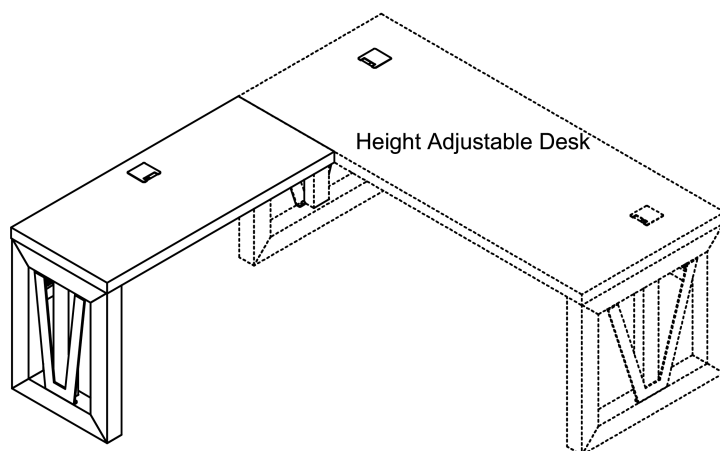


INSTRUCTIONS

! Make sure no obstacles are in the desk's path.
! Make sure the desktop is not touching any walls.
Make sure all cords are appropriate length to accommodate the change in height.

IMPORTANT: You must INITIALIZE the desk prior to first use.

Controller Initialization- Press and hold the Down button on the controller until the desk reaches its lowest height, slightly raises, and stops. Release the down button, your desk is now ready for use. (Following the "USER MANUALS" to use your desk)

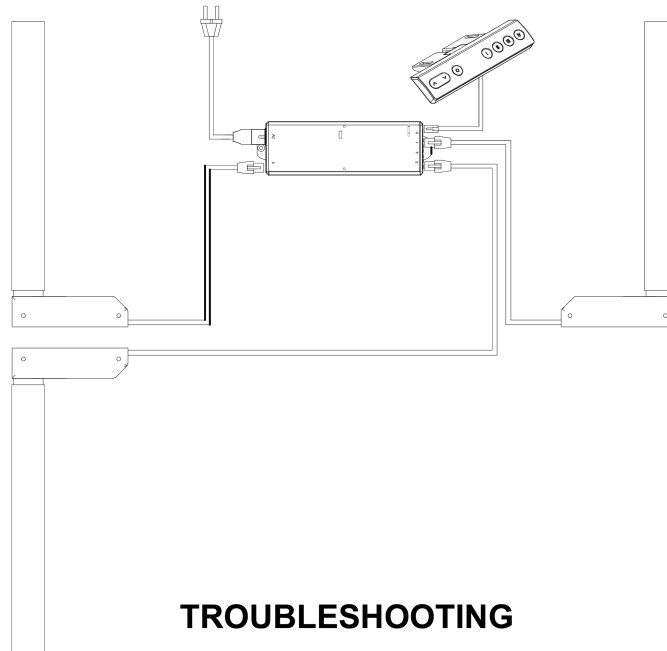

TROUBLESHOOTING

If the table is not functioning properly it may need to be reset.

Unplug the power cord for 20 seconds.

Plug the power cord back in and follow the RESET procedures.

If the error message persists after the reset procedure, please contact your dealer.

If the height between the legs exceeds 1.5 inches, stop the reset procedure, please contact your dealer.