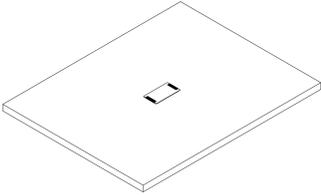
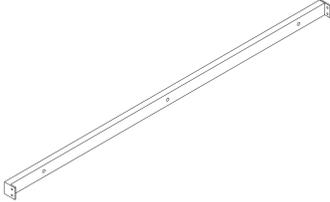

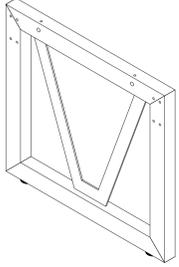


Congratulations on the purchase of your new *Signature Series* product!

COMPONENTS


<p>A Top Panel -1pc</p> 	<p>B Mounting Frame -2pcs</p> 	<p>C Corner Crossbar -4pcs</p> 	<p>D Wire Management Tray-1pc</p> 	<p>ICTBB E Starter Base -2pcs</p> 
<p>Mounting Frame Length ICT72T (944mm) ICT96T (1536mm)</p>				

HARDWARE & TOOLS

<p>F Allen Screw M6X20mm-17pcs</p> 	<p>G Stand-off Ø20x76mm-2pcs</p> 	<p>H Cam Lock-5pcs</p> 	<p>I Allen Screw M6X40mm-7pcs</p> 	<p>Tools Required for Assembly</p>
<p>J Cam Post-5pcs</p> 	<p>K Cam Sticker-5pcs</p> 	<p>L Cable Clip-3pcs</p> 	<p>M Allen Wrench 4mm-1pc</p> 	 <p>Philips Screw Driver for J Cam Post H Cam Lock O Wood Screw</p>
<p>N Leveler-2pcs</p> 	<p>O Wood Screw-8pcs</p> 			
<p>NOTE: Hardware is packed with carton ICT72T / ICT96T.</p>				

INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

STEP 1

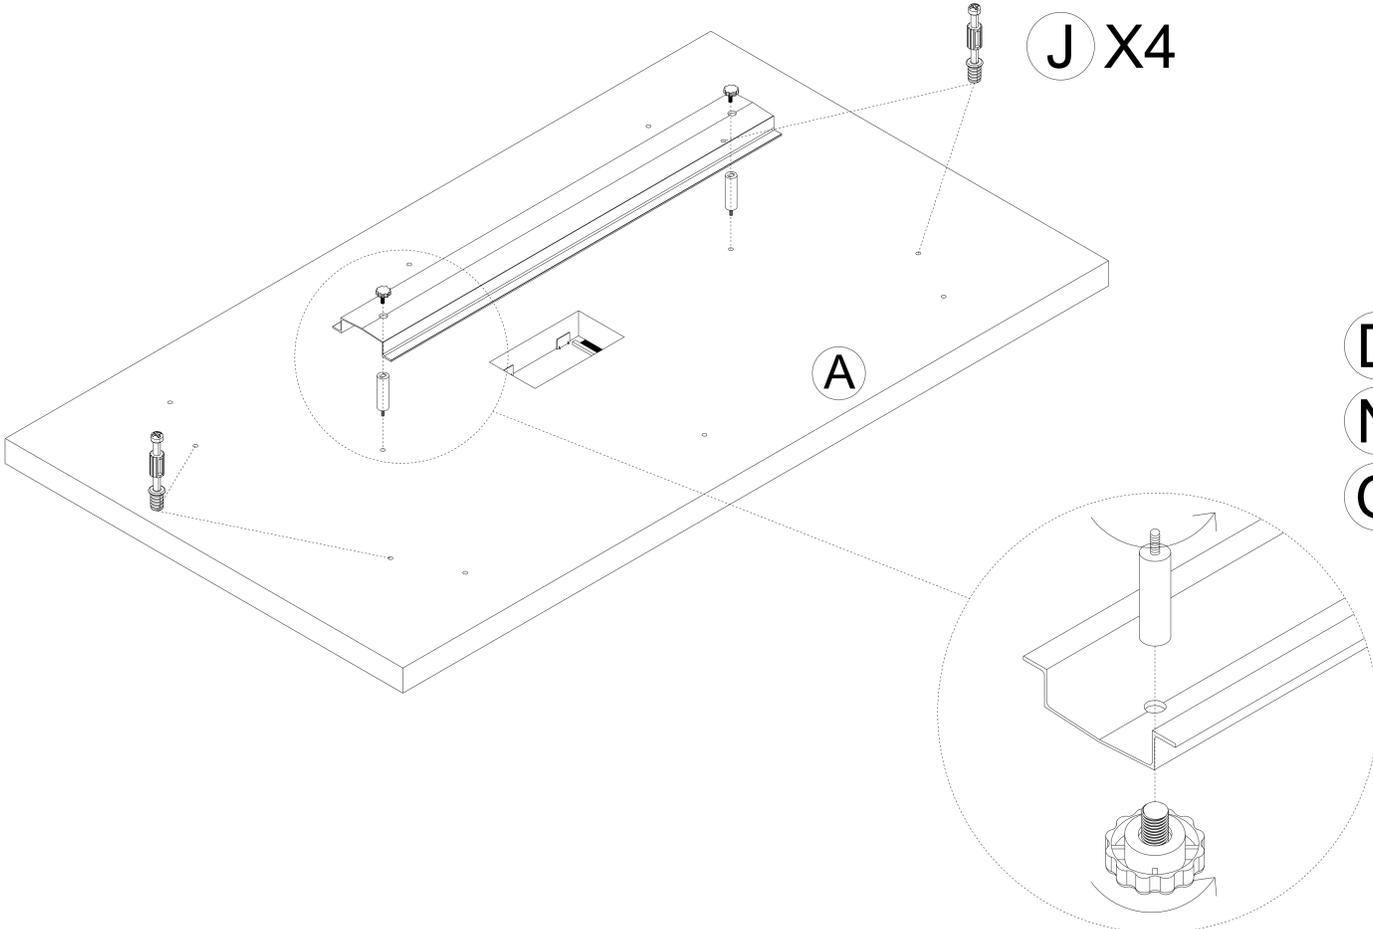

J X4

A

D X1


N X2

G X2


Congratulations on the purchase of your new *Signature Series* product!

INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

STEP 2

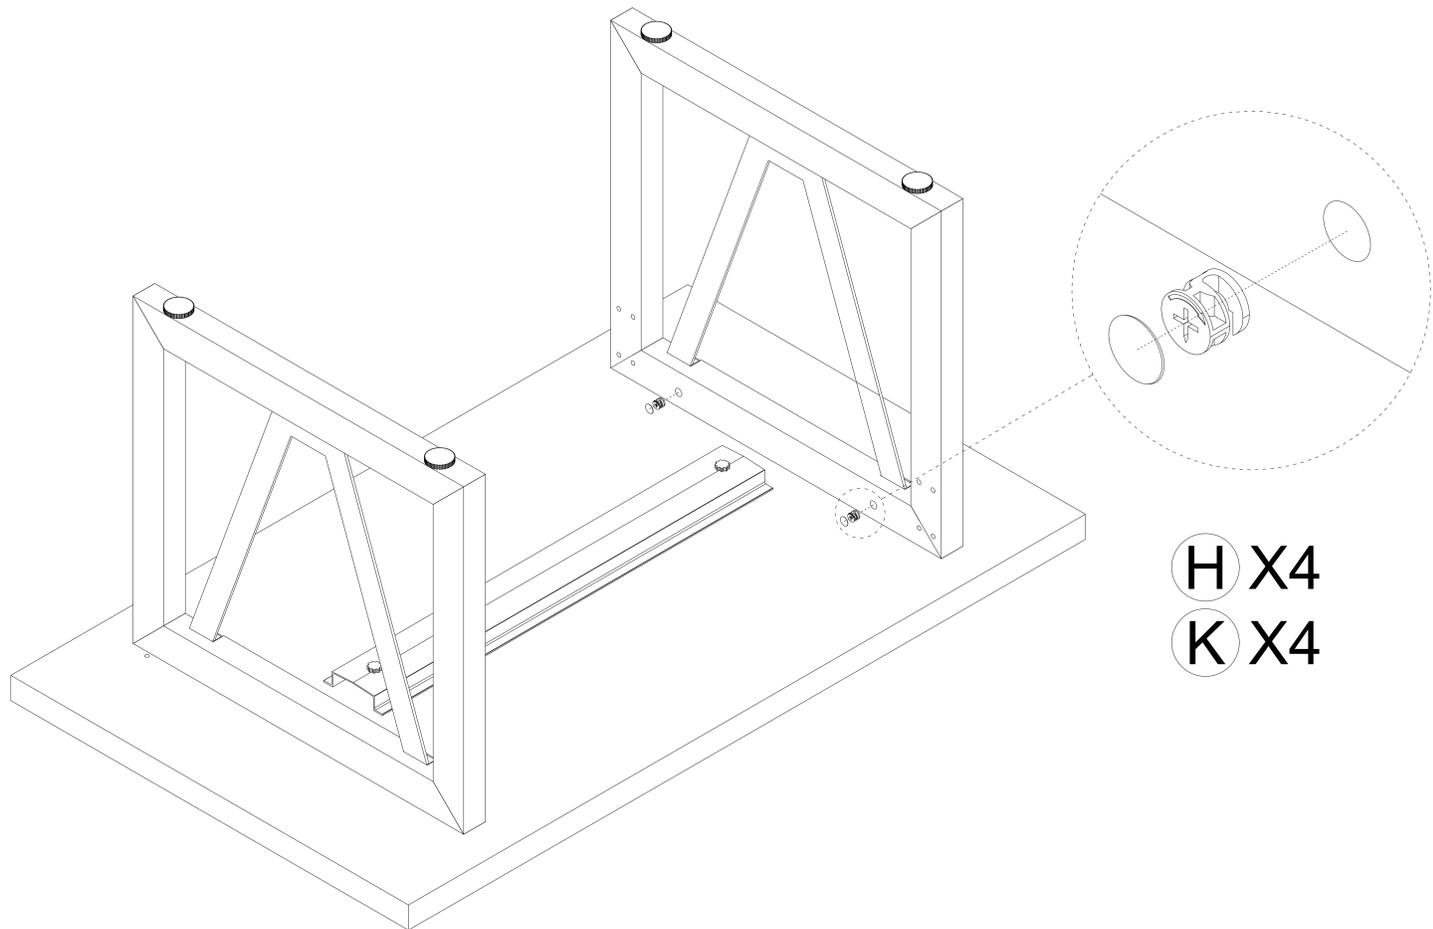


STEP 3

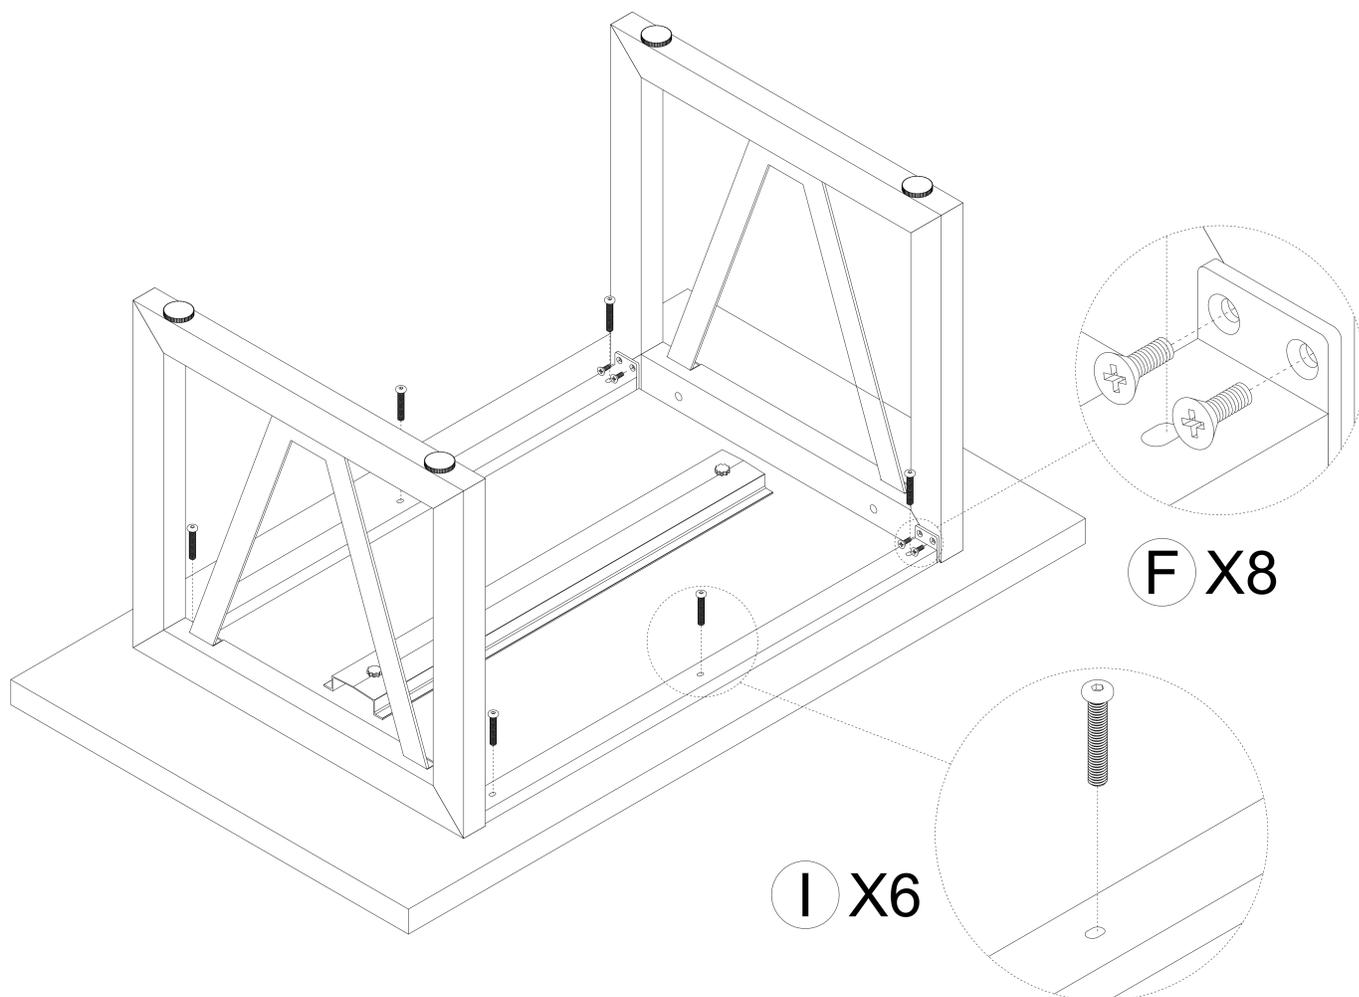


Congratulations on the purchase of your new *Signature Series* product!

INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

STEP 4

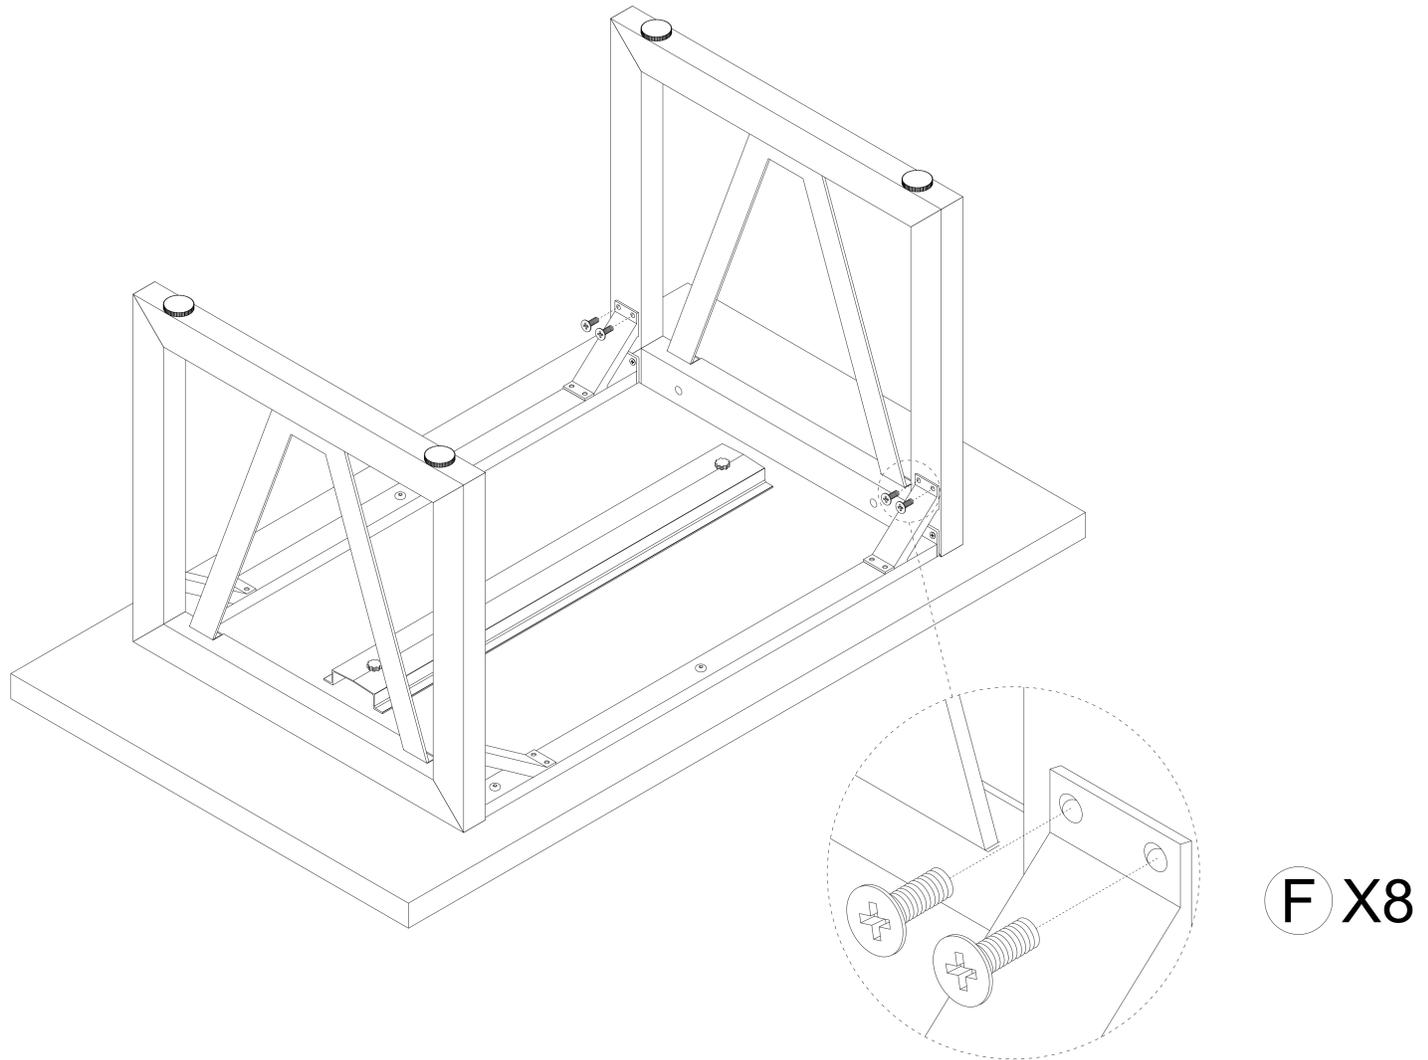

STEP 5

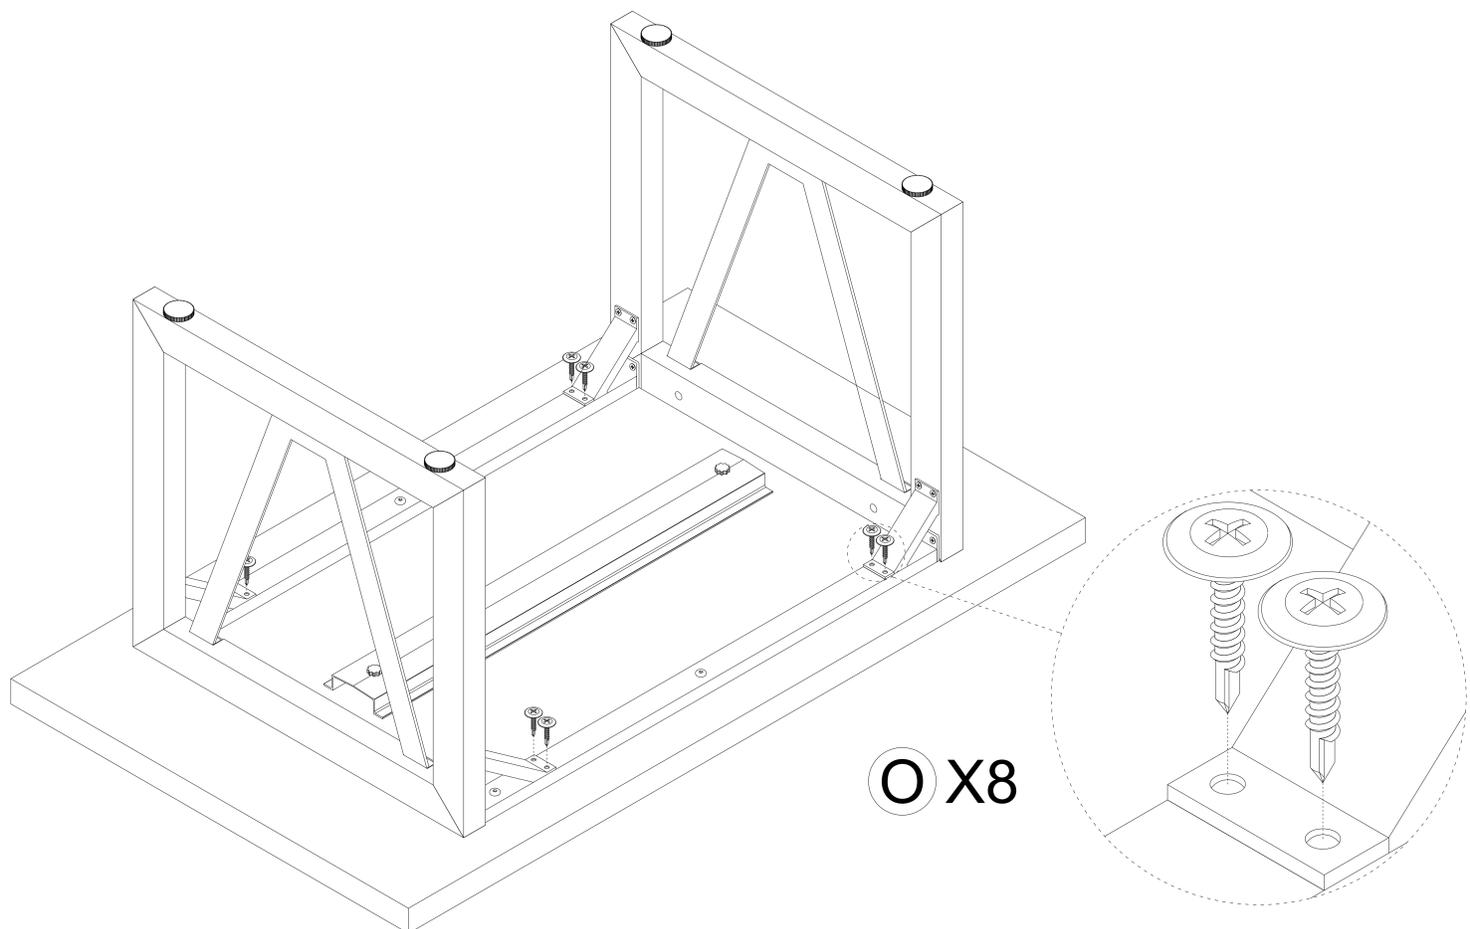

Congratulations on the purchase of your new *Signature Series* product!

INSTRUCTIONS - We don't recommend using power tools when installing Cam Posts.

COMPLETED

