


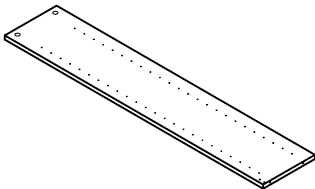
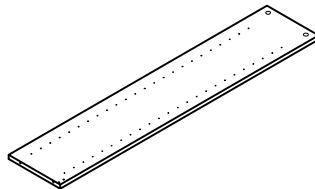
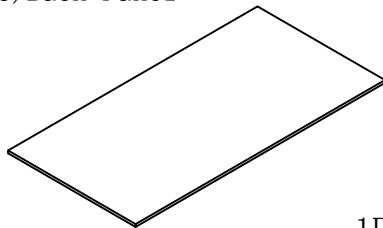




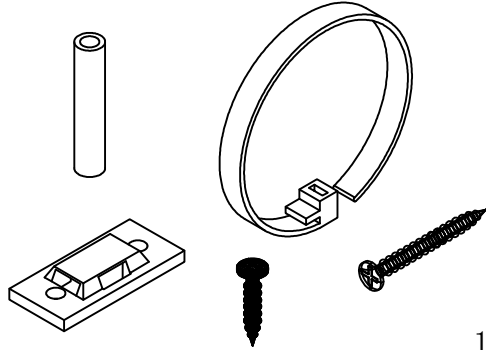
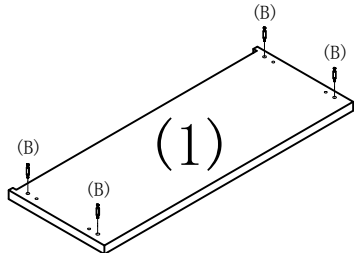
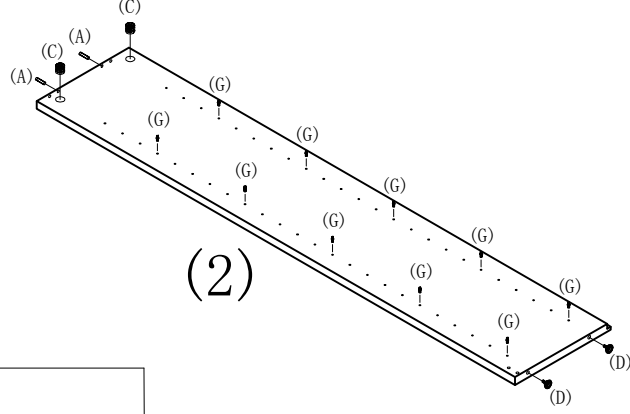
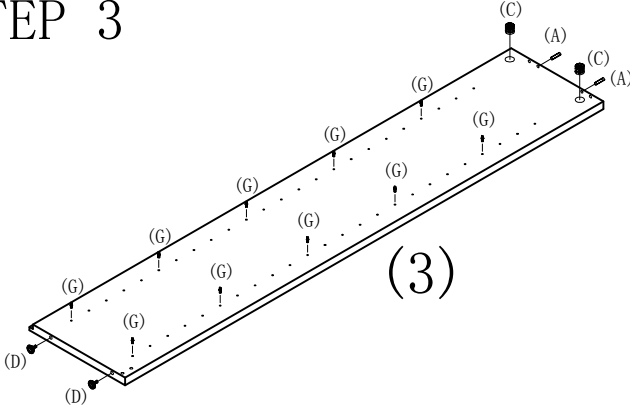
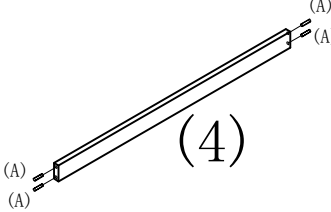


(1) Top  1PC	(2) End Panel  1PC	(3) End Panel  1PC	(4) Bottom Rail  1PC	(5) Back Panel  1PC	(6) Shelf  5PCS			
(A) Dowel  8PCS+1	(B) Cam Pin  4PCS+1	(C) Cam Lock  4PCS+1	(D) Leg leveller  4PCS	(G) Shelf Pin  20PCS+2	(p) Adhesive Cam Cover  4PCS+1	(E3) Wood Screw  13PCS+1	(E4) Wood Screw  8PCS+1	(S1) Corner Bracket  2PCS
(F) Wall-attachment kits  1PC			STEP 1 		STEP 2 			
STEP 3 			STEP 4 			BOOKCASE 65"H NAP-56 36"W × 14"D × 65"H  877-OSP-WORX (677-9679) Always lay components on A clean, soft-cushioned surface during assembly.		


STEP 5

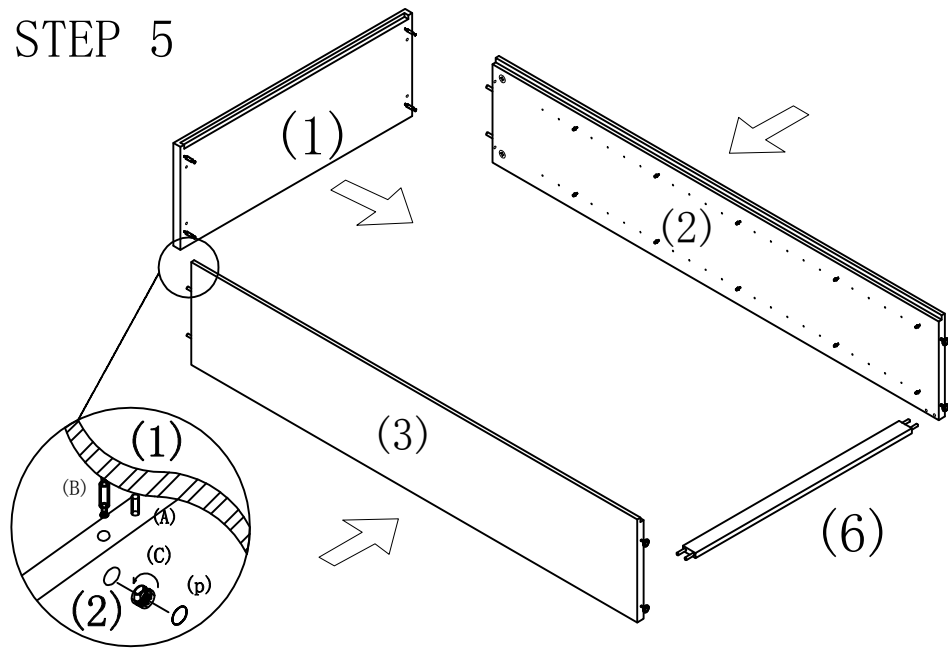

STEP 6

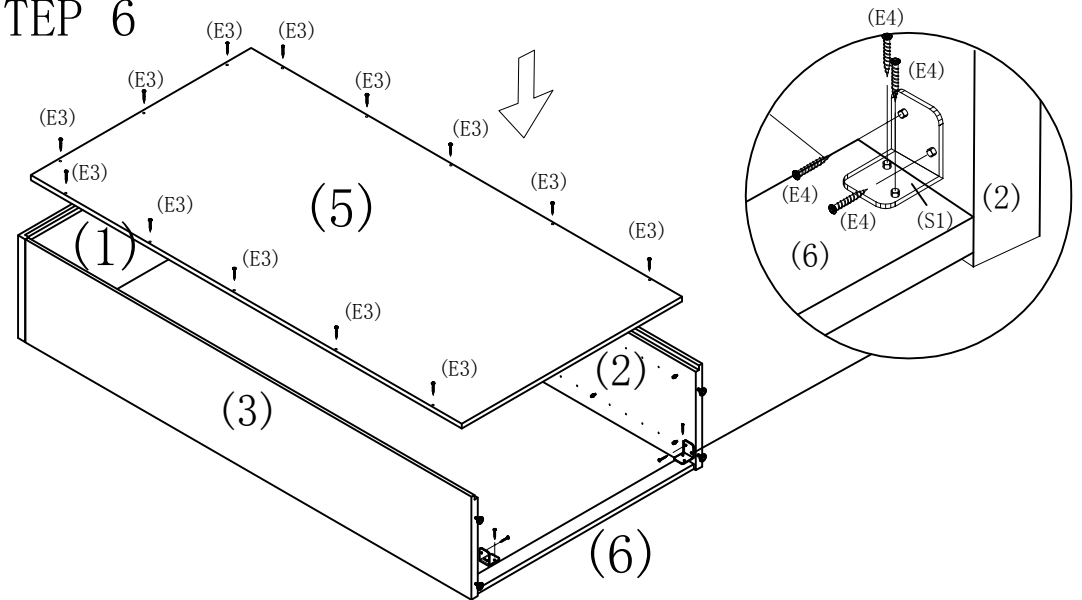


STEP 7

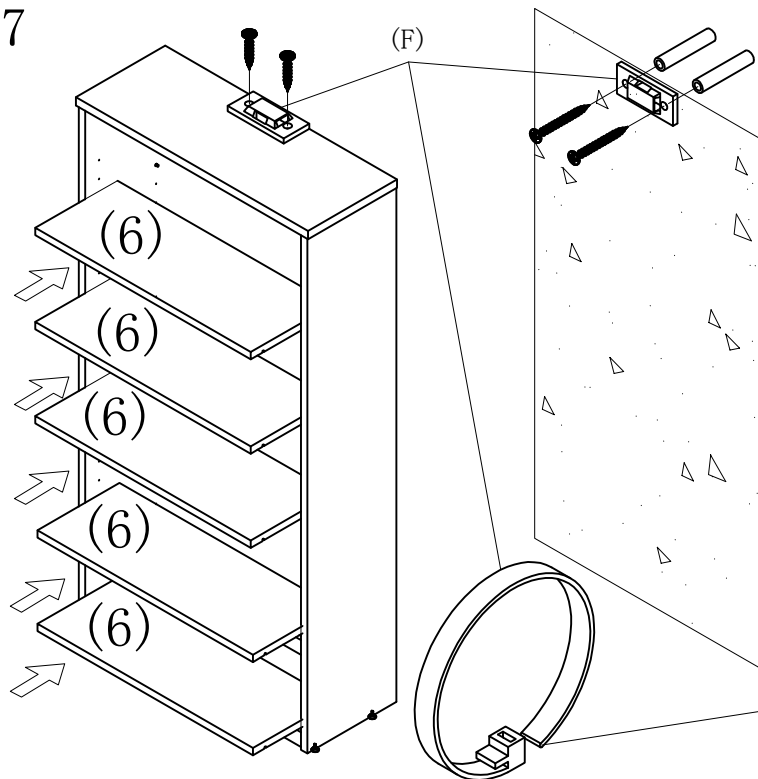

1. Affix 1st wall-attachment bracket to the top of Bookcase, at rear/center, using (2) **SHORT** screws.
2. Affix 2nd wall-attachment bracket to the wall, using (2) wall anchors and (2) **LONG** screws.

Note: Locate the 2nd bracket 1/4" higher than the 1st bracket (now located on the top of the bookcase). Align 2nd bracket left/right with the 1st bracket.

3. Connect wall-attachment brackets with plastic cable tie.

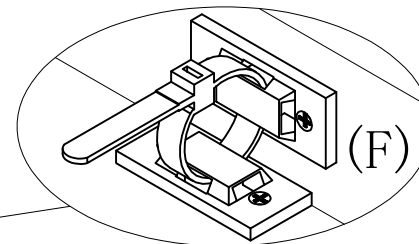

BOOKCASE 65"H

NAP-56

36"W × 14"D × 65"H

OSP
furniture

877-OSP-WORX

(677-9679)

*Always lay components on A clean,
soft-cushioned surface during assembly.*