







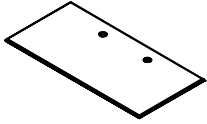



Hardware List (included in CK172FB1)

	6 PCS Machine Bolts(1-1/4")		2 PCS Metal Grommet
	2 PCS Keys For File Drawer Lock		2 PCS Long(1-1/4") Flat Head Wood Screws
	4 PCS Wood Dowels (ø8x25mm)		13 PCS Short (3/4") Flat Head Wood Screws
	CK→Handle		C→Handle

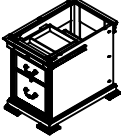



CK172FT Parts List

E	DESK TOP	1 PC
		

CK172FB2 Parts List

B	PEDESTAL	1 PC
		

CK172FB1 Parts List

A	PEDESTAL	1 PC	C	BACKPANEL	1 PC	D	CROSS BAR	1 PC	F	DROP FRONT CENTER DRAWER	1 PC
											

Notes: Need two people to assemble.

Instructions:

- ① Move the pedestals (A) (B) to the desired location , insert and tighten machine bolts (1-1/4")(6 PCS) to connect backpanel (C) to the pedestals (A) (B).
- ② Insert center Cross Bar(D) to the pedestals (A) (B), tighten with (1-1/4") flat head wood screws(2 PCS).

