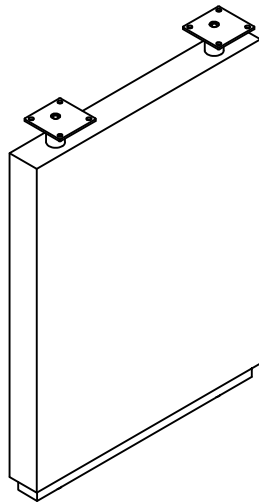









**Sterling Series™  
Desk Leg  
Model No. STEDB**







**ASSEMBLY INSTRUCTIONS**

**CALL 1-800-822-8037 FOR ASSISTANCE**

# PARTS LIST

Name	Part	Qty.	Spare Qty	Name	Part	Qty.	Spare Qty
<b>A</b>	 <b>REALS603</b> M6x15mm White	<b>8</b>	<b>1</b>	<b>D</b>	 <b>STEDB**</b> leg	<b>1</b>	
<b>B</b>	 <b>REALBY028</b> Wrench 4mm	<b>1</b>			 <b>STEDBHB</b>		
<b>C</b>	 <b>REALS084</b> Wrench 5mm	<b>1</b>					

## Pre-Assembled Replacement Part List

Replacement #	Part	Qty.	Replacement #	Part	Qty.
<b>REALS425</b>	 Leveler	<b>2</b>	<b>REALS601</b>	 Screw	<b>2</b>
<b>REALS602</b>	 Base Stand-off	<b>2</b>	<b>REALS644</b>	 Base Stand-off Ø34x43mm	<b>2</b>

Items with HB are in hardware box.

\*\*Denotes Color Code

## IMPORTANT!

**Review ALL instructions before beginning assembly.** These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.

- 1 Attach Leg (D) to the underside of adjacent Top (STLDT72/STLDT66/STRDT72/STRDT66/STCT72/STCT66) using Screws (A) and Wrench (C) .

