


# nbf Signature Series

(MKTBFT4824, MKTBFT6524, MKFT4824, MKFT6024, MKFT7224, MKFT8424)

Organize your parts. You will need a drill, 16 mm and 5/16" socket wrenches, rubber mallet, pliers and measuring tape.  
Two people are required for assembly.

## Parts

**A:** Vertical Assembly • **B:** Table Top • **C:** Top Bracket • **D:** Feet (2)

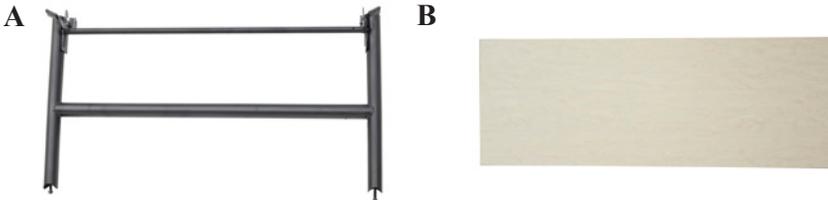


## Hardware:


**E:** Casters(4) • **F:** Small Screws (8) • **G:** Large Screws (8) (10 for MKTBFT6524) • **H:** Assembly Key • **I:** Foot Cap (2) • **J:** Small Bolt (2) • **K:** Nut and Washer (2 Each)

## Pre-Attached Hardware:

**L:** Long Bolt (2) • **M:** Small Nut (2)

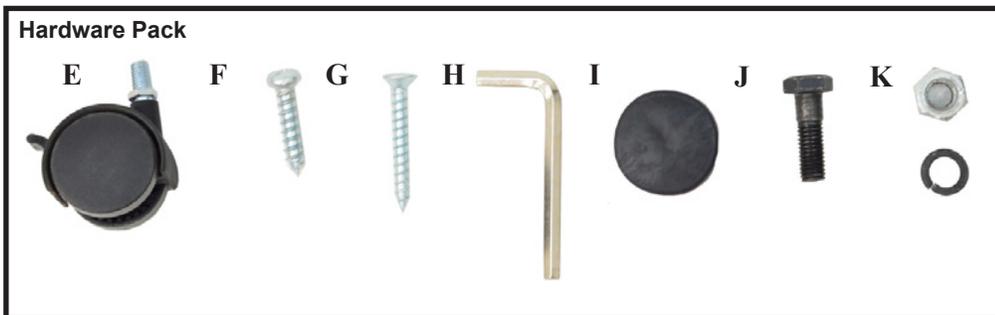

**STEP 1:** Attach 2 Casters (E) to each Foot (D) as shown in **Figure 1**.

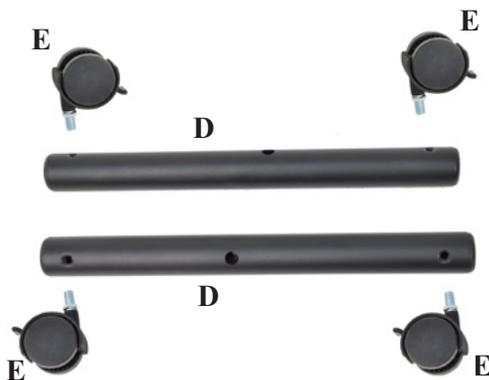

*Figure 1*

## IMPORTANT NOTICE


Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.  
Check to be sure that you have all parts and hardware.  
Remove all wrapping materials, including staples & packing straps before you start to assemble.  
Do not tighten all screws/bolts until completely assembled.  
Keep all hardware parts, tools and packaging out of reach of children.

Any problems or questions please call Regency Office Furniture at 1-866-816-9822

(MKTBFT4824, MKTBFT6524, MKFT4824, MKFT6024, MKFT7224, MKFT8424)


**STEP 2:** Use **Assembly Key (H)** to remove Pre-Attached **Long Bolts (L)** from ends of **Vertical Assembly (A)**. Attach **Feet (D)** to **Vertical Assembly (A)** with **Long Bolts (L)** as shown in **Figure 2**.

*Note: Holes in **Feet (D)** to attach **Long Bolts (L)** are drilled off-center. Make sure the shorter length of each **Foot (D)** coordinates with the same side as the levers of the **Vertical Assembly (A)**.*

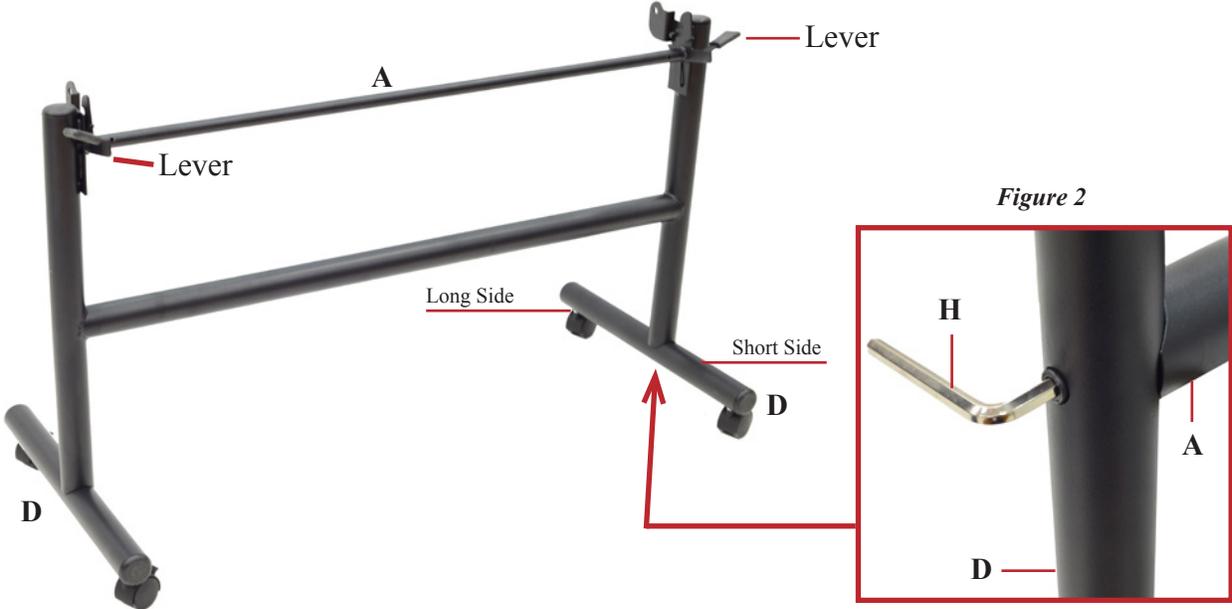

**STEP 3:** Place **Top Bracket (C)** on top of **Vertical Assembly (A)**


*Note: Slide pegs on **Top Bracket (C)** into notches on **Vertical Assembly (A)** as shown in **Figure 3**.*

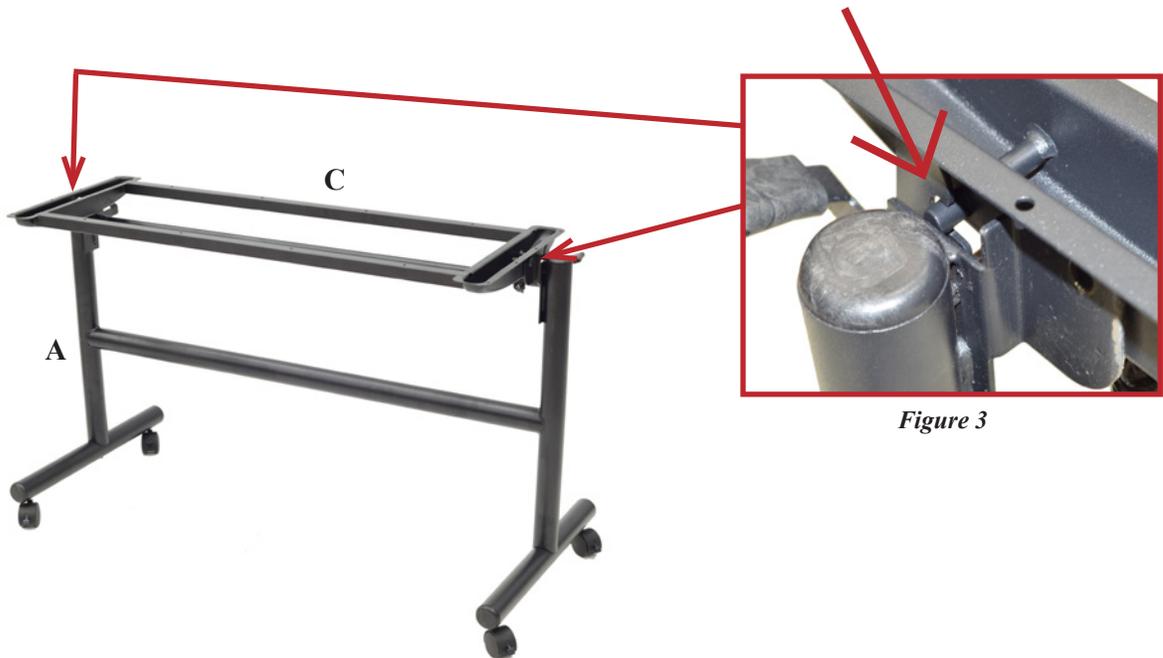


(MKTBFT4824, MKTBFT6524, MKFT4824, MKFT6024, MKFT7224, MKFT8424)

**STEP 4:** Attach **Top Bracket (C)** to both sides of **Vertical Assembly (A)** using **Small Bolts (J)** and **Nuts and Washers (K)** as shown in **Figure 4**.

*Note: To line up holes in **Top Bracket (C)** and **Vertical Assembly (A)** adjust tension by squeezing lever.*

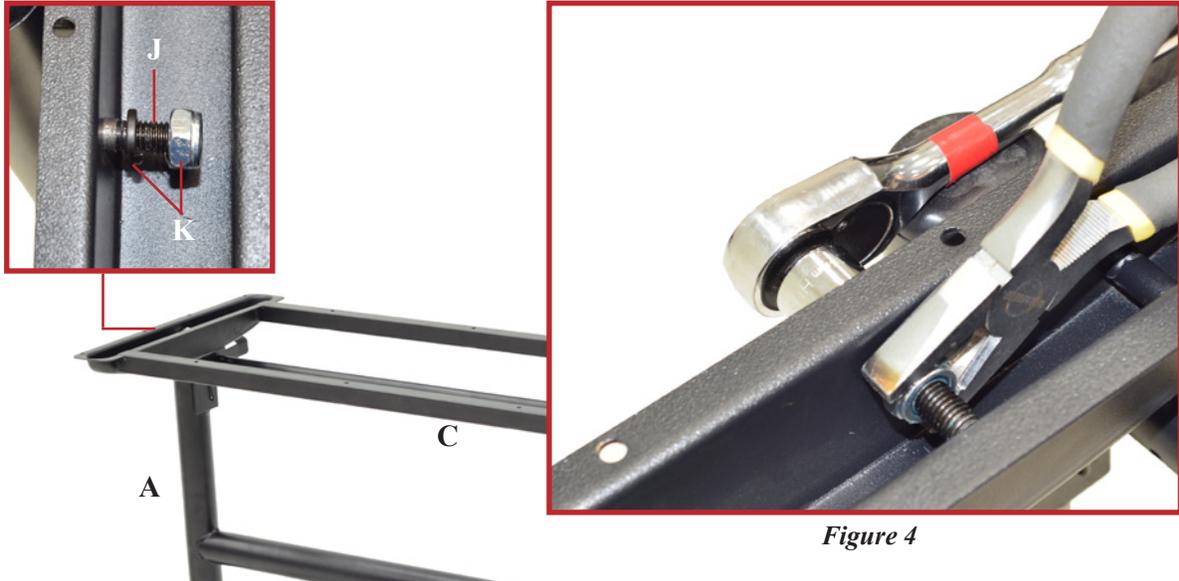

**STEP 5:** Remove Pre-Attached **Small Nuts (M)** from springs on **Top Bracket (C)**. Thread spring through holes on top rail of **Vertical Assembly (A)**. Tighten **Small Nuts (M)** as shown in **Figure 5**.

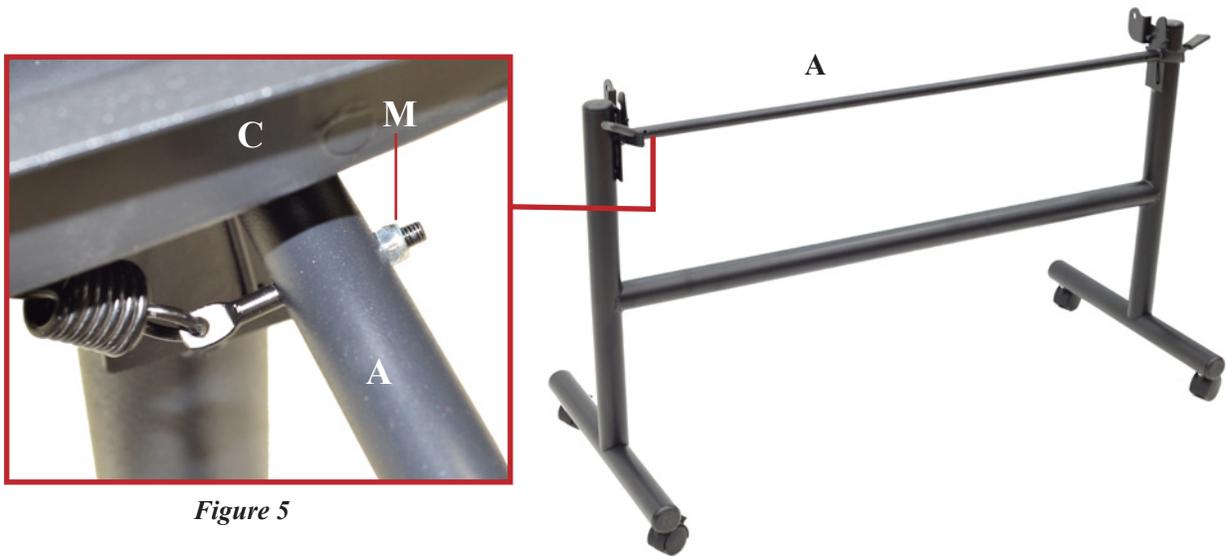

# nbf Signature Series


(MKTBFT4824, MKTBFT6524, MKFT4824, MKFT6024, MKFT7224, MKFT8424)

**STEP 6a:** Ensure Assembly is correct and Feet (D) are facing the right direction. Tighten all Bolts, Nuts and Washers.

**STEP 6b:** Conceal holes on bottom of Feet (D) with Foot Caps (I).



**STEP 7a:** Place Table Top (B) on a clean flat surface with desired table finish face down. Using a measuring tape, center the base on Table Top (B). Use 8 Small Screws (F) and 8 (10 for MKTBFT6524) Large Screws (G) to attach the base to the Table Top (B).

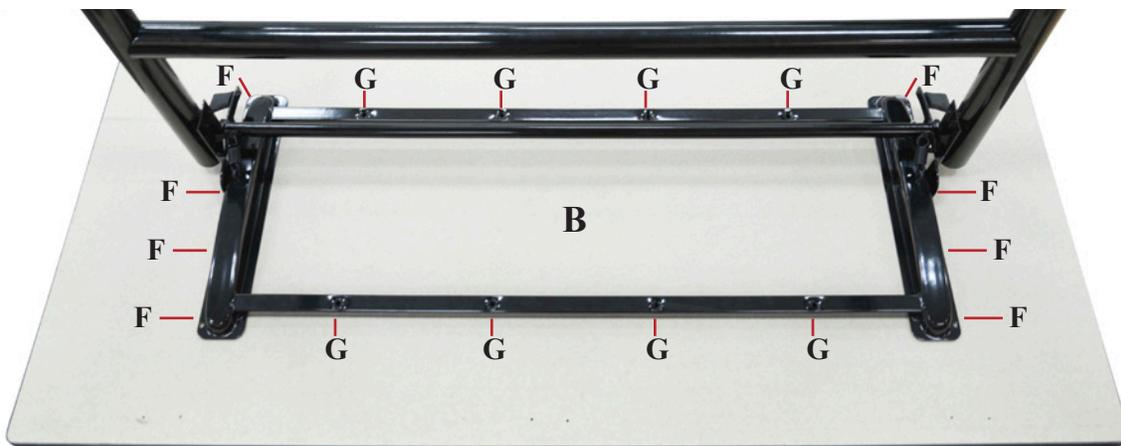

**STEP 7b:** Using two people, place assembled table in upright position.



Any problems or questions please call Regency Office Furniture at 1-866-816-9822