




800-558-1010 | www.NBF.com

Holloway Collection

ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!

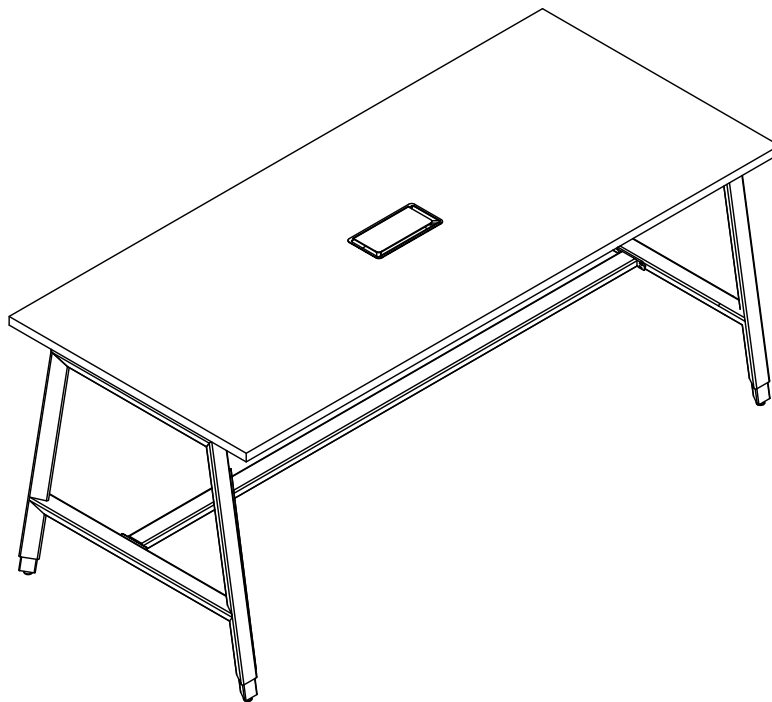











800-558-1010 | www.NBF.com

Holloway Collection


ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!


Assembly HARDWARE				
S/N	PICTURE	NAME	TOTAL QTY	REMARK
A		CAM SCREW	32+1(SPARE)	M6*10
B		SELF-TAPPING SCREW	15+1(SPARE)	Ø3*19
C		CONNECTOR	8PCS	
D		WRENCH	1PCS	M6
E		WIRE MANAGEMENT	1PCS	Silver
F			3PCS	
G		GROMMET	1PCS	
H		POWER HOLDER	1PCS	

Congratulations on the purchase of your new Signature Series product!

1. Attach the support bar to side frame with "A" screws, then install the "C" connector to metal frame with "A" screws.
A(32X)
C(8x)

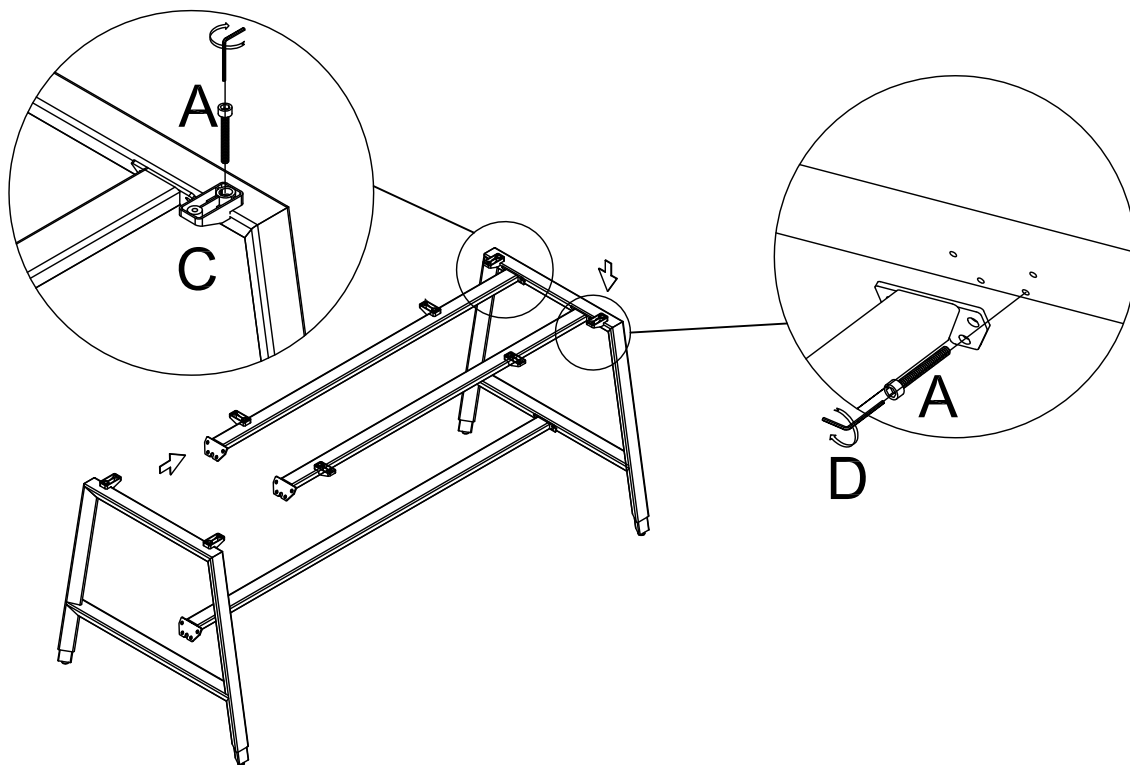

2. Install the desk top to metal support with self-tapping screws "B". Put the "G" grommet on the desk top; Attach the magnetic cable duct to the leg.
B(8X)
G(1X)
E(1X)

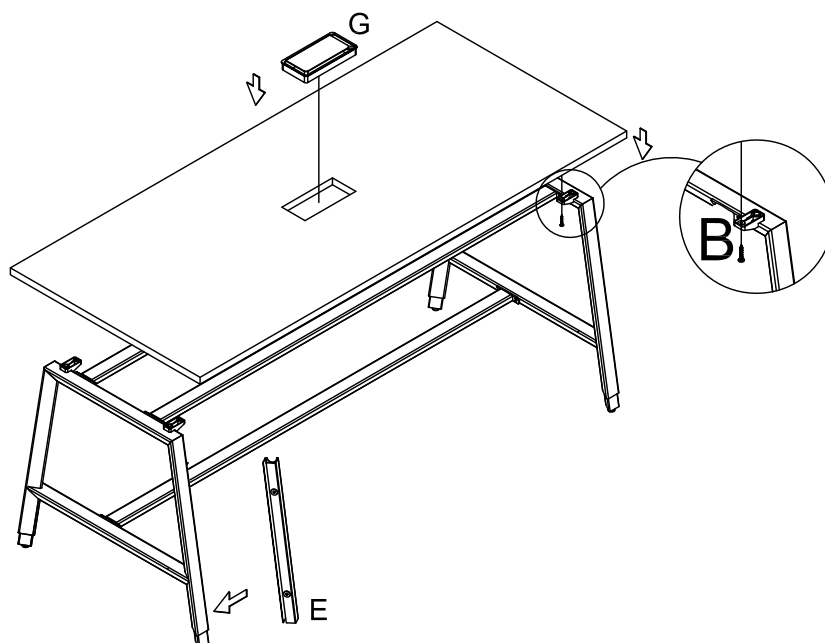


Congratulations on the purchase of your new Signature Series product!

3. Install the "H" power holder under desk top using "B" self tapping screws. Stick the "F" cable tie under the desktop.

H(1X)


B(7x)

F(3X)

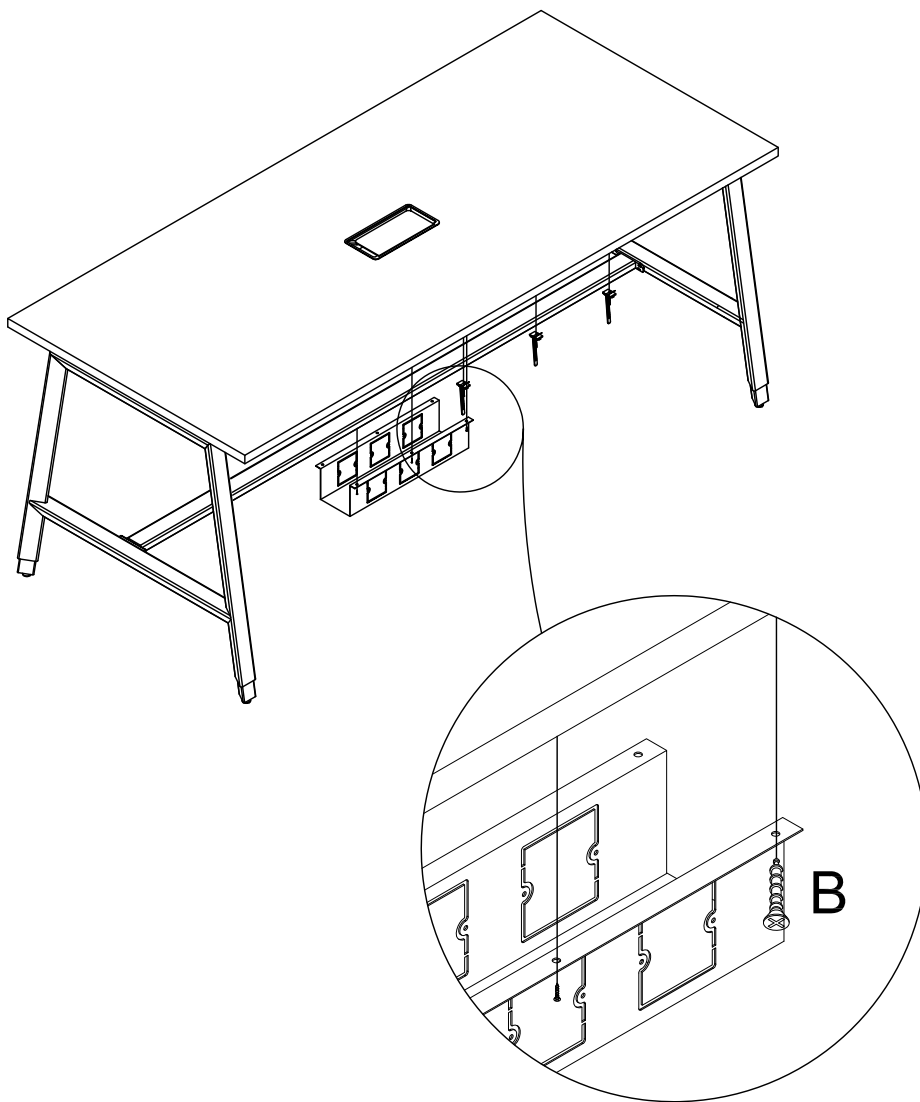


Congratulations on the purchase of your new Signature Series product!


Part List

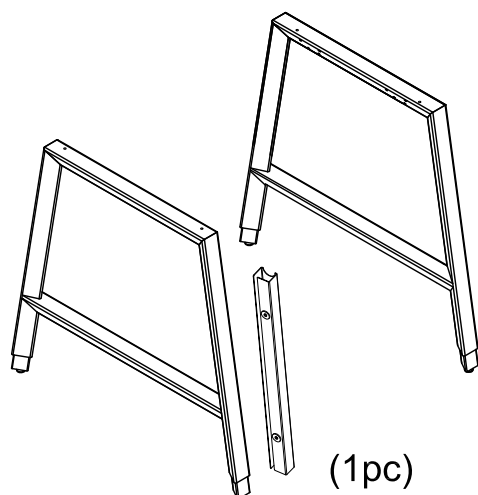

Side frame(1 set)

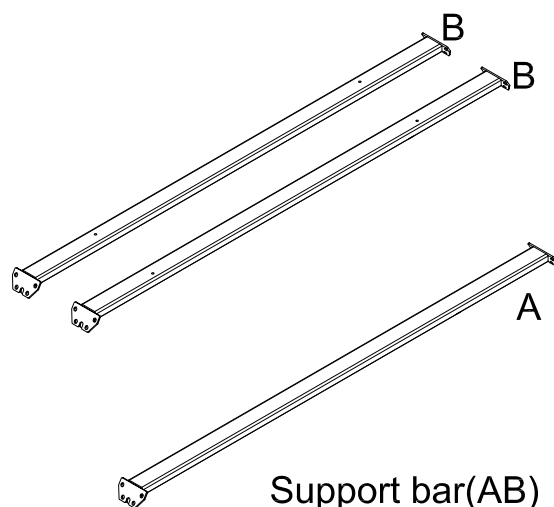

Support bar(AB)
A:Bottom bar
B:Up bar

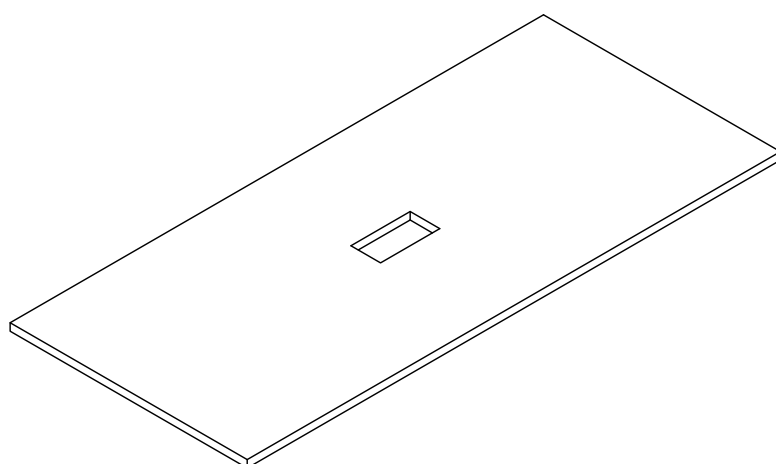

Desk top(1pc)