




800-558-1010 | www.NBF.com

Holloway Collection

ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!

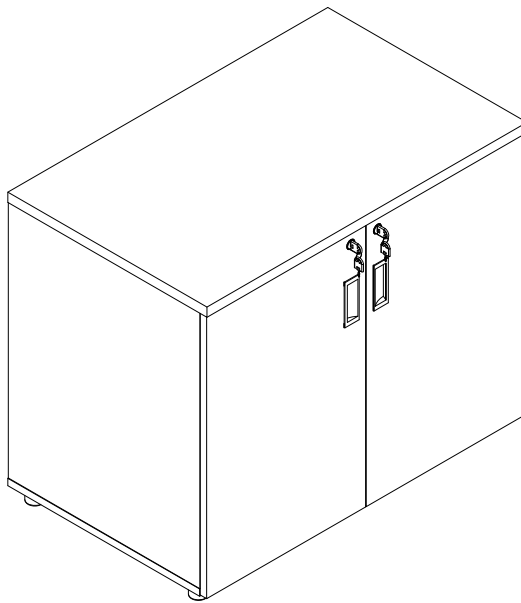






800-558-1010 | www.NBF.com

Holloway Collection

ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!

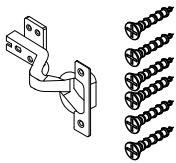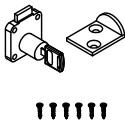Assembly HARDWARE					
S/N	PICTURE	NAME	TOTAL QTY		REMARK
A		CAM SCREW	18+1(SPARE)		
B		KLIX CAM	18+1(SPARE)		
C		CAM COVER STICKER	18+1(SPARE)		use cam covers to cover any klix cam screws
D		WOOD DOWEL	14+1(SPARE)		
E		CASTER	4PCS		
F		HINGE	4PCS		
G		KEYS	2PCS		
H		SHELF PEG	8+1(SPARE)		
I		LOCK	2(SPARE)		




800-558-1010 | www.NBF.com

Holloway Collection

ASSEMBLY INSTRUCTIONS

Congratulations on the purchase of your new Signature Series product!


Part List

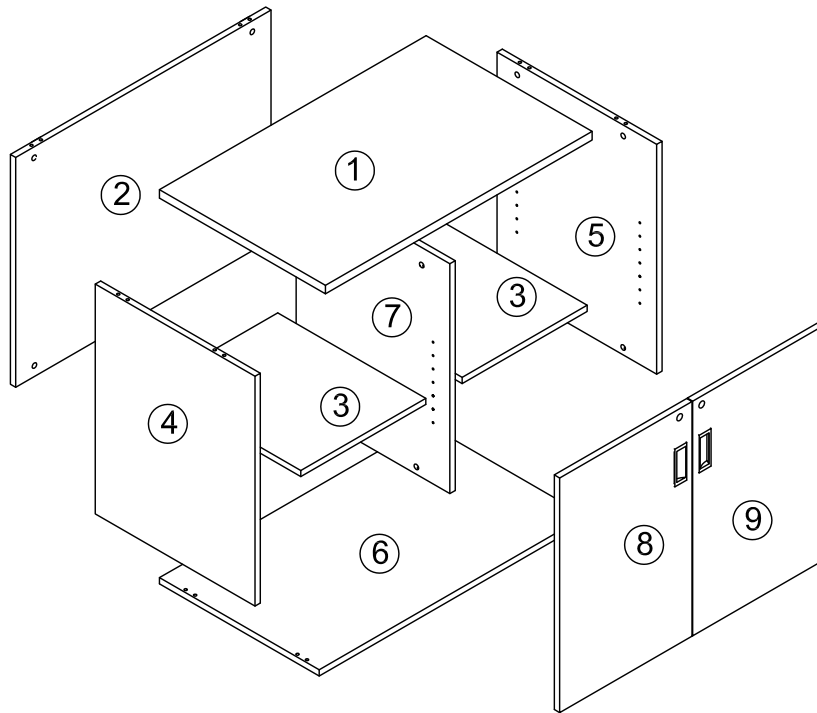

Congratulations on the purchase of your new Signature Series product!


1. INSTALL "A" CAM SCREWS AND "D" DOWELS ON THE PANEL # 2 & 4 & 5. THEN LOCK THEM WITH "B" KLIX CAM, TIGHTEN. PRESS WITH "C" COVER.

A (8x)
B (8X)
C (8X)
D (6X)

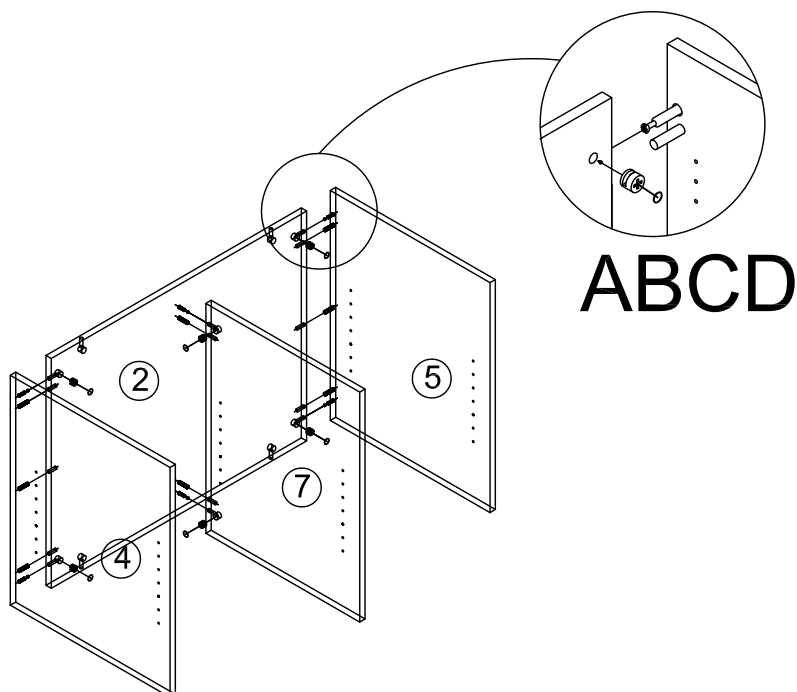


2. INSTALL "A" CAM SCREWS AND "D" DOWELS ON THE TOP AND BOTTOM PANEL #1 & 6. THEN INSTALL THE TOP AND BOTTOM PANEL TO SIDE PANELS USING "B" KLIX CAM, TIGHTEN.

A (10x)
B (10X)
C (10X)
D (8X)

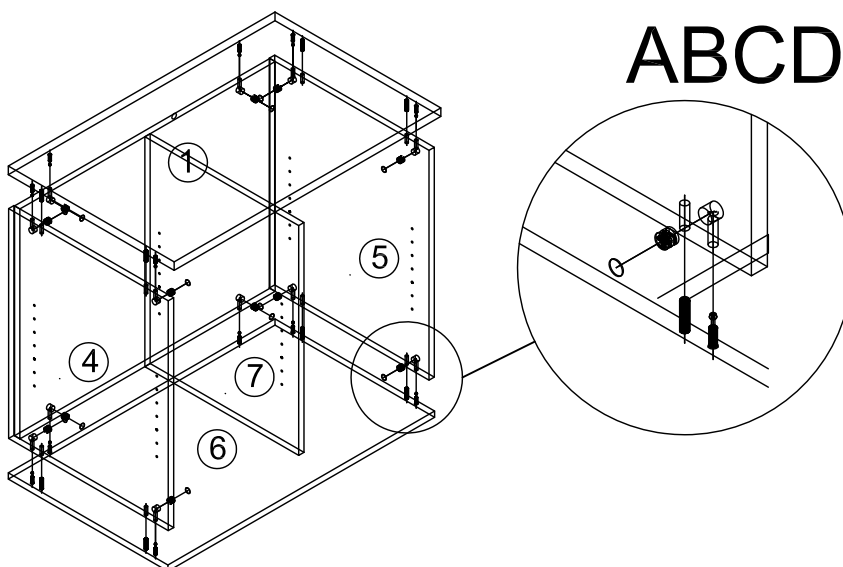


Congratulations on the purchase of your new Signature Series product!

**3. INSTALL "E" LEVERS AT THE BOTTOM USING SELF-TAPPING SCREWS..
E(4X)**

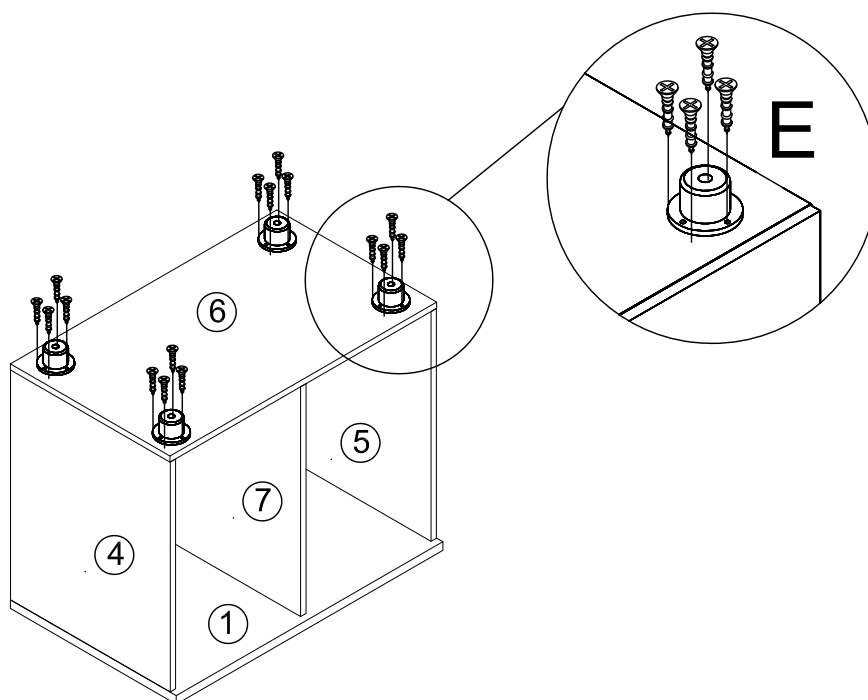

**4. INSTALL THE SHELF PEG AND SHELF.
H (8x)**

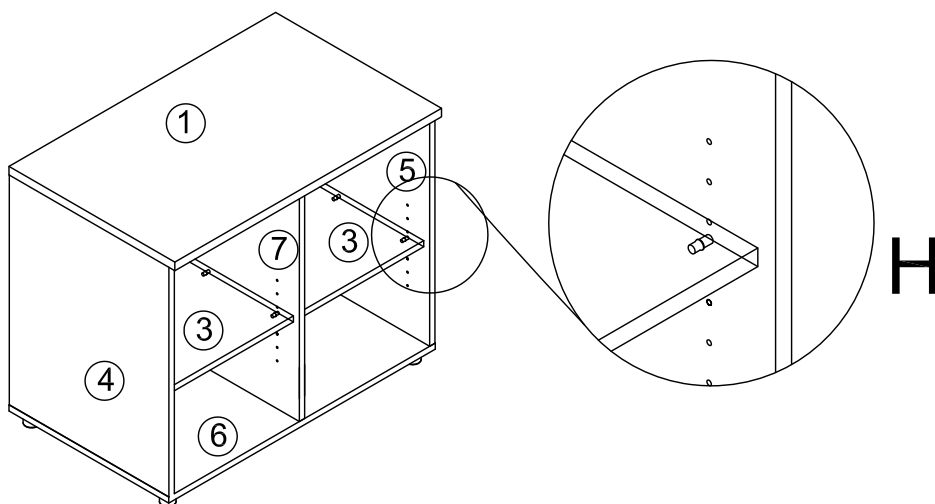

Congratulations on the purchase of your new Signature Series product!

5. INSTALL THE DOOR #8 & 9 USING "F" HINGES. THEN INSTALL THE "I" LOCK.
I (1x)
F (4x)

