

# Assembly Guide



**Bush**  
FURNITURE




**If you're having any difficulty during assembly of this product, don't hesitate to call us at 1-800-950-4782.**

Our customer service experts are trained to provide step-by-step instruction and can easily replace any missing or damaged parts.

**Representatives are available Monday-Friday from 8:30 a.m. to 7:30 p.m. (ET)**

## 60W L Desk

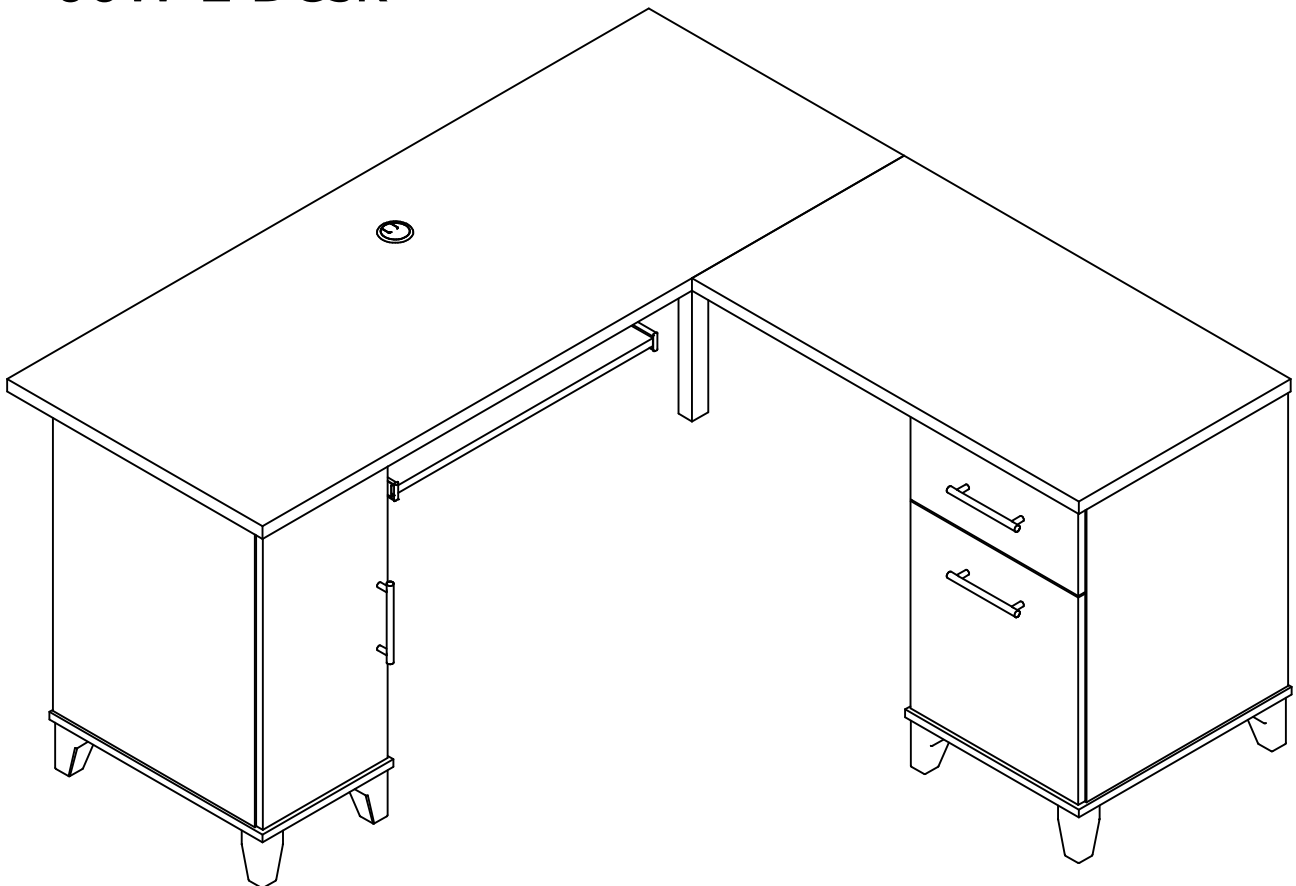

Lot Code #

Part Number A187451G

Keep manual for future reference.

## For best results, keep these tips in mind:

- ① We know you want to finish this assembly as quickly as possible, but trust us: you'll have a better experience if you take it one step at a time.
- ② Give yourself some room to work near where you want the fully assembled product.
- ③ If your floor isn't carpeted, assemble this product on the empty carton to avoid scratching.
- ④ Do you have a friend who owes you a favor? Some steps may go a little easier with a second set of hands.

### DOs

- ✓ Use a #2 Phillips head screwdriver (or other handheld tools as indicated)
- ✓ Wear safety glasses at all times during assembly
- ✓ Carefully follow the instructions in this guide and complete all steps in order
- ✓ Give us a call if you're having trouble with a particularly tricky step

### DON'Ts

- ✗ We know power tools are quick and easy, but you shouldn't use them when assembling this product (unless otherwise specified)
- ✗ Never move your furniture with items inside or resting on the surface
- ✗ Do not attempt to use this product before all steps have been completed



## Watch assembly videos right on your phone or computer!



Some steps include QR codes that link to helpful videos. Watch out for the icon on the left! Simply open up your smartphone camera to scan the code.

*(Users of older smartphones may need to install a QR Reader.)*

### SCAN HERE



FOR VIDEOS

Or visit <https://www.bushfurniture.com/CustomerService/HowtoAssemble.aspx>

## IMPORTANT SAFETY INFORMATION





# PLEASE READ WARNINGS

Improper use can cause safety hazards, or damage to your furniture and household items.

Warning	Do	Don't	Why it's important
<b>Serious injury may occur.</b>	<ul style="list-style-type: none"><li>Assemble following all instructions using all indicated parts and hardware provided.</li></ul>	<ul style="list-style-type: none"><li>Do not move unit when loaded.</li><li>Do not load with a television or other heavy equipment.</li><li>Do not exceed the maximum load limits stated in the instructions.</li></ul>	Improper assembly, use or loading can lead to product instability, tip-over or collapse.










Advertencia	Hacer	No	Por qué es importante
<b>Se pueden producir lesiones graves.</b>	<ul style="list-style-type: none"><li>Ensamble siguiendo todas las instrucciones utilizando todas las piezas y ferretería indicados provistos.</li></ul>	<ul style="list-style-type: none"><li>No mueva la unidad cuando esté cargada.</li><li>No cargue con un televisor u otro equipo pesado.</li><li>No exceda los límites máximos de carga establecidos en las instrucciones.</li></ul>	El ensamblaje, uso o carga inadecuados pueden provocar inestabilidad del producto, vuelco o colapso.

Avertissement	Faire	Ne le fais pas	Pourquoi c'est important
<b>Des blessures graves peuvent survenir.</b>	<ul style="list-style-type: none"><li>Assemblez en suivant toutes les instructions en utilisant toutes les pièces et le matériel indiqués fournis.</li></ul>	<ul style="list-style-type: none"><li>Ne déplacez pas l'unité lorsqu'elle est chargée.</li><li>Ne chargez pas avec un téléviseur ou un autre équipement lourd.</li><li>Ne dépassez pas les limites de charge maximale indiquées dans les instructions.</li></ul>	Un assemblage, une utilisation ou un chargement incorrects peuvent entraîner une instabilité du produit, un renversement ou un effondrement.

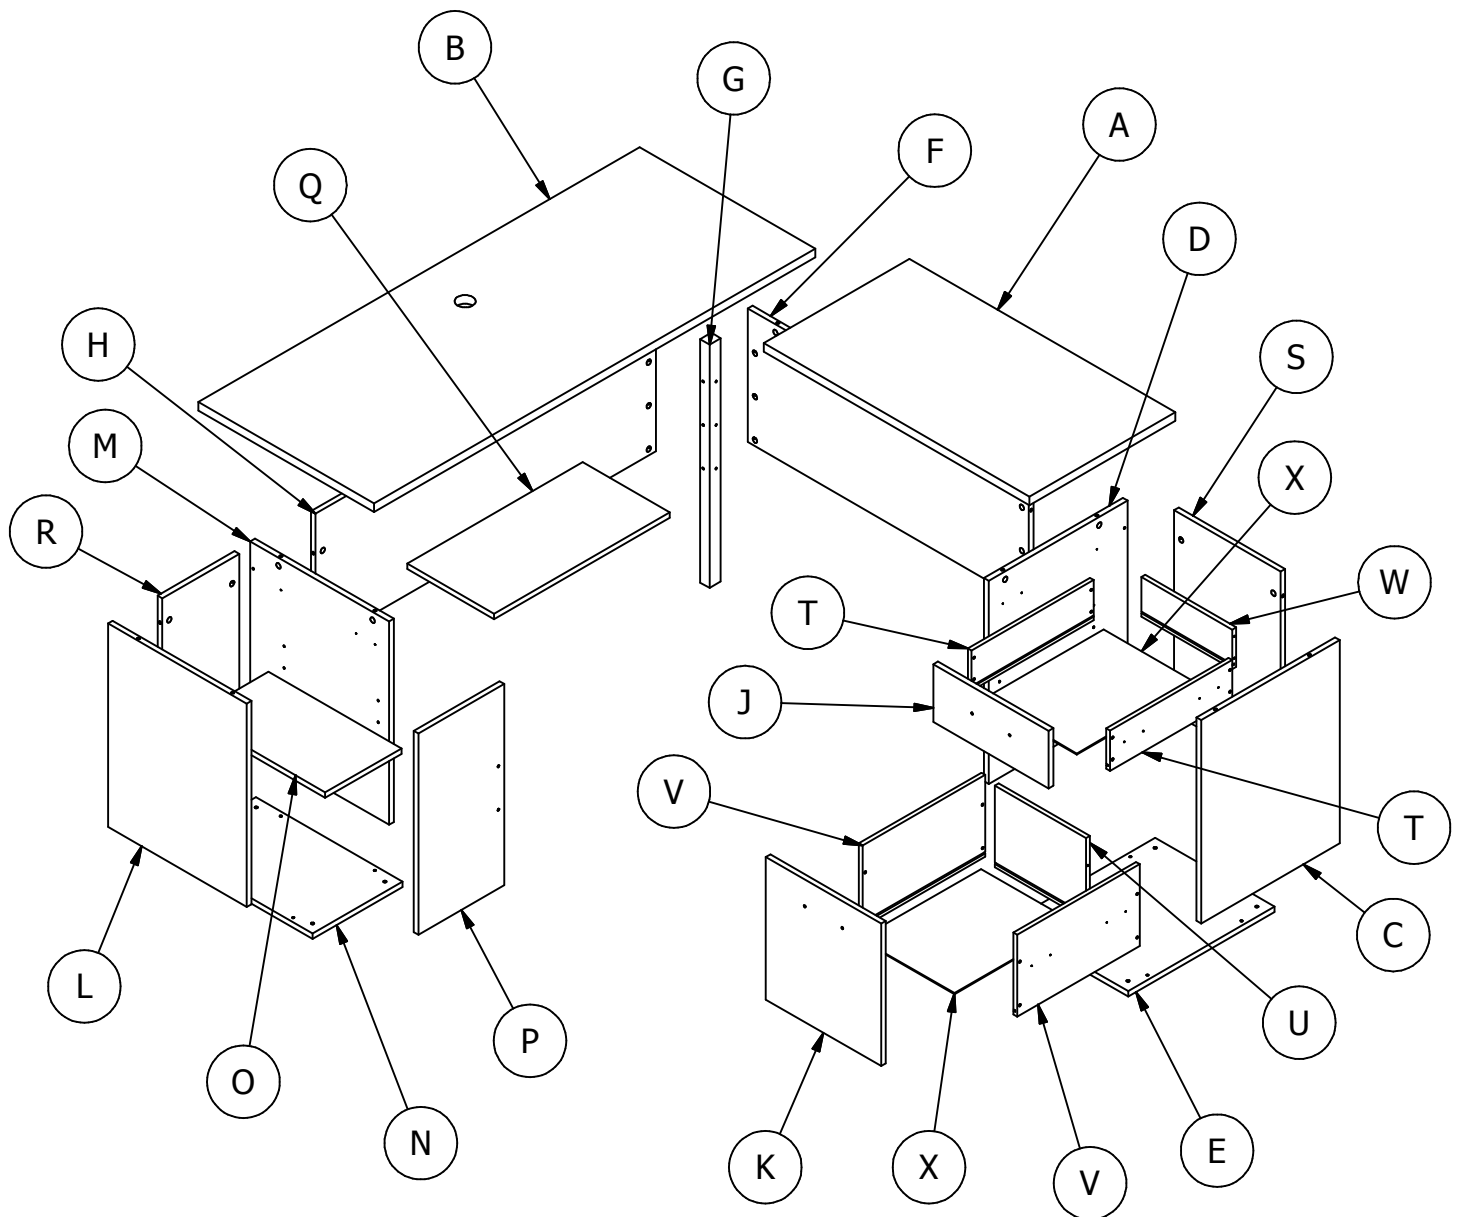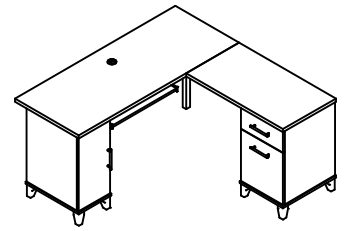

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.


Fasteners are shown actual size.

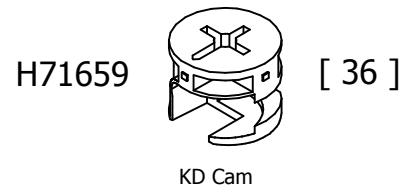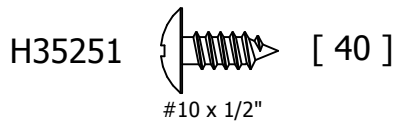

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.


Hardware not to scale.

Q89897

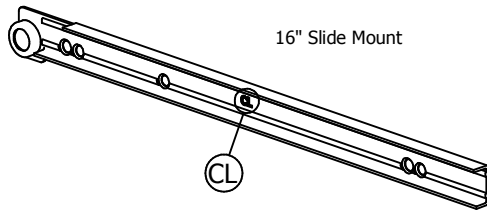

[ 1 ]


H100445

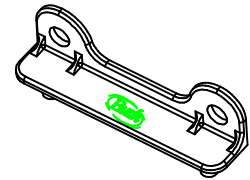

DWR Bracket


[ 2 ]

Q89897

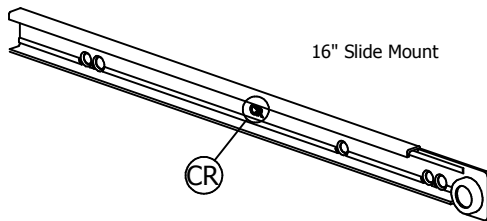

[ 1 ]


H100446

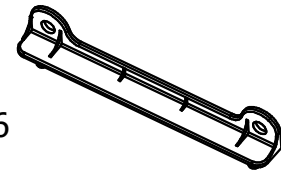

Drawer Bracket


[ 2 ]

Q89897

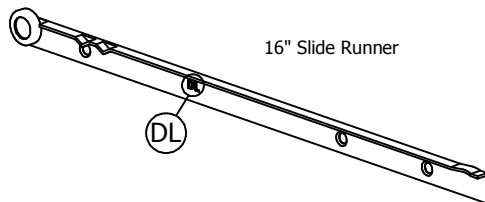


[ 1 ]

H162488

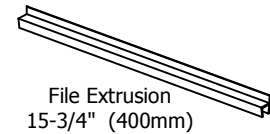


[ 2 ]

Q89897

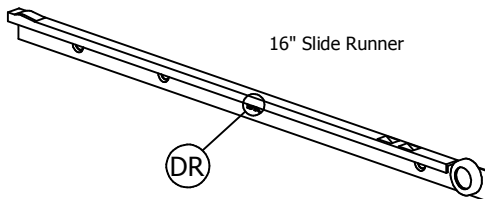

[ 1 ]


H39922



Strap

[ 2 ]

Q162813

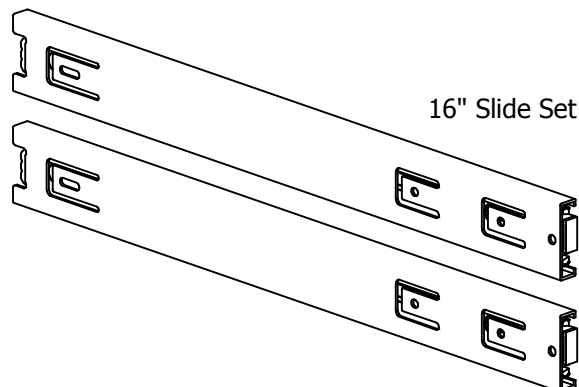


[ 1 ]

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Hardware not to scale.


H126364

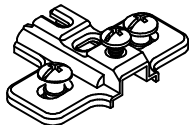

[ 2 ]

Mounting Plate

H126359

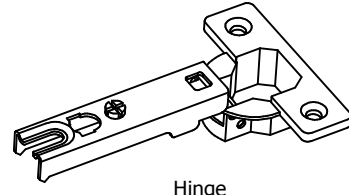

[ 2 ]

Hinge


H23604



[ 4 ]

Shelf Pin


H77351

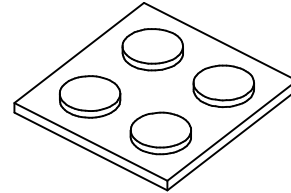

[ 2 ]

Bumper (4) per pack


H126396

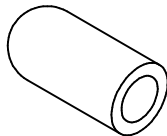


[ 4 ]

Shelf Pin Sleeve

16" Slide  
Mount  
Set

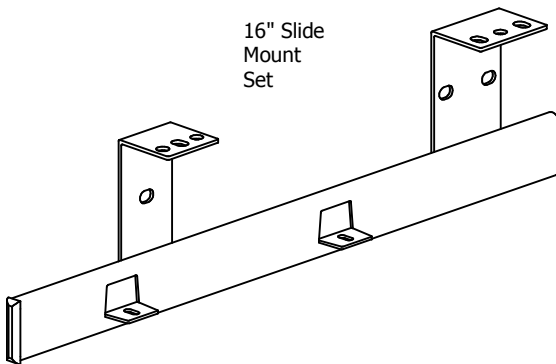





Q92805

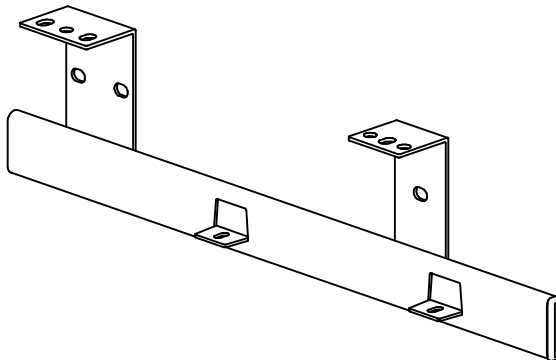

[ 1 ]

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Hardware not to scale.

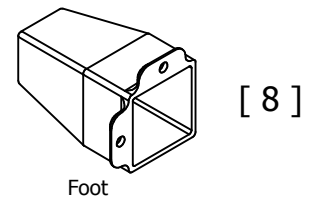
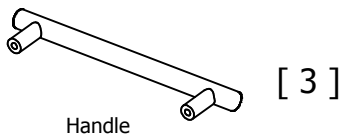
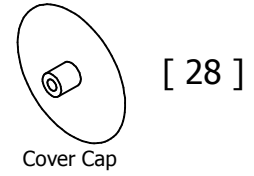
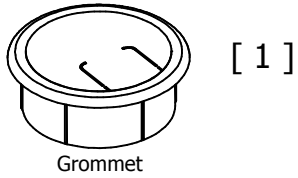




# STEP 1

## Prepare Drawer Fronts

A187451G

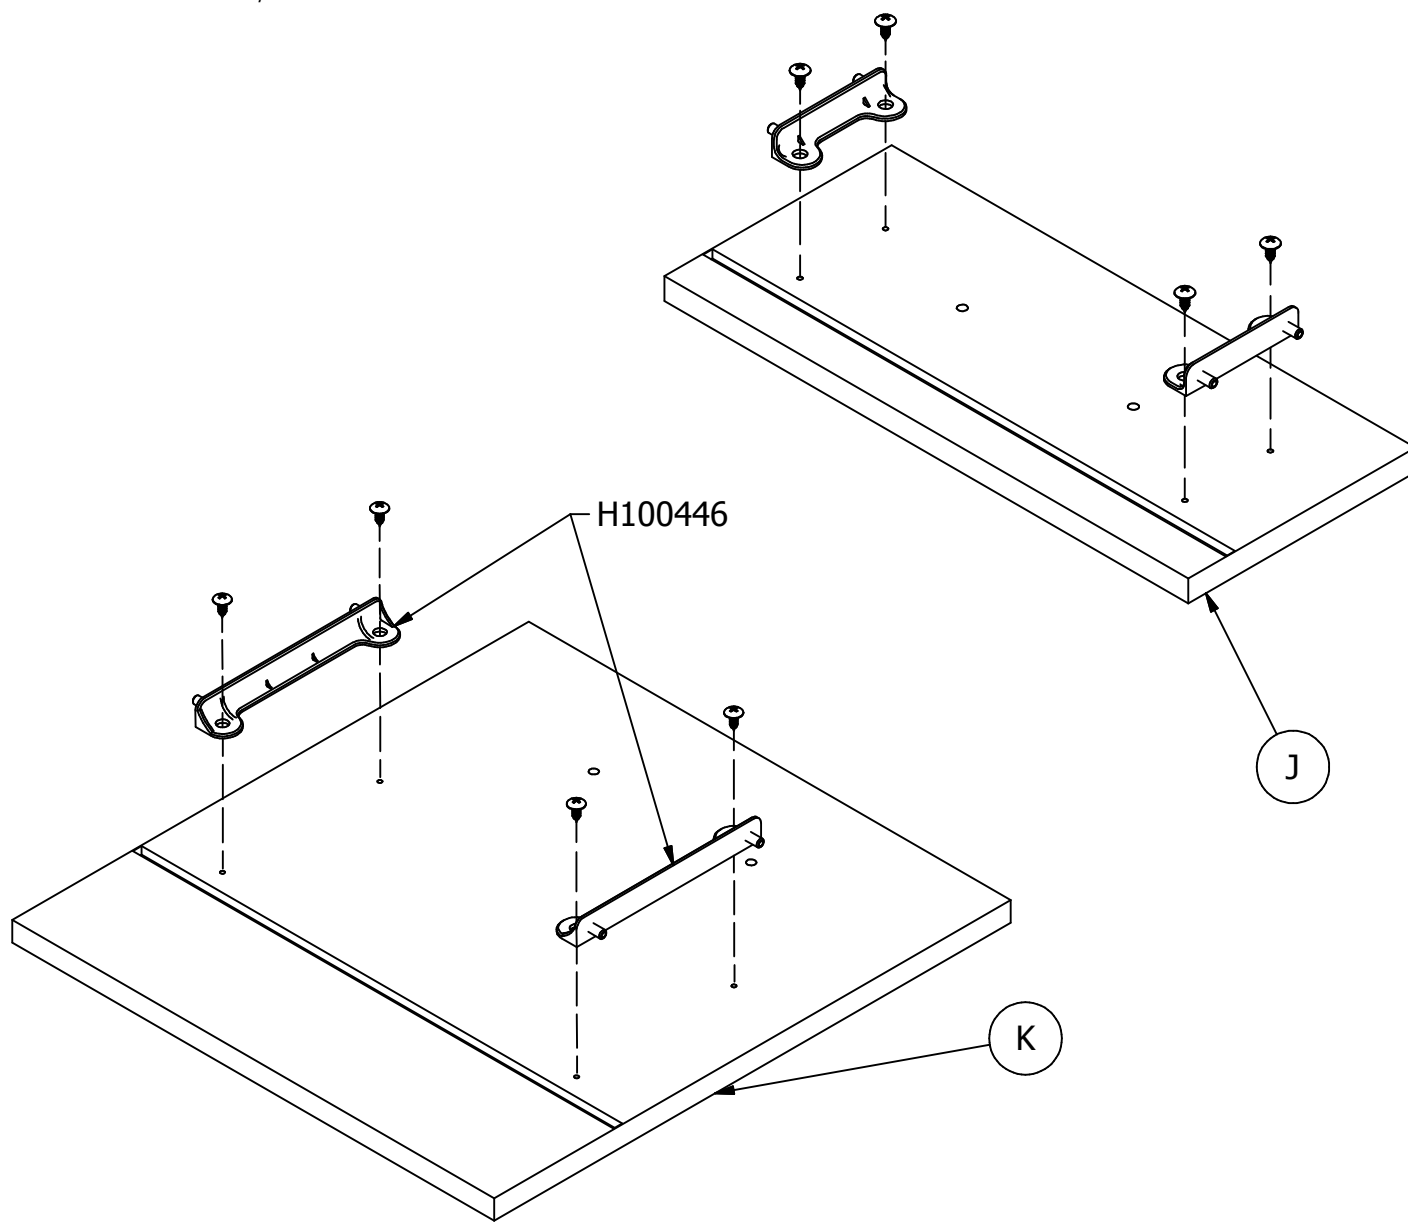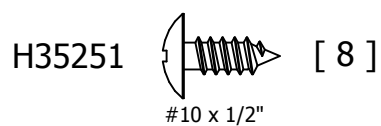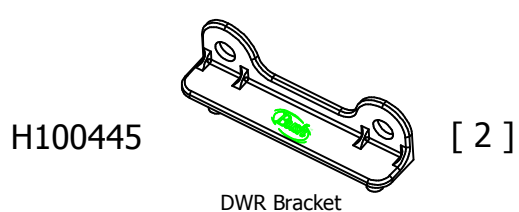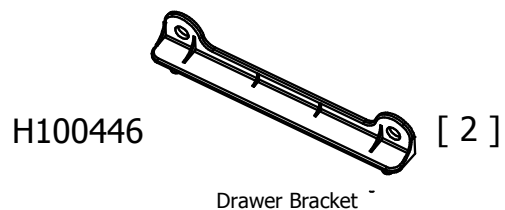



Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.




# STEP 2


# Assemble Drawers


A187451G


H28917  [ 4 ]  
#6 x 1/2" Silver


H26053  [ 4 ]  
#10 x 1-1/4"

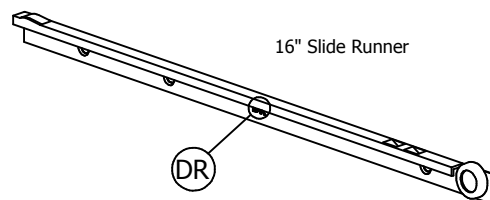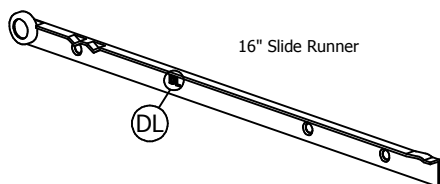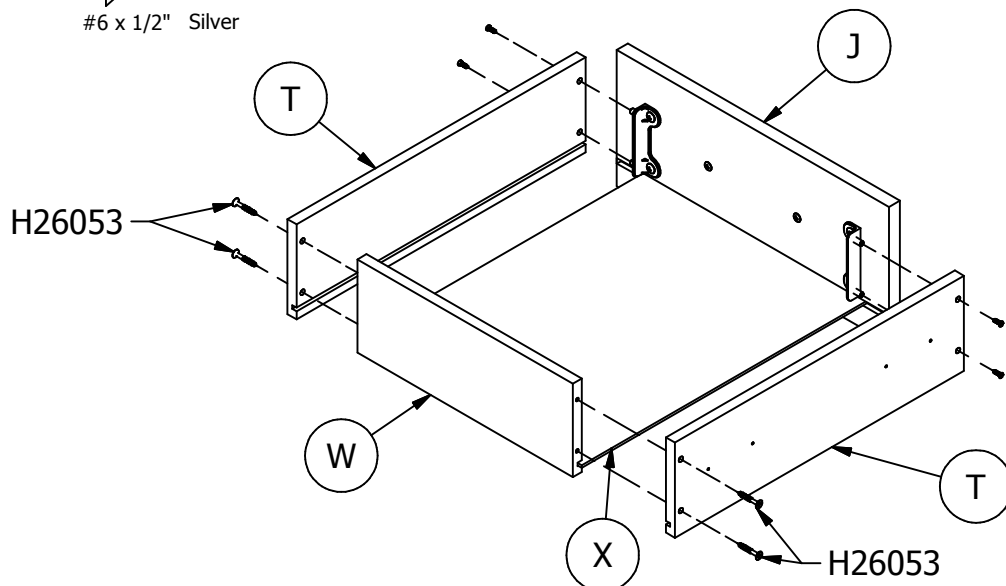

H23480  [ 2 ]  
#8-32 x 7/8"

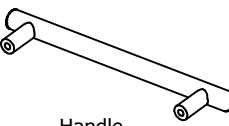 [ 1 ]  
Handle

H28917  [ 6 ]  
#6 x 1/2" Silver

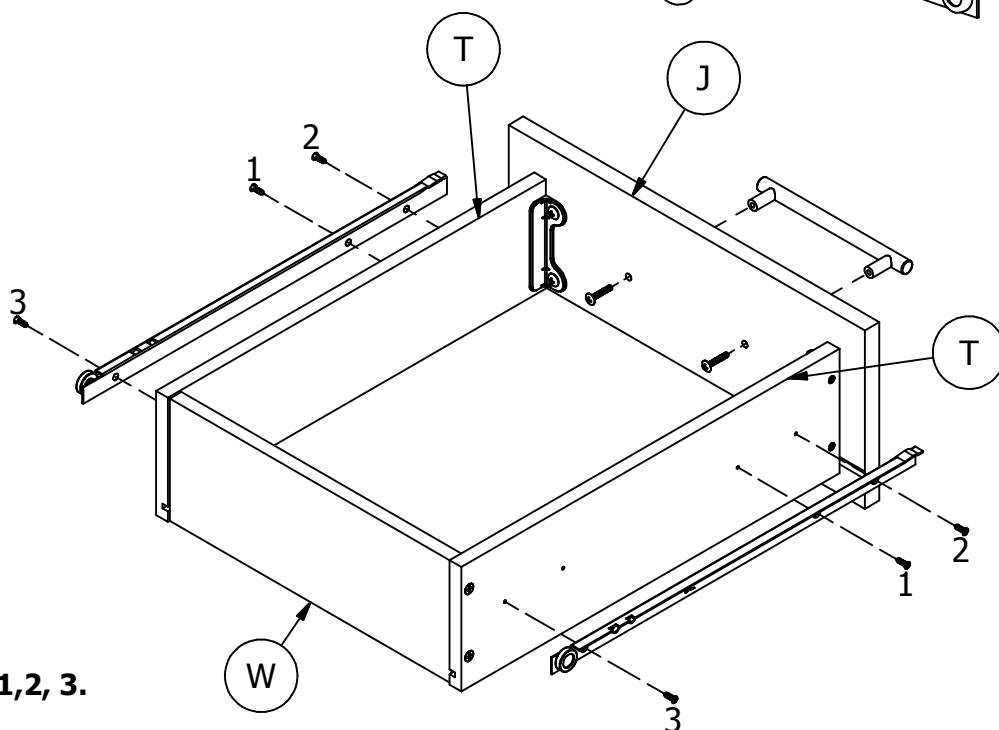

**Tighten screws in order shown 1,2,3.**  
Atornille en orden indicado 1,2,3.  
Serrer les vis dans la façon montrée 1,2,3.

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:




How to Separate  
and Install Drawer  
Slides

**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**


Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

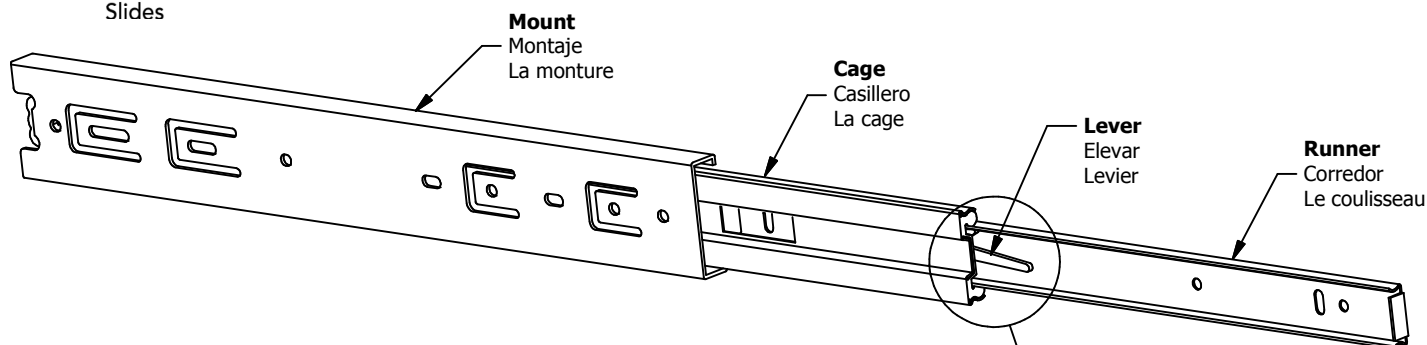


**STEP 1: Extend Slide**

Extender la diapositiva  
Extendre la diapositive

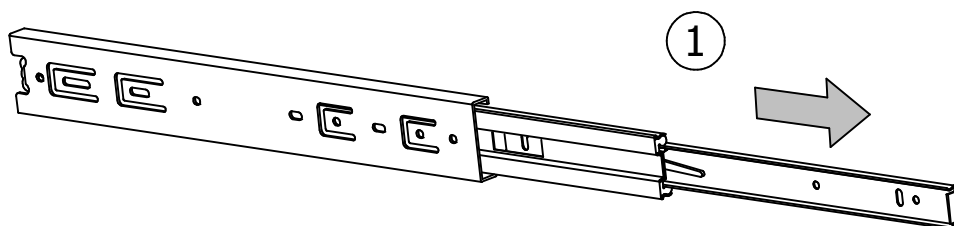


**STEP 2: Push Lever UP**

Empujar hacia arriba  
Lever le levier

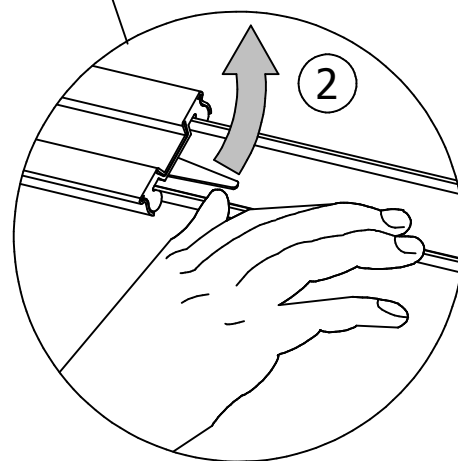

**STEP 3: Remove Runner**

Quitar el corredor  
Enlever le coureur

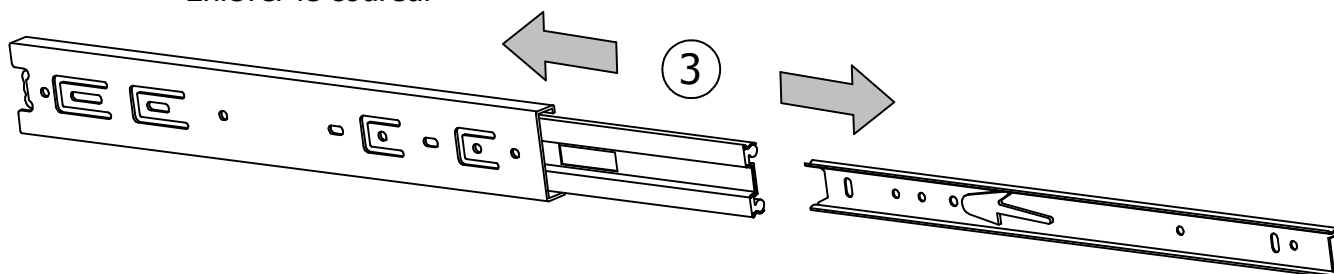

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 4


## Assemble Drawers


A187451G


Scan QR Code to  
Watch Video on:




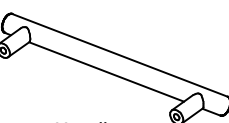
How to Separate  
and Install Drawer  
Slides


H101725  [ 4 ]  
#6 x 1/2"


H26053  [ 4 ]  
#10 x 1-1/4"

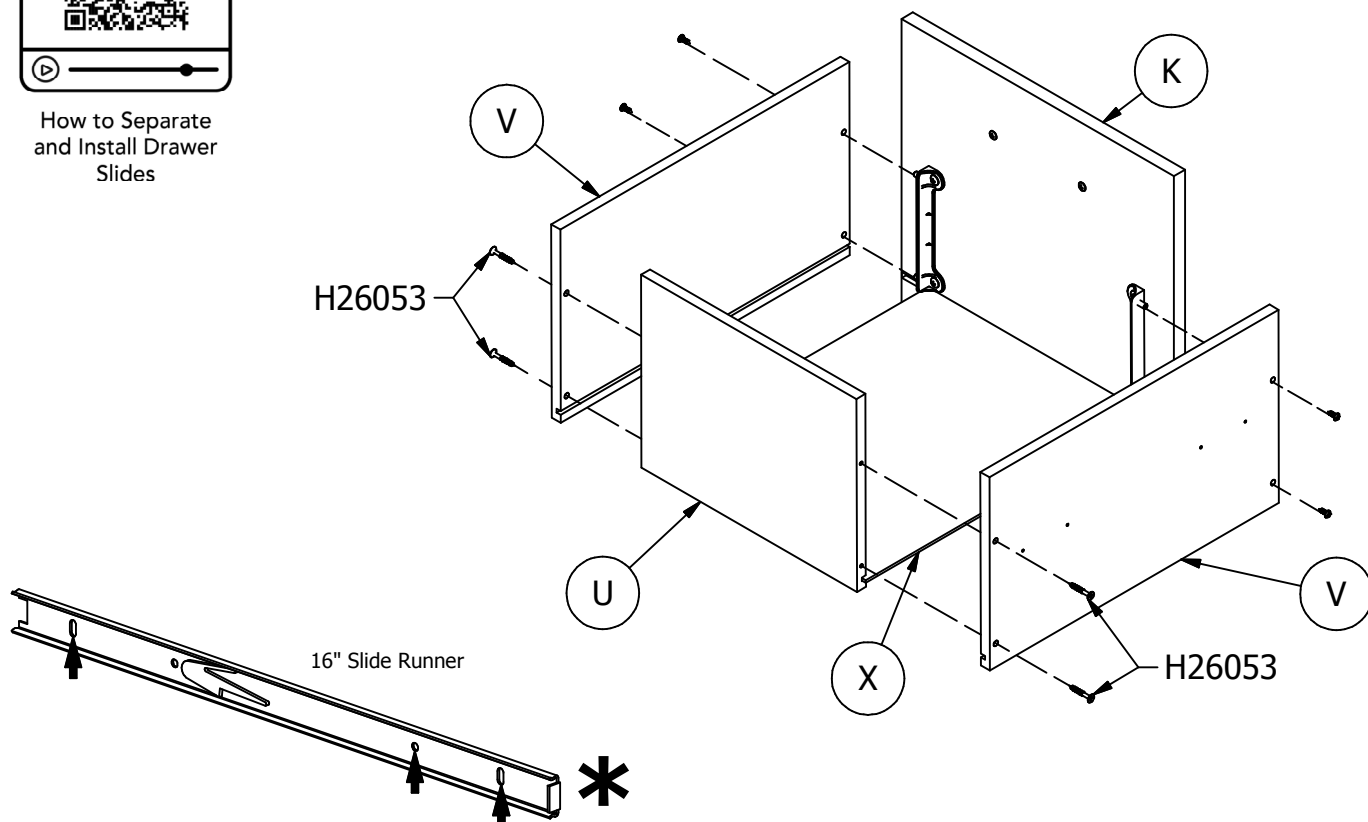

H23480  [ 2 ]  
#8-32 x 7/8"

 [ 1 ]  
Handle


H101725  [ 6 ]  
#6 x 1/2"

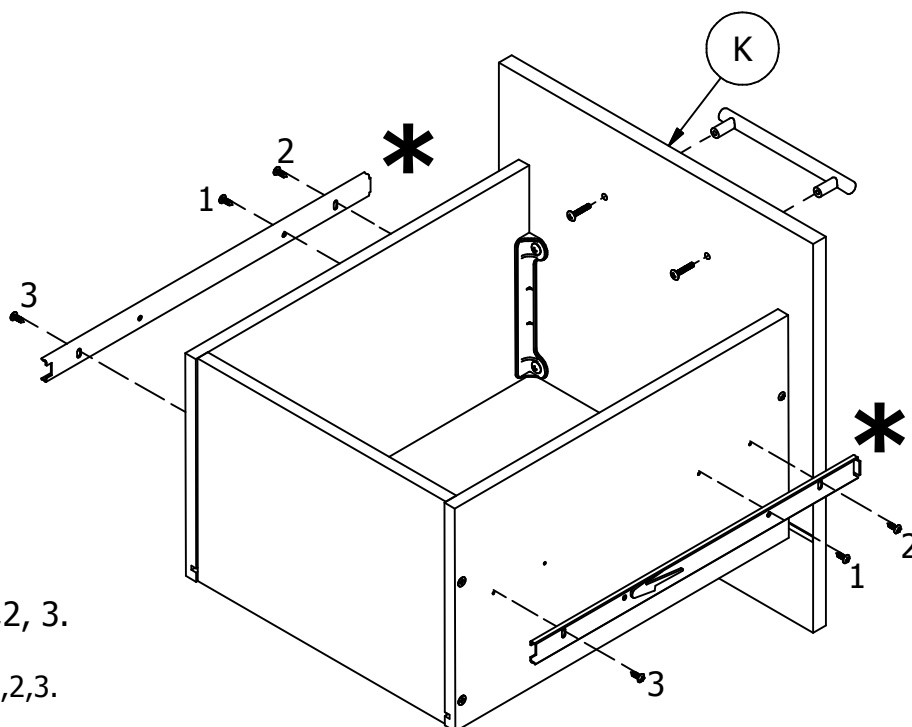

Tighten screws in order shown 1,2, 3.  
Atornille en orden indicado 1,2,3.  
Serrer les vis dans la facon montrée 1,2,3.

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

H162488


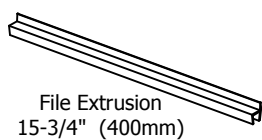


[ 2 ]

H77351



[ 4 ]

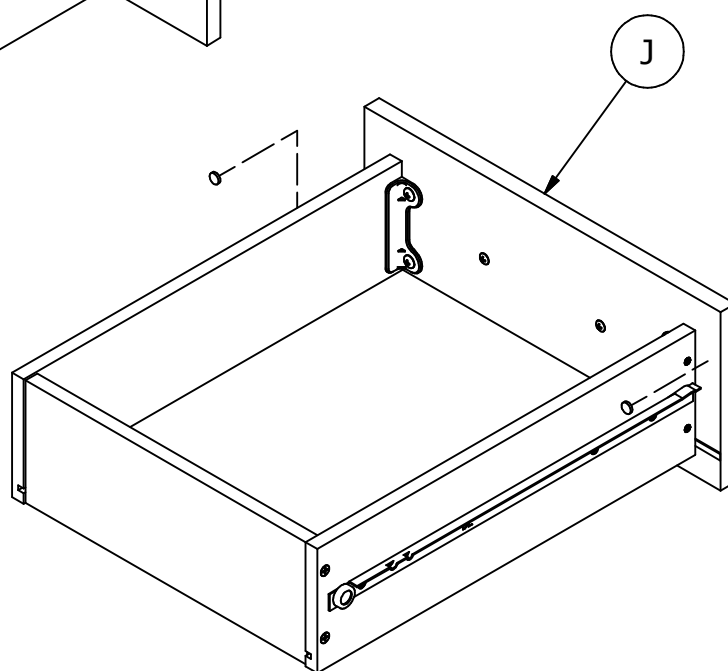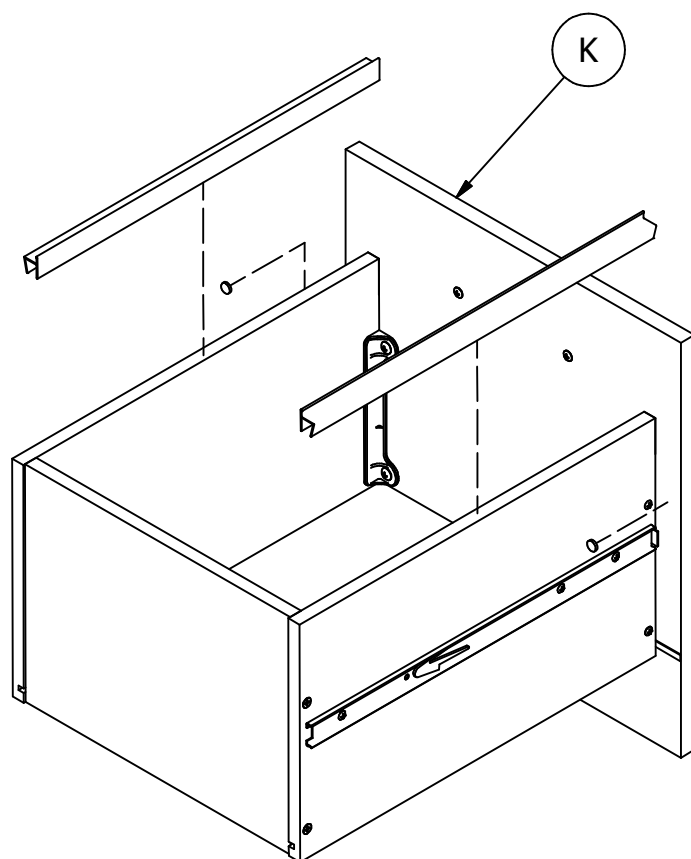



Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.


## STEP 6


## Prepare Cabinet Door


A187451G


H23480  [ 2 ]  
#8-32 x 7/8"

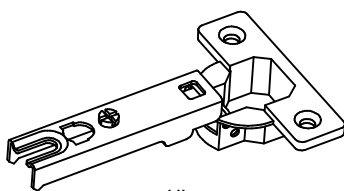H126359  [ 2 ]  
Hinge

H28917  [ 4 ]  
#6 x 1/2" Silver

 [ 1 ]  
Handle

H77351  [ 2 ]  
Bumper

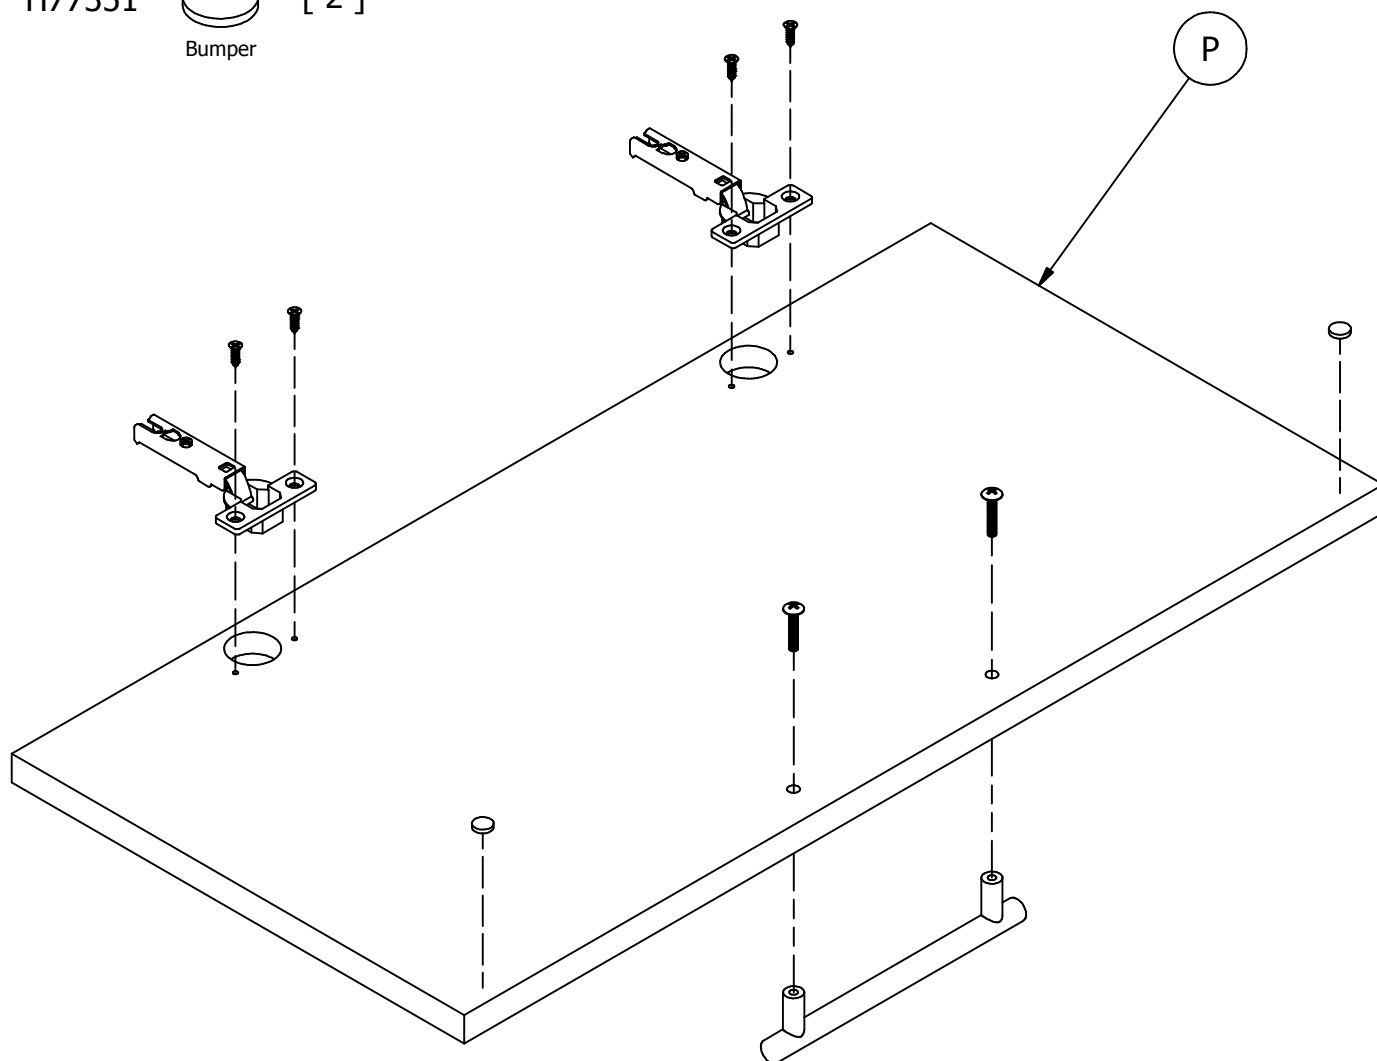


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

## STEP 7

## Prepare Rear Leg


A187451G

H72988




KD Bolt


[ 6 ]

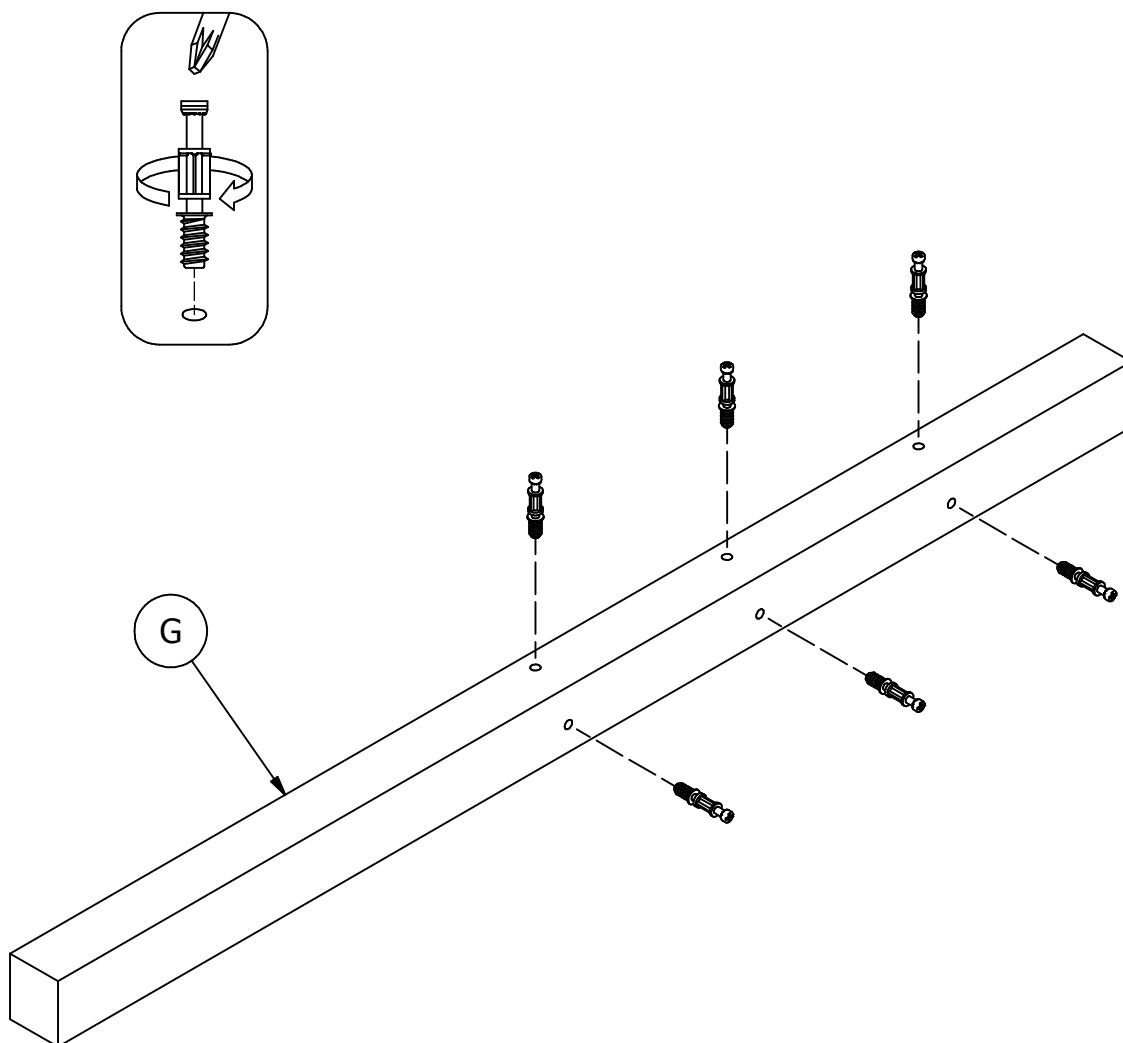

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

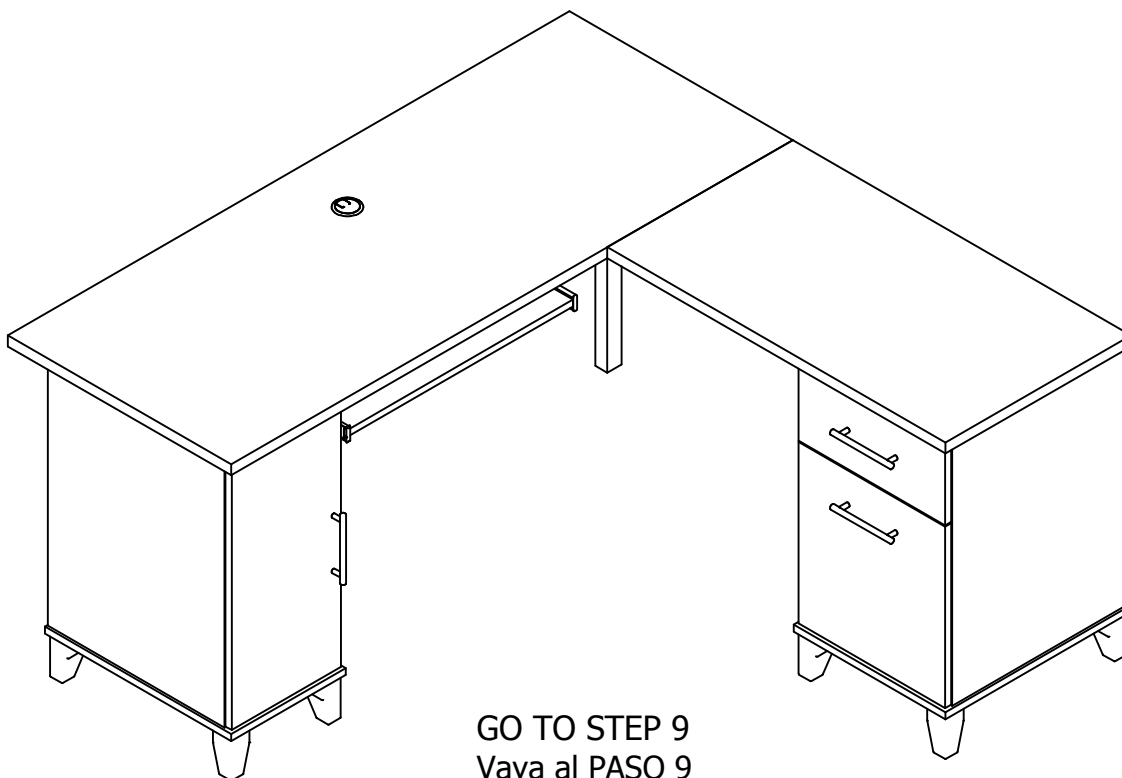

GO TO STEP 9  
Vaya al PASO 9  
Allez à l'ÉTAPE 9

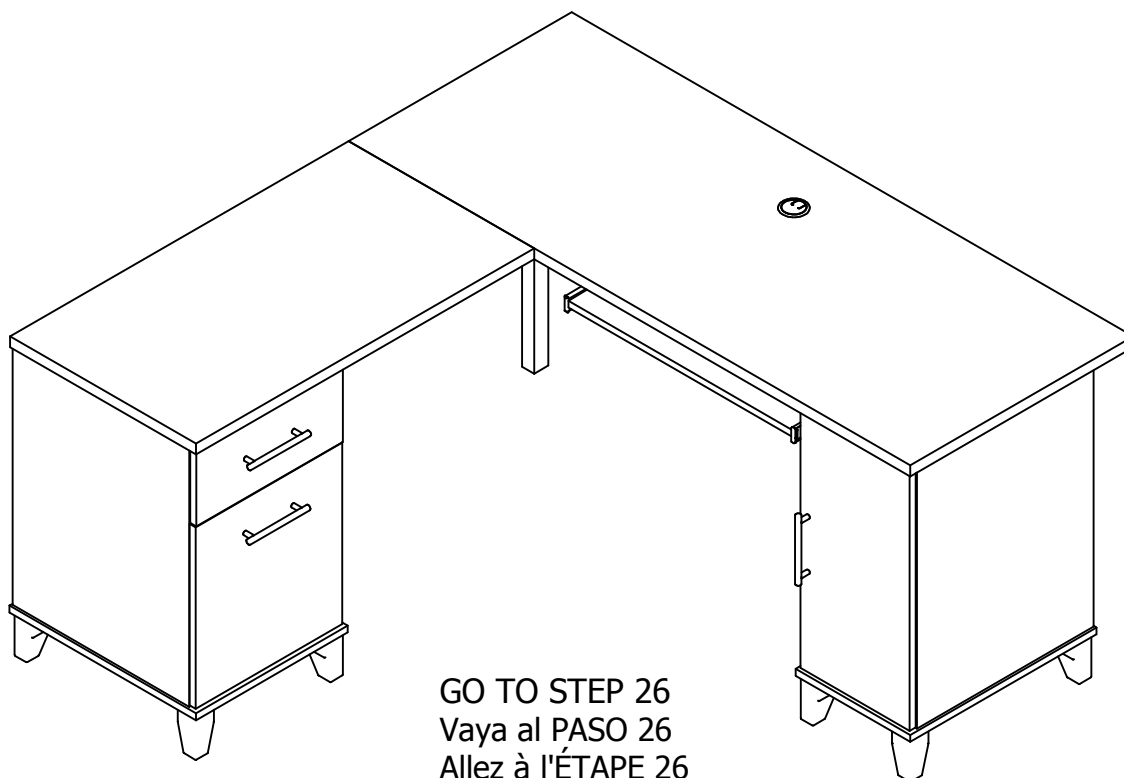


GO TO STEP 26  
Vaya al PASO 26  
Allez à l'ÉTAPE 26





## STEP 9

## Prepare Cabinet Sides

A187451G

H72988  [ 7 ]  
KD Bolt

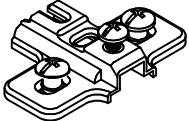H126364  [ 2 ]  
Mounting Plate

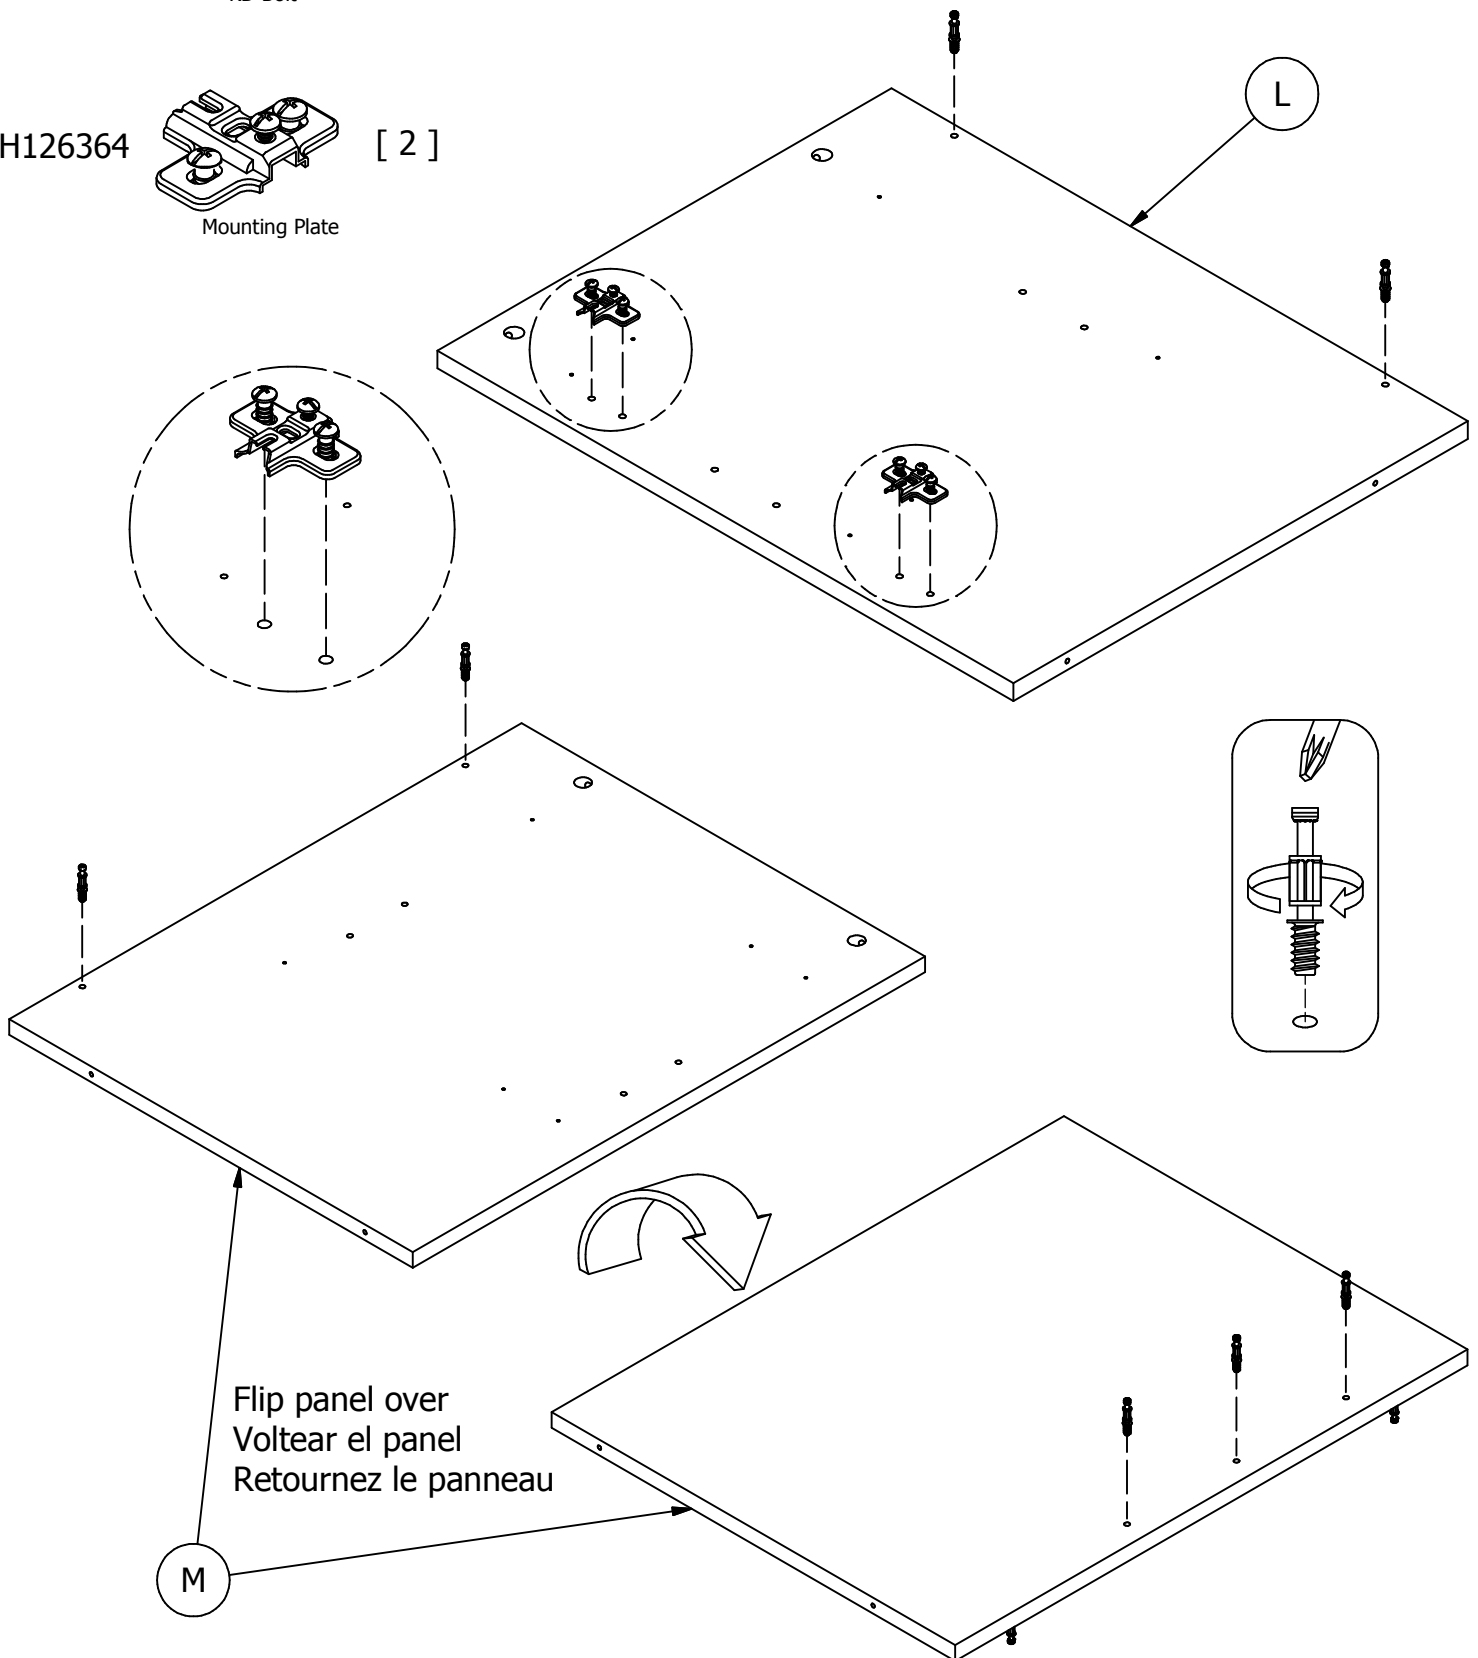


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:




How to Tighten  
KD Cams

H71659

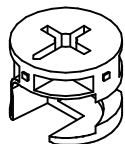



KD Cam

[ 4 ]



Cover Cap

[ 4 ]

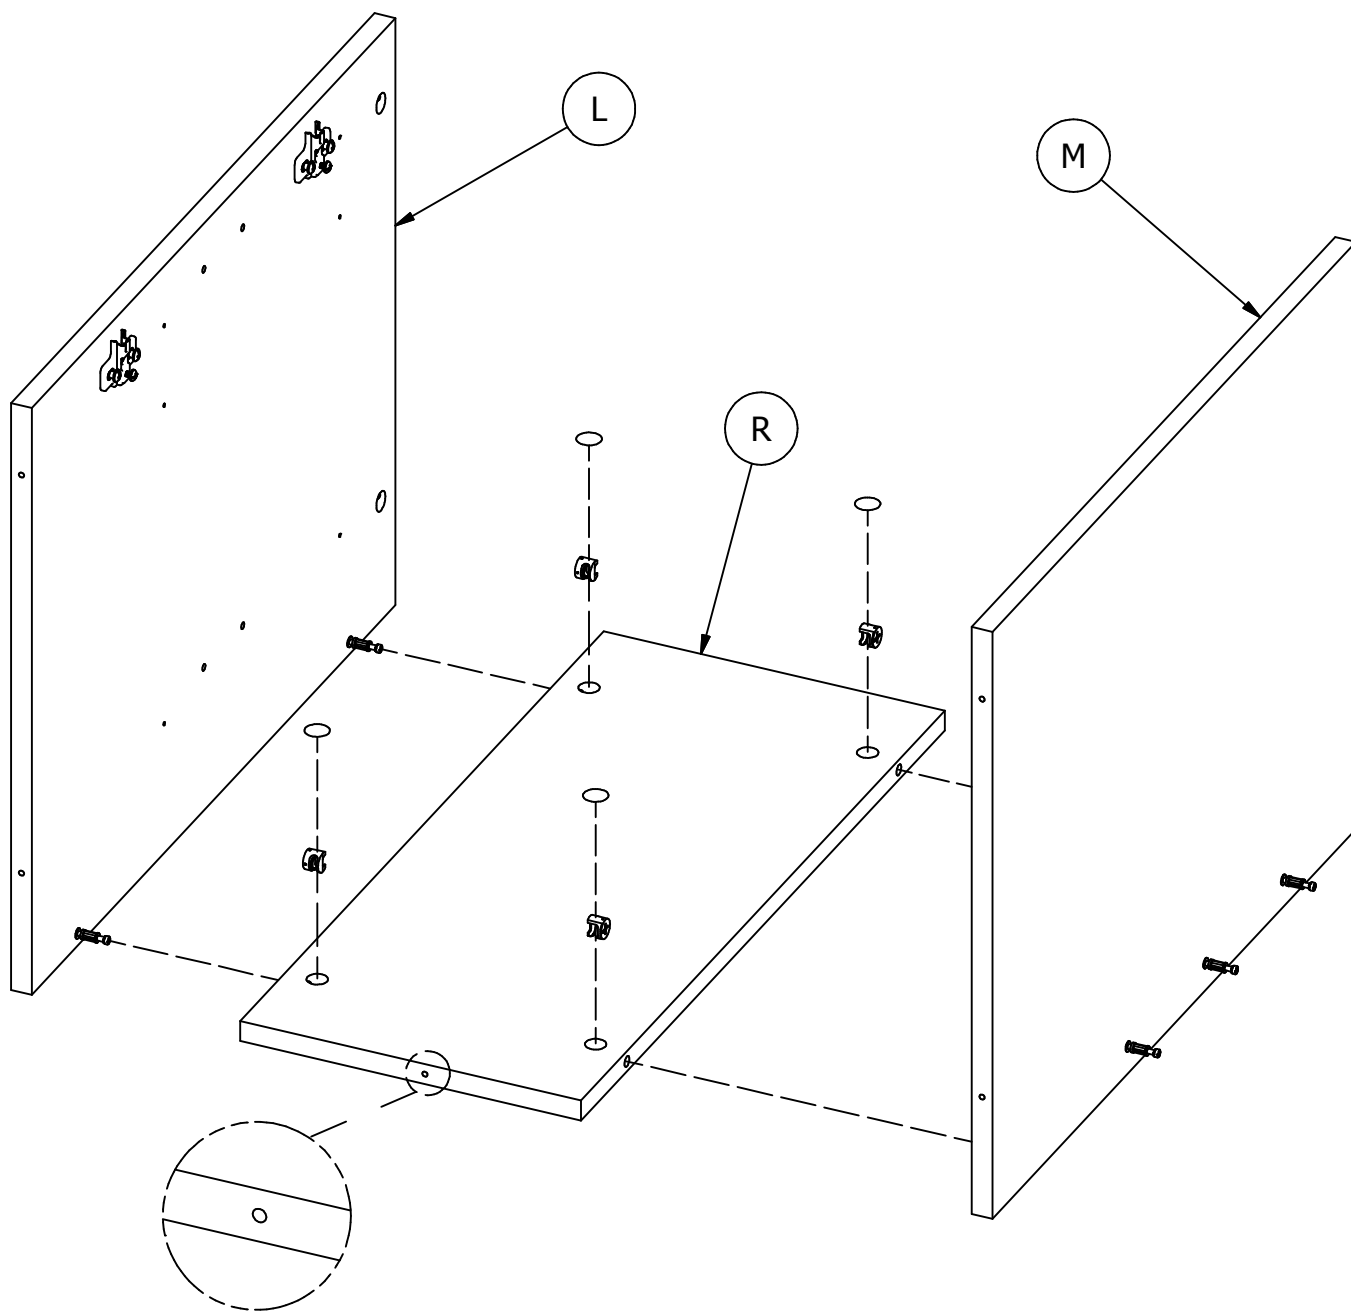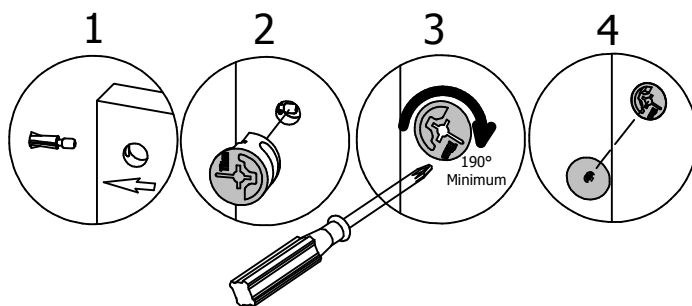


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 11

## Assembly Cabinet Base


A187451G

H143460




[ 4 ]


H35251

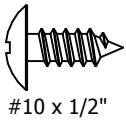


[ 8 ]

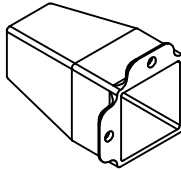

[ 4 ]

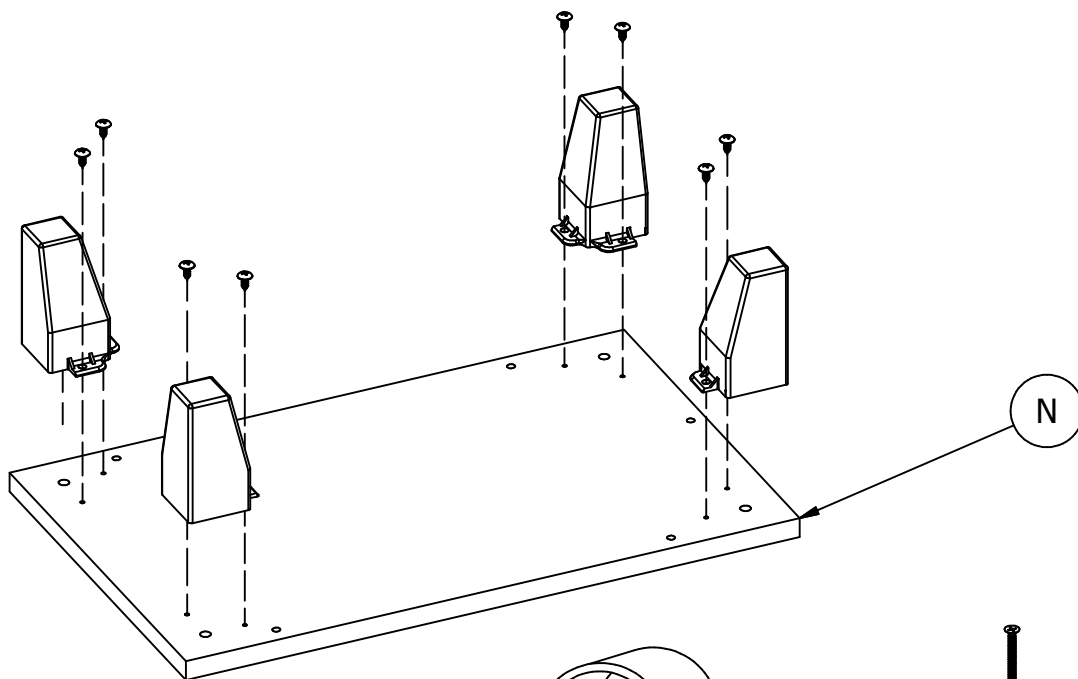


Flip panel over  
Voltear el panel  
Retournez le panneau

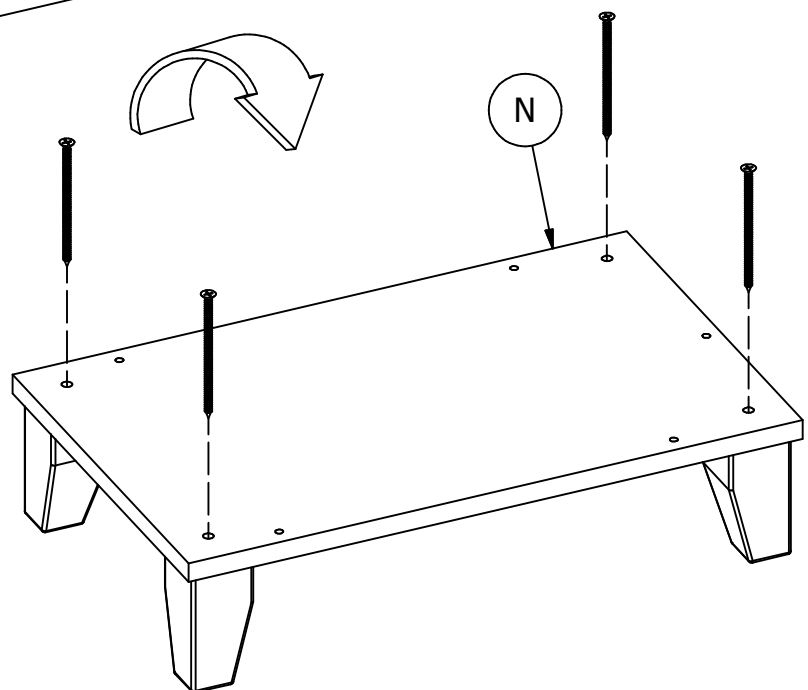


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

H23491



#10 x 2"

[ 5 ]

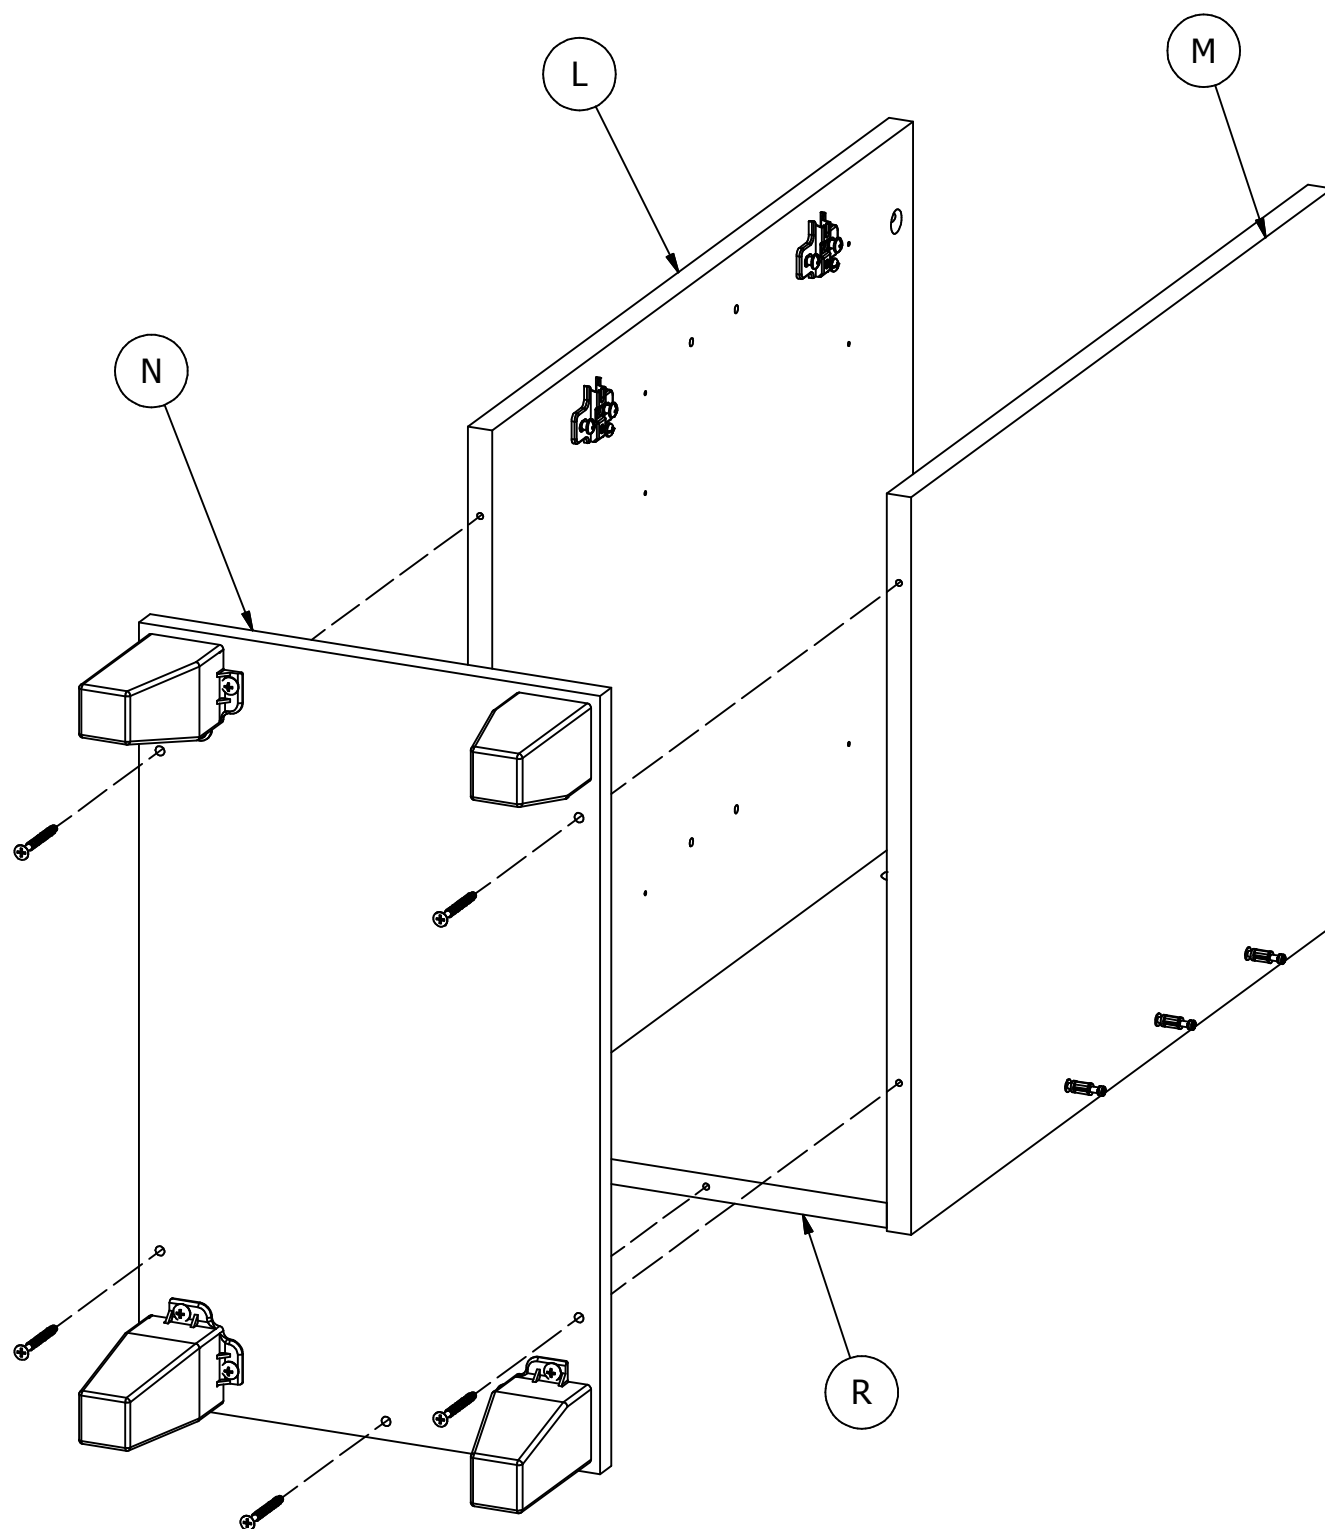

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 13


## Prepare Cabinet Sides


A187451G


Scan QR Code to  
Watch Video on:





How to Separate  
and Install Drawer  
Slides

H28917  [ 3 ]  
#6 x 1/2" Silver

H101725  [ 3 ]  
#6 x 1/2"

H72988  [ 2 ]  
KD Bolt

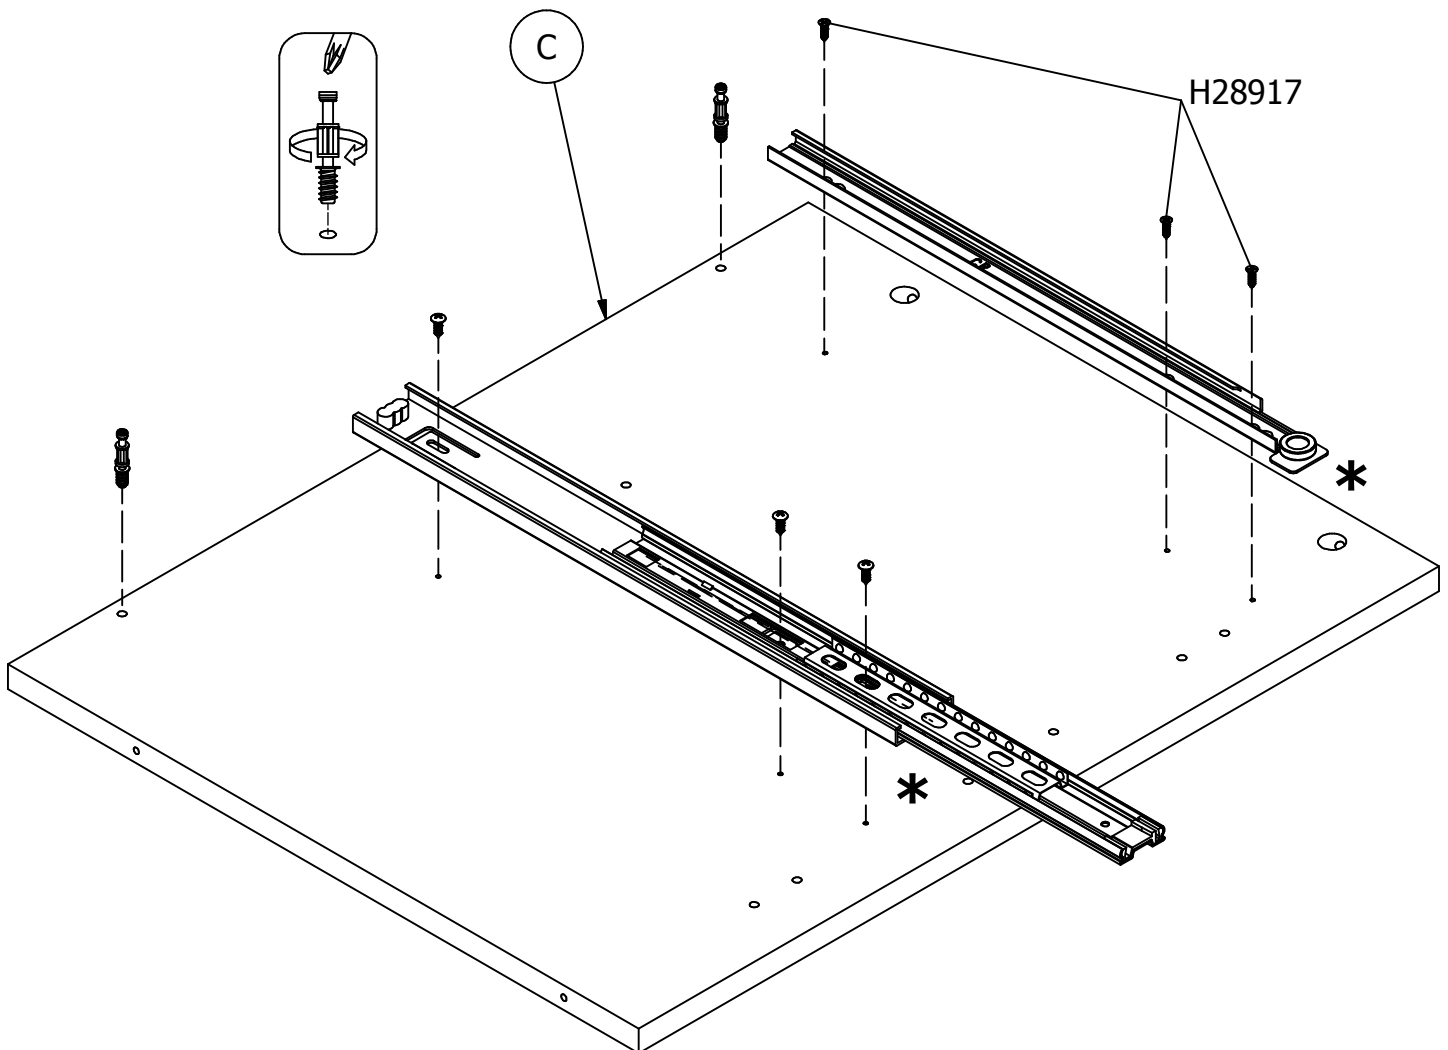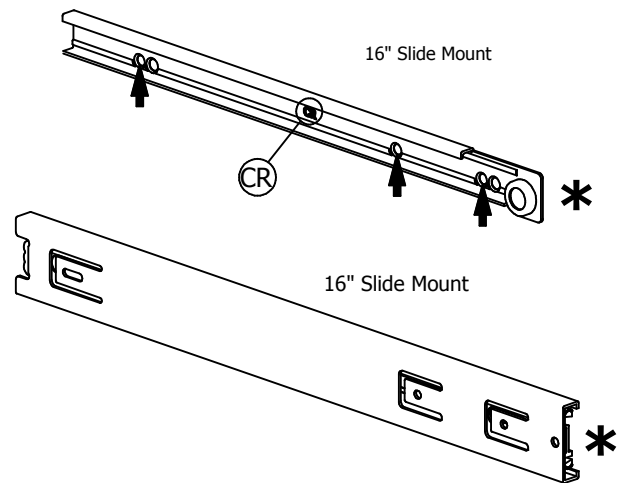

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 14


## Prepare Cabinet Sides


A187451G


Scan QR Code to  
Watch Video on:






How to Separate  
and Install Drawer  
Slides

H28917  [ 3 ]  
#6 x 1/2" Silver

H101725  [ 3 ]  
#6 x 1/2"

H72988  [ 5 ]  
KD Bolt

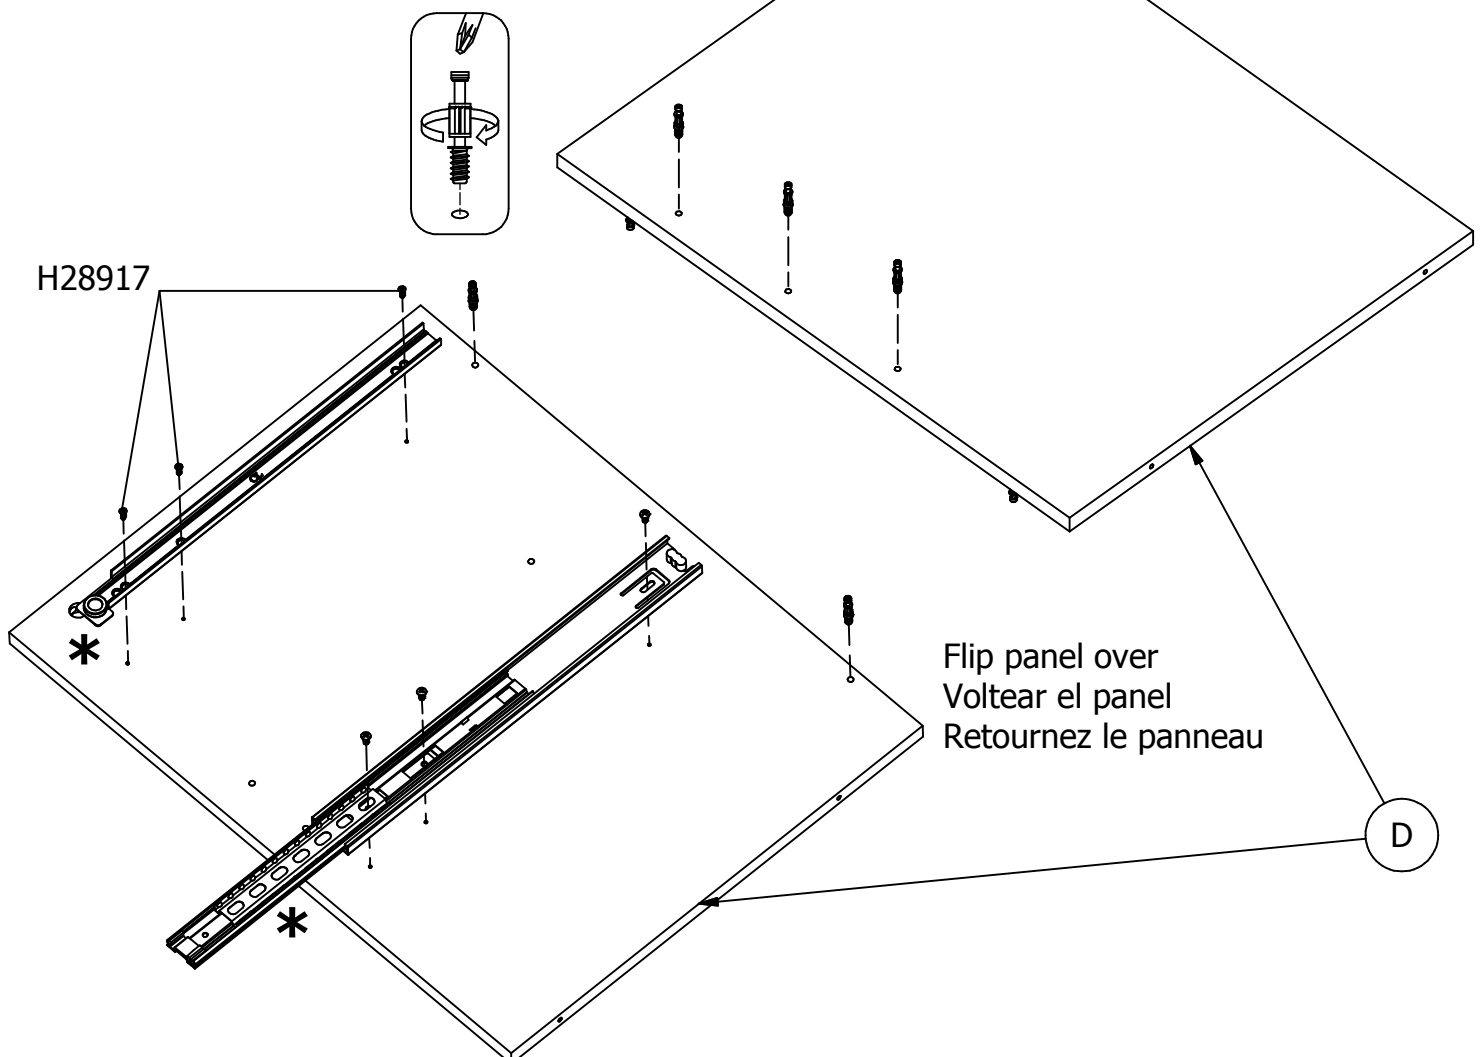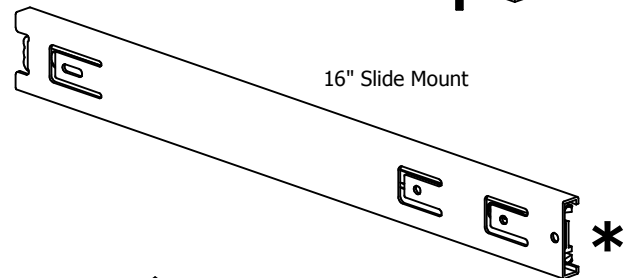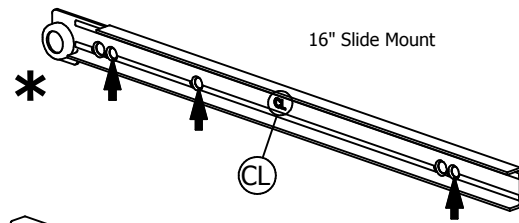

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 15

## Assemble Pedestal


A187451G

Scan QR Code to  
Watch Video on:





How to Tighten  
KD Cams

H71659




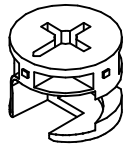


KD Cam

[ 4 ]

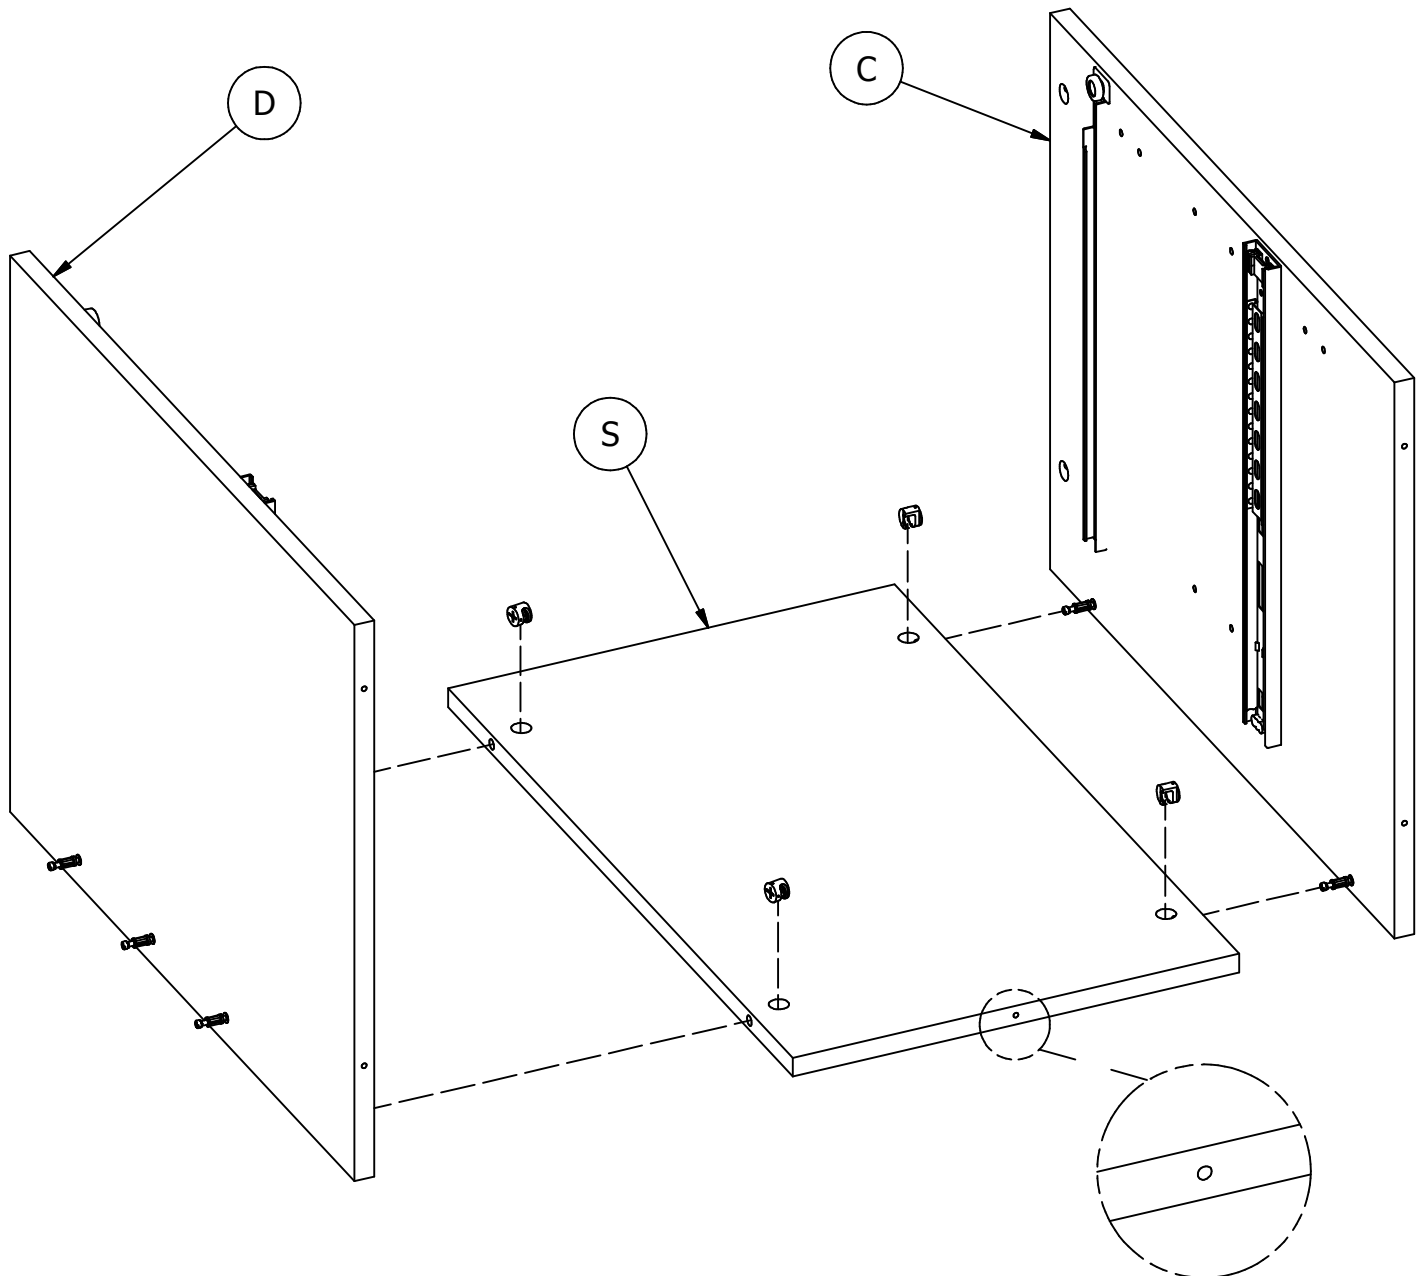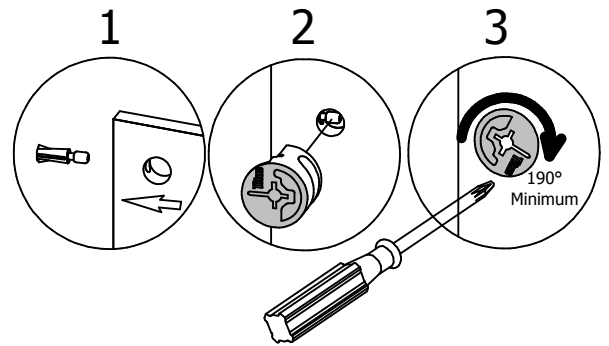


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

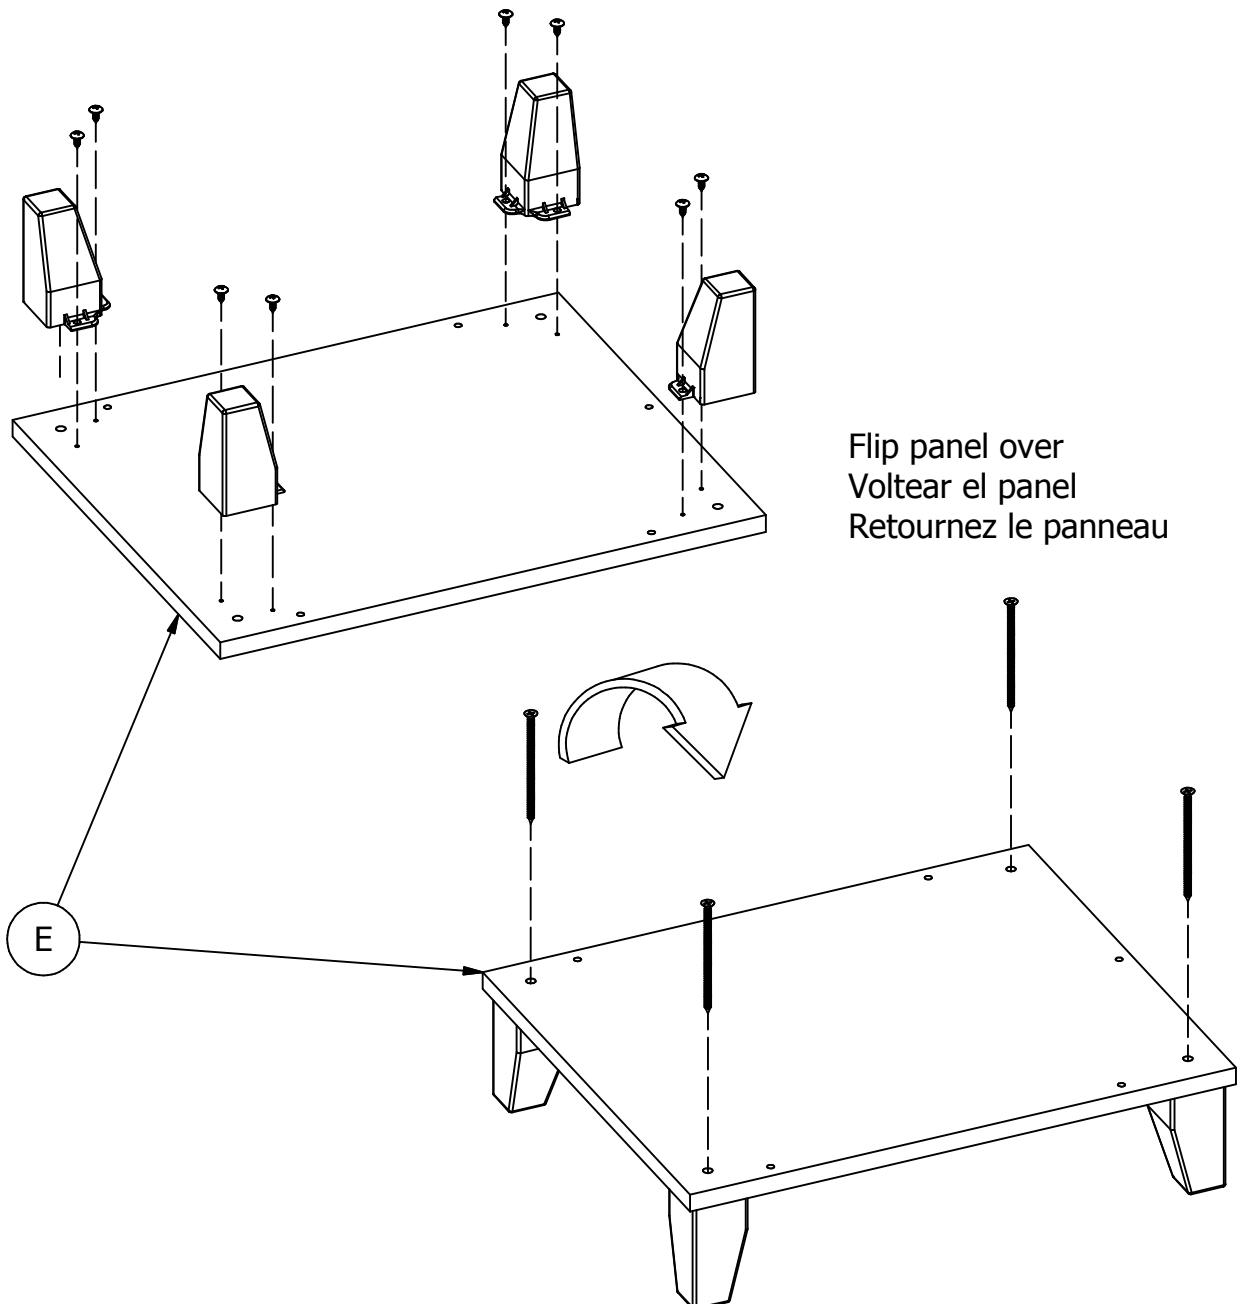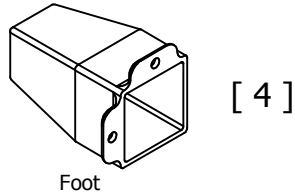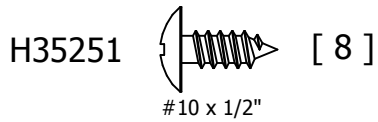




H23491



[ 5 ]

#10 x 2"

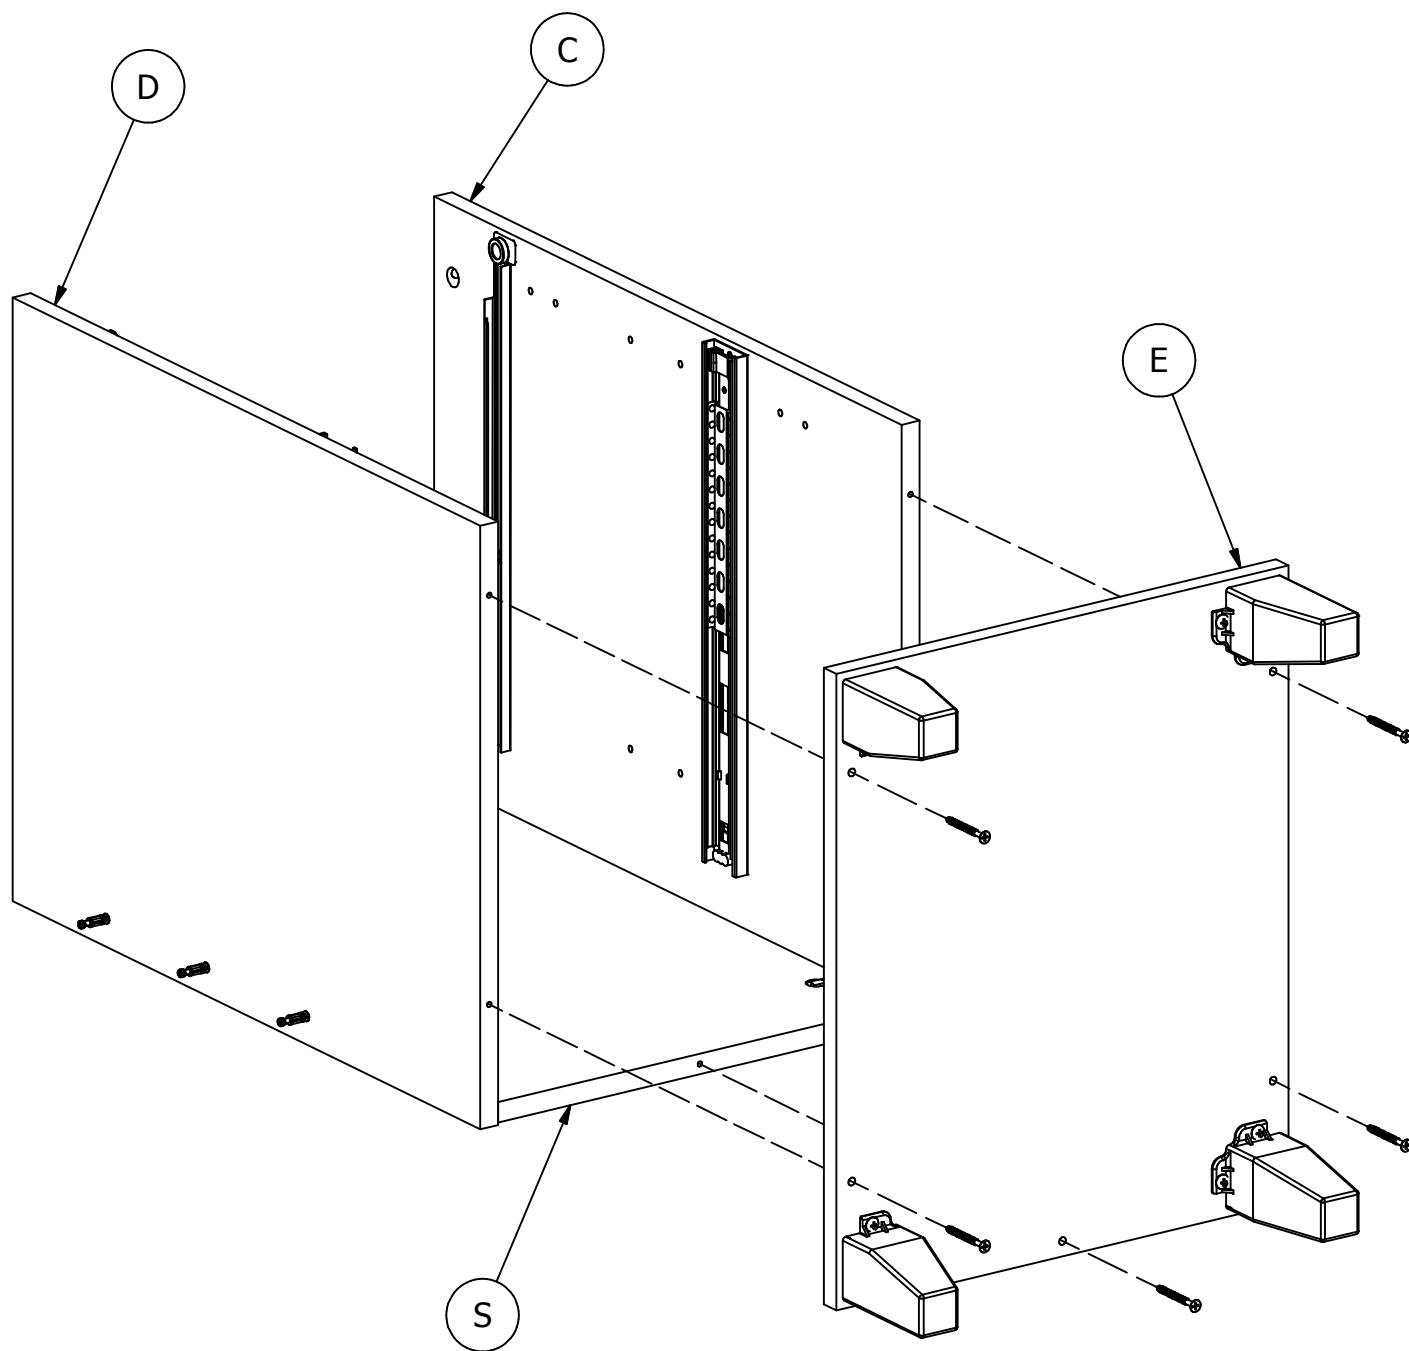


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:




How to Tighten  
KD Cams

H71659

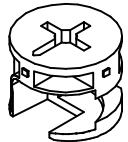



KD Cam

[ 3 ]



Cover Cap

[ 3 ]

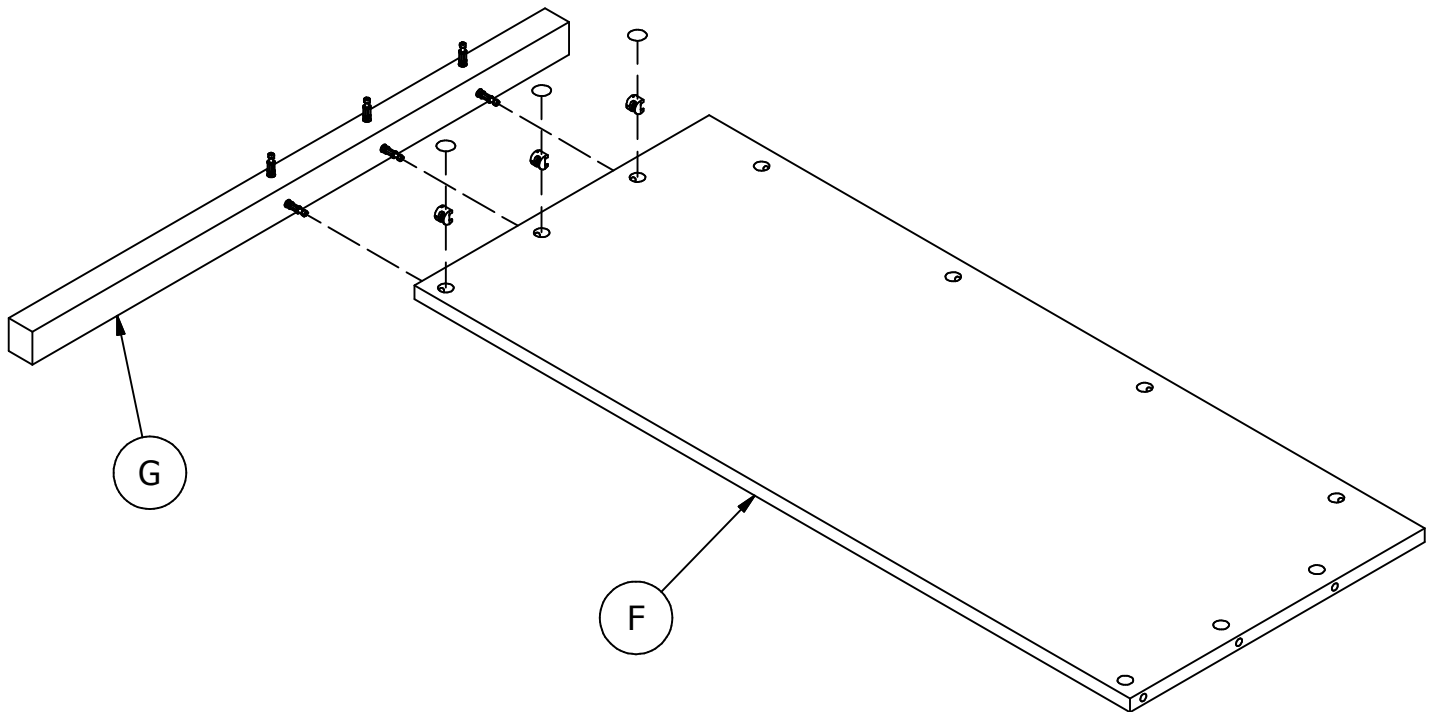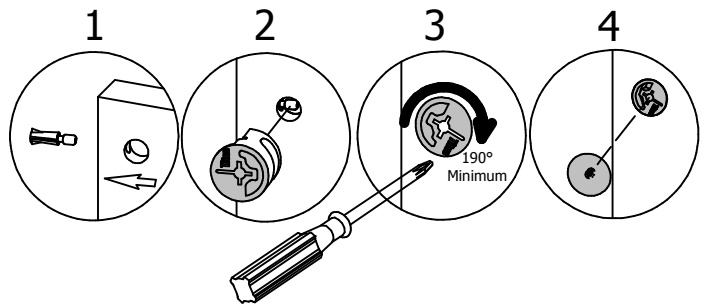

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

## STEP 19

## Assemble Modesty Panel to Cabinet


A187451G

Scan QR Code to  
Watch Video on:




How to Tighten  
KD Cams

H71659

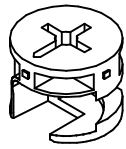



KD Cam

[ 3 ]




Cover Cap

[ 3 ]

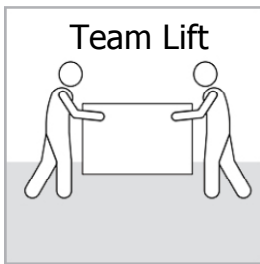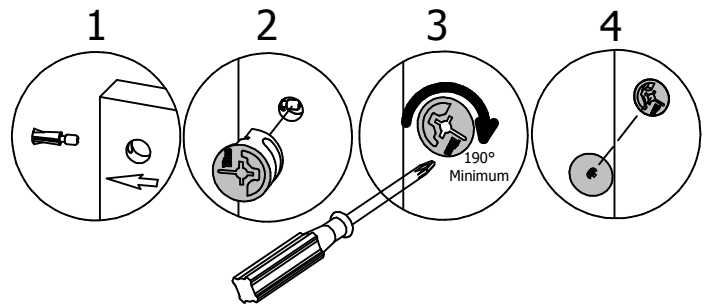

Team Lift

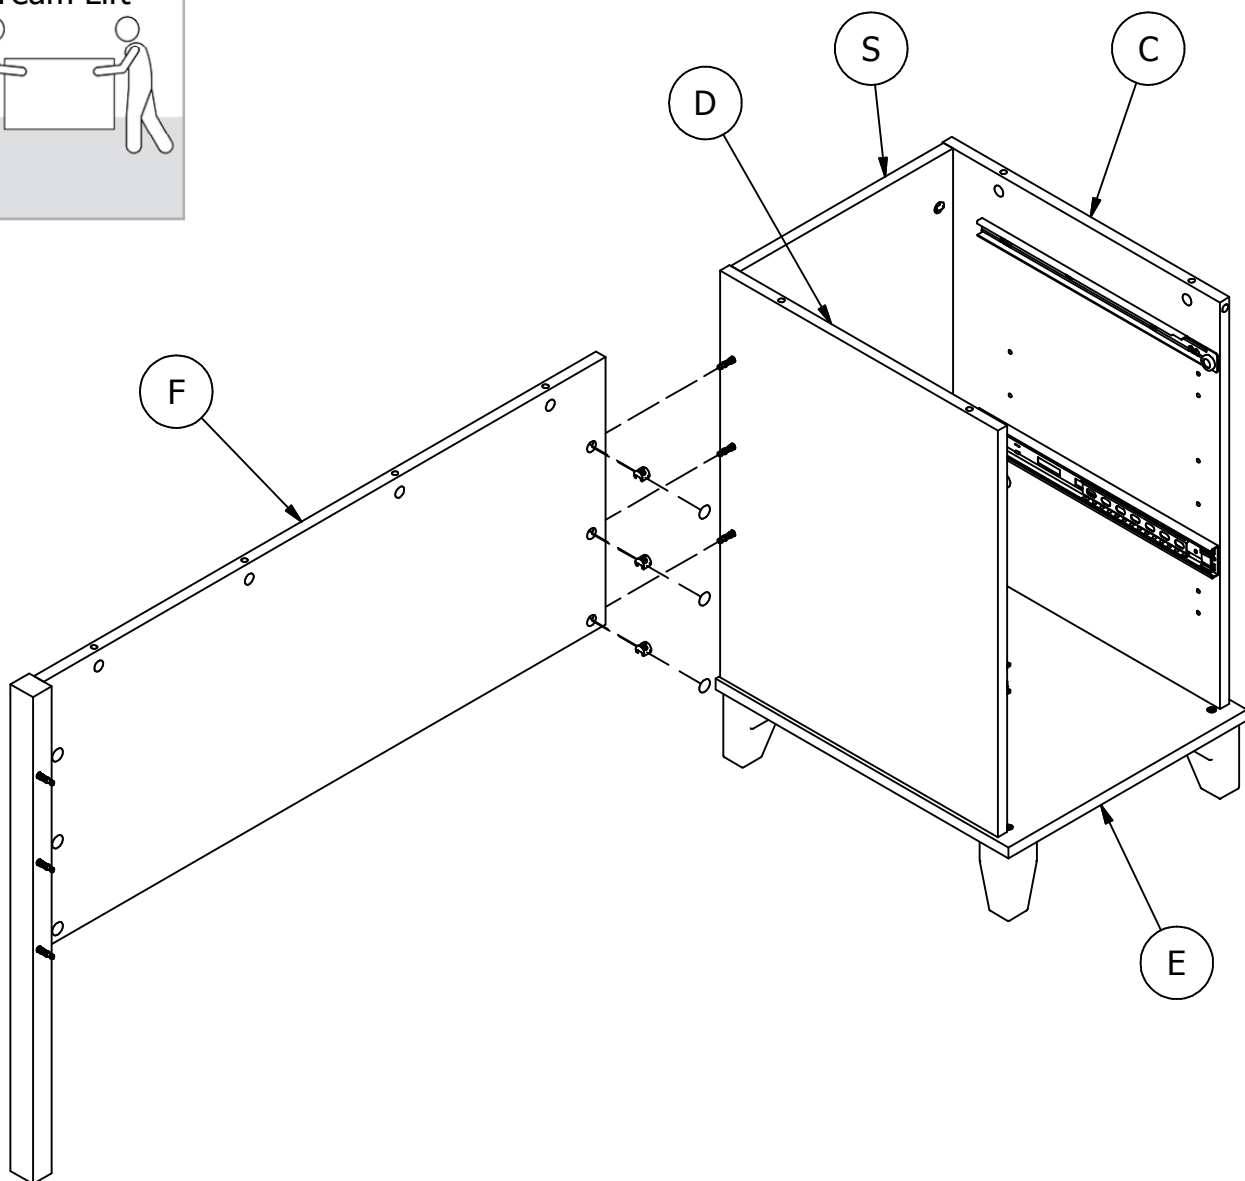

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 20





## Assemble Modesty Panel to Cabinet

A187451G

Scan QR Code to  
Watch Video on:



How to Tighten  
KD Cams

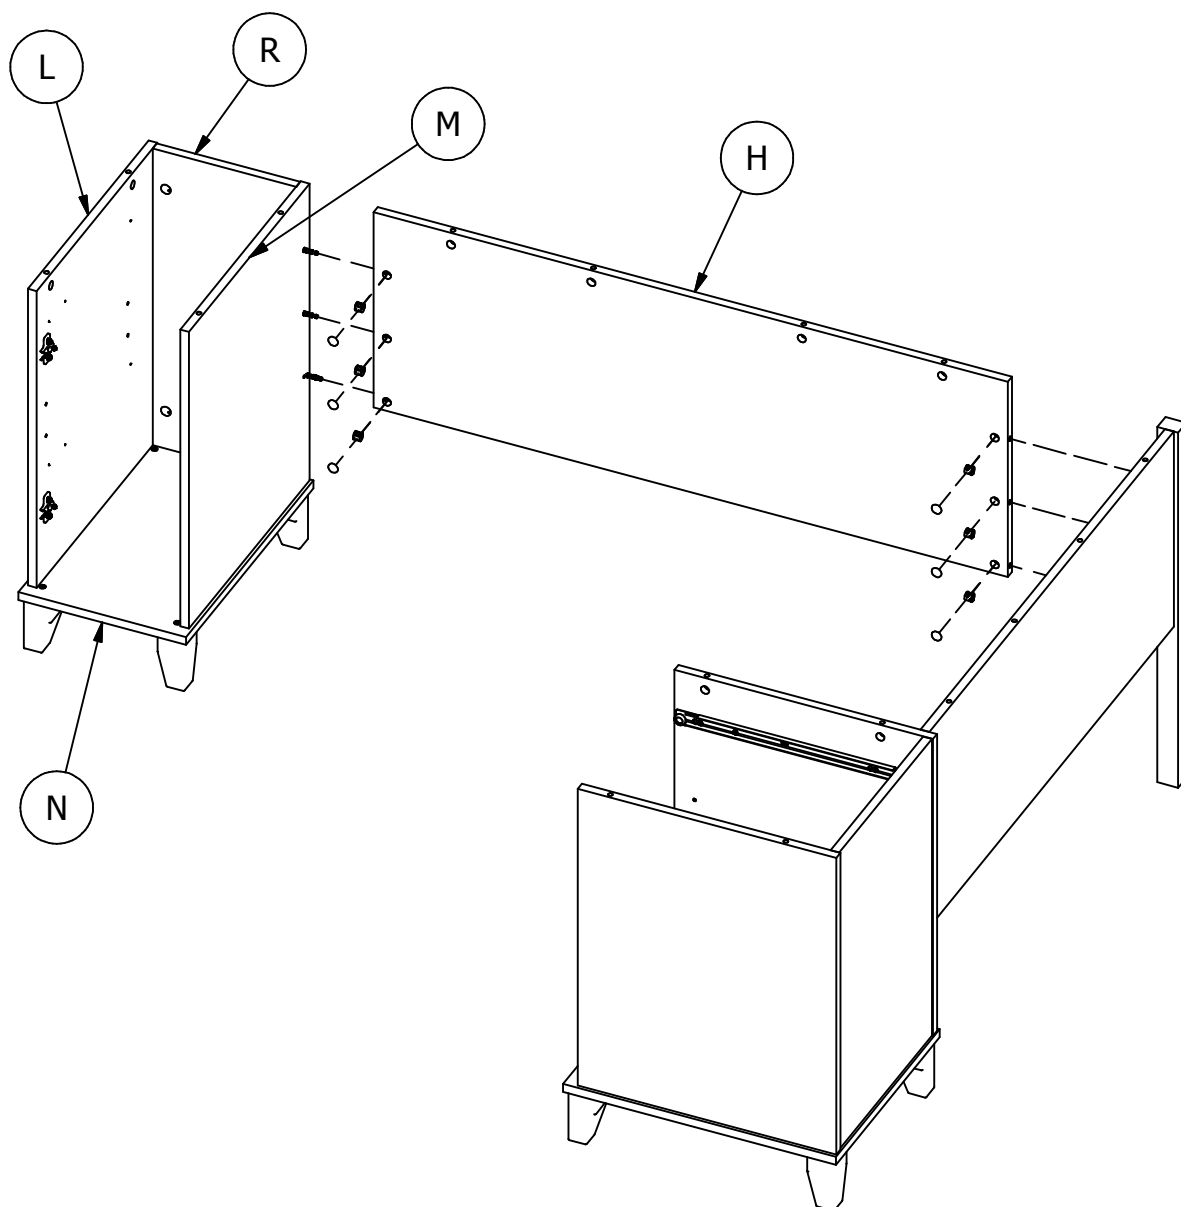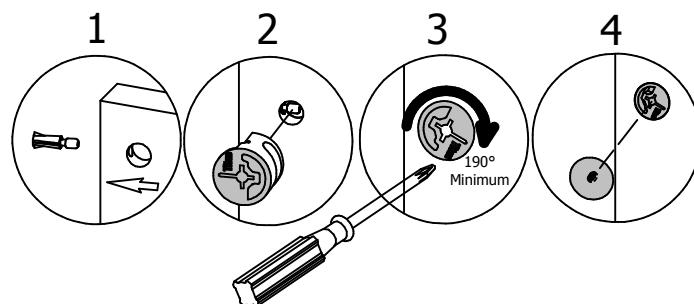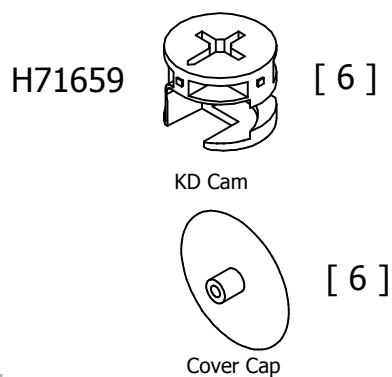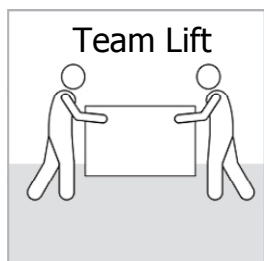


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 21

## Prepare Work Surface

A187451G


H72988



KD Bolt

[ 10 ]


H35251



#10 x 1/2"


[ 4 ]

H39922







Strap

[ 2 ]

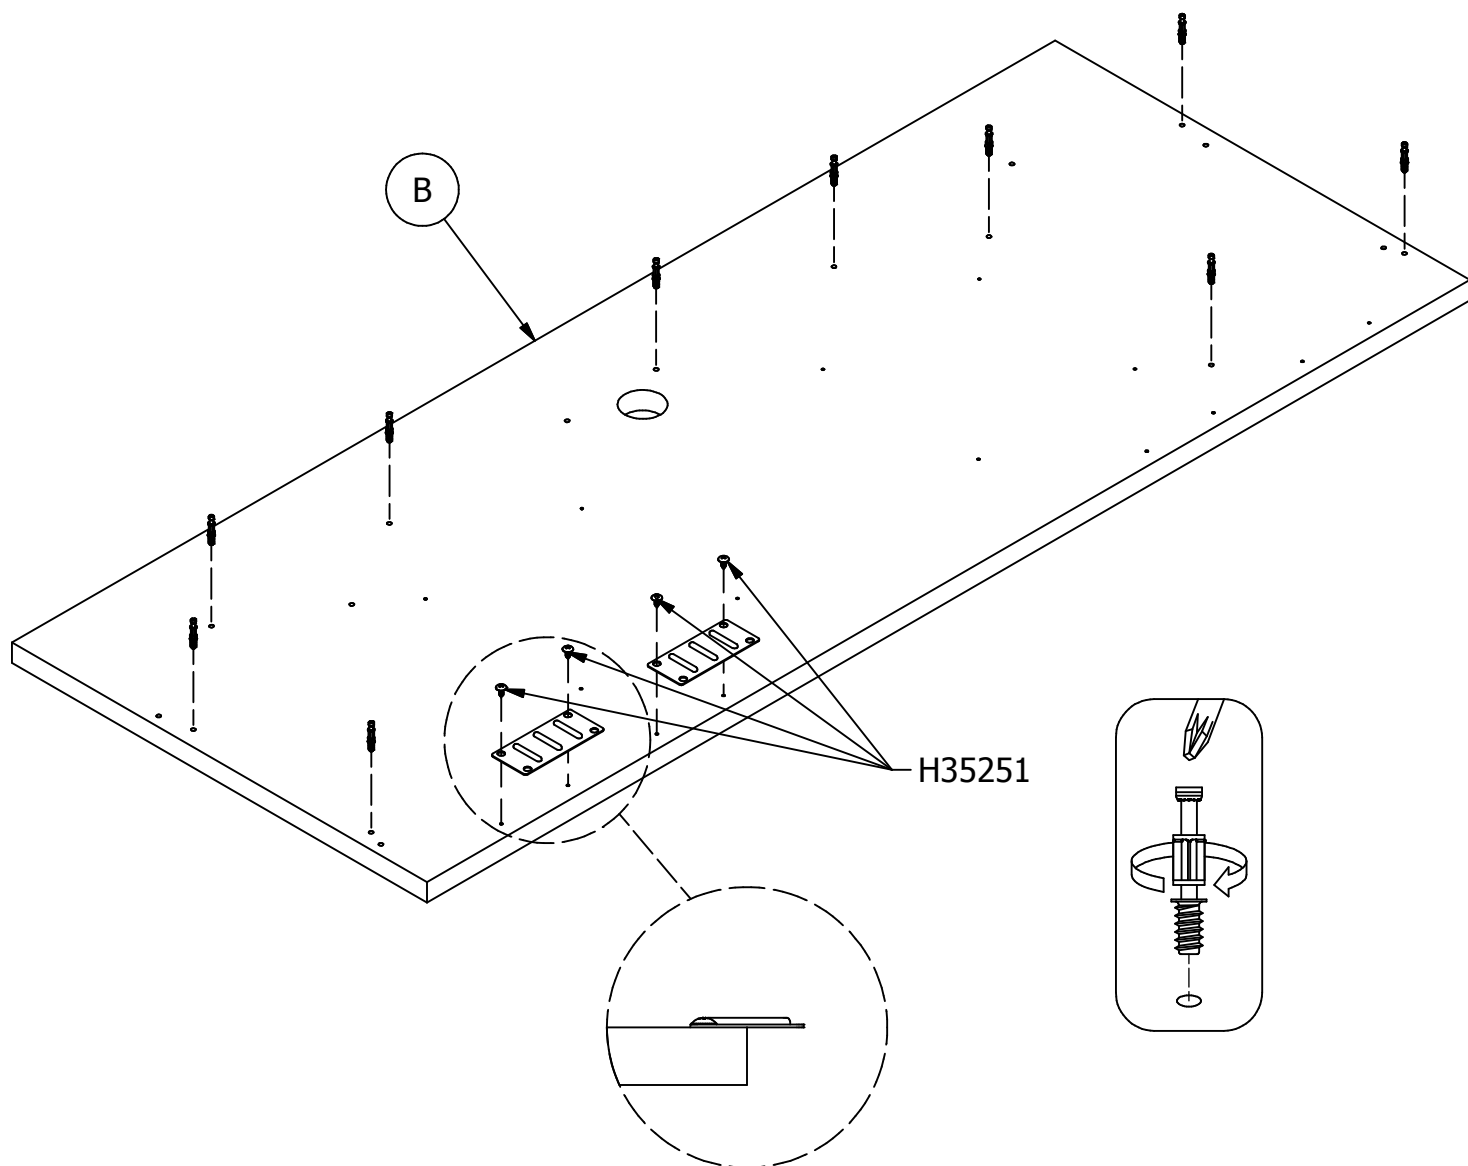

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

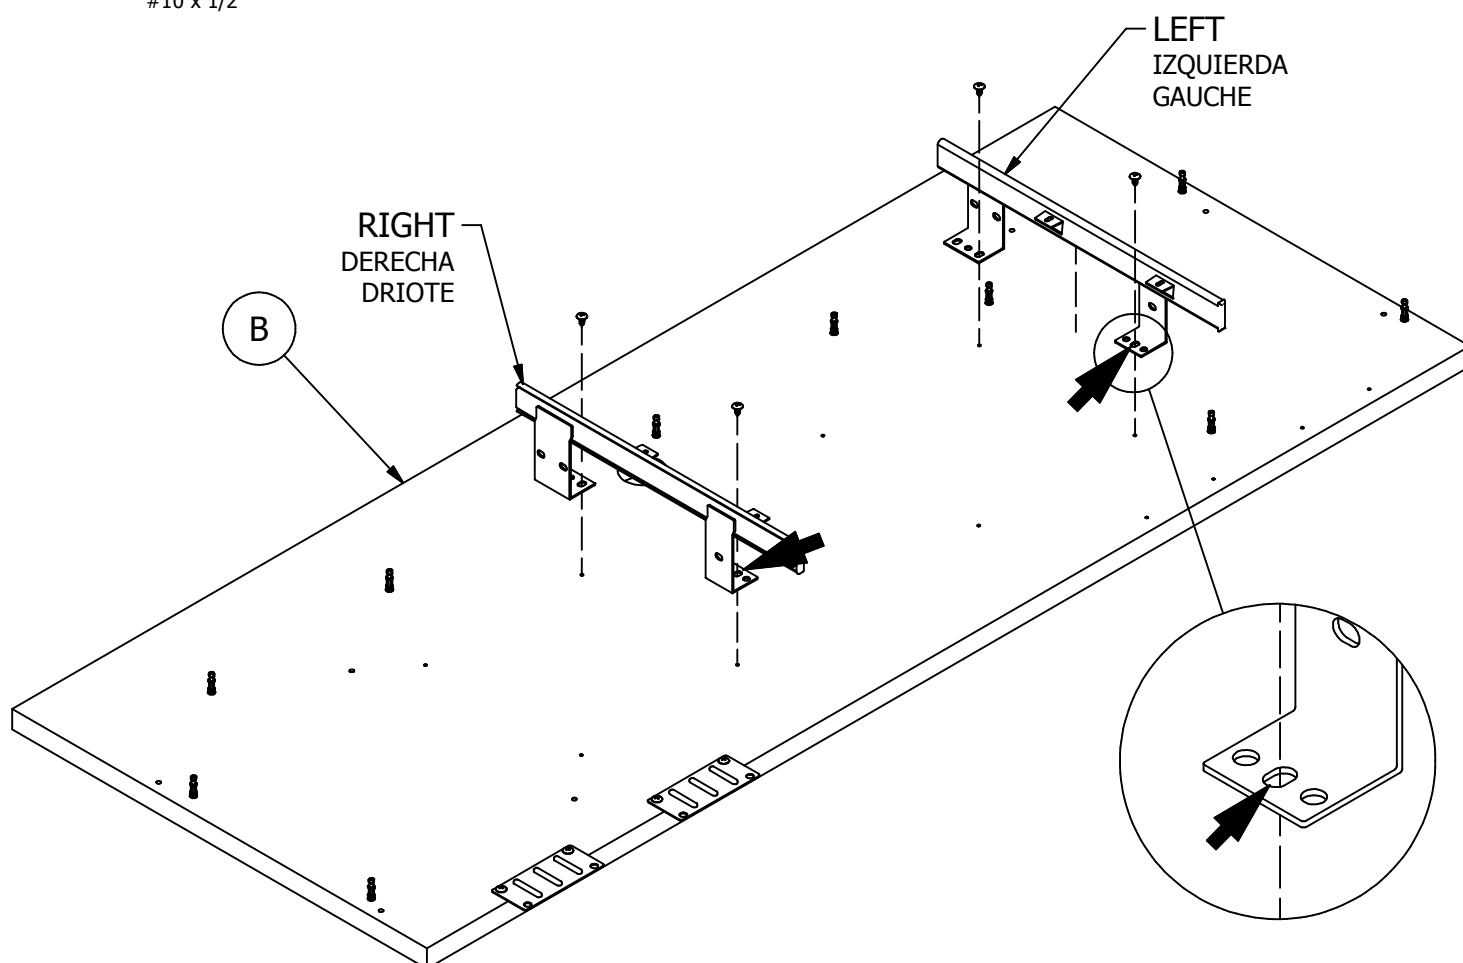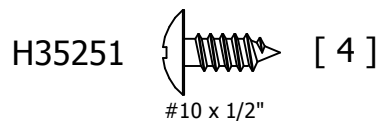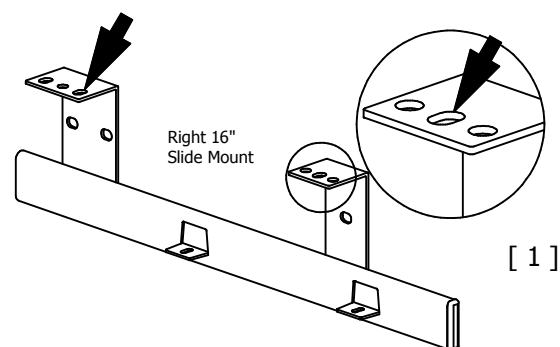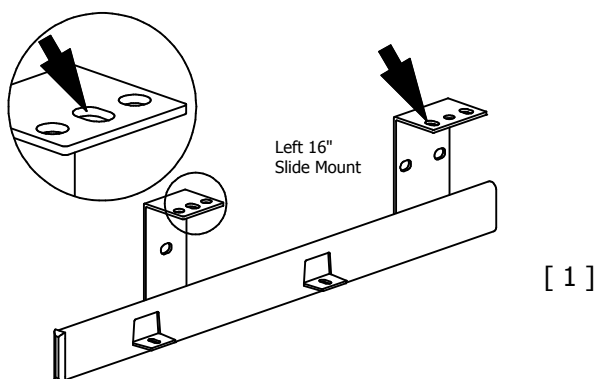

# STEP 23

## Assemble Work Surface


A187451G

Scan QR Code to  
Watch Video on:




How to Tighten  
KD Cams

H71659

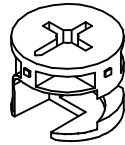



KD Cam

[ 10 ]




Cover Cap

[ 10 ]

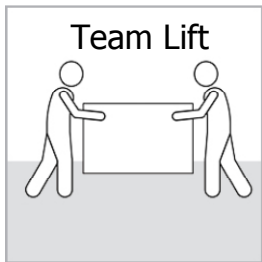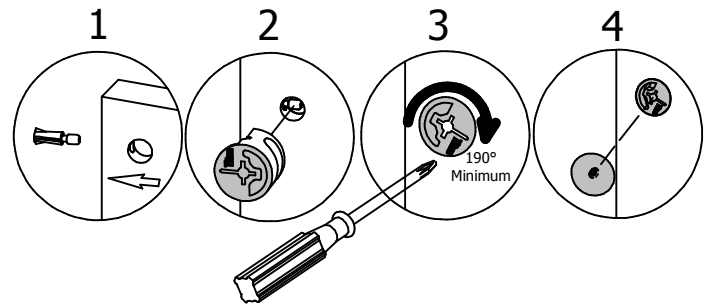

Team Lift

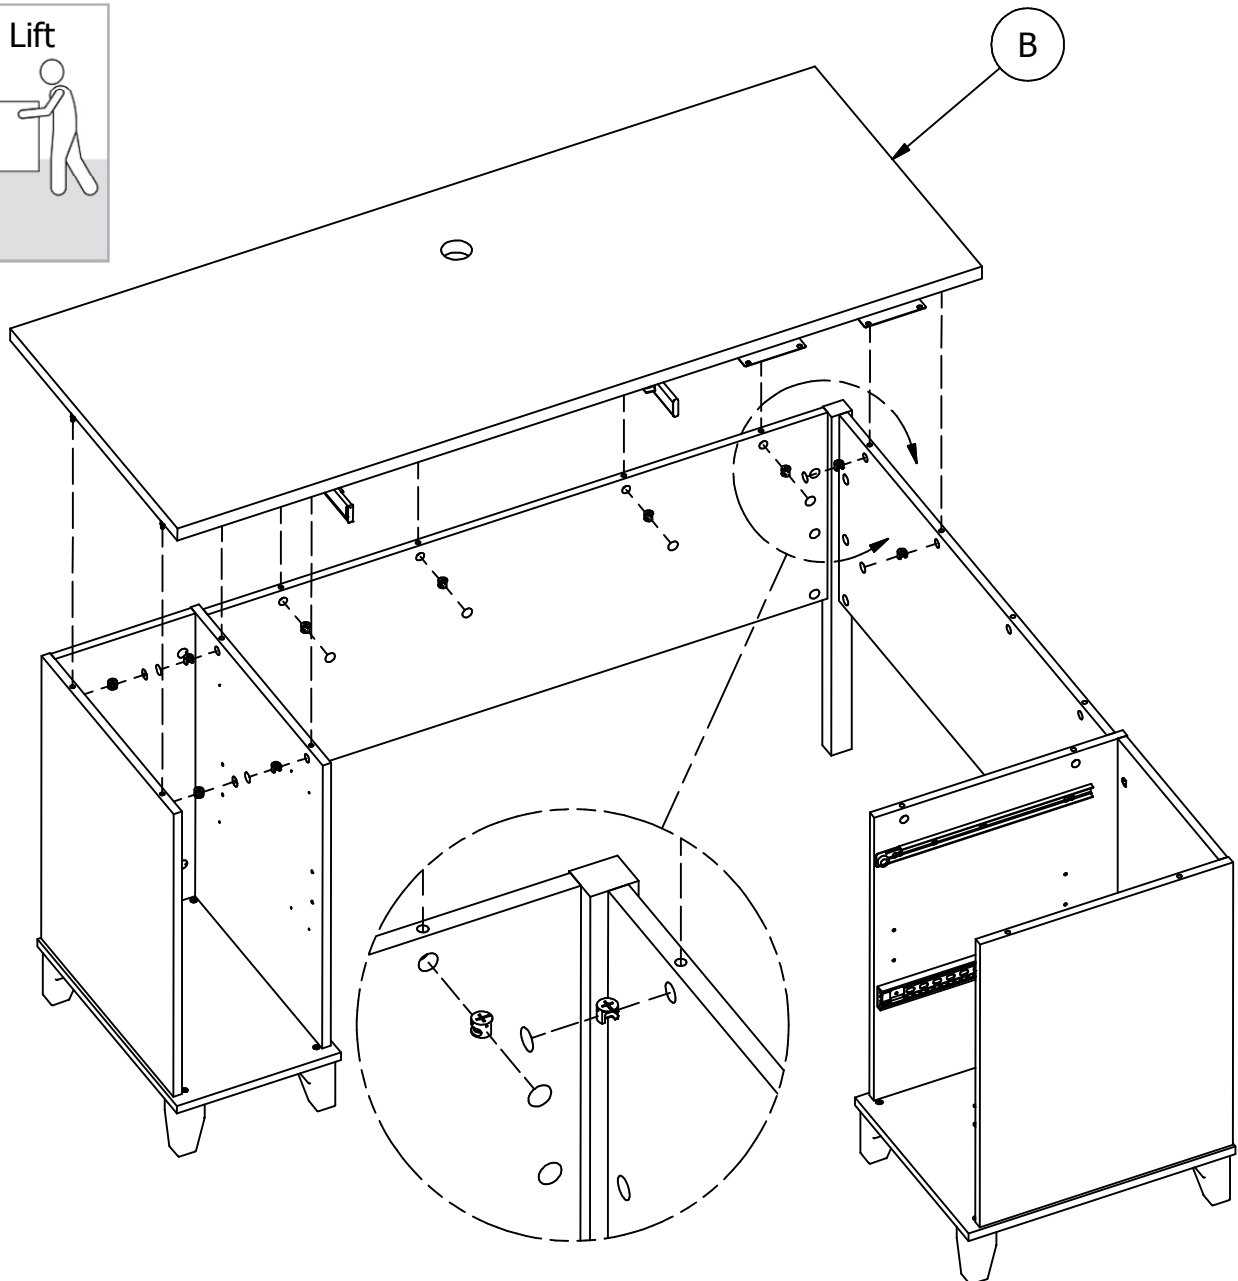


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

## STEP 24



## Prepare Work Surface

A187451G

H72988 [ 6 ]



KD Bolt

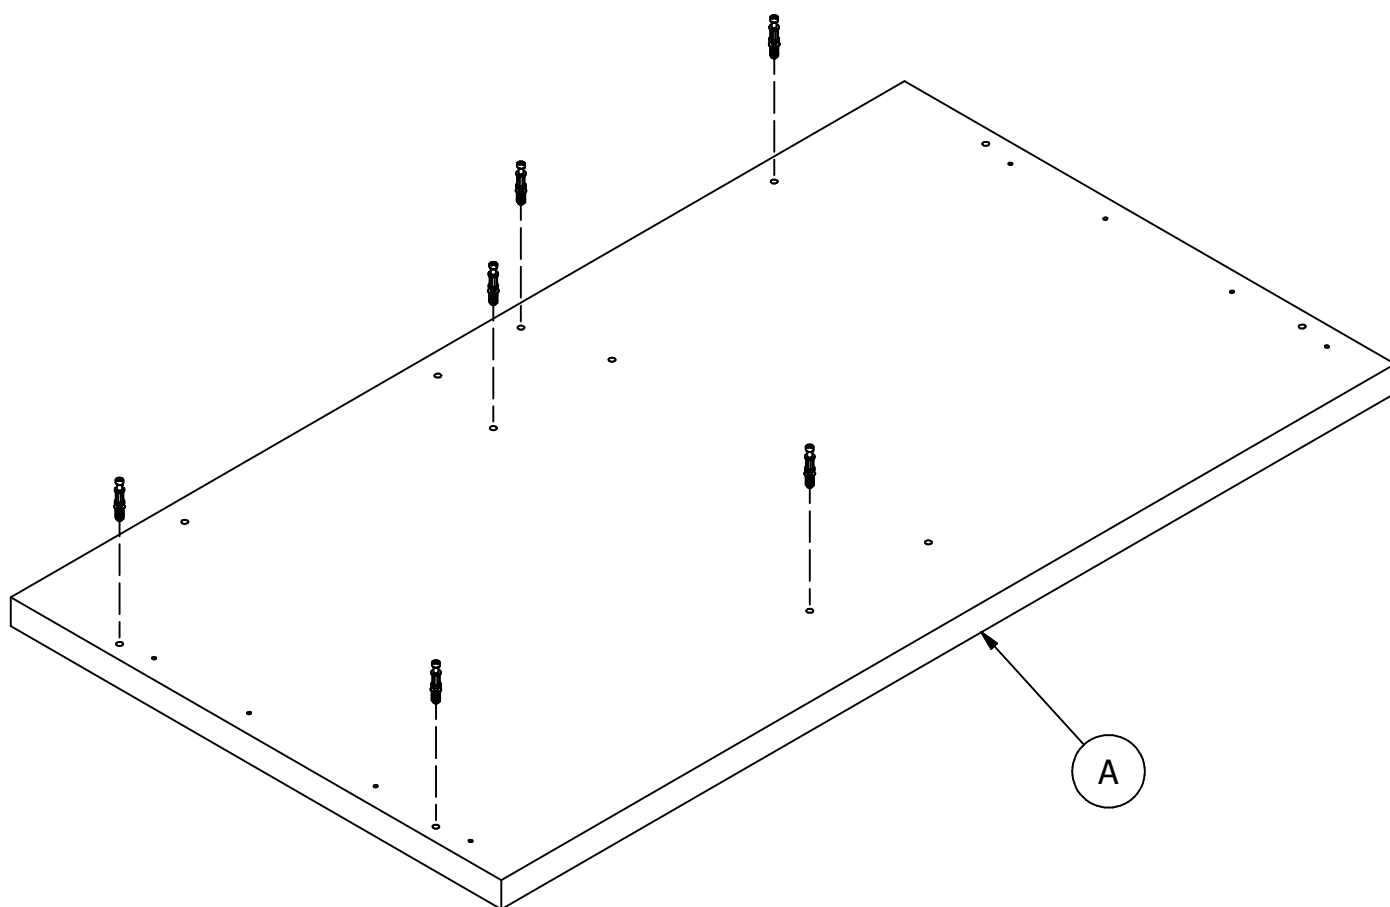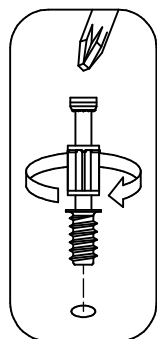


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.




Scan QR Code to  
Watch Video on:



How to Tighten  
KD Cams

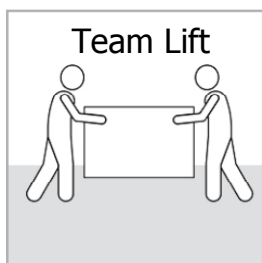


H71659

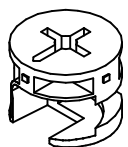

KD Cam


[ 6 ]

H35251





#10 x 1/2"

[ 4 ]



Cover Cap

[ 2 ]

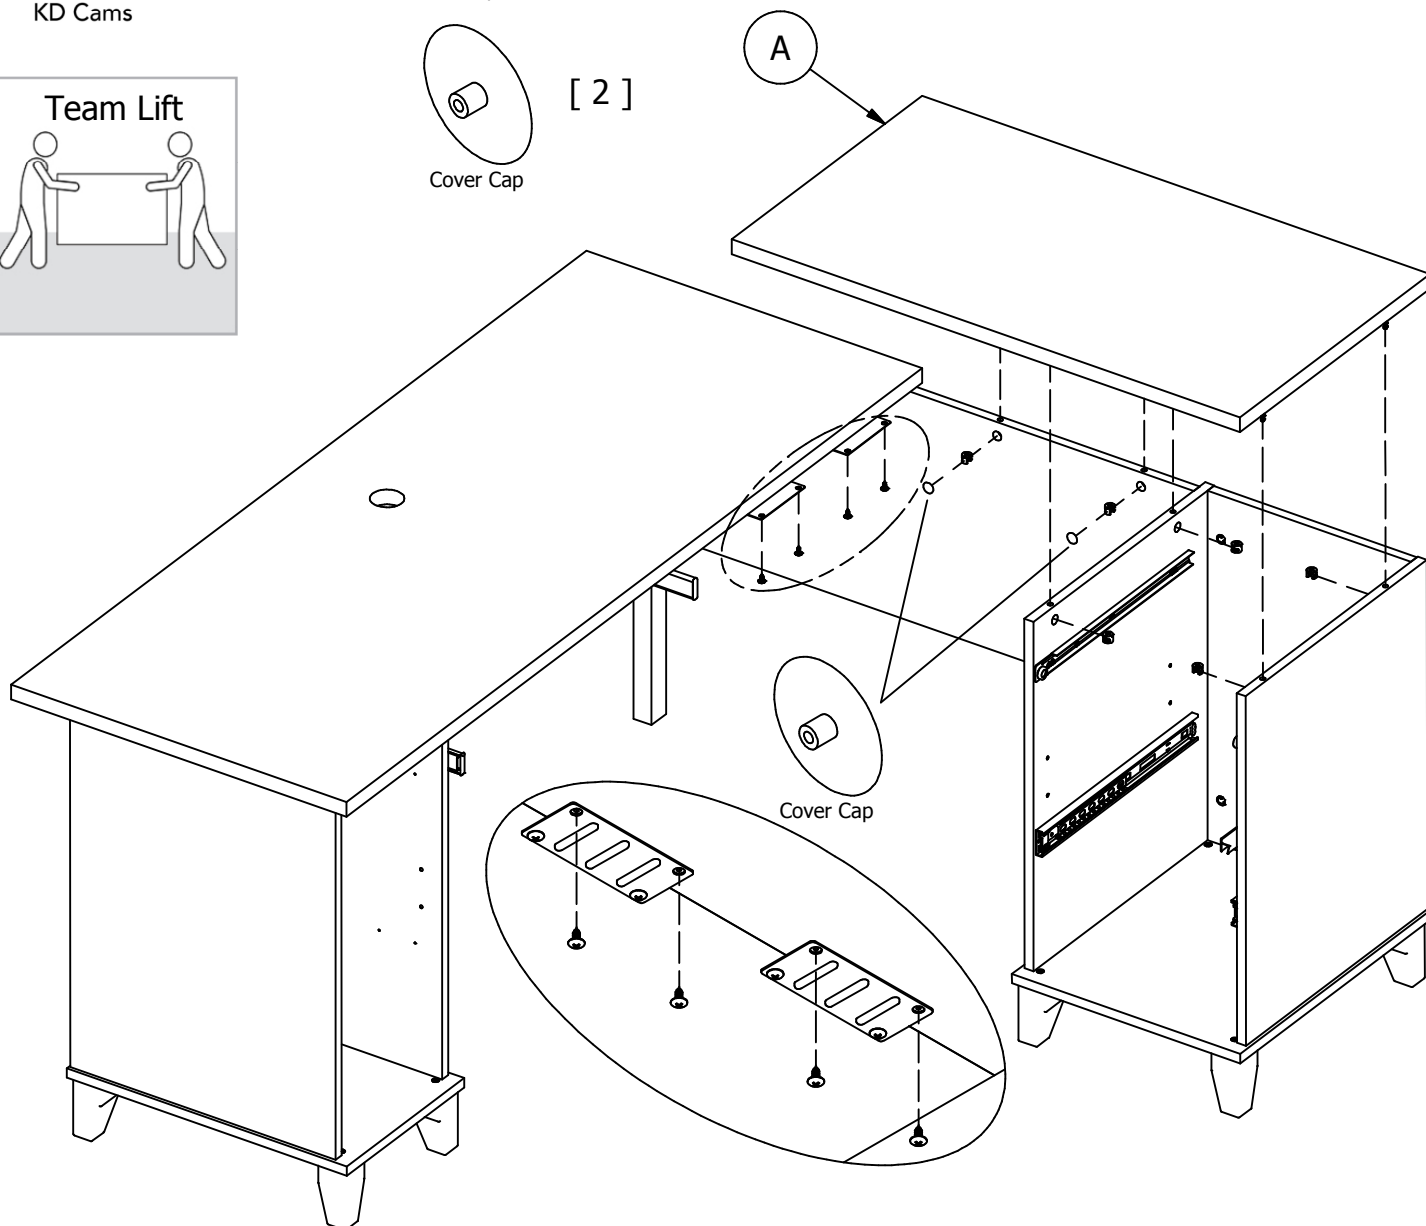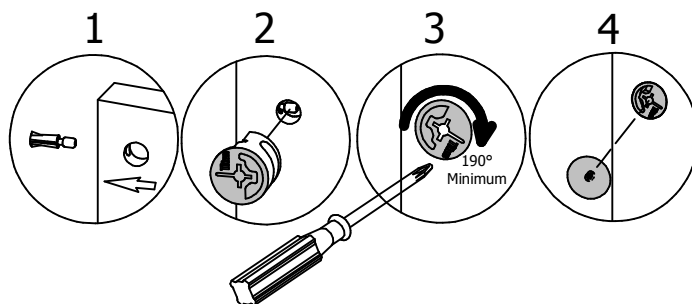

**Go to Step 43 to finish Assembly.**

Vaya al paso 43 para terminar el ensamblaje.

Passez à l'étape 43 pour terminer l'assemblage.


Have an assembly question or need a replacement part? Just call


**1-800-950-4782**, we are here to help.




# STEP 26

## Prepare Cabinet Sides

A187451G

H72988  [ 7 ]  
KD Bolt

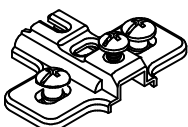H126364  [ 2 ]  
Mounting Plate

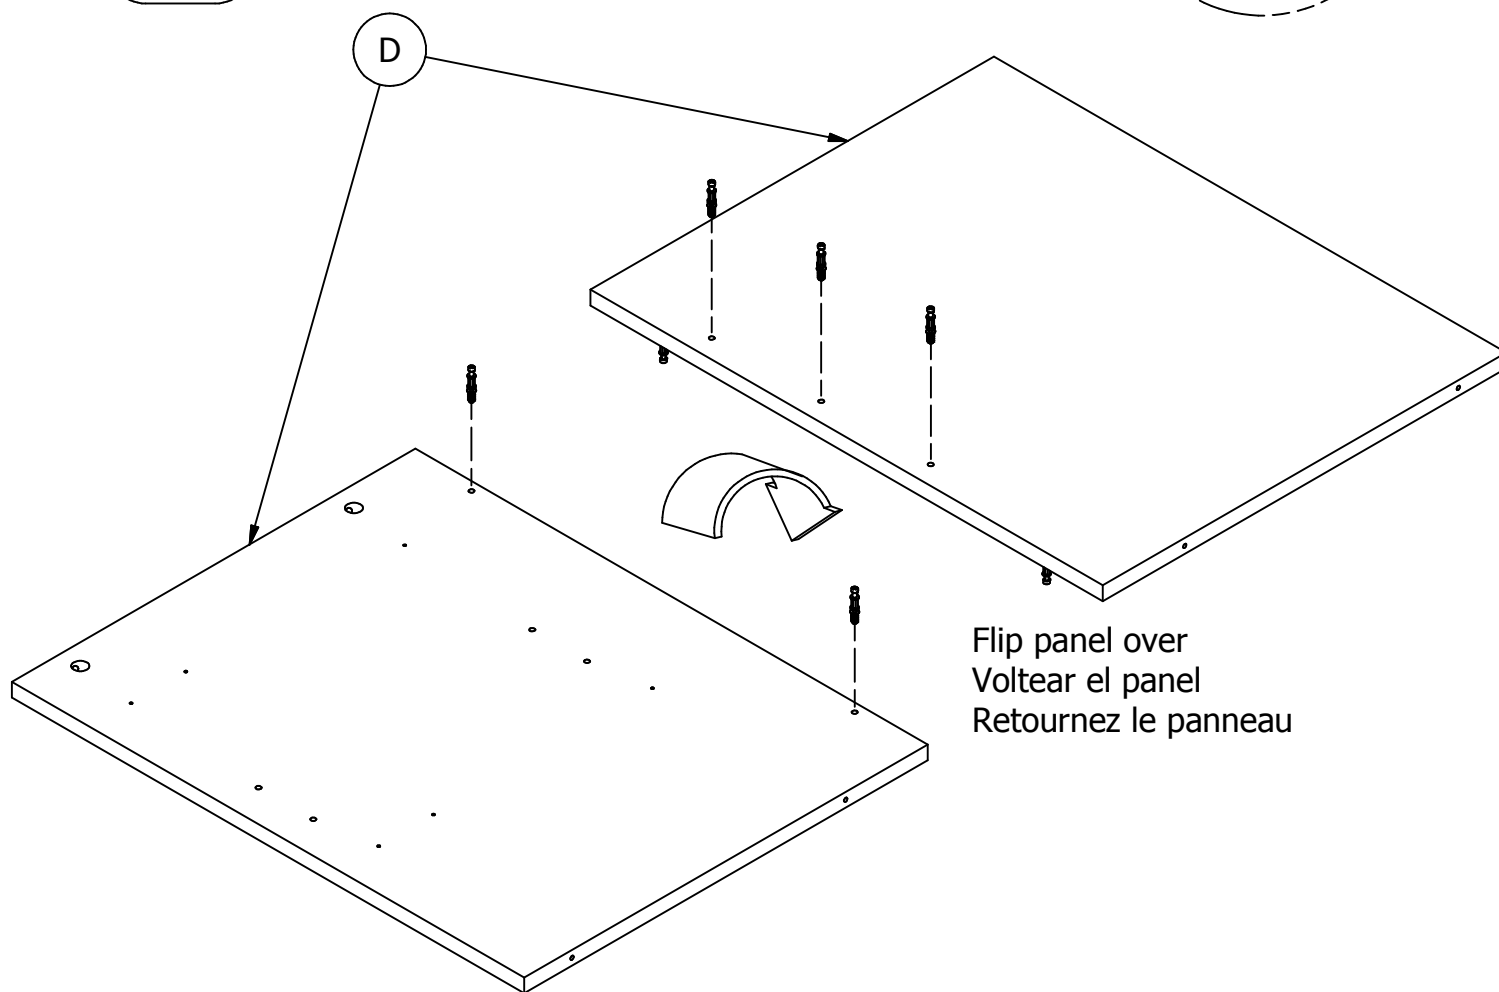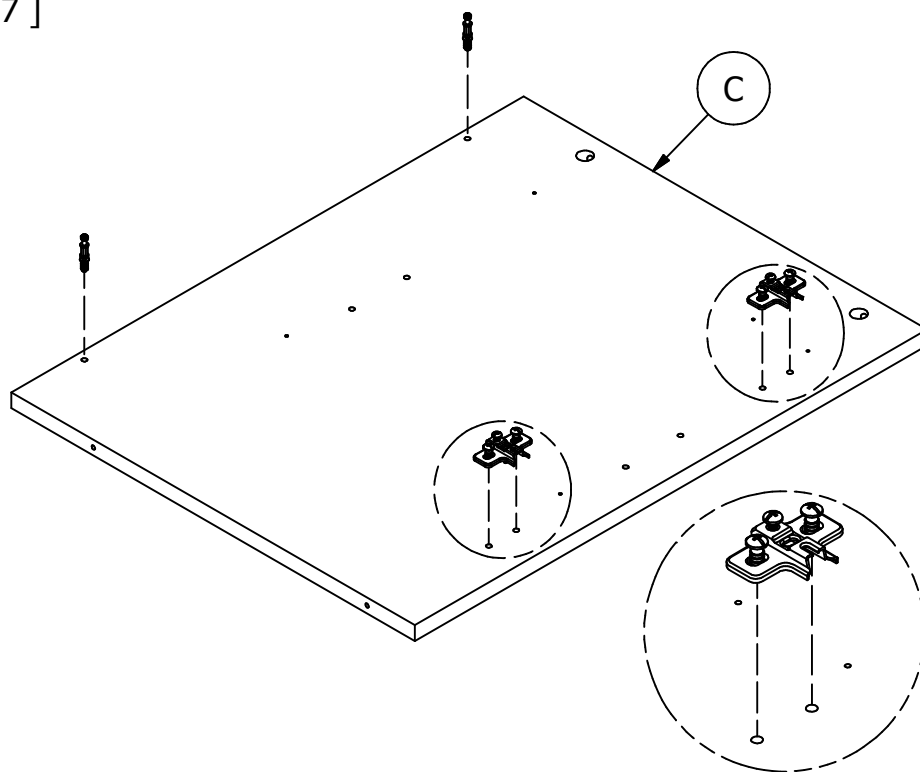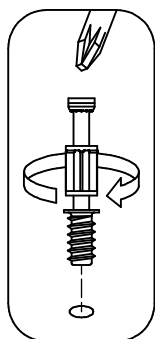

Flip panel over  
Voltear el panel  
Retournez le panneau


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:




How to Tighten  
KD Cams

H71659

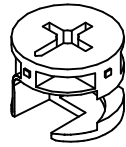



KD Cam

[ 4 ]




Cover Cap

[ 4 ]

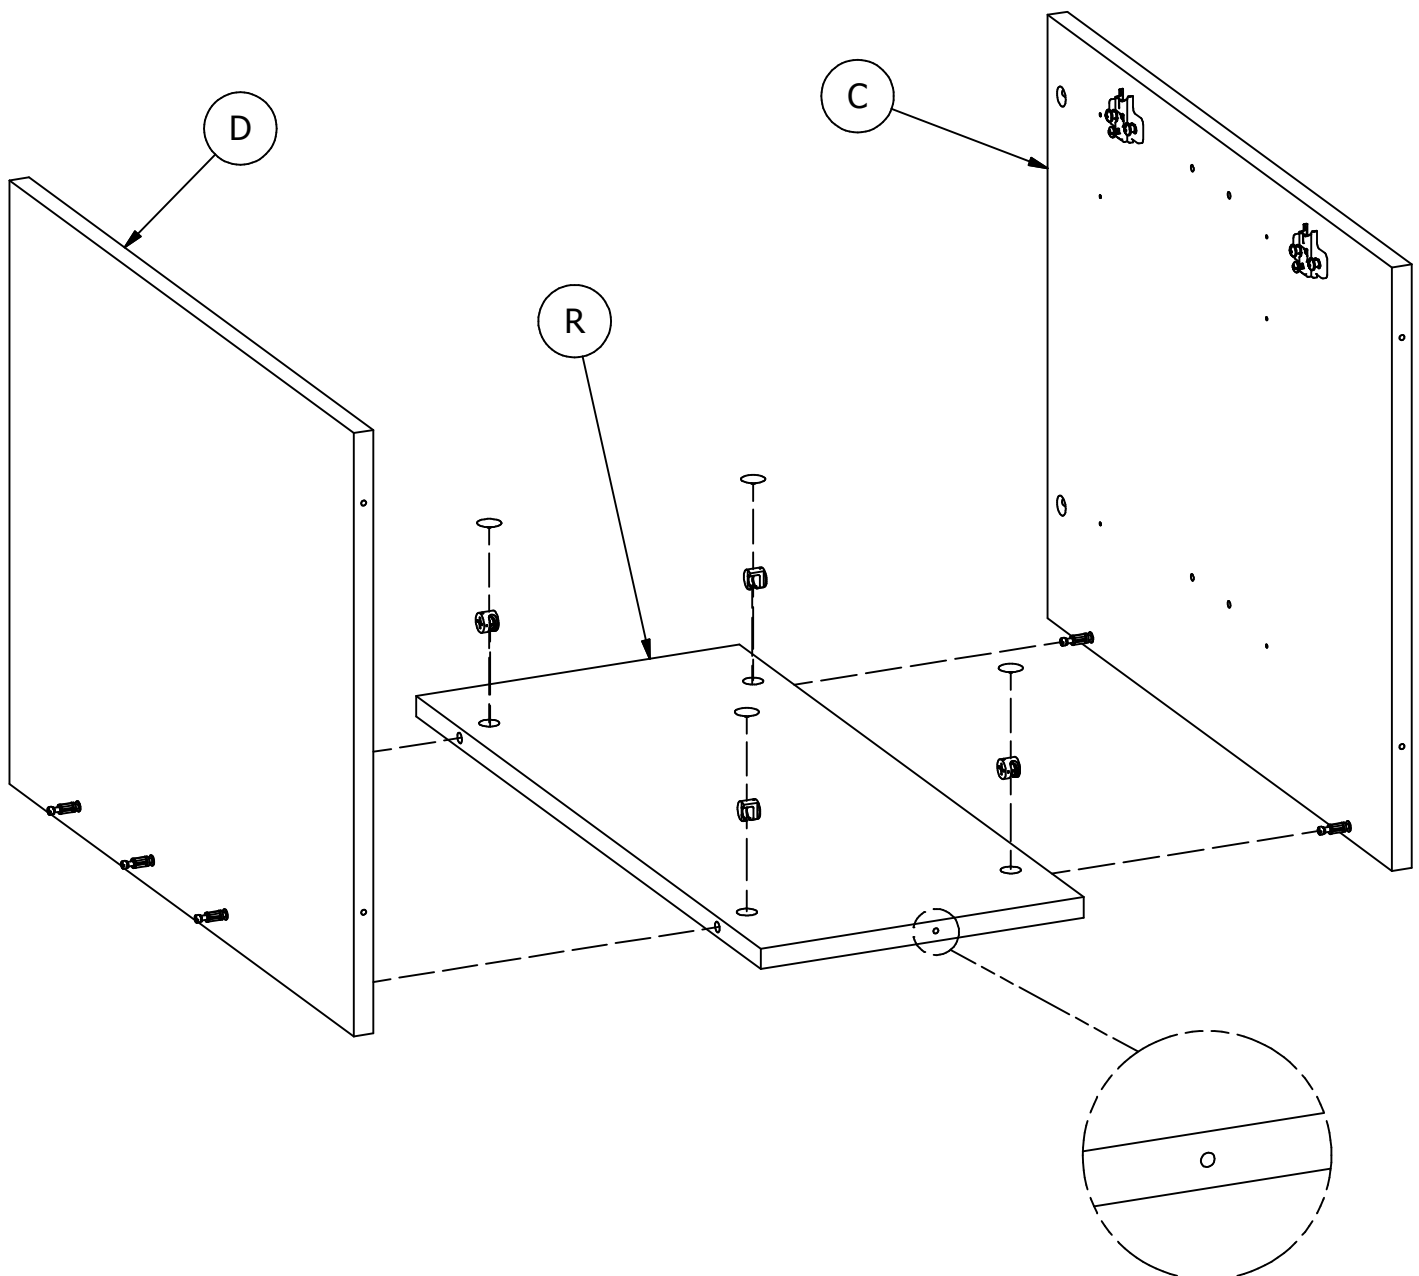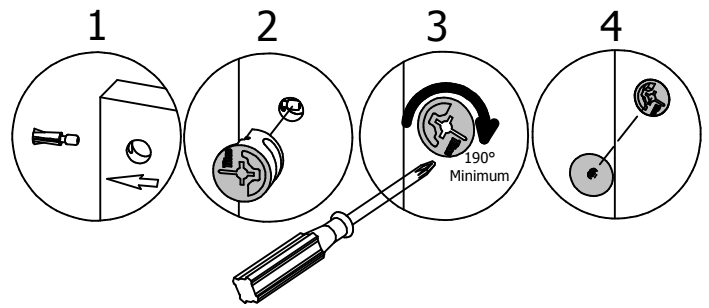


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

H143460




[ 4 ]


H35251

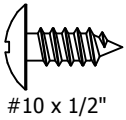


[ 8 ]

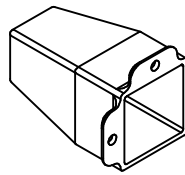

[ 4 ]

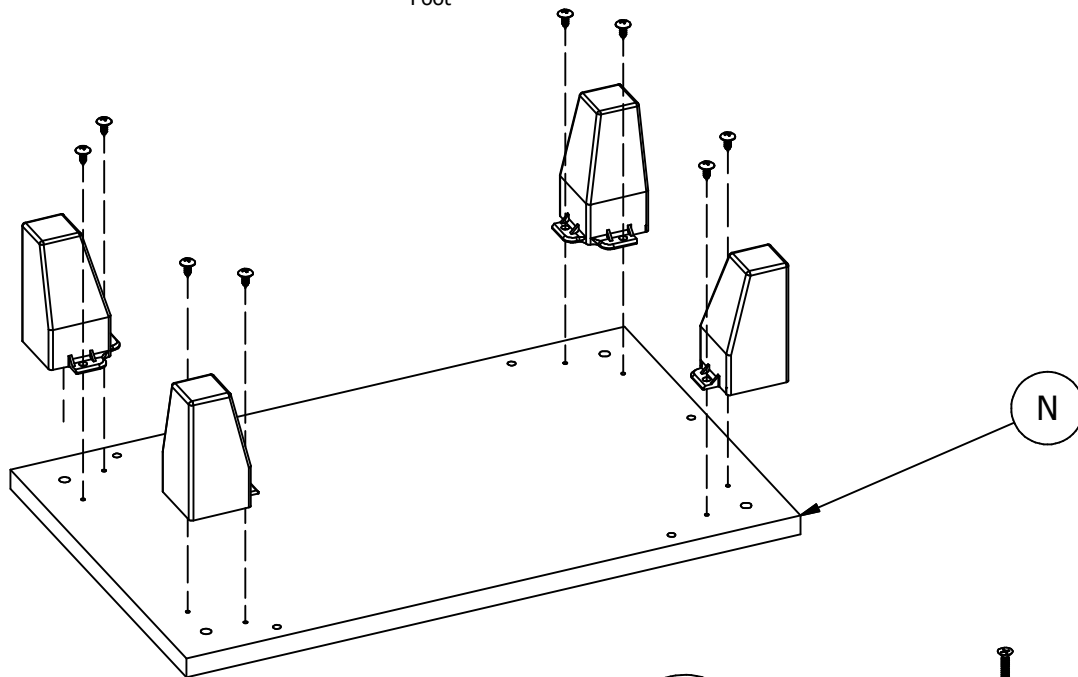


Flip panel over  
Voltear el panel  
Retournez le panneau

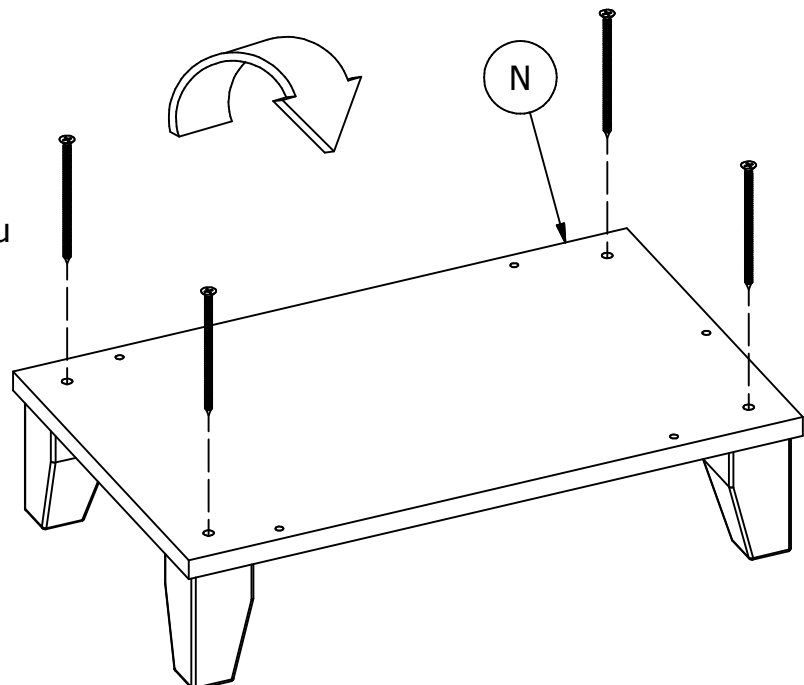


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

H23491



[ 5 ]

#10 x 2"

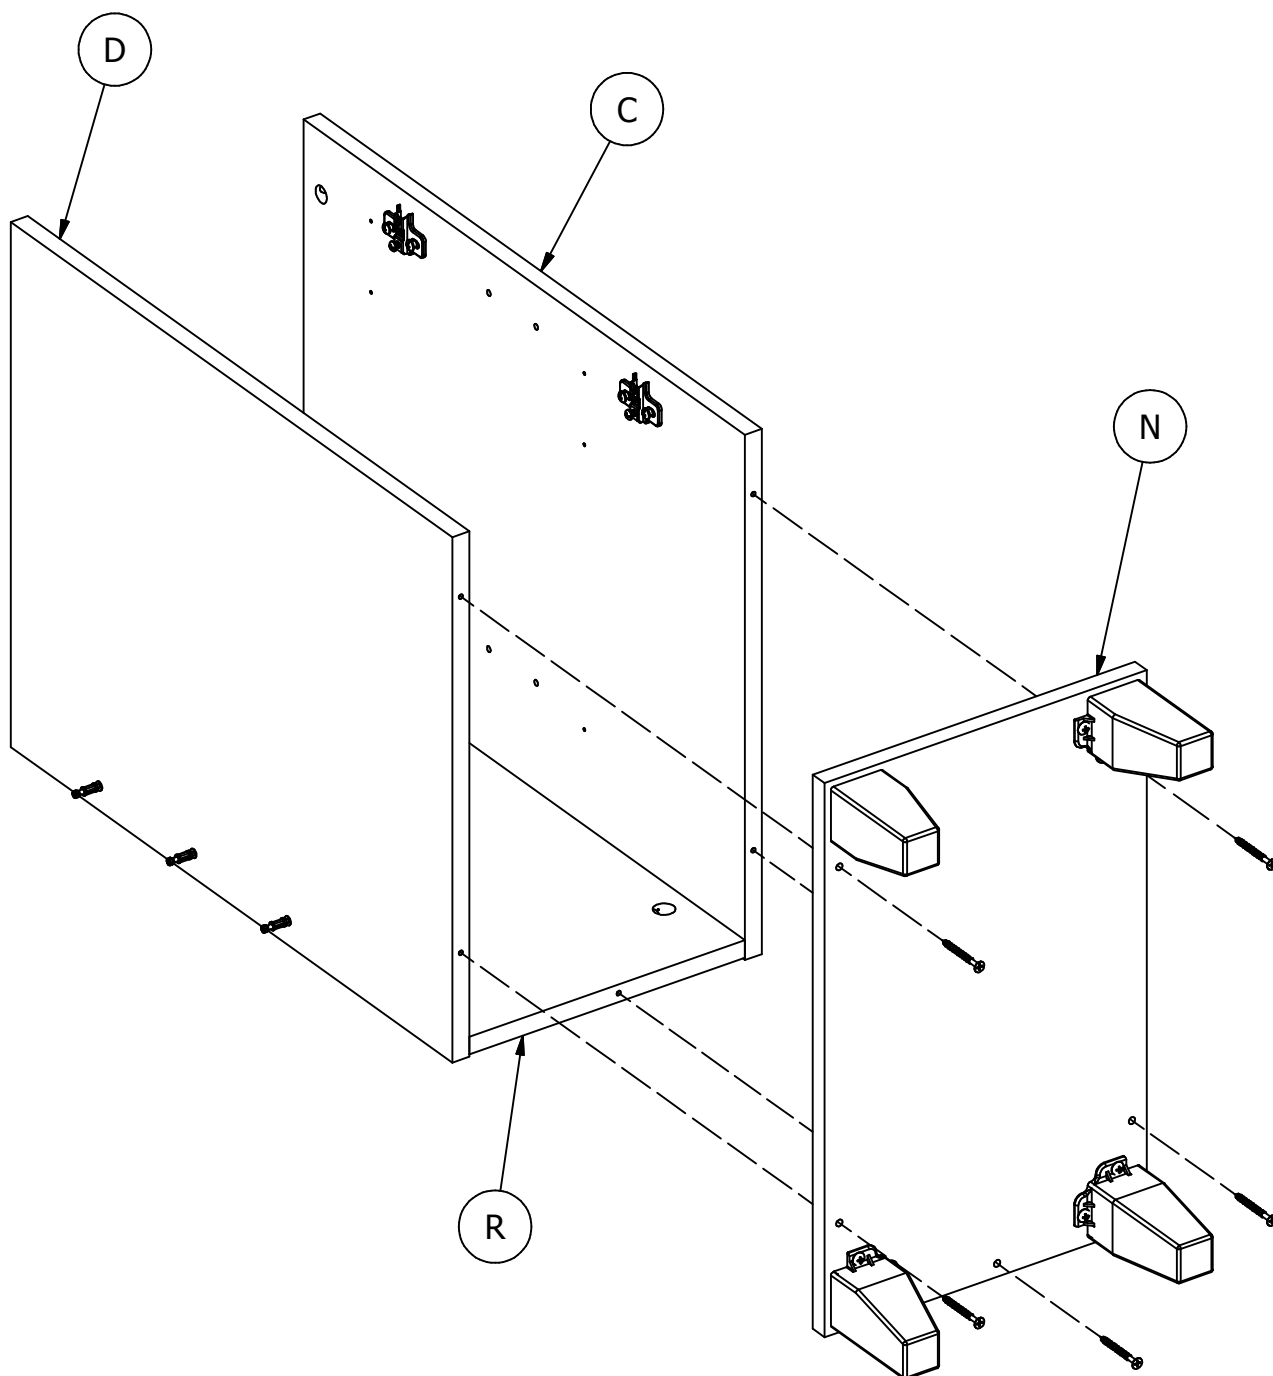

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 30


## Prepare Cabinet Sides


A187451G



Scan QR Code to  
Watch Video on:




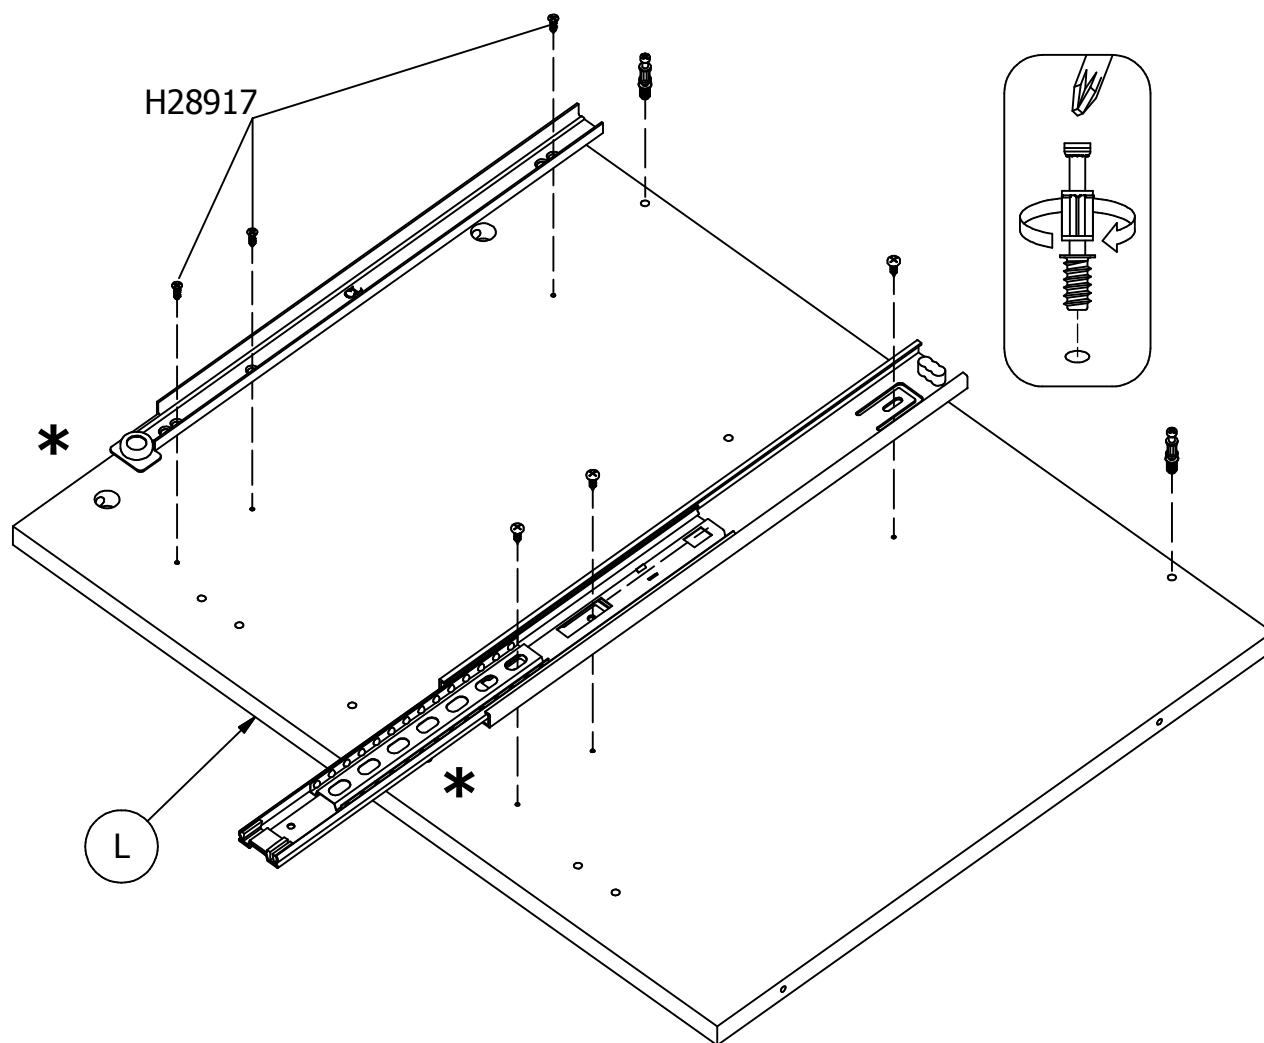
How to Separate  
and Install Drawer  
Slides

H28917  [ 3 ]  
#6 x 1/2" Silver

H101725  [ 3 ]  
#6 x 1/2"

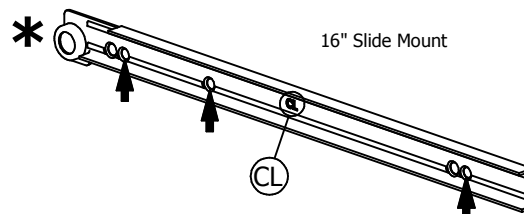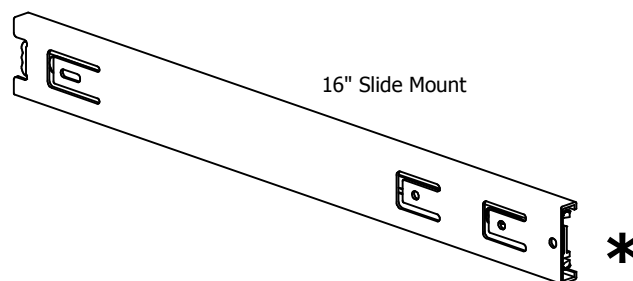

H72988  [ 2 ]  
KD Bolt



Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 31


## Prepare Cabinet Sides


A187451G


Scan QR Code to  
Watch Video on:





How to Separate  
and Install Drawer  
Slides

H28917  [ 3 ]  
#6 x 1/2" Silver

H101725  [ 3 ]  
#6 x 1/2"

H72988  [ 5 ]  
KD Bolt

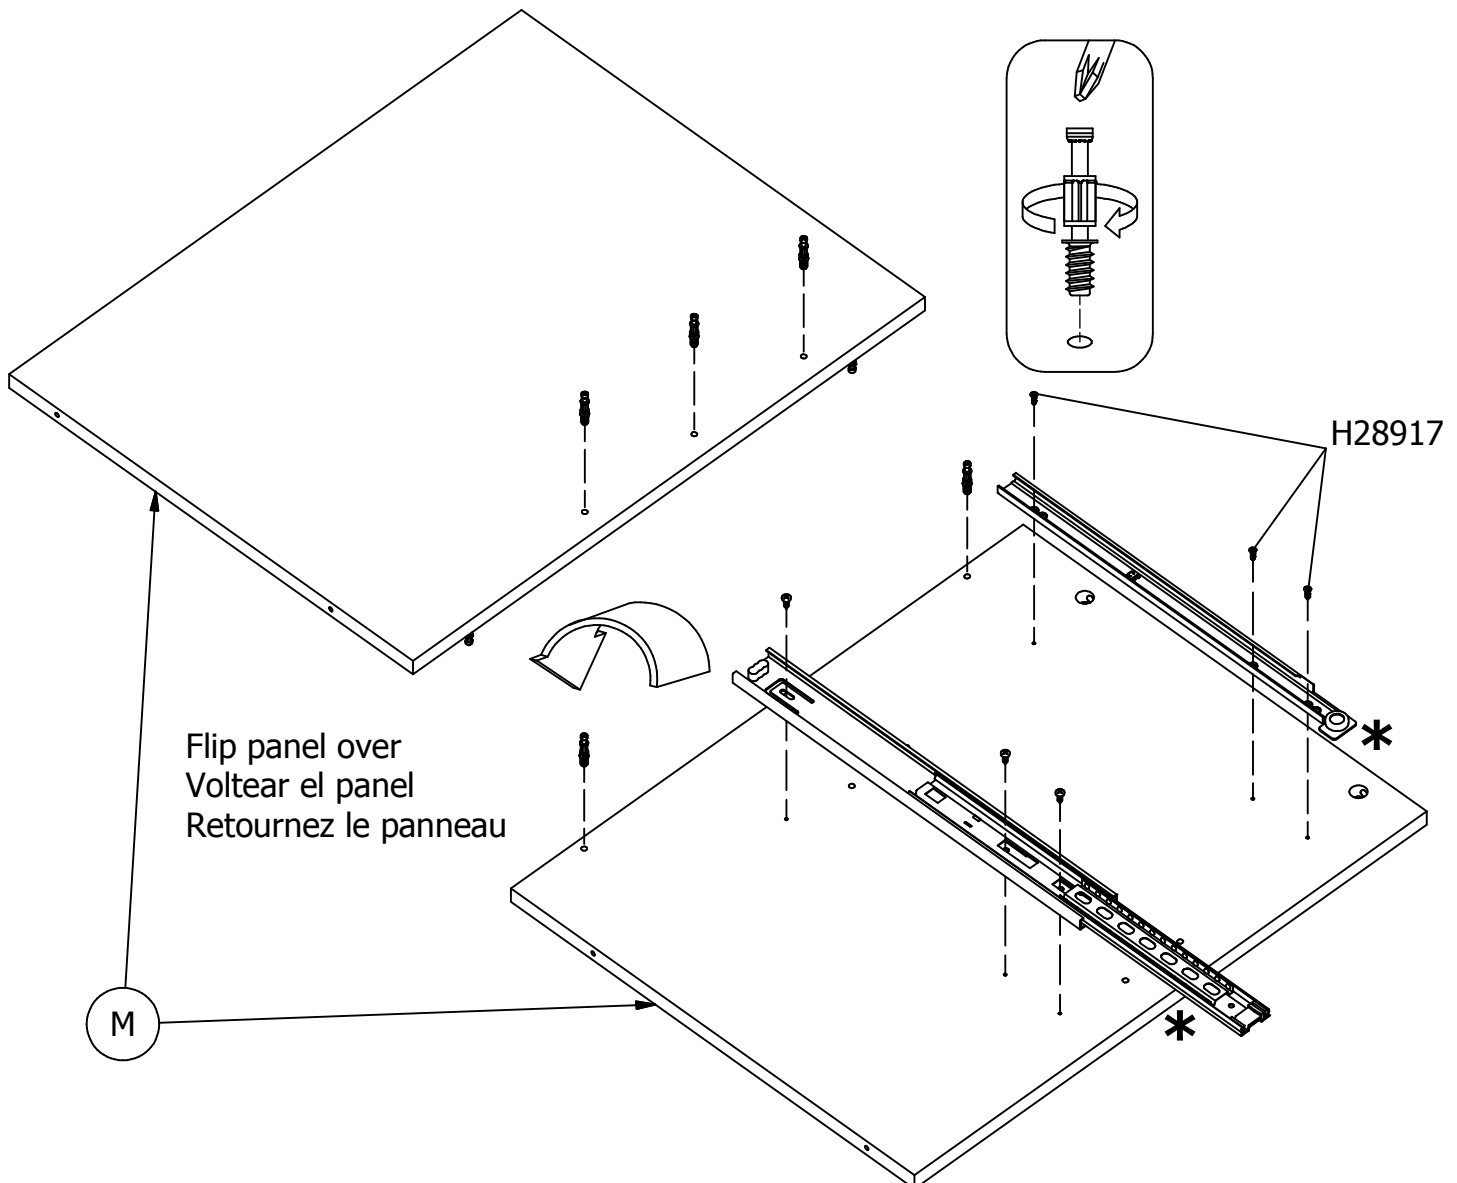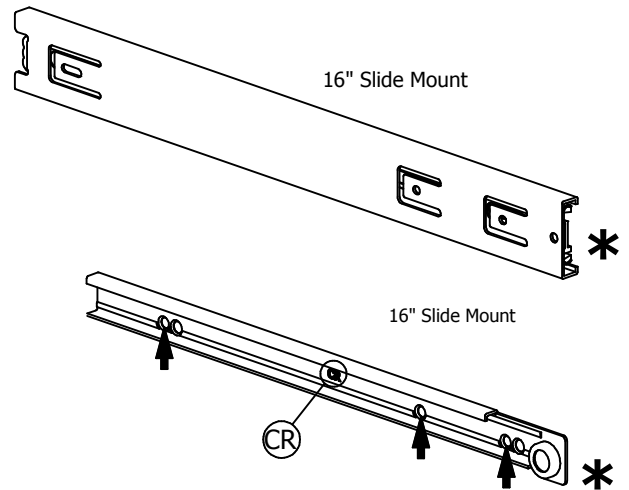

Flip panel over  
Voltear el panel  
Retournez le panneau


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:





How to Tighten  
KD Cams

H71659

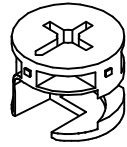

KD Cam


[ 4 ]

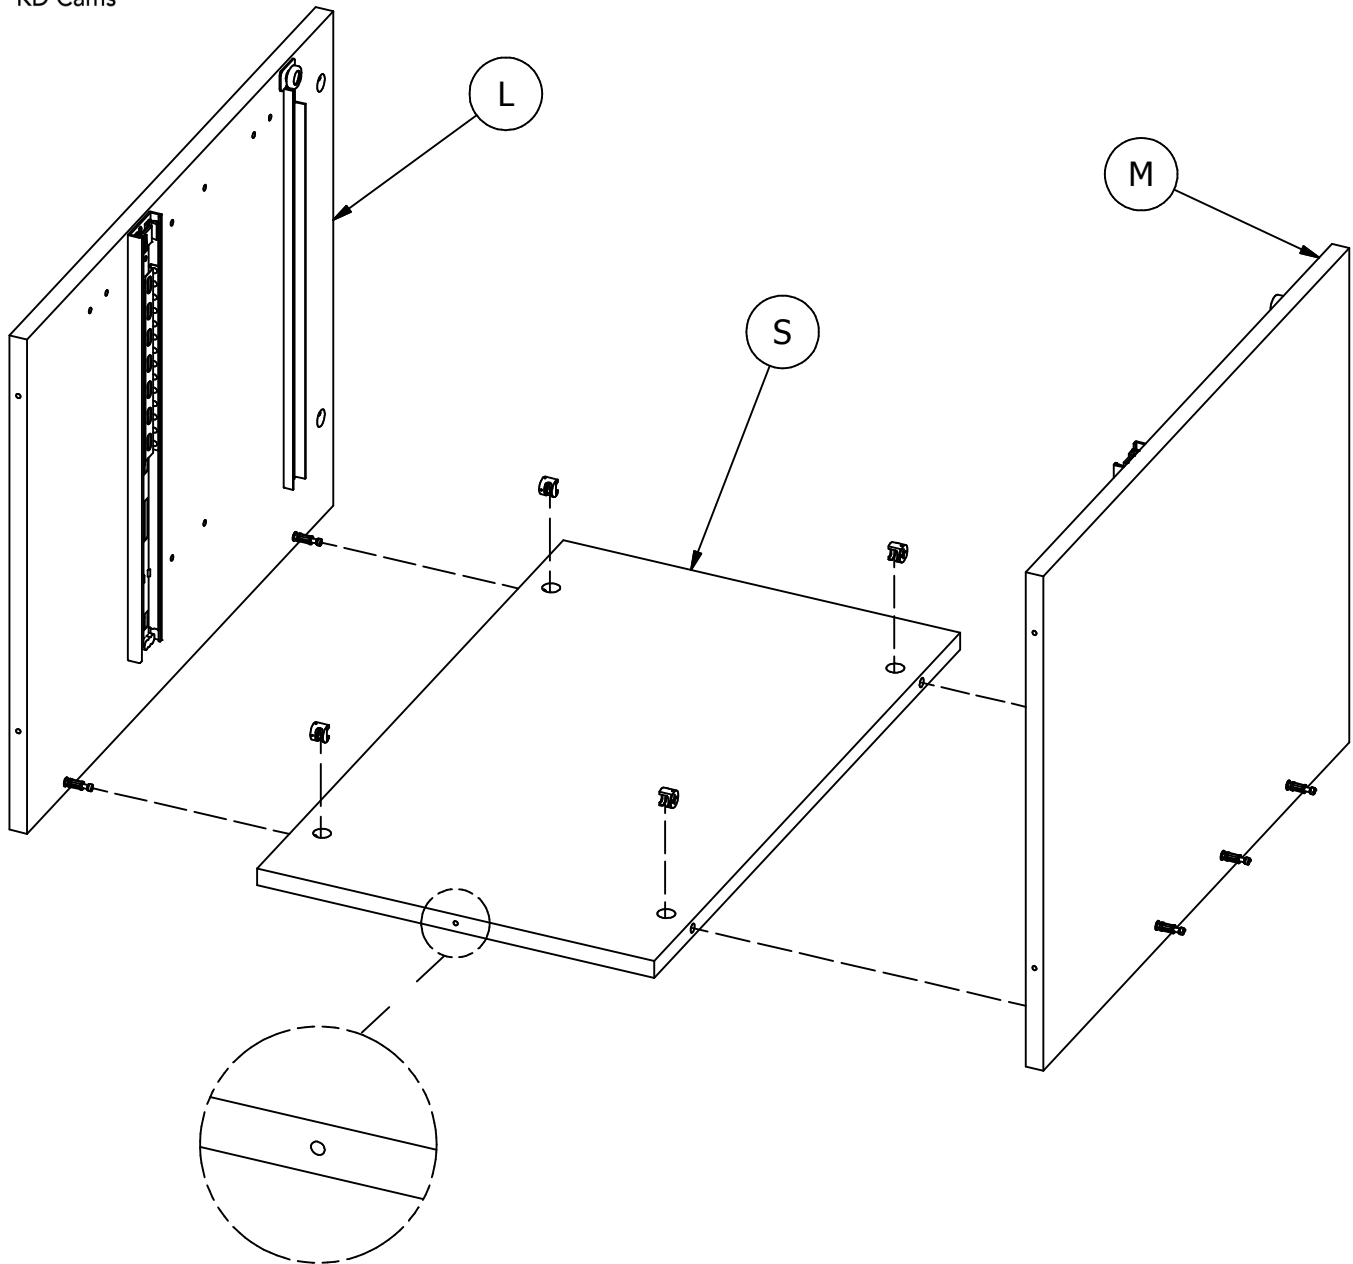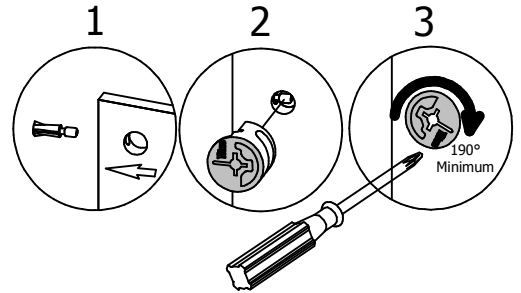

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.




H143460



[ 4 ]


#12 x 4"

H35251




[ 8 ]

#10 x 1/2"

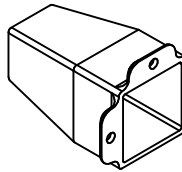


[ 4 ]

Foot

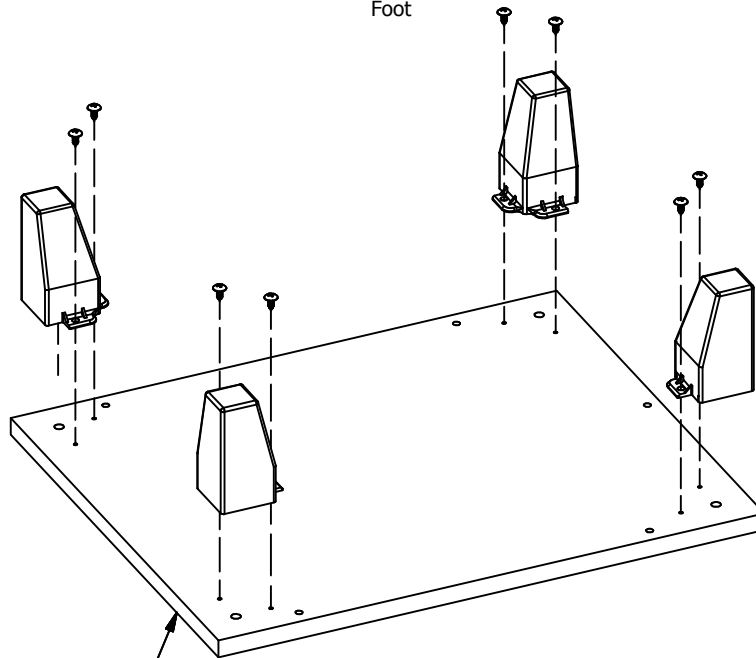


Flip panel over  
Voltear el panel  
Retournez le panneau

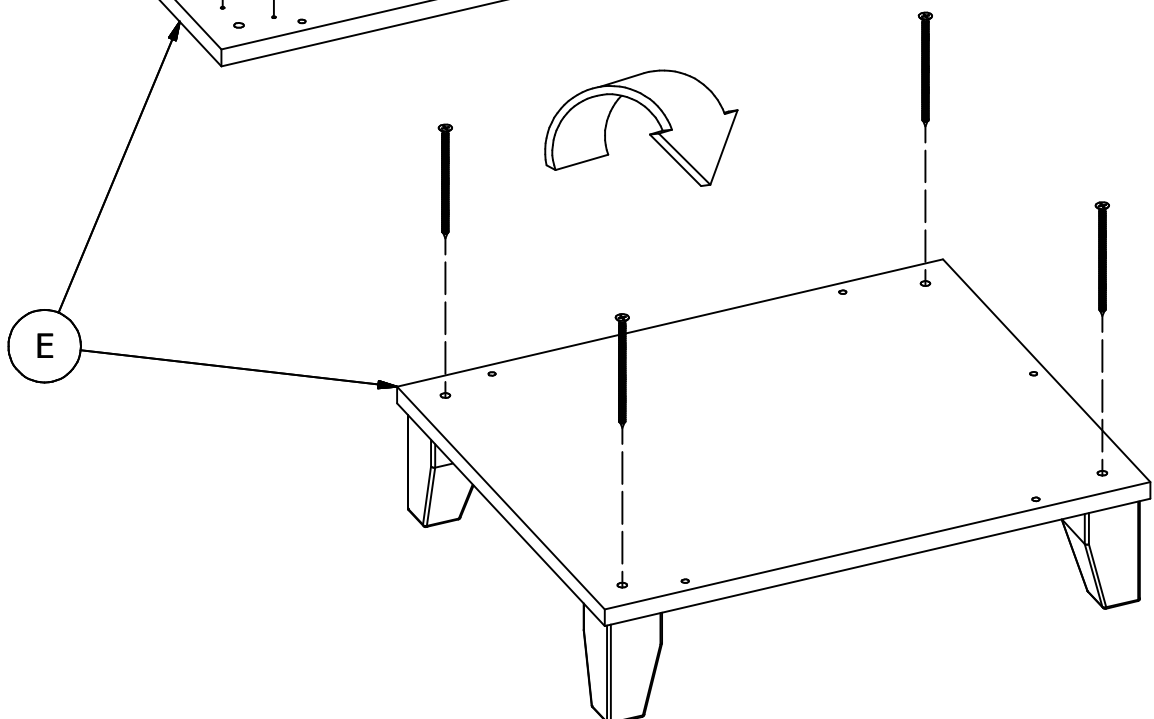


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

H23491



#10 x 2"

[ 5 ]

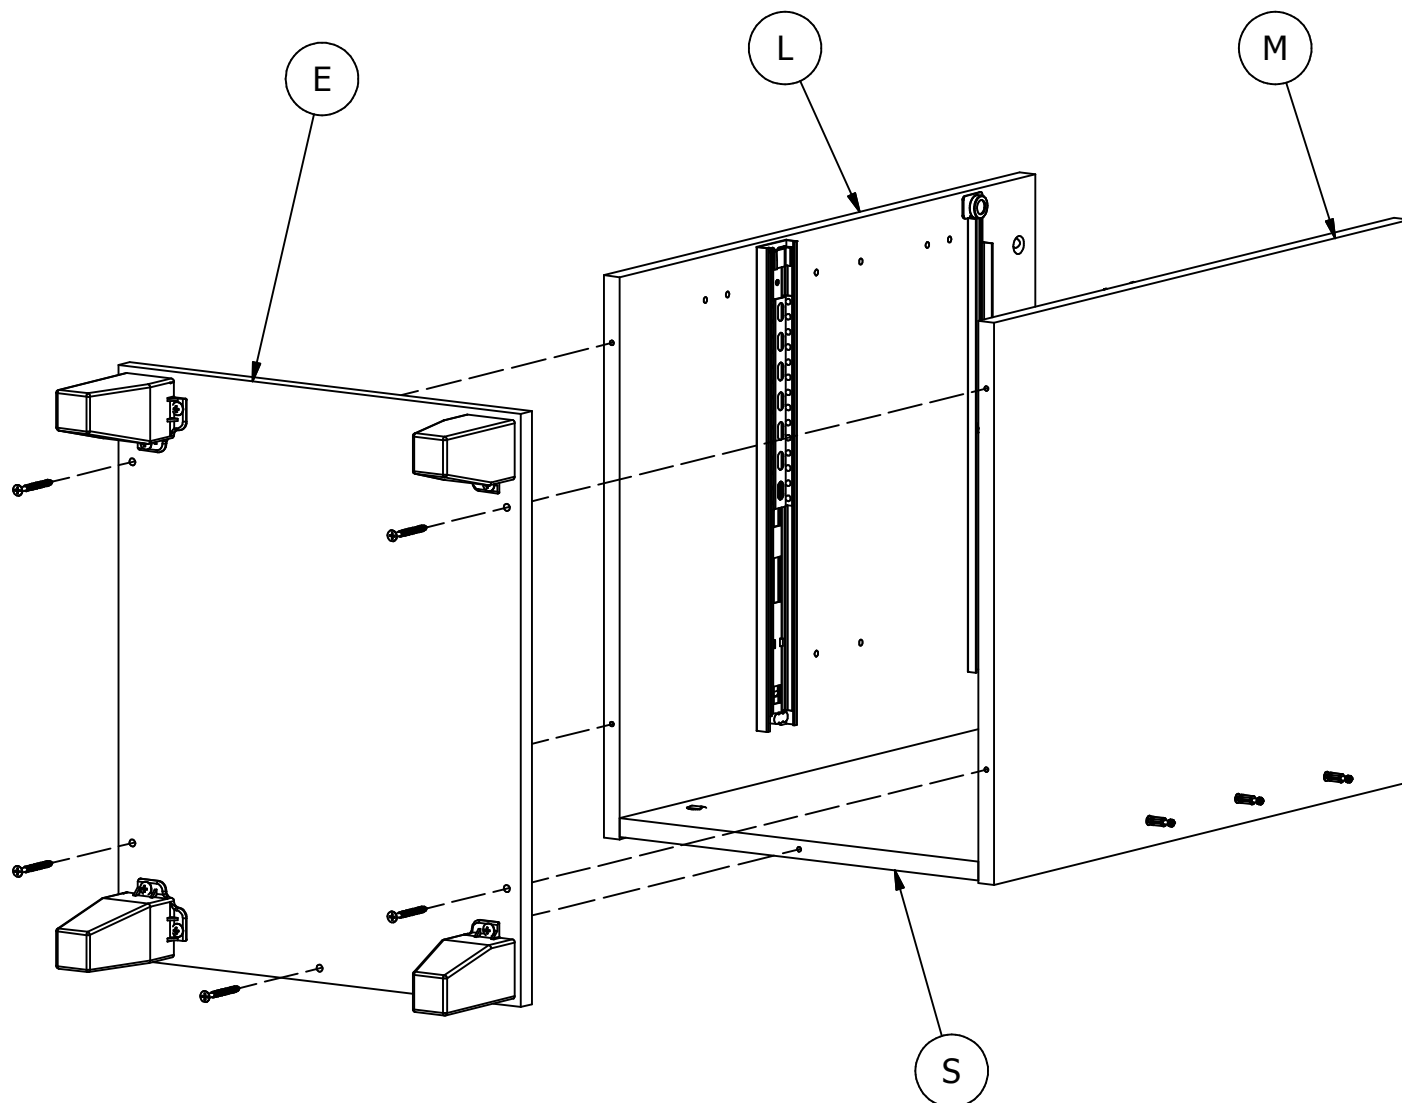


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:




How to Tighten  
KD Cams

H71659

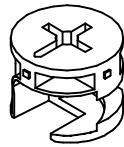



KD Cam

[ 3 ]



Cover Cap

[ 3 ]

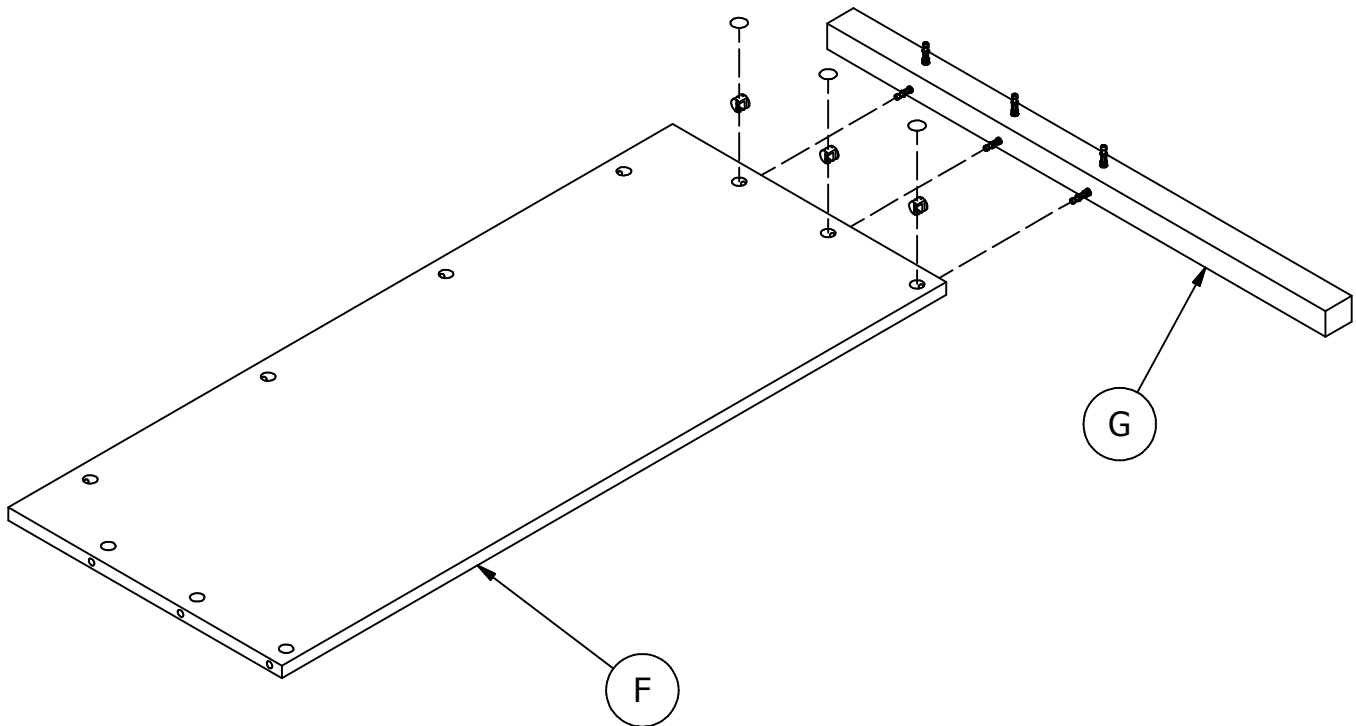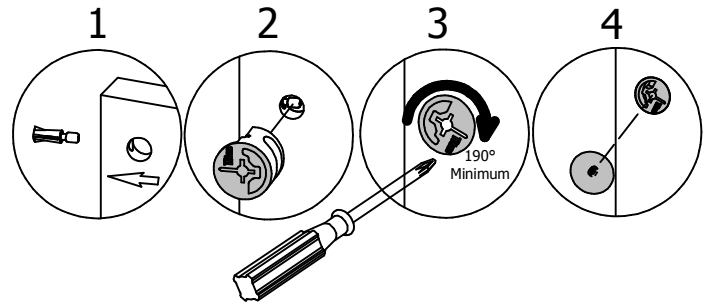

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

## STEP 36





## Assemble Modesty Panel to Cabinet

A187451G

Scan QR Code to  
Watch Video on:



How to Tighten  
KD Cams

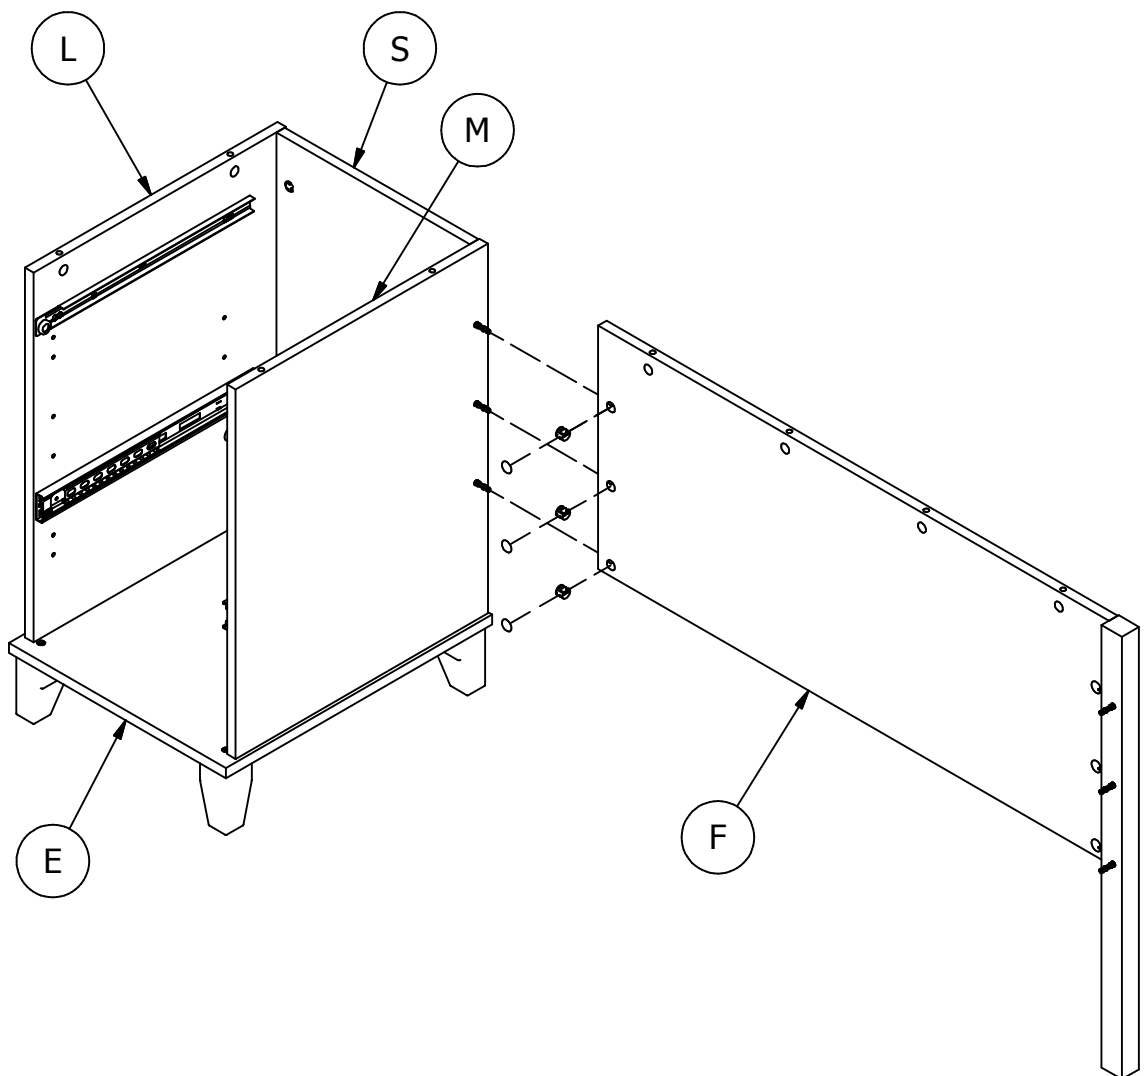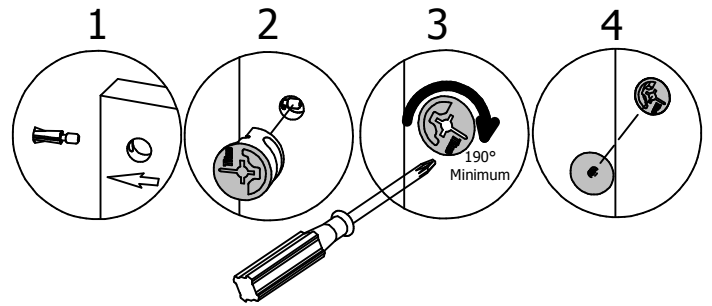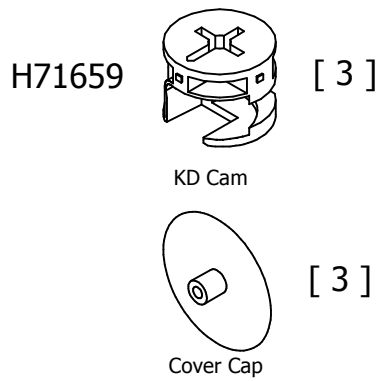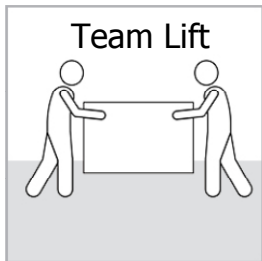

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 37


## Assemble Modesty Panel to Cabinet

A187451G


Scan QR Code to  
Watch Video on:



How to Tighten  
KD Cams

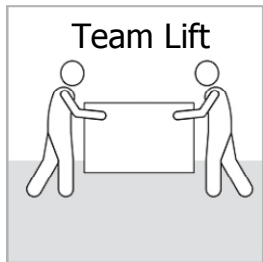


H71659

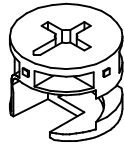



KD Cam

[ 6 ]



Cover Cap

[ 6 ]

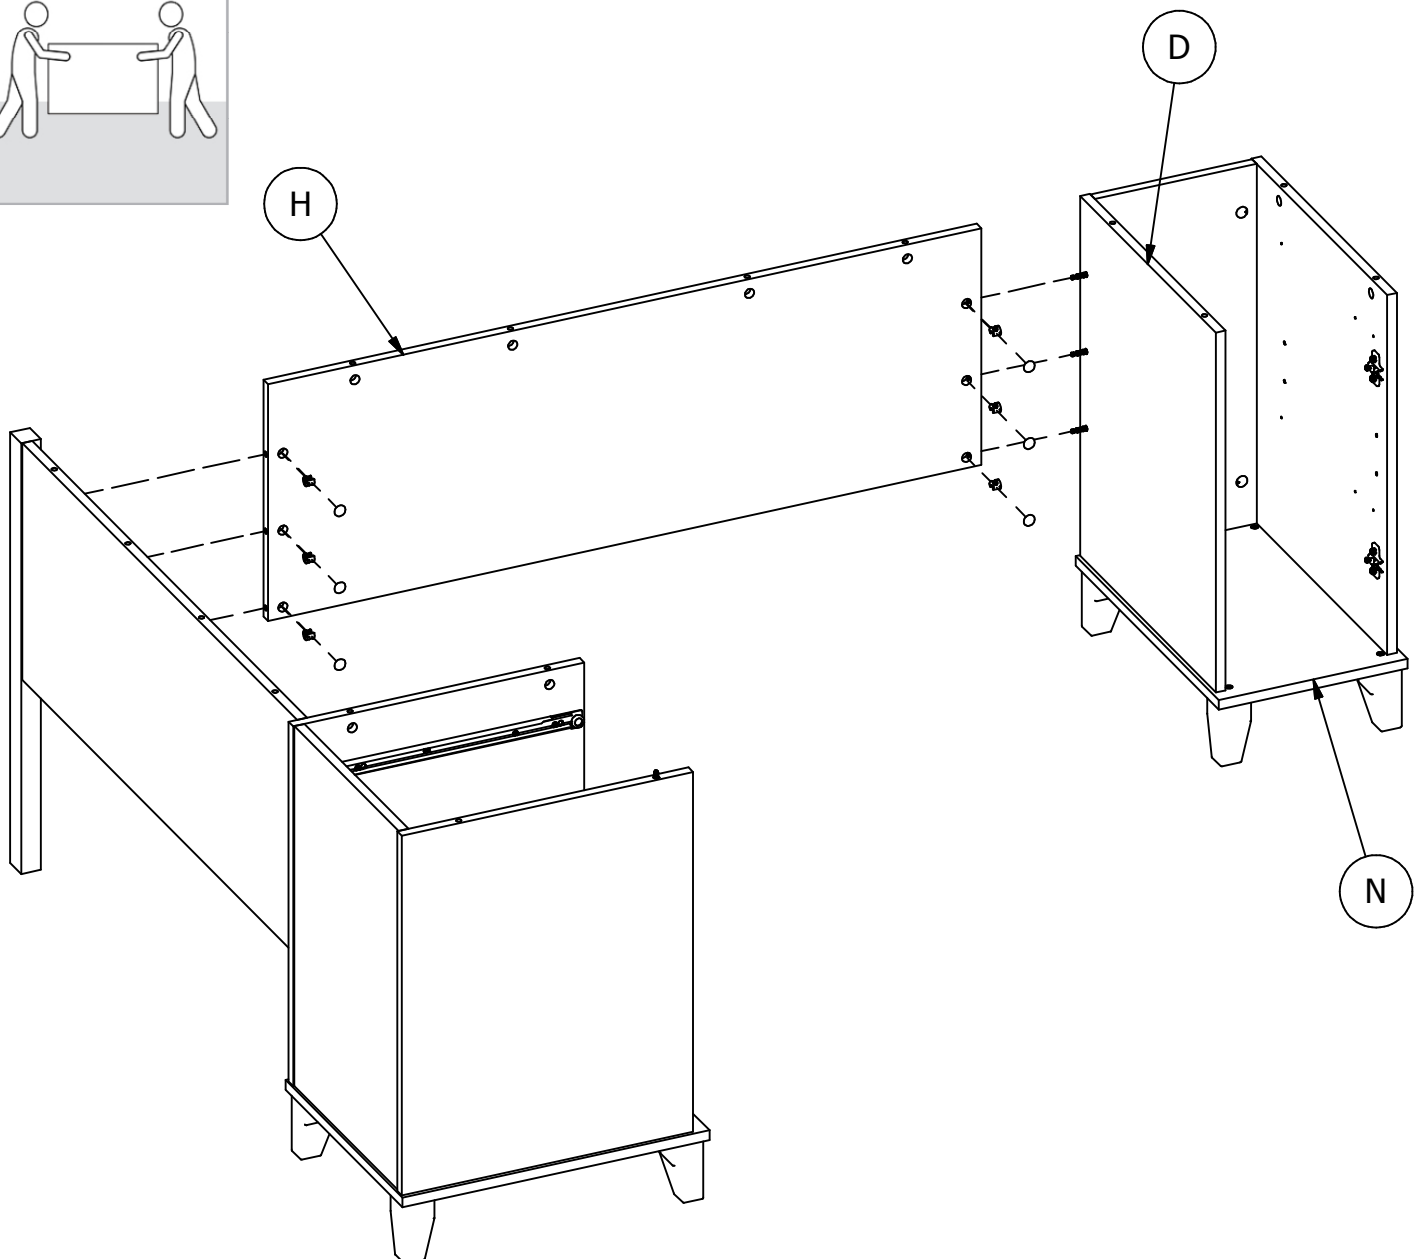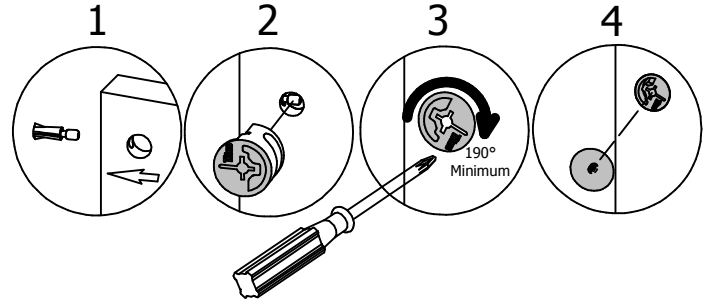


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 38

## Prepare Work Surface

A187451G


H72988



KD Bolt

[ 10 ]


H35251

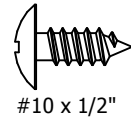

[ 4 ]



#10 x 1/2"

H39922







Strap

[ 2 ]

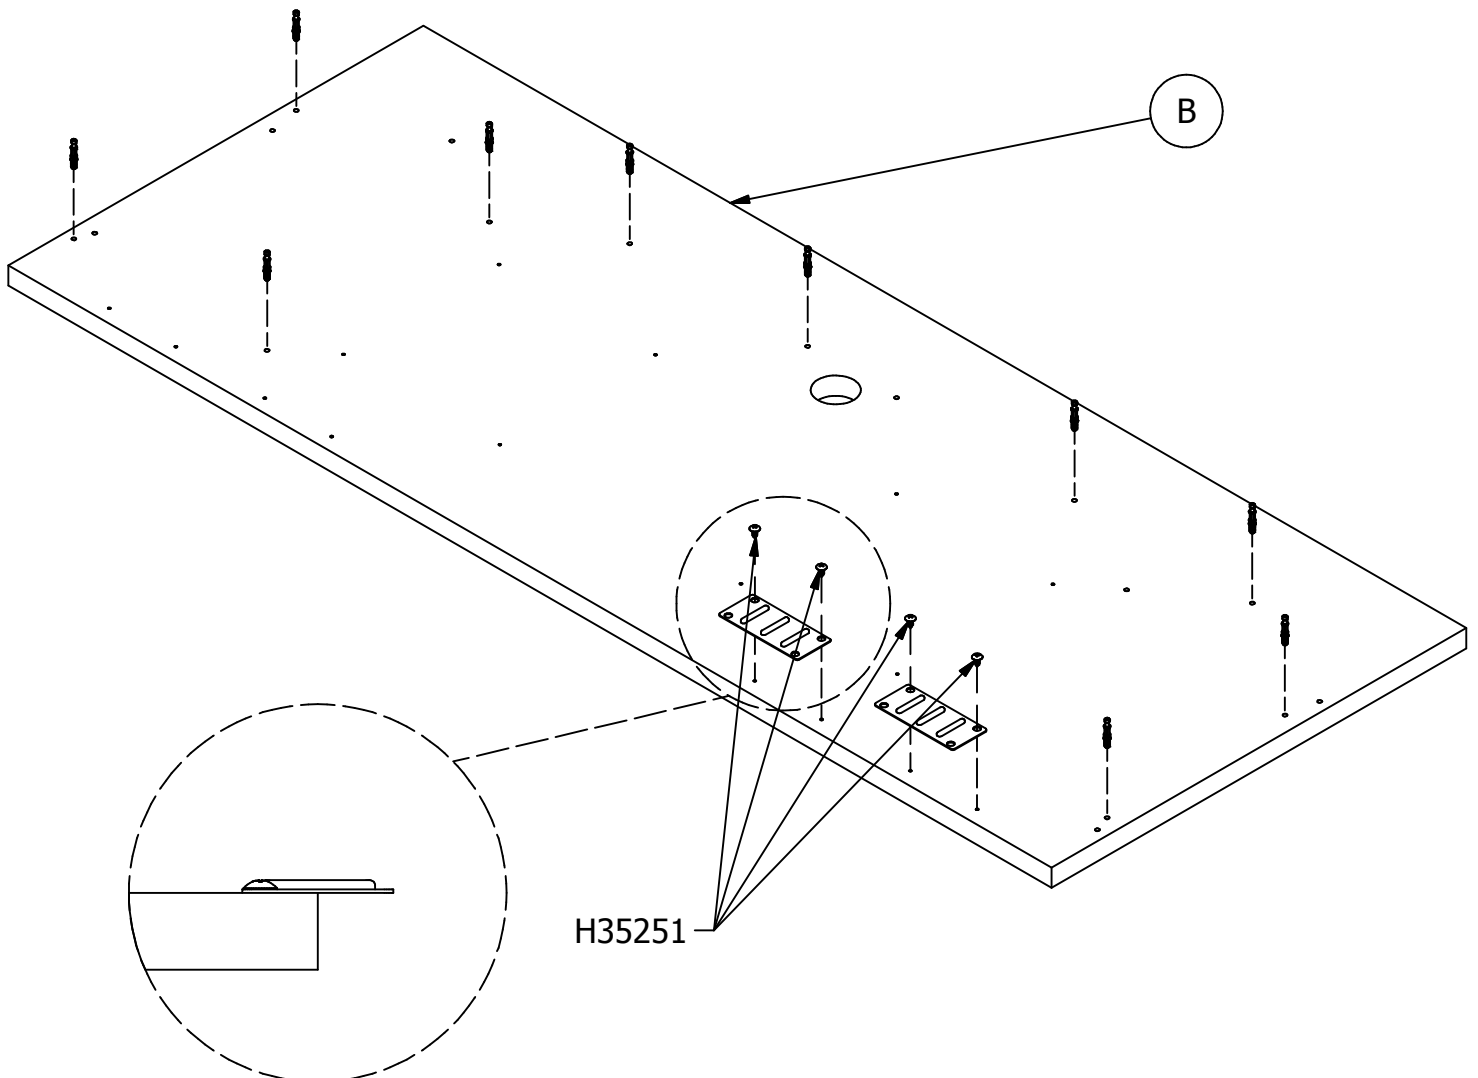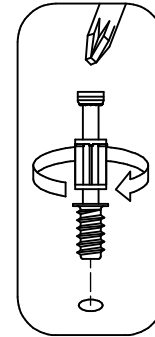

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

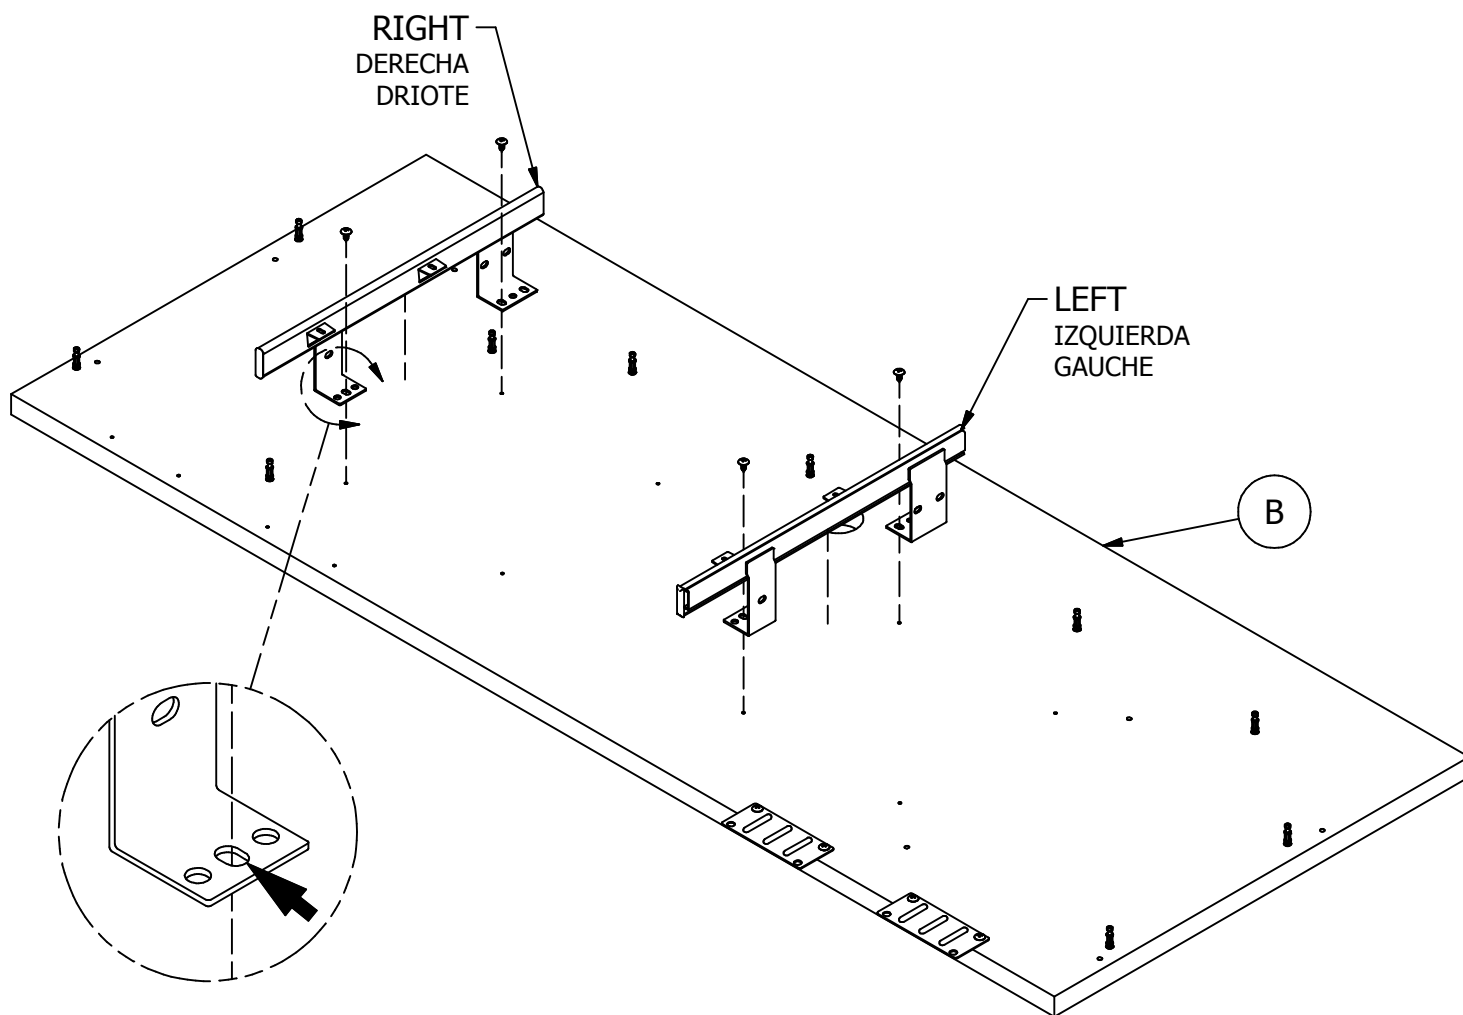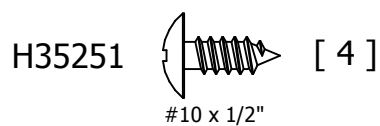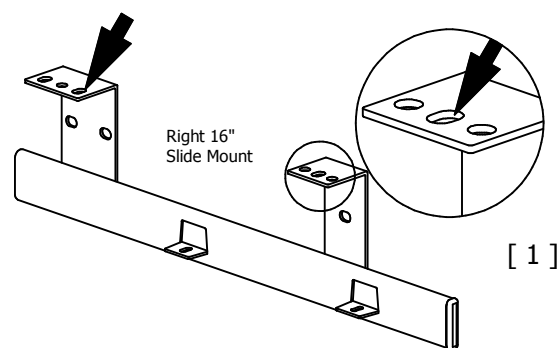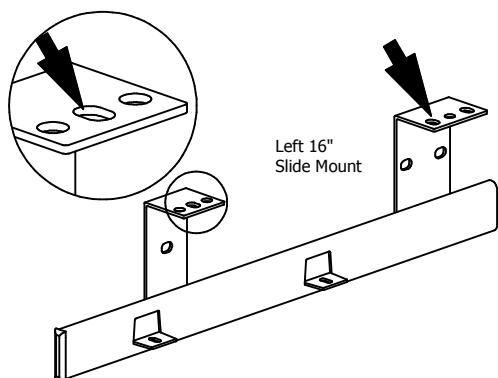

# STEP 40


## Assemble Work Surface

A187451G


Scan QR Code to  
Watch Video on:



How to Tighten  
KD Cams

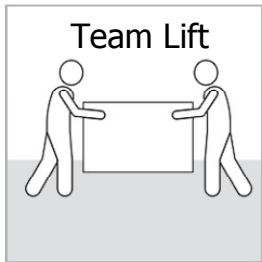


H71659

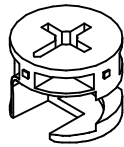



KD Cam

[ 10 ]



Cover Cap

[ 10 ]

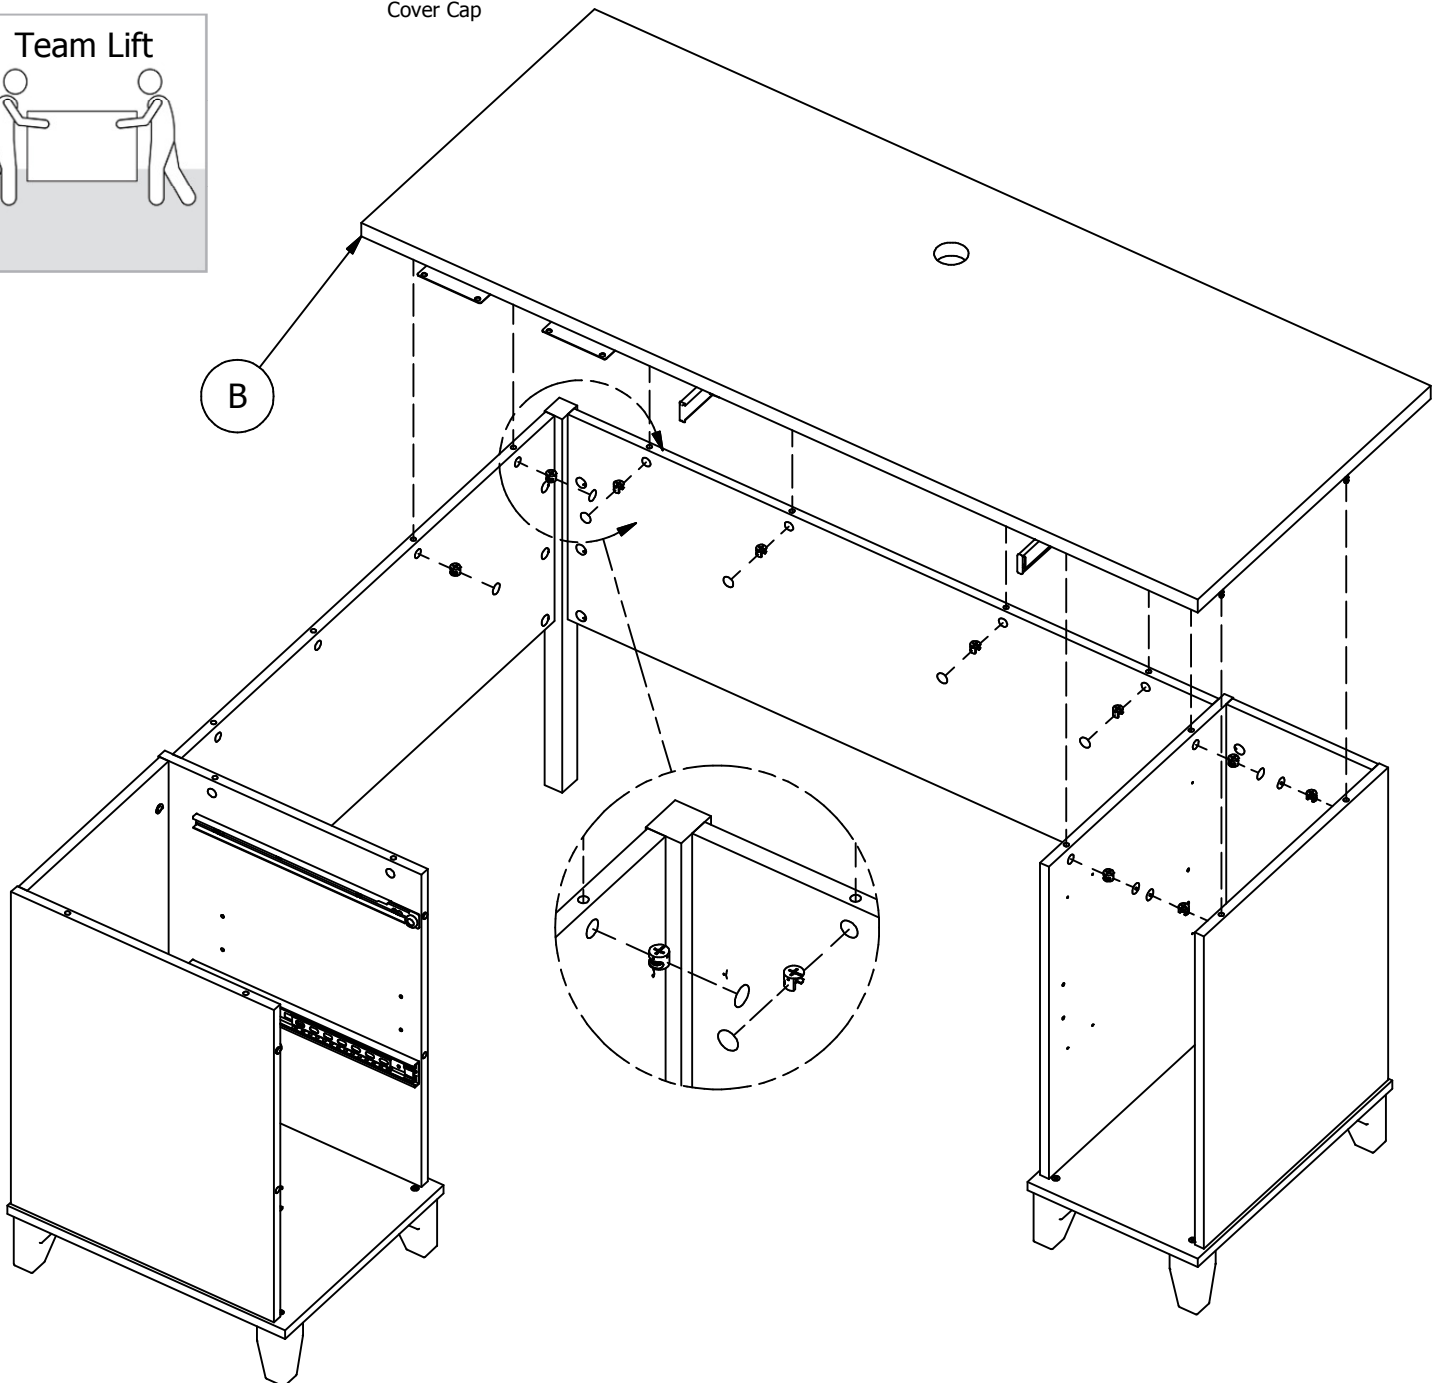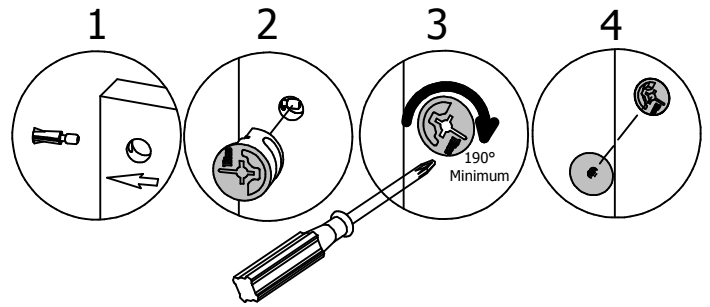

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.




## STEP 41

## Prepare Work Surface


A187451G

H72988



KD Bolt

[ 6 ]

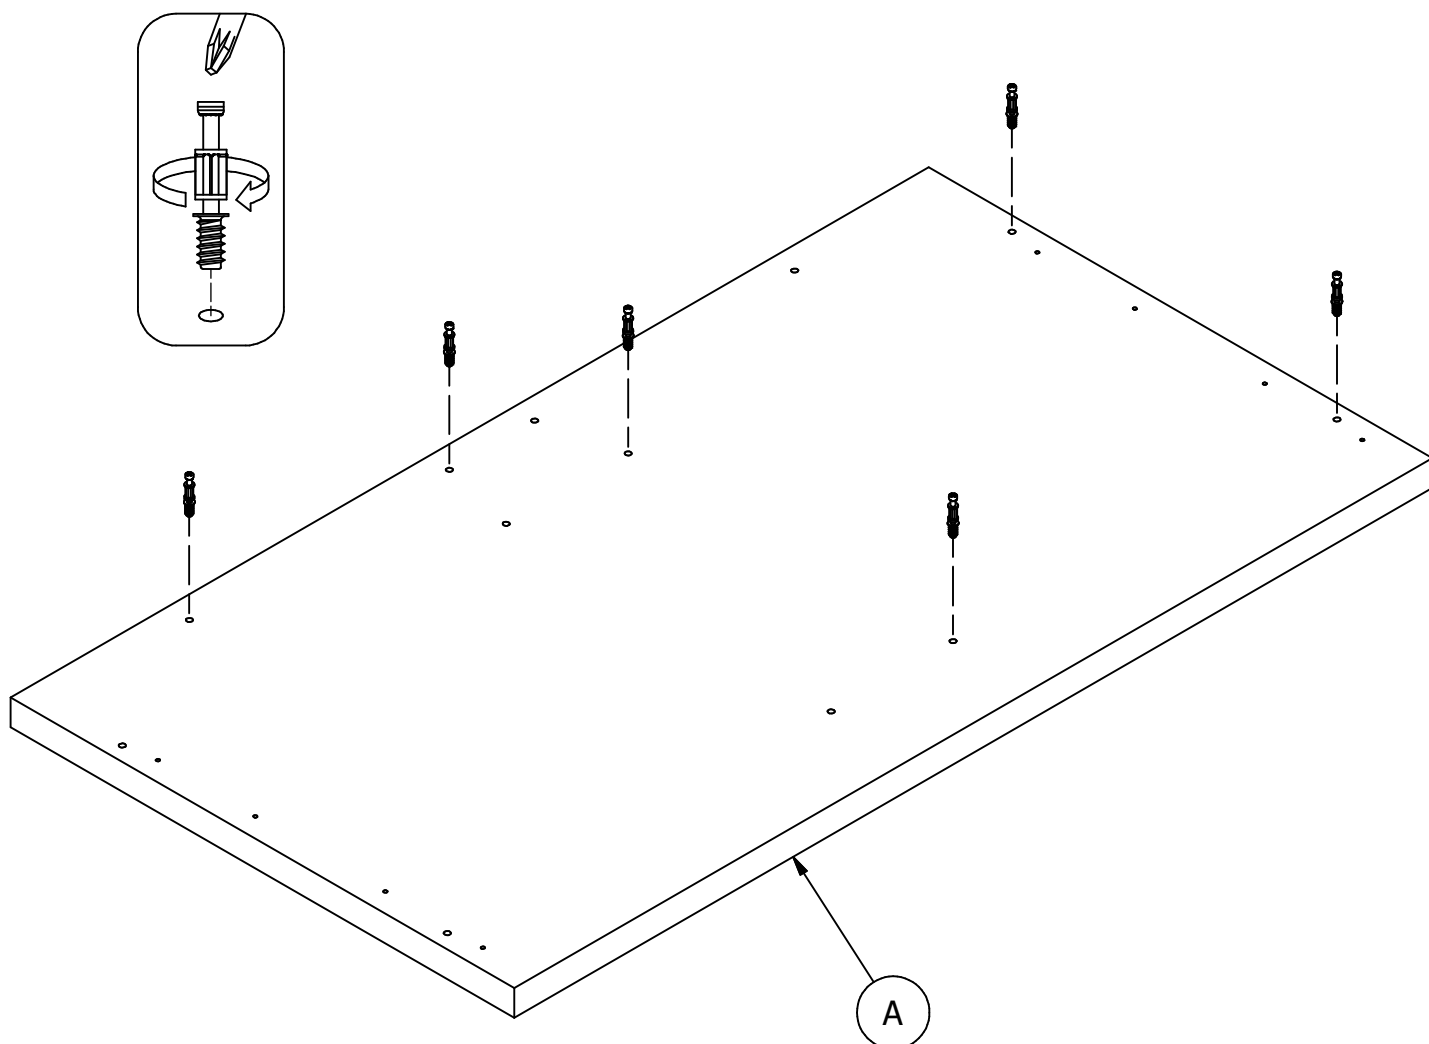

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 42


## Assemble Work Surface

A187451G


Scan QR Code to  
Watch Video on:



How to Tighten  
KD Cams

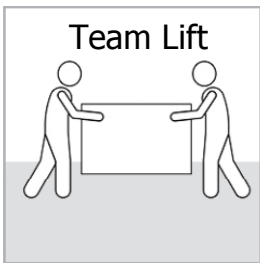


H71659

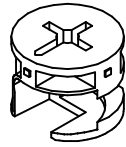

KD Cam


[ 6 ]

H35251





#10 x 1/2"

[ 4 ]

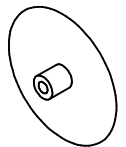


Cover Cap


[ 2 ]

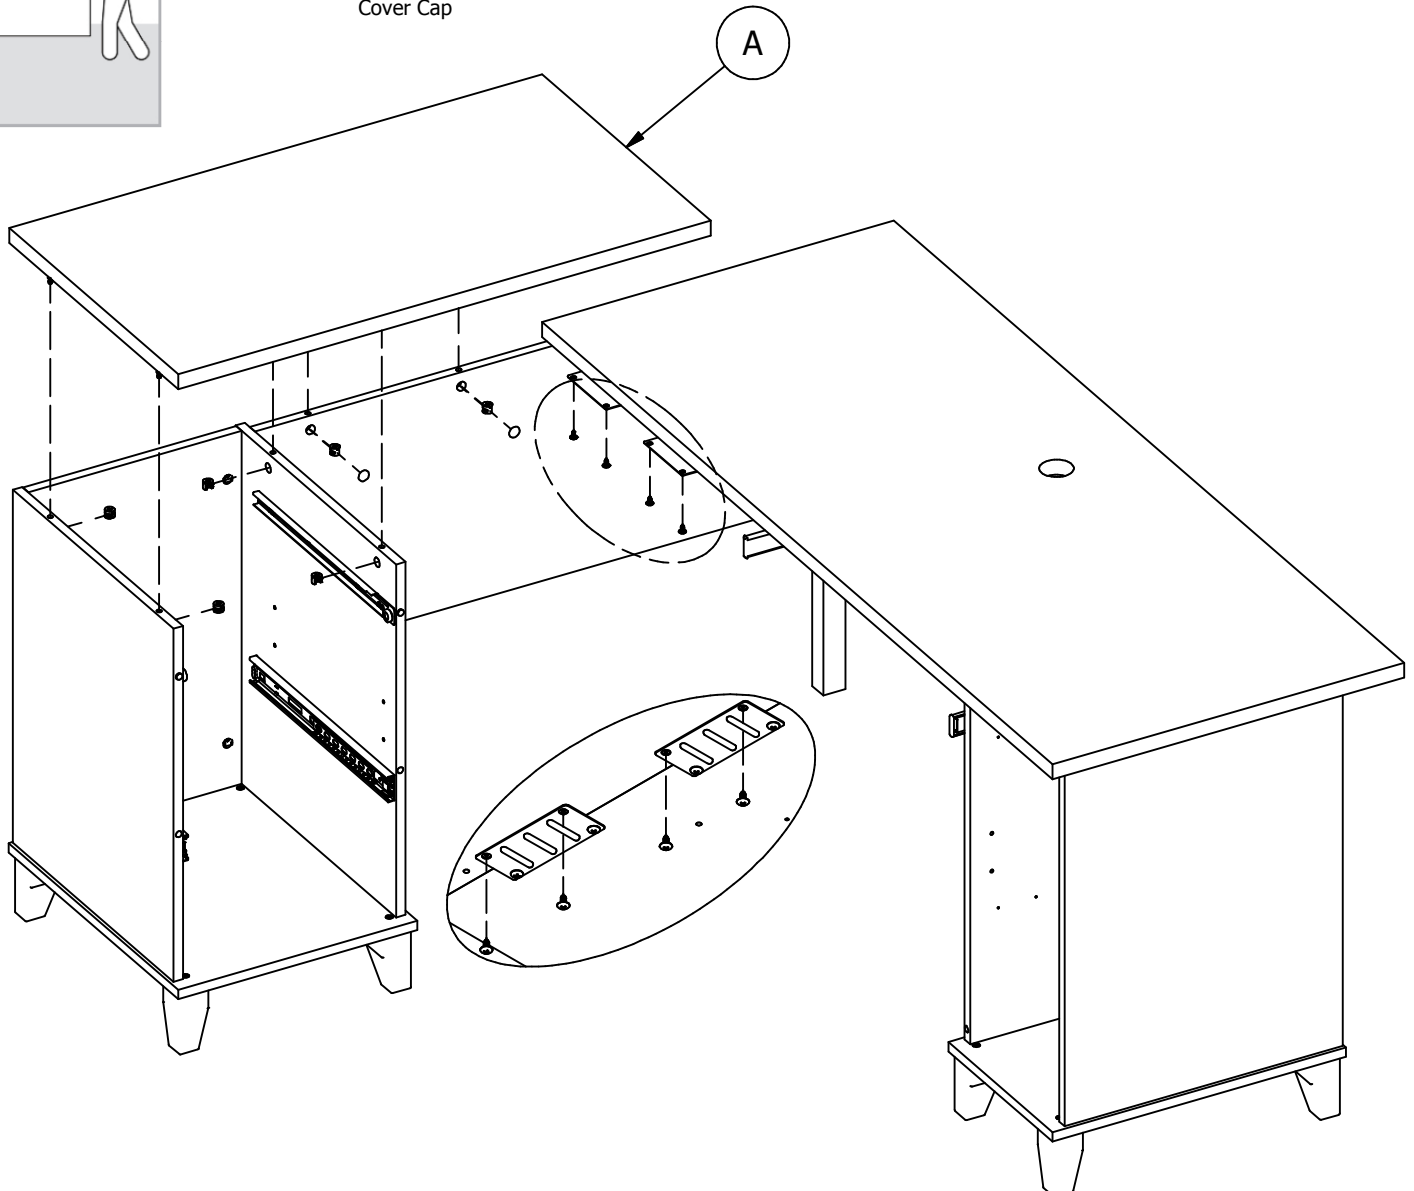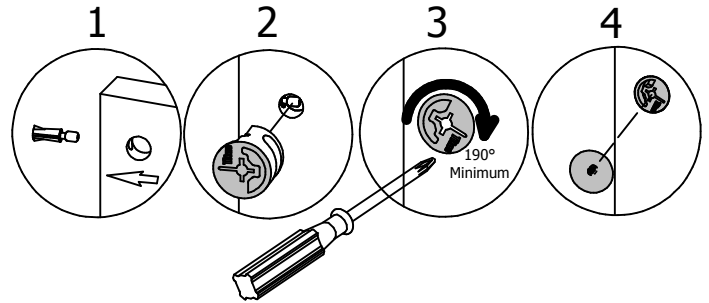


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

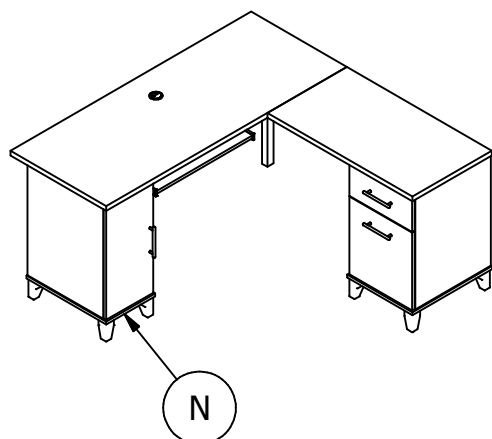

Or

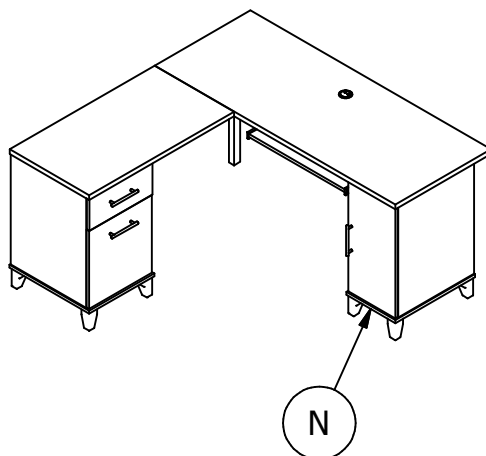

H23604

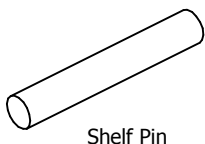

[ 4 ]

Shelf Pin




H126396



[ 4 ]

Shelf Pin Sleeve

O

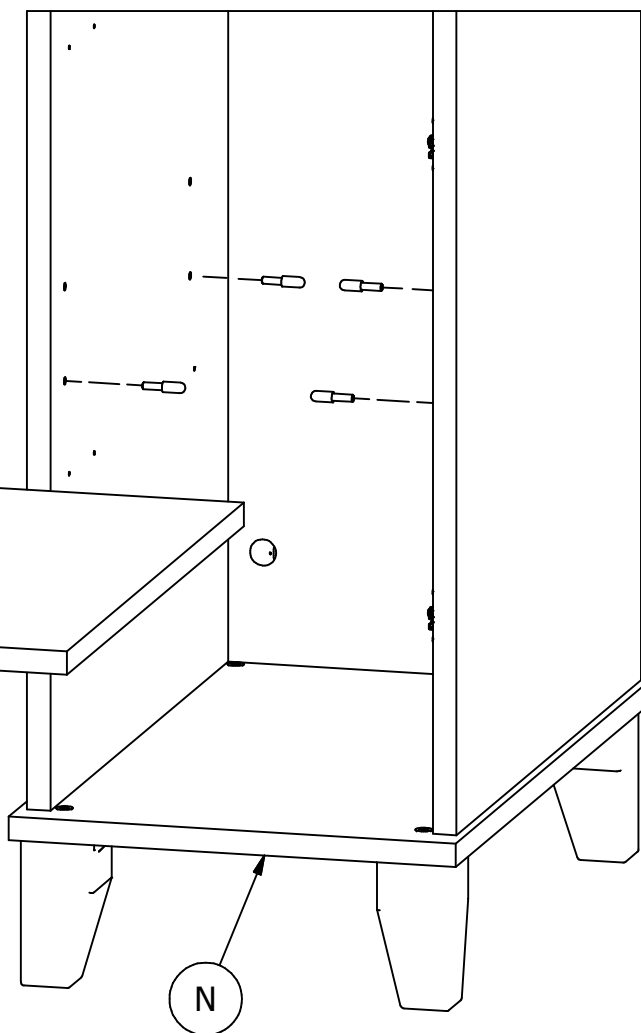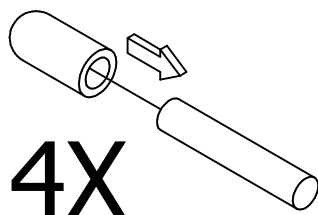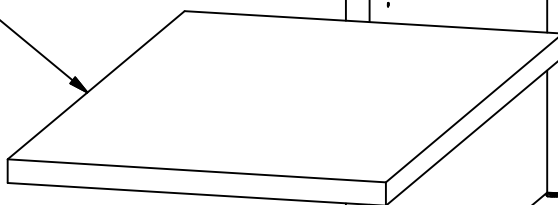

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

# STEP 44


## Assemble and Adjust Door

A187451G





Scan QR Code to  
Watch Video on:




How to Adjust  
Door Hinges

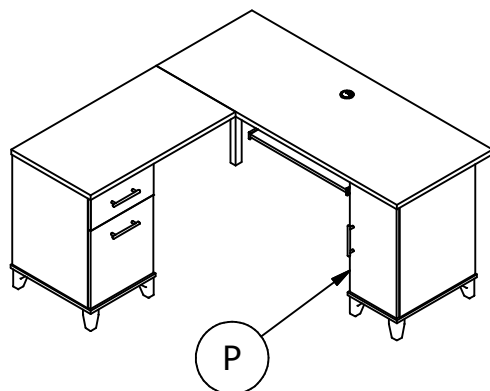


Or

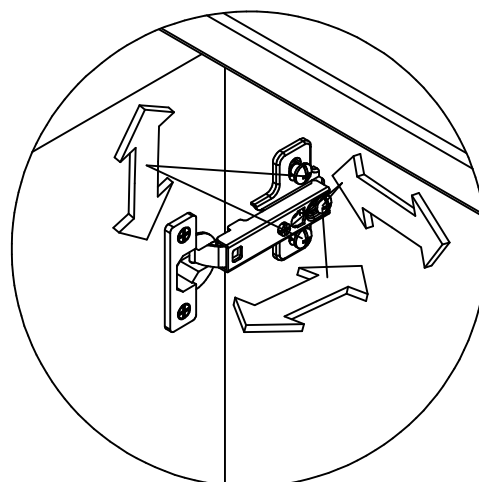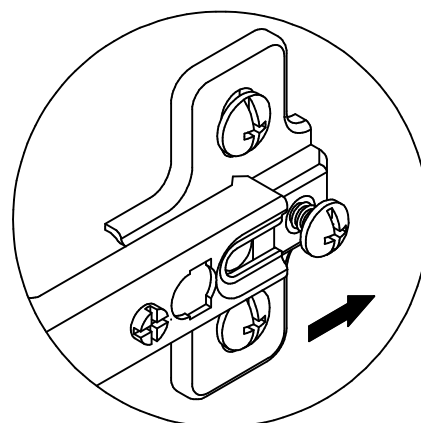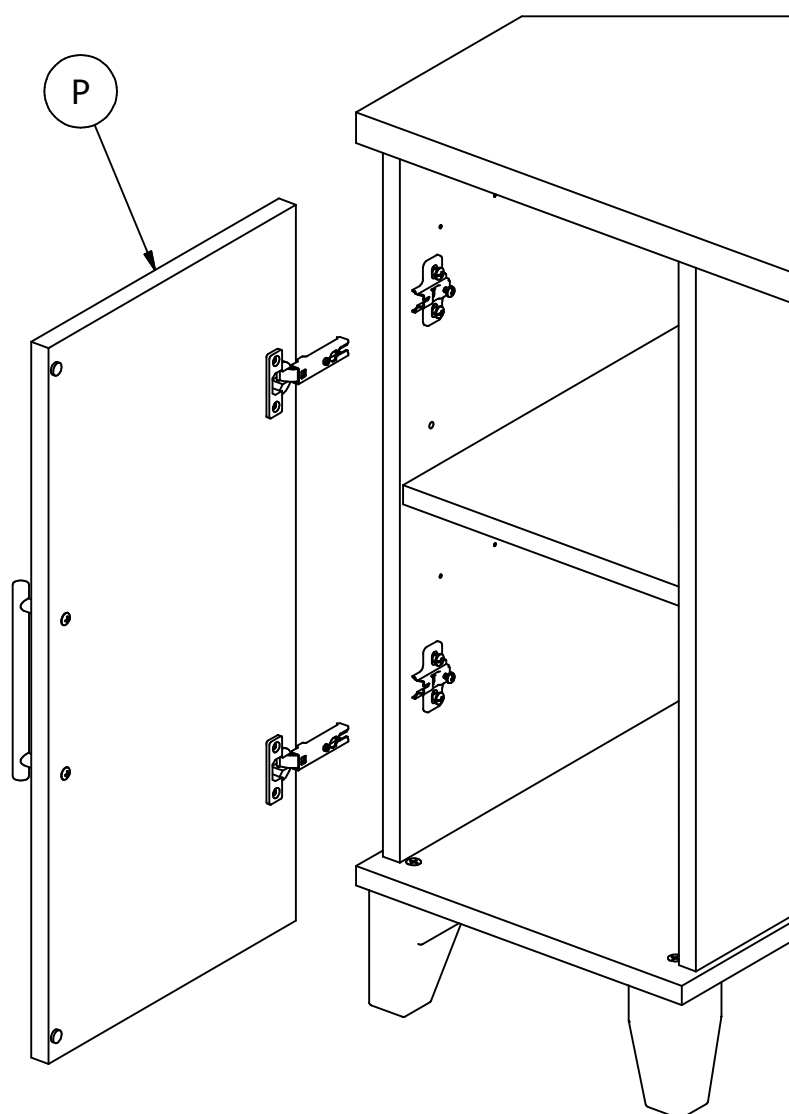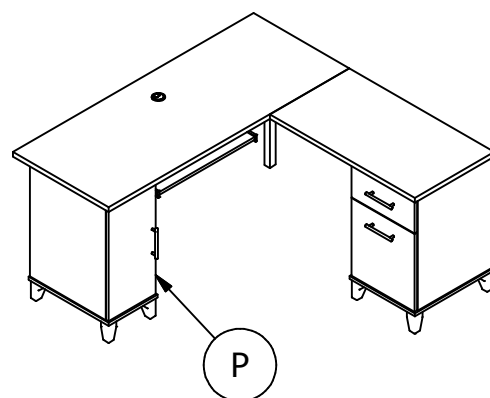



Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

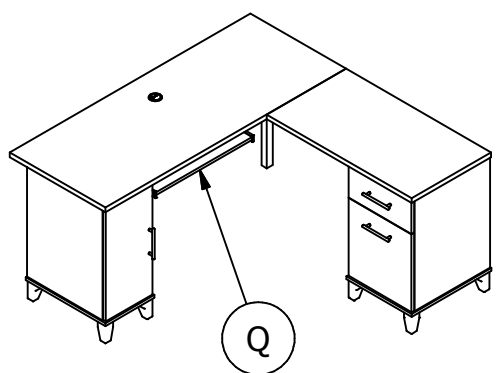

Or

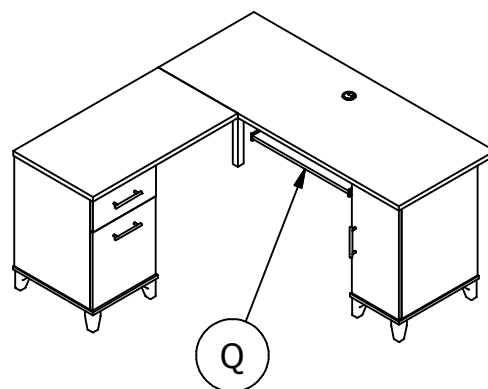

H35251  [ 4 ]  
#10 x 1/2"

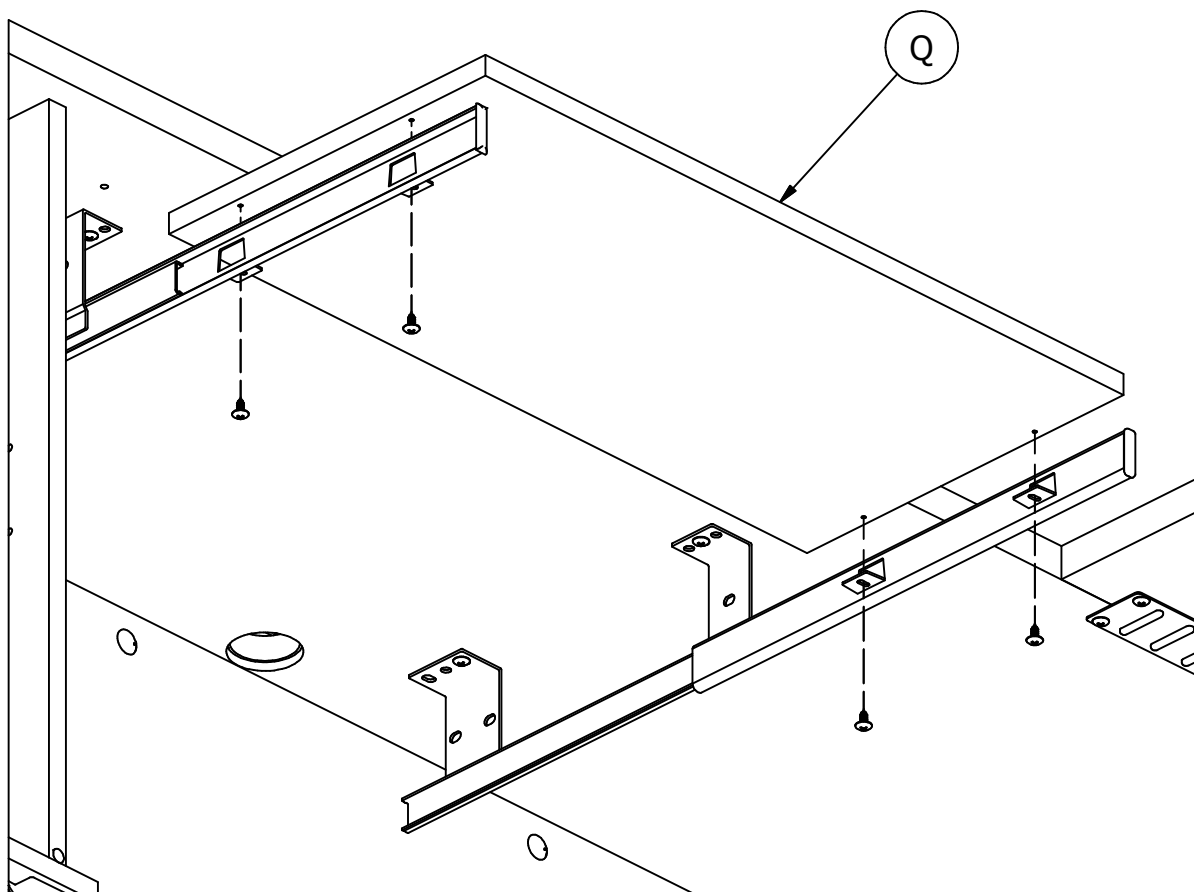


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.



Scan QR Code to  
Watch Video on:



How to Separate  
and Install Drawer  
Slides

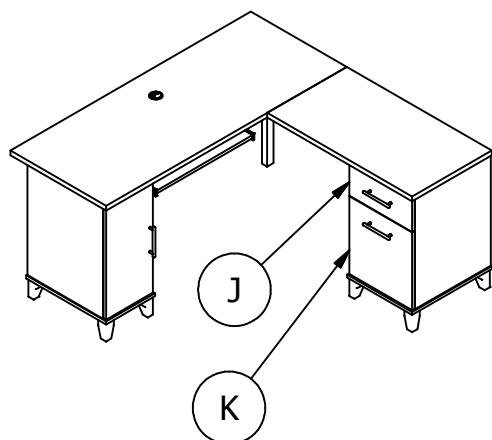

Or

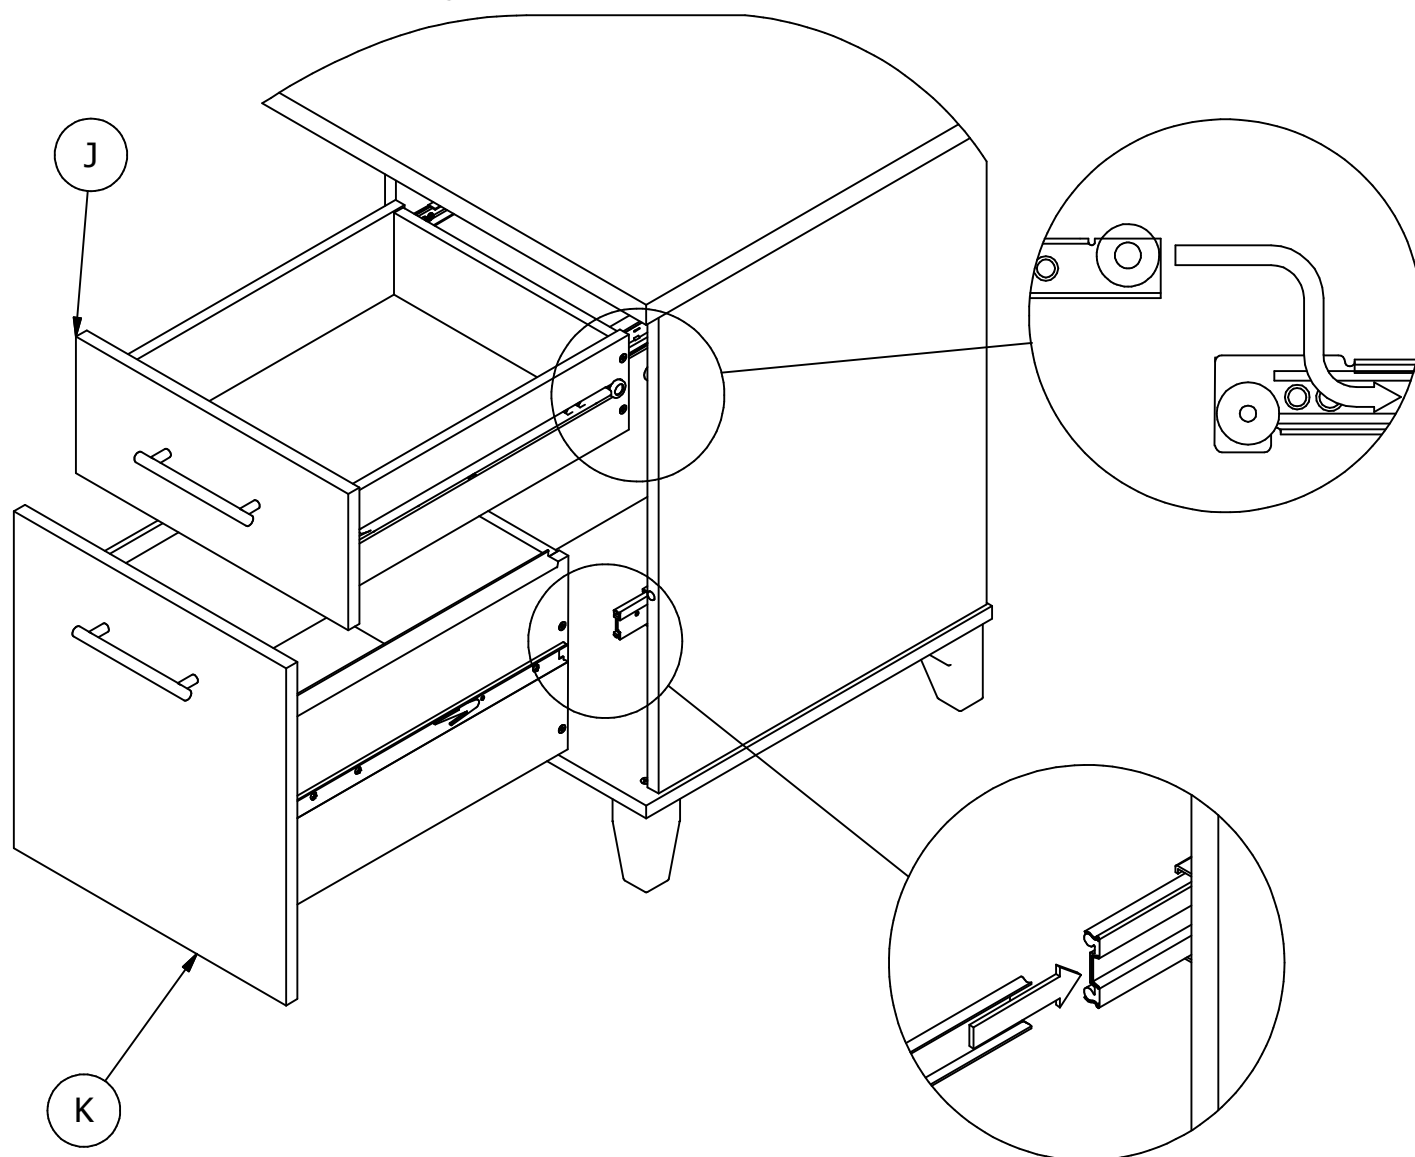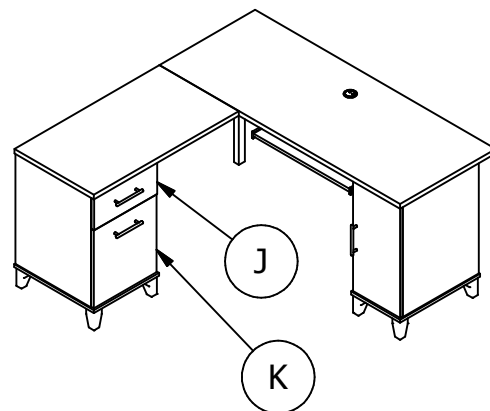







Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

Scan QR Code to  
Watch Video on:



How to Adjust  
Drawer Fronts

## DRAWER FRONT VIEW

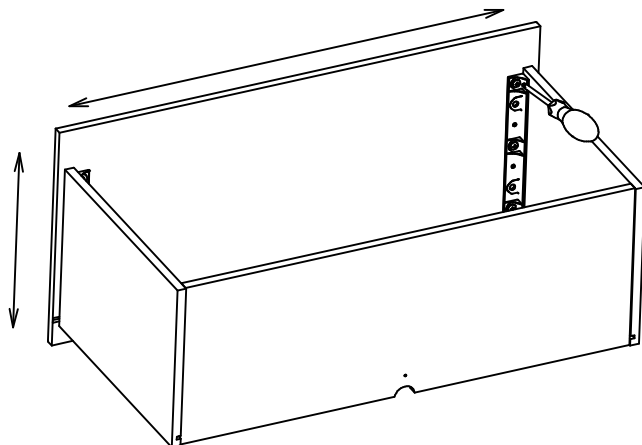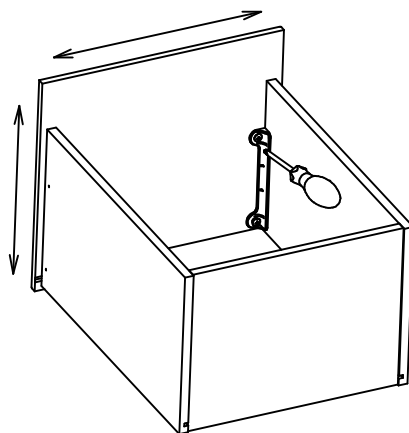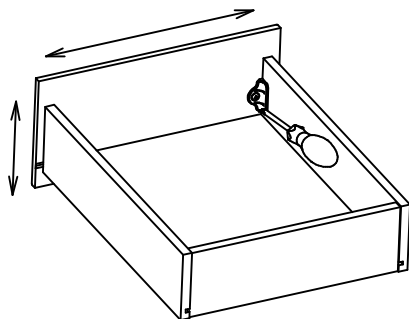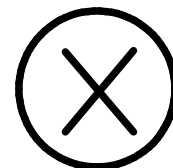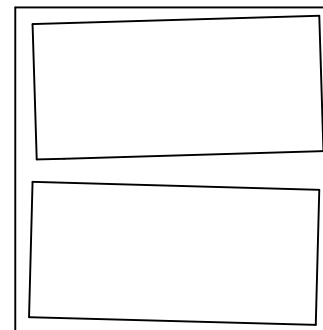

REQUIRED TOOL: PHILLIPS SCREWDRIVER

HERRAMIENTA REQUERIDA: DESTORNILLADOR PHILLIPS  
OUTIL REQUIS: TOURNEVIS CRUCIFORME



1. LOOSEN SCREWS.
2. ADJUST DRAWER FRONTS.
3. TIGHTEN SCREWS.

1. Afloje los tornillos
2. Ajustar frentes de cajón
3. Apriete los tornillos


1. Desserrer les vis
2. Ajuster les façades des tiroirs
3. Serrer les vis

Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.


Scan QR Code to  
Watch Video on:



Gently clean surfaces with a damp  
sponge eraser.

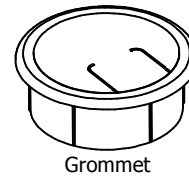

[ 1 ]

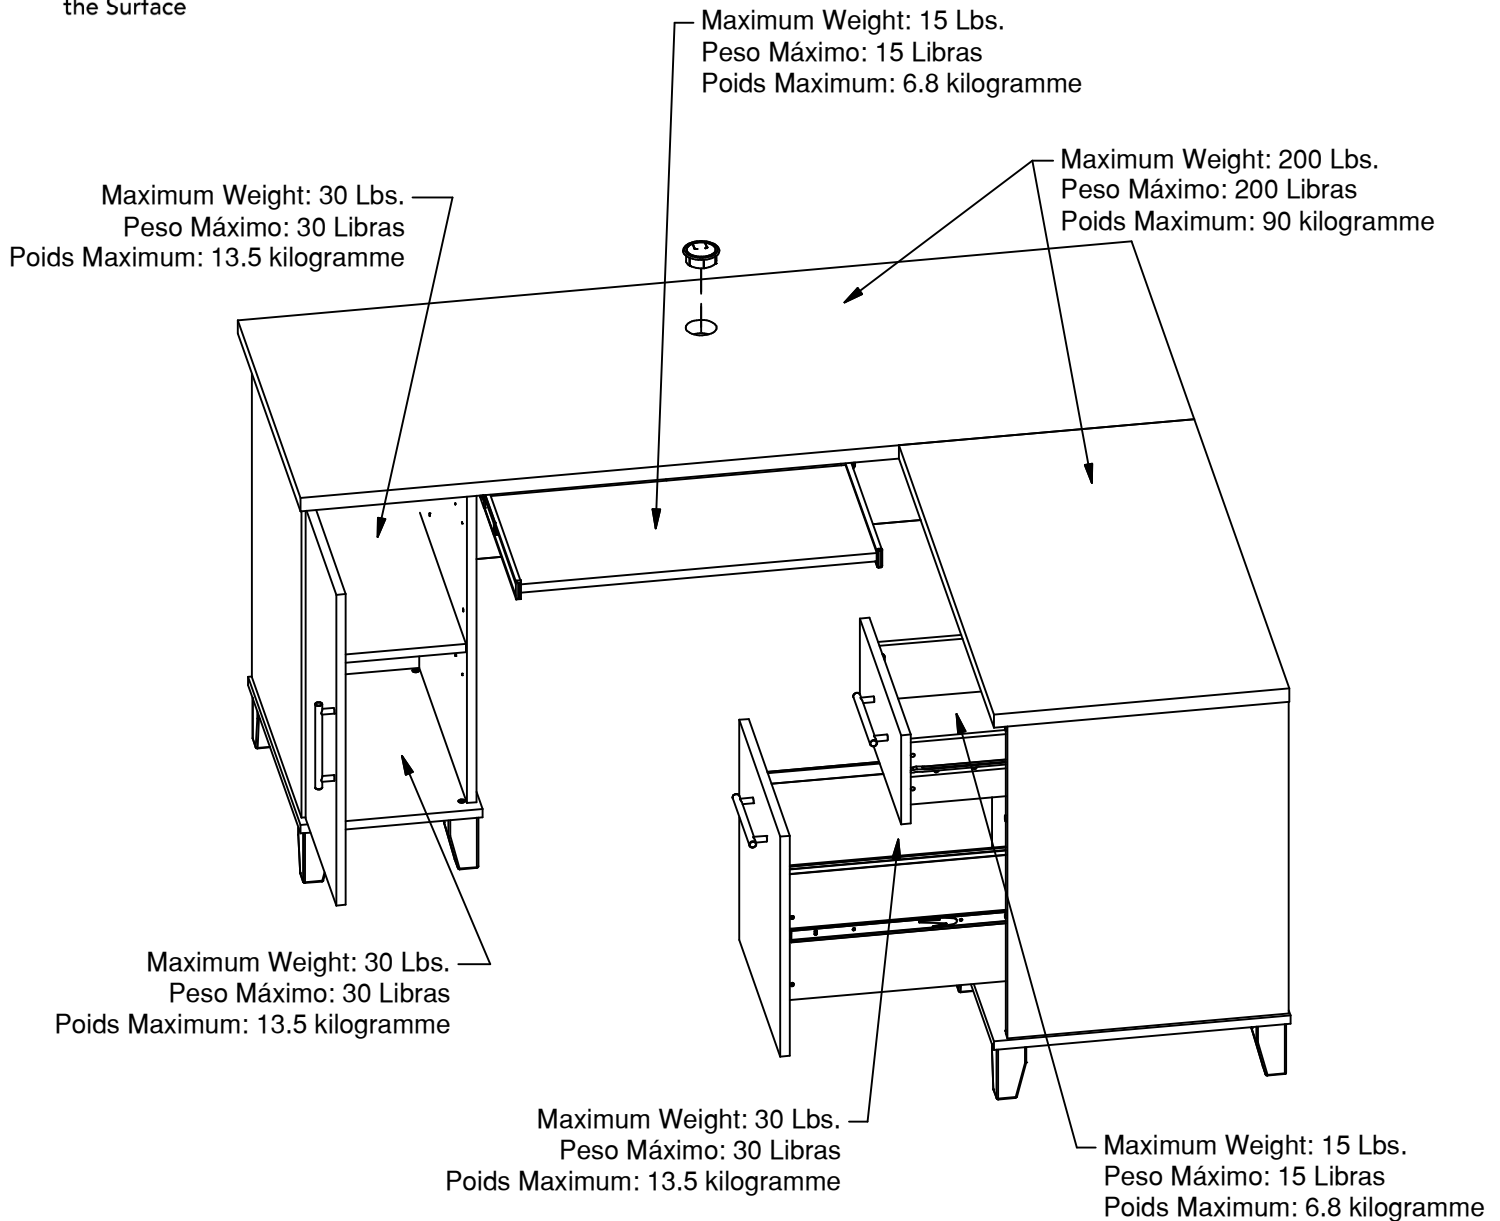
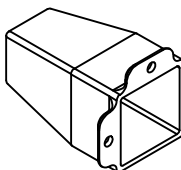


Congratulations! You are all done. If  
you have any questions or concerns,  
please call.


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.



## WC81030

A	W200553	[ 1 ]	N	W196055	[ 1 ]	H195624		[ 1 ]
B	W200552	[ 1 ]	O	W200724	[ 1 ]			
C	W196045	[ 1 ]	P	W193865	[ 1 ]			
D	W196046	[ 1 ]	Q	W200559	[ 1 ]			
E	W196047	[ 1 ]	R	W193687	[ 1 ]			
F	W196085	[ 1 ]	S	W193868	[ 1 ]			
G	W196049	[ 1 ]	T	W106489	[ 2 ]			
H	W196084	[ 1 ]	U	W176195	[ 1 ]	H193807		[ 8 ]
J	W193859	[ 1 ]	V	W107681	[ 2 ]			
K	W193860	[ 1 ]	W	W107685	[ 1 ]			
L	W196053	[ 1 ]	X	W87410	[ 2 ]			
M	w196054	[ 1 ]						


H196000

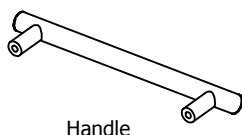

Handle

[ 3 ]



H73619




Cover Cap

[ 28 ]

## WC81130

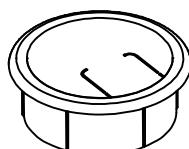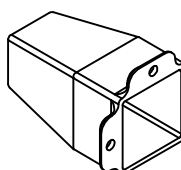A	W200498	[ 1 ]	N	W200467	[ 1 ]	H151407		[ 1 ]
B	W200495	[ 1 ]	O	W200468	[ 1 ]			
C	W200457	[ 1 ]	P	W200469	[ 1 ]			
D	W200458	[ 1 ]	Q	W200472	[ 1 ]			
E	W200459	[ 1 ]	R	W200470	[ 1 ]			
F	W200497	[ 1 ]	S	W200471	[ 1 ]			
G	W200461	[ 1 ]	T	W106489	[ 2 ]			
H	W200496	[ 1 ]	U	W176195	[ 1 ]			
J	W200463	[ 1 ]	V	W107681	[ 2 ]	H195789		[ 8 ]
K	W200464	[ 1 ]	W	W107685	[ 1 ]			
L	W200465	[ 1 ]	X	W87410	[ 2 ]			
M	W200466	[ 1 ]						


H150001



Handle

[ 3 ]

H193368







Cover Cap

[ 28 ]





## WC81230

A	W195879	[ 1 ]	N	W195848	[ 1 ]
B	W195876	[ 1 ]	O	W195849	[ 1 ]
C	W195838	[ 1 ]	P	W195850	[ 1 ]
D	W195839	[ 1 ]	Q	W195853	[ 1 ]
E	W195840	[ 1 ]	R	W195851	[ 1 ]
F	W195878	[ 1 ]	S	W195852	[ 1 ]
G	W195842	[ 1 ]	T	W106489	[ 2 ]
H	W195877	[ 1 ]	U	W176195	[ 1 ]
J	W195844	[ 1 ]	V	W107681	[ 2 ]
K	W195845	[ 1 ]	W	W107685	[ 1 ]
L	W195846	[ 1 ]	X	W87410	[ 2 ]
M	W195847	[ 1 ]			

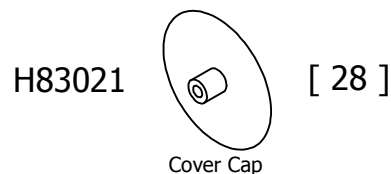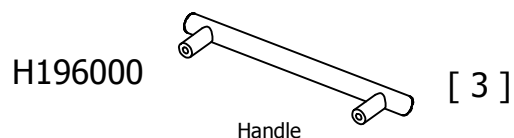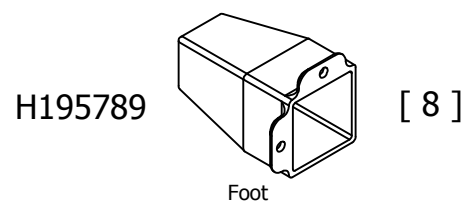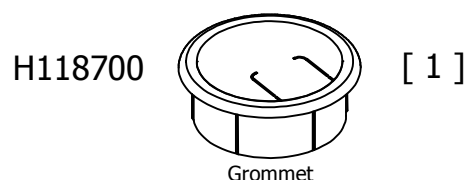





## WC81330

A	W200404	[ 1 ]	N	W200373	[ 1 ]
B	W200401	[ 1 ]	O	W200374	[ 1 ]
C	W200363	[ 1 ]	P	W200375	[ 1 ]
D	W200364	[ 1 ]	Q	W200378	[ 1 ]
E	W200365	[ 1 ]	R	W200376	[ 1 ]
F	W200403	[ 1 ]	S	W200377	[ 1 ]
G	W200367	[ 1 ]	T	W106489	[ 2 ]
H	W200402	[ 1 ]	U	W176195	[ 1 ]
J	W200369	[ 1 ]	V	W107681	[ 2 ]
K	W200370	[ 1 ]	W	W107685	[ 1 ]
L	W200371	[ 1 ]	X	W87410	[ 2 ]
M	W200372	[ 1 ]			

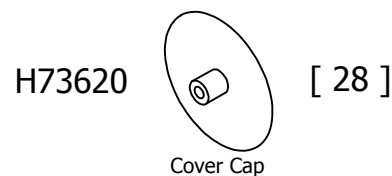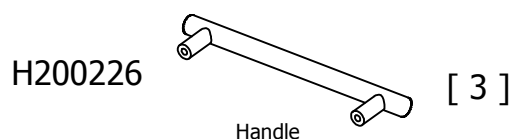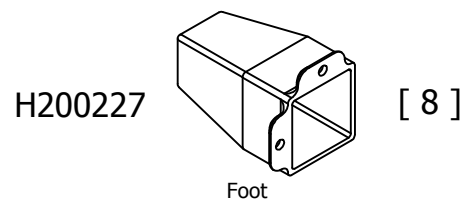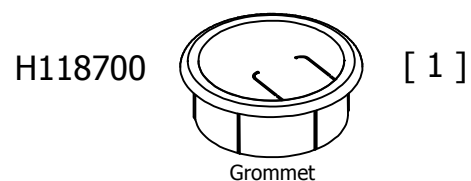





## WC81430C

A	W187442	[ 1 ]	N	W187372	[ 1 ]
B	W187439	[ 1 ]	O	W187373	[ 1 ]
C	W187362	[ 1 ]	P	W187374	[ 1 ]
D	W187363	[ 1 ]	Q	W195729	[ 1 ]
E	W187364	[ 1 ]	R	W187376	[ 1 ]
F	W187441	[ 1 ]	S	W187377	[ 1 ]
G	W187366	[ 1 ]	T	W106489	[ 2 ]
H	W187440	[ 1 ]	U	W176195	[ 1 ]
J	W187368	[ 1 ]	V	W107681	[ 2 ]
K	W187369	[ 1 ]	W	W107685	[ 1 ]
L	W187370	[ 1 ]	X	W87410	[ 2 ]
M	W187371	[ 1 ]			

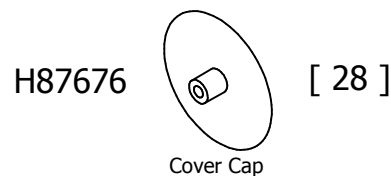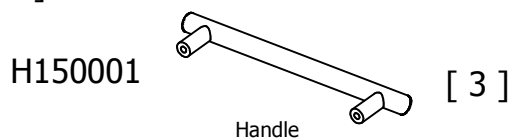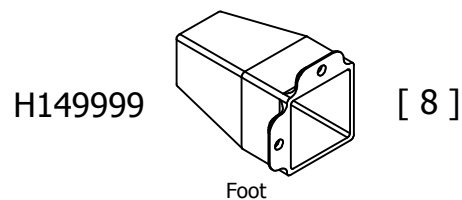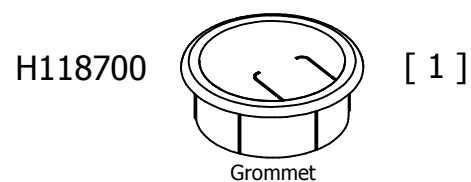

## WC81530

A	W193872	[ 1 ]	N	W193863	[ 1 ]
B	W193869	[ 1 ]	O	W193864	[ 1 ]
C	W193853	[ 1 ]	P	W193865	[ 1 ]
D	W193854	[ 1 ]	Q	W195730	[ 1 ]
E	W193855	[ 1 ]	R	W193867	[ 1 ]
F	W193871	[ 1 ]	S	W193868	[ 1 ]
G	W193857	[ 1 ]	T	W106489	[ 2 ]
H	W193870	[ 1 ]	U	W176195	[ 1 ]
J	W193859	[ 1 ]	V	W107681	[ 2 ]
K	W193860	[ 1 ]	W	W107685	[ 1 ]
L	W193861	[ 1 ]	X	W87410	[ 2 ]
M	W193862	[ 1 ]			

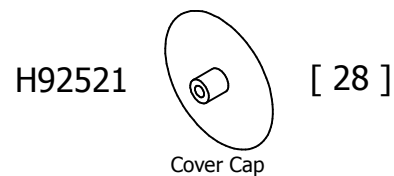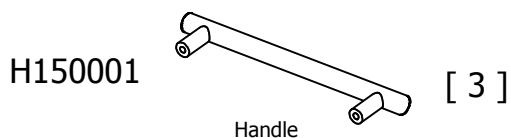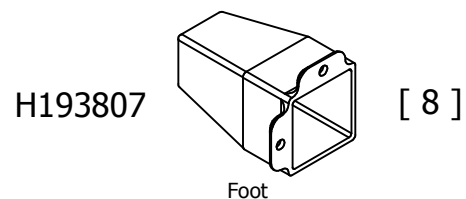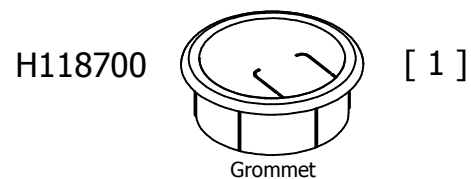


Have an assembly question or need a replacement part? Just call  
**1-800-950-4782**, we are here to help.

## WC81630

A	W186367	[ 1 ]	N	W186350	[ 1 ]
B	W186368	[ 1 ]	O	W186375	[ 1 ]
C	W186351	[ 1 ]	P	W186365	[ 1 ]
D	W186352	[ 1 ]	Q	W195731	[ 1 ]
E	W186353	[ 1 ]	R	W186363	[ 1 ]
F	W186369	[ 1 ]	S	W186364	[ 1 ]
G	W186354	[ 1 ]	T	W106489	[ 2 ]
H	W186370	[ 1 ]	U	W176195	[ 1 ]
J	W186355	[ 1 ]	V	W107681	[ 2 ]
K	W186356	[ 1 ]	W	W107685	[ 1 ]
L	W186357	[ 1 ]	X	W87410	[ 2 ]
M	W186358	[ 1 ]			


H150001

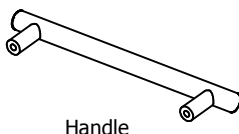

Handle

[ 3 ]


H151406

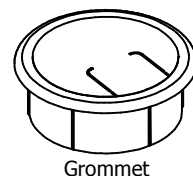

Grommet

[ 1 ]


H149999

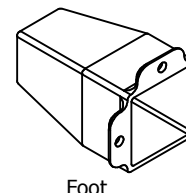

Foot

[ 8 ]

H83021




Cover Cap

[ 28 ]

## WC81730C

A	W187446	[ 1 ]	N	W187390	[ 1 ]
B	W187443	[ 1 ]	O	W187391	[ 1 ]
C	W187380	[ 1 ]	P	W187392	[ 1 ]
D	W187381	[ 1 ]	Q	W195732	[ 1 ]
E	W187382	[ 1 ]	R	W187394	[ 1 ]
F	W187445	[ 1 ]	S	W187395	[ 1 ]
G	W187384	[ 1 ]	T	W106489	[ 2 ]
H	W187444	[ 1 ]	U	W176195	[ 1 ]
J	W187386	[ 1 ]	V	W107681	[ 2 ]
K	W187387	[ 1 ]	W	W107685	[ 1 ]
L	W187388	[ 1 ]	X	W87410	[ 2 ]
M	W187389	[ 1 ]			


H150001

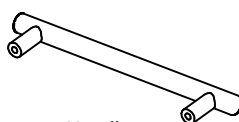

Handle

[ 3 ]


H118700

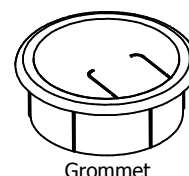

Grommet

[ 1 ]


H149999

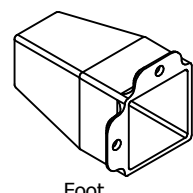

Foot

[ 8 ]

H95137







Cover Cap

[ 28 ]

## WC81830C

A	W187450	[ 1 ]	N	W187408	[ 1 ]
B	W187447	[ 1 ]	O	W187409	[ 1 ]
C	W187398	[ 1 ]	P	W187410	[ 1 ]
D	W187399	[ 1 ]	Q	W195733	[ 1 ]
E	W187400	[ 1 ]	R	W187412	[ 1 ]
F	W187449	[ 1 ]	S	W187413	[ 1 ]
G	W187402	[ 1 ]	T	W106489	[ 2 ]
H	W187448	[ 1 ]	U	W176195	[ 1 ]
J	W187404	[ 1 ]	V	W107681	[ 2 ]
K	W187405	[ 1 ]	W	W107685	[ 1 ]
L	W187406	[ 1 ]	X	W87410	[ 2 ]
M	W187407	[ 1 ]			

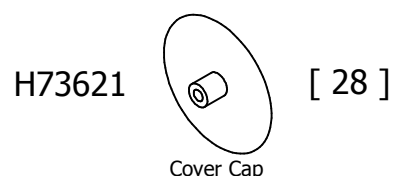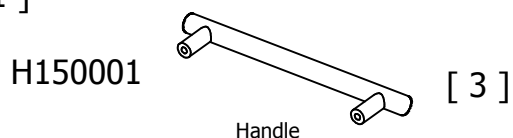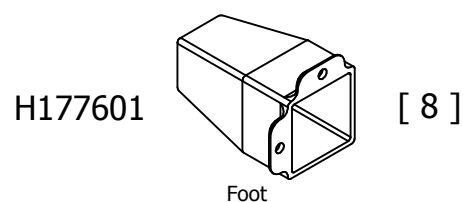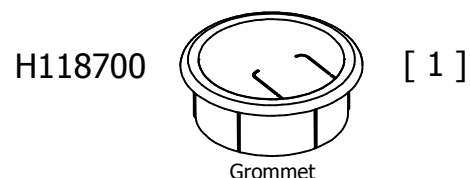

## WC81930

A	W196086	[ 1 ]	N	W196055	[ 1 ]
B	W196083	[ 1 ]	O	W196056	[ 1 ]
C	W196045	[ 1 ]	P	W196057	[ 1 ]
D	W196046	[ 1 ]	Q	W196060	[ 1 ]
E	W196047	[ 1 ]	R	W196058	[ 1 ]
F	W196085	[ 1 ]	S	W196059	[ 1 ]
G	W196049	[ 1 ]	T	W106489	[ 2 ]
H	W196084	[ 1 ]	U	W176195	[ 1 ]
J	W196051	[ 1 ]	V	W107681	[ 2 ]
K	W196052	[ 1 ]	W	W107685	[ 1 ]
L	W196053	[ 1 ]	X	W87410	[ 2 ]
M	W196054	[ 1 ]			

