


Assembly Instructions

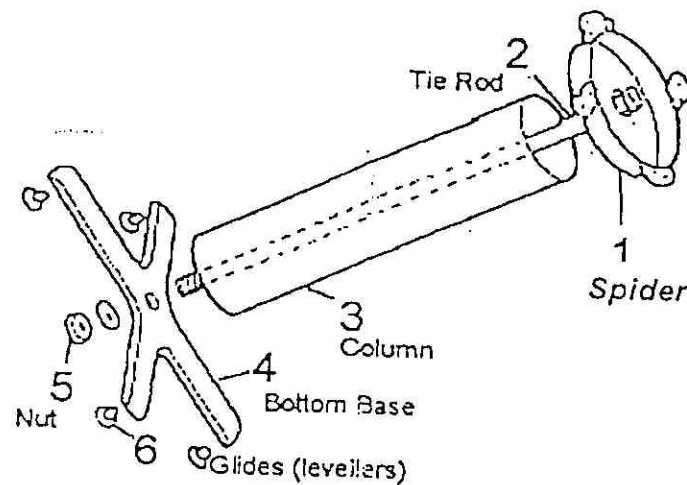

Tools Needed: $\frac{3}{4}$ " wrench / socket.

Note: T-Base not shown in above diagram. Assembly is the same.

1. Insert Tie Rod threaded end through Spider center hole.
2. Insert Tie Rod / Spider through Column.
3. Place Spider on a hard surface with the Tie-Rod threaded end in the upright position.
4. Insert Tie Rod threaded end into Bottom Base center hole.
5. Install Washers and nut. Center all components and tighten securely.
6. Adjust Level Glides as necessary.