


Medina Series[™]
Curved Desk
Model No. MND63/72

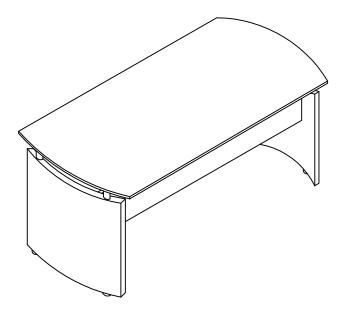

ASSEMBLY INSTRUCTIONS
CALL 1-800-822-8037 FOR ASSISTANCE

PARTS LIST

Name	Part	Qty.	Spare Qty
A	REALSO01 Cam Lock	9	1
В	REALS102** Cam Sticker	4	1
С	REALS003 Cam Post	9	1

Name	Part	Qty.	Spare Qty
D	REALS102SLV Cam Sticker/Silver	5	1
E	REALS414 Base Stand-off	5	
	MNCNZHB		

NOTE:

- ①. 1 Top and 1 Modesty Panel packed in one carton MNDT63/MNDT72.
- ②. 2 Legs with Hardware packed in one carton MNDB.

Items with HB are in hardware box.

**Denotes Color Code

PARTS LIST

Name	Part	Qty.
G	MNDT~~** TOP	1
Н1	MNDB** Left Base Leg	1

Name	Part	Qty.
H2	MNDB** Right Base Leg	1
K	MNDTK~~** Modesty Panel	1

Pre-Assembled Replacement Part List

Replacement #	Part	Qty.
REALS425	Leveler	4


~~Denotes Size - 63/72


**Denotes Color Code


IMPORTANT!

Review ALL instructions before beginning assembly. These instructions are provided to avoid problems that may occur from improper assembly or installation. Mayline and/or its distributor are not responsible for failure resulting from improper assembly or installation of this product. Moreover, all warranties are void for failure to follow these assembly instructions.


1 Insert Cams (A) into the Modesty Panel (K) and Base Legs (H1 & H2). Install Cam Posts (C) into threaded inserts in Base Legs (H1 & H2). Attach Modesty Panel (K) to Base Legs (H1 & H2) by turning Cams (A). Apply Cam Sticker/Silver (D) onto Cams (A) of Modesty Panel (K).

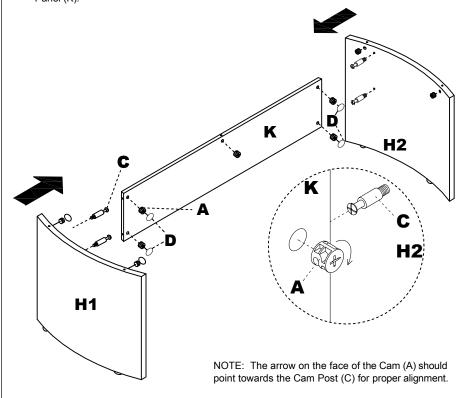




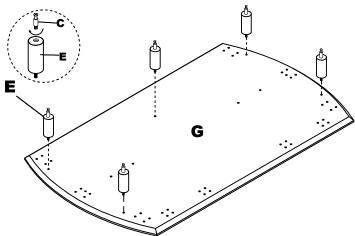

Place Top (G) onto base and lock in place by turning Cams (A). Apply Cam Stickers (B) onto Cams (A) of Base Legs (H1 & H2). Apply Cam Sticker/Silver (D) onto Cams (A) of Modesty Panel (K).

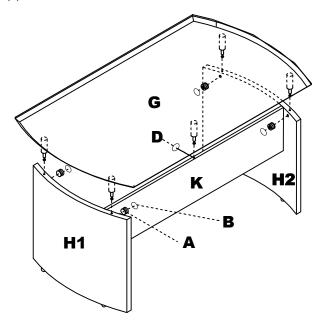

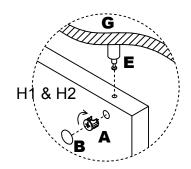

NOTE: The arrow on the face of the Cam (A) should point towards the Base Stand-off (E) for proper alignment.

ATTENTION: Due to the floating design of the Medina desk, care must be taken when moving the unit. Lift the desk by its base and avoid pushing the desk

