

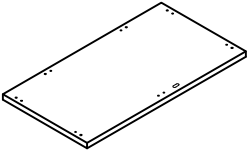
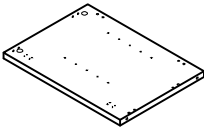
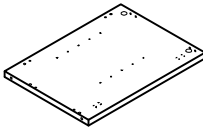
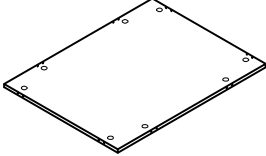
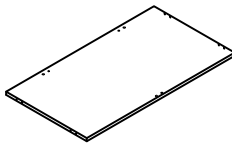
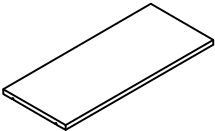
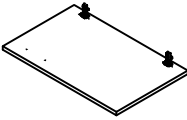




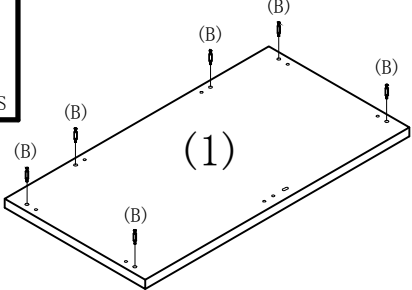
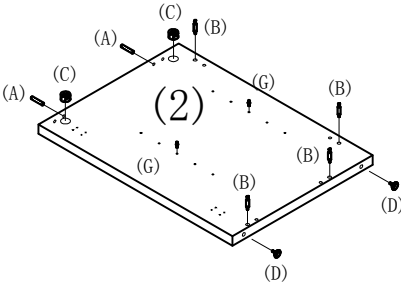
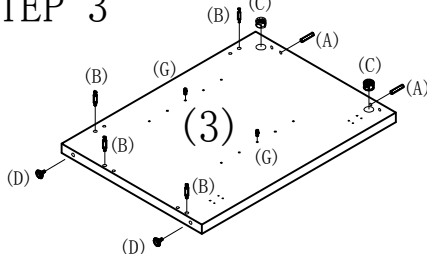

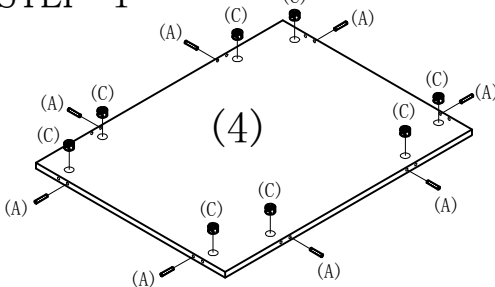
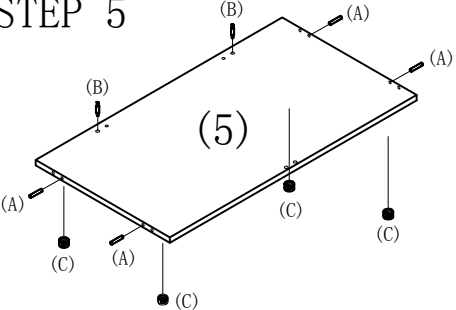
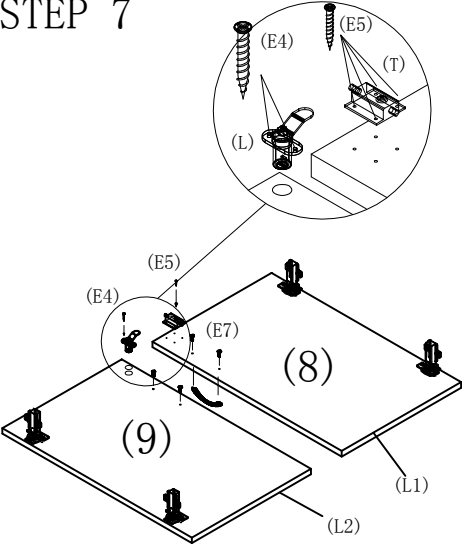
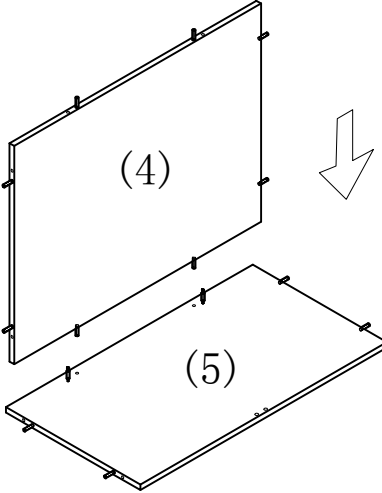
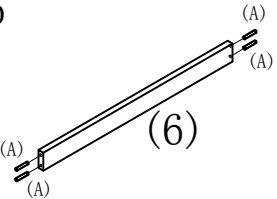


(1) Top  1PC	(2) End Panel  1PC	(3) End Panel  1PC	(4) Back Panel  1PC	(5) Bottom Panel  1PC	(6) Center Upright  1PC	(7) Shelf  1PC	(8) Door (L1)  1PC			
(9) Door (L2)  1PC	(A) Dowel  20PCS+1	(B) Cam Pin  16PCS+1	(C) Cam Lock  16PCS+1	(p) Adhesive Cam Cover  16PCS+1	(D) Leg Leveller  4PCS	(G) Shelf Pin  4PCS+1	(E0) Wood Screw  16+2PCS	(E5) Wood Screw  4+1PCS	(E7) Cap Screw  4PCS	
(M1) Cushion  4PCS	(H) Handle  2PCS	(E4) Wood Screw  2PCS	STEP 1 			STEP 2 			STEP 3 	
(T) Latch  1PC	(L) Lock  1PC					STEP 4 				
STEP 5 			STEP 7 			STEP 8 			STEP 6 	
TWO DOOR CABINET NAP-13 36"W*22"D*29"H  877-OSP-WORX (677-9679) <i>Always lay components on A clean, soft-cushioned surface during assembly.</i>										


STEP 9

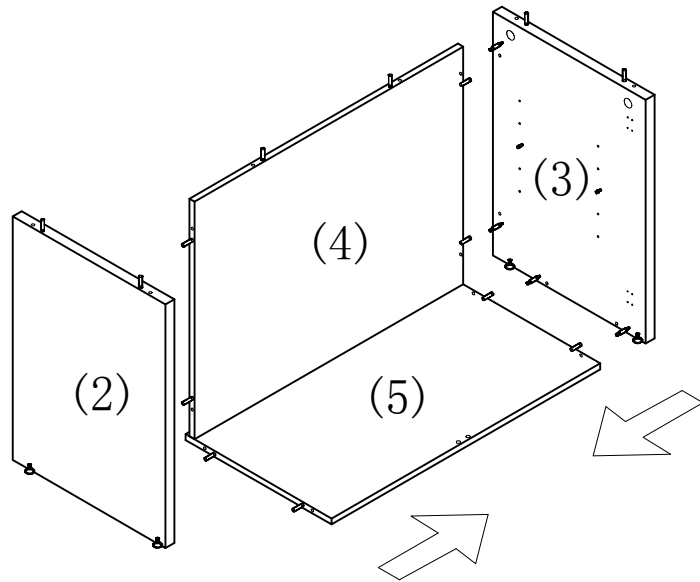


STEP 10

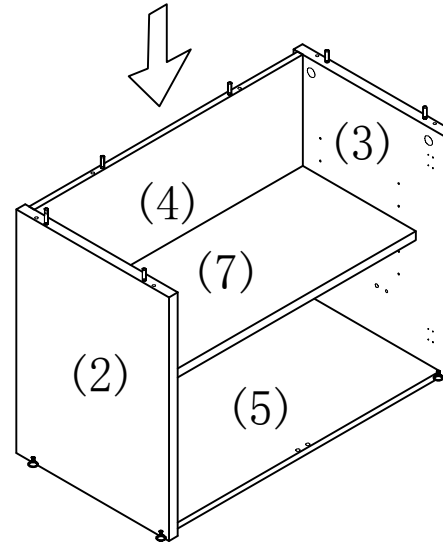


STEP 11

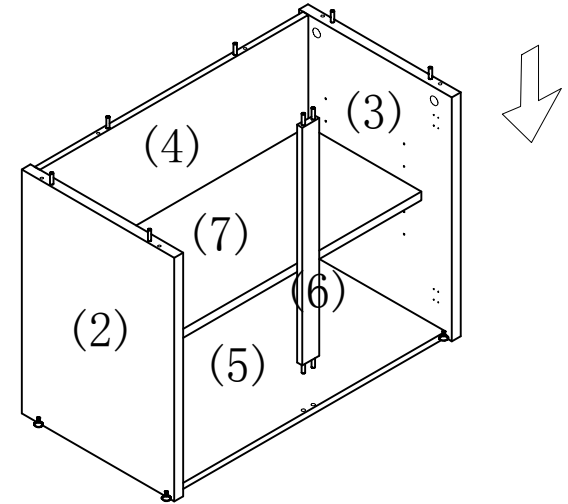

STEP 12

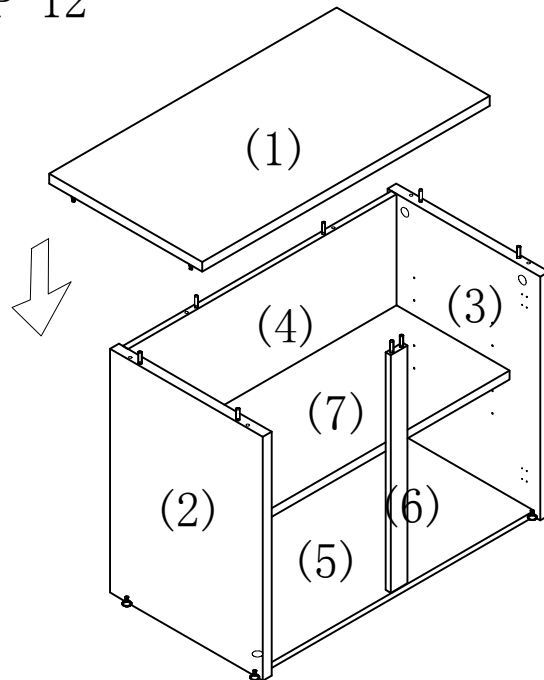

STEP 13

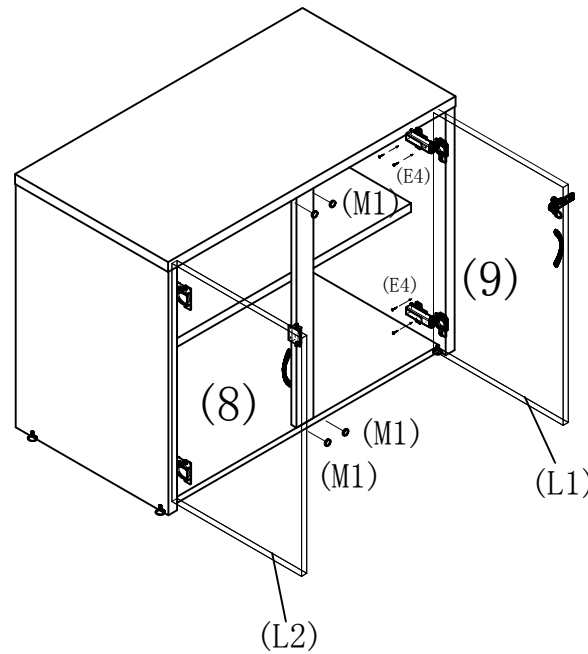

TWO DOOR CABINET

NAP-13

36"W*22"D*29"H

OSP
furniture

877-OSP-WORX
(677-9679)

*Always lay components on A clean,
soft-cushioned surface during assembly.*