

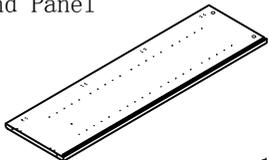
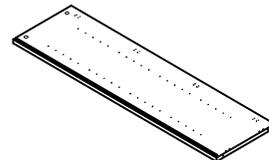

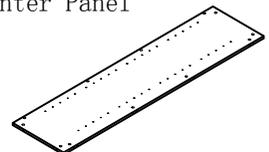
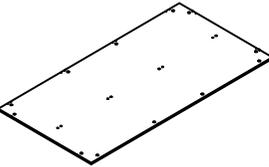
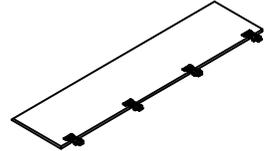
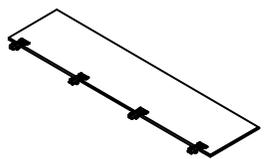
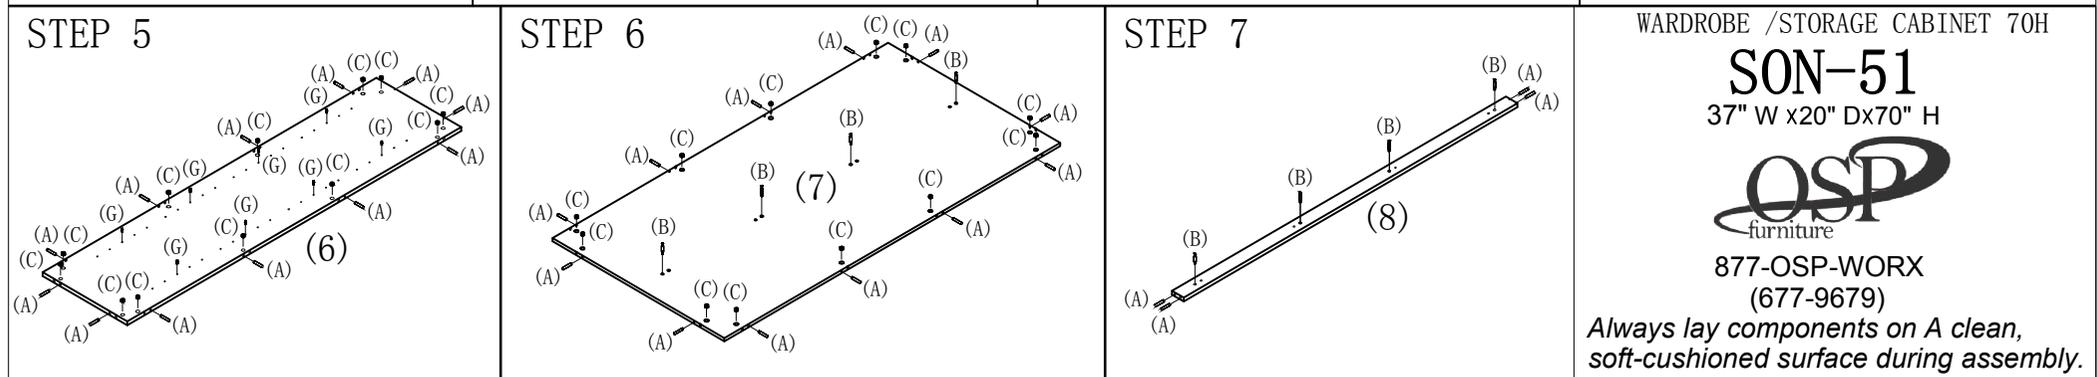



(1) Top  1PC	(2) End Panel  1PC	(3) End Panel  1PC	(4) Shelf  8PCS	(5) Bottom Panel  1PC	(6) Center Panel  1PC		
(7) Back Panel  1PC	(8) Center Upright  1PC	(9) Door  1PC	(10) Door  1PC	(A) Dowel  36PCS+1	(B) Cam Pin  32PCS+1	(C) Cam Lock  32PCS+1	
(p) Adhesive Cam Cover  32PCS+1	(D) Leg Leveller  4PCS	(G) Shelf Pin  32PCS+2	(H) Holder  2PCS	(E5) Wood Screw  36PCS+2	(E4) Wood Screw  4PCS+1	(R) Dress Pole  1PCS	(M1) Cushion  4PCS

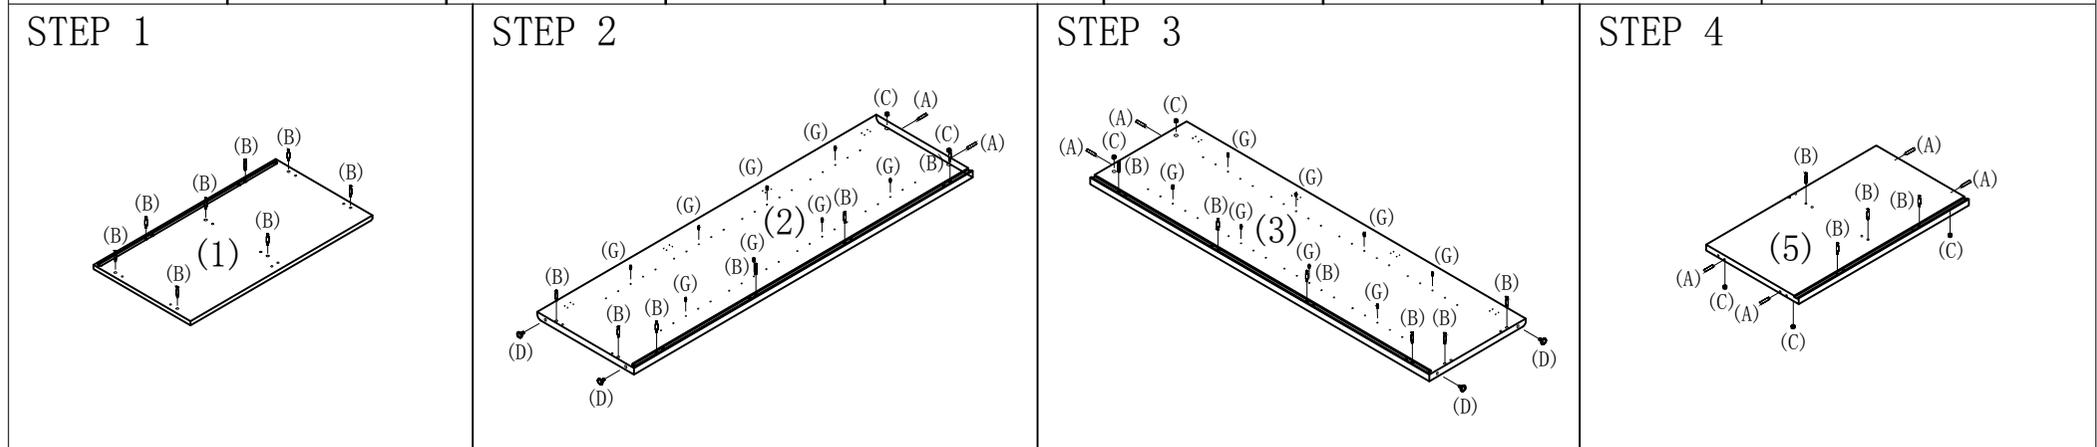


STEP 8

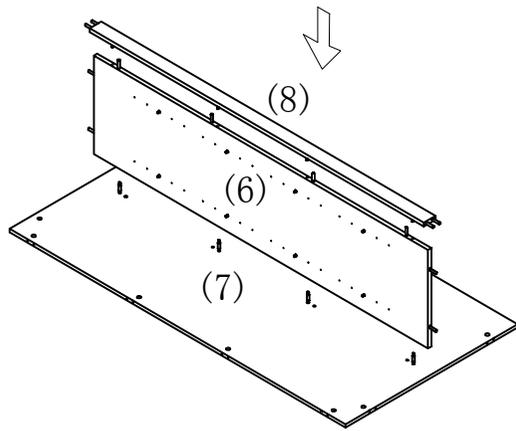


STEP 9

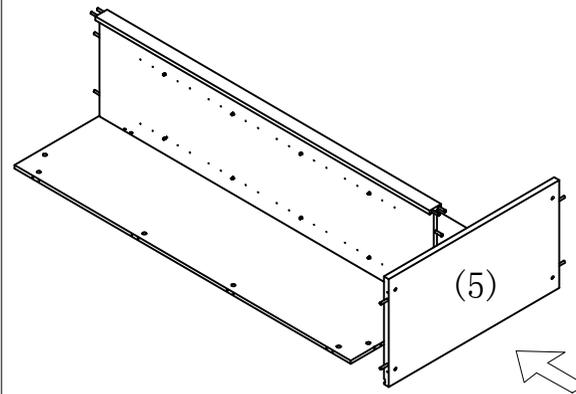


STEP 10

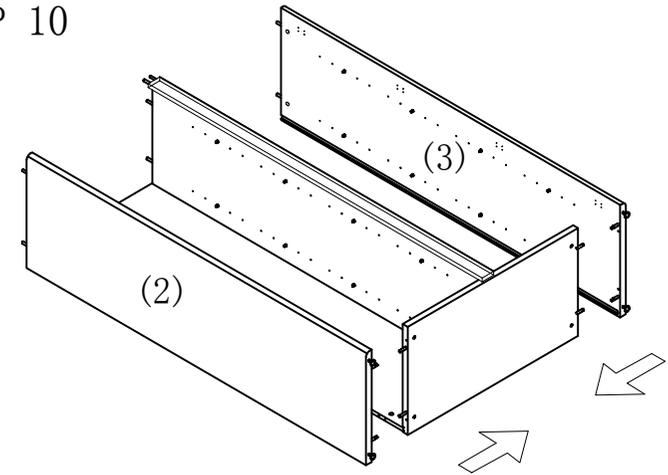


STEP 11

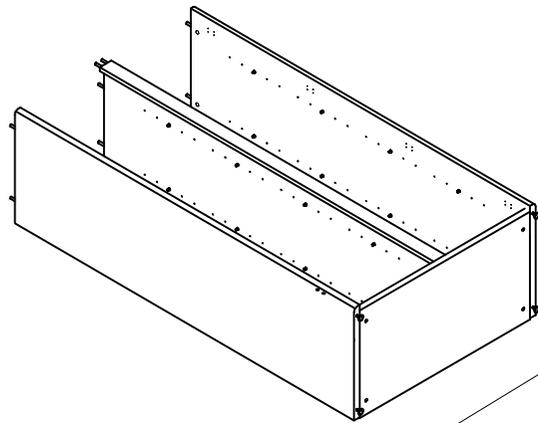



STEP 12

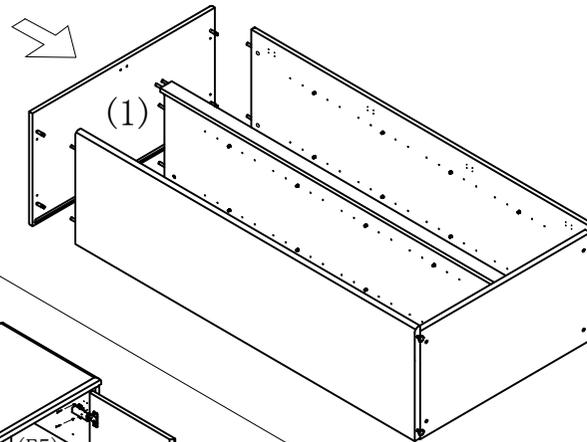

STEP 13

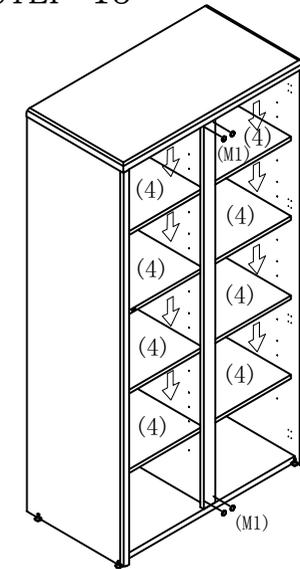

STEP 14

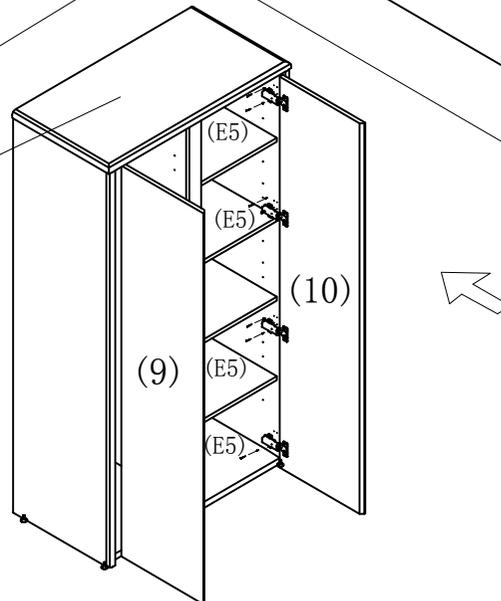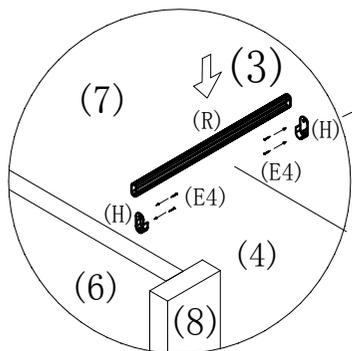

WARDROBE / STORAGE CABINET 70H

SON-51


37" W × 20" D × 70" H

OSP
furniture

877-OSP-WORX
(677-9679)

*Always lay components on A clean,
soft-cushioned surface during assembly.*

(F) Wall-attachment kits

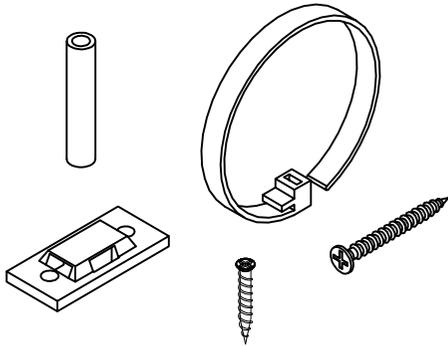

1PC


1. Affix 1st wall-attachment bracket to the top of Bookcase, at rear/center, using (2) **SHORT** screws.

2. Affix 2nd wall-attachment bracket to the wall, using (2) wall anchors and (2) **LONG** screws.

Note: Locate the 2nd bracket 1/4" higher than the 1st bracket (now located on the top of the bookcase). Align 2nd bracket left/right with the 1st bracket.

3. Connect wall-attachment brackets with plastic cable tie.

STEP 13

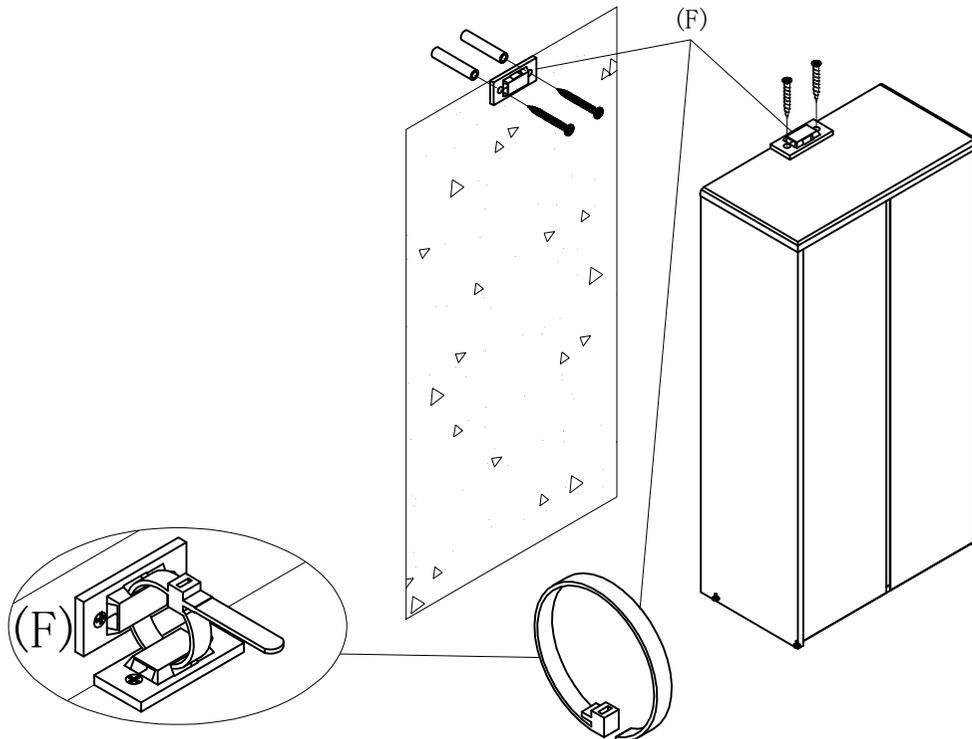

WARDROBE / STORAGE CABINET 70H

SON-51

37" W × 20" D × 70" H

OSP
furniture

877-OSP-WORX
(677-9679)

*Always lay components on A clean,
soft-cushioned surface during assembly*