




SINGLE CHAIR ASSEMBLY INSTRUCTIONS OPTIONAL LOCKING SCREW

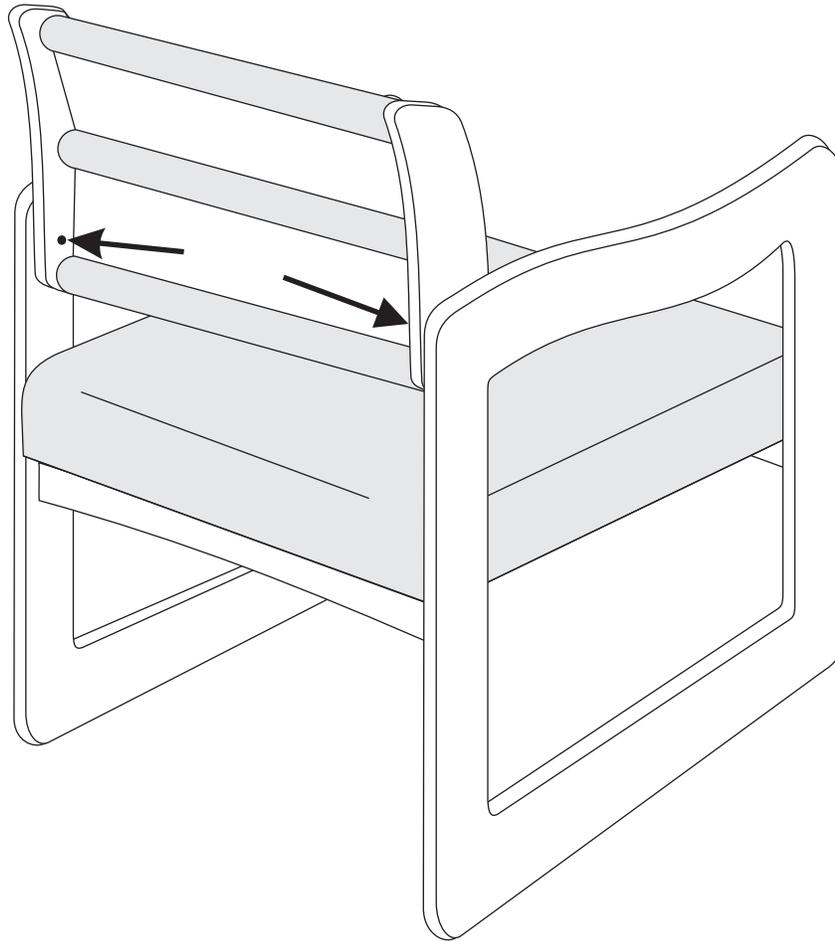

To prevent tampering, an optional locking screw has been provided. Once chair is completely assembled, make sure that the back is slid completely into brackets of side frames. Place screws that are provided into holes in the back side of the back rest being sure that the screw lines up with the small hole on the side frame. Screw in until the screw is snug. Cover with "snap-cap" provided. Repeat with other side.