




Signature Series

800-558-1010

www.NBF.com

ATWORK 60"H storage cabinet w/ wood doors

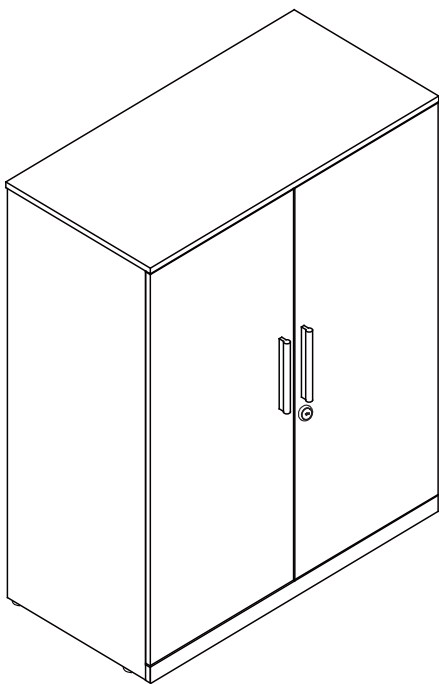

Model# AW-50209

Assembly


Instructions

ATWORK 60" H Wall storage cabinet


with wood doors Model# AW-50209

Identify all the components

- A. Top-1pc (AW-50209-A) B. Left Side-1pc (AW-50209-B) C. Right Side-1pc (AW-50209-C) D. Shelf-1pc (AW-50209-D) E. Bottm-1pc (AW-50209-E) F. Top Trim-1pc (AW-50209-F)

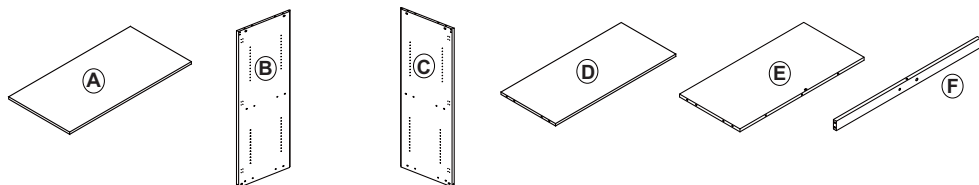

- G. Bottom Trim-1pc (AW-50209-G) H. Back Panel-2pcs (AW-50209-H) I. Back Panel Support -1pc (AW-50209-I) J. Door-2pcs (AW-50209-J) K. Adjustable Shelf-2pcs (AW-ADJUSTSHELF)

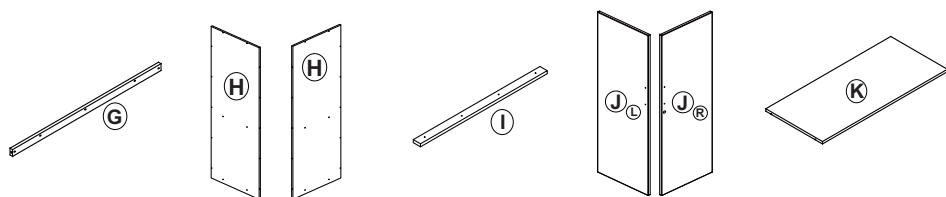

Hardware identification

- Z1. Cam lock-16pcs (AW-CamLock)



- Z2. Cam bolt-16pcs (AW-Cam-Bolt)



- Z3. Wood dowel 8*30-18pcs (AW-WoodDowel)



- Z4. Screw 3.5*14mm-46pcs (AW-PHFWS 3.5*14mmB)



- Z5. Hinge-6pcs (AW-Hinge)



- Z6. Shelf support-8pcs (AW-Shelf-Pin)



- Z7. Handle-2pcs (AW-Handle 2)



- Z8. Bolt-4pcs (AW-RFLAT 4*25mmS)



- Z9. Screw 4*29mm-4pcs (AW-PHFWS 4*29mmB)



- Z10. Adhesive cover-20pcs (AW-Adh-Cover 2)



- Z11. Adjustable glide-4pcs (AW-AdjustGlide 2)



- Z12. Screw 4*25mmR-22pcs (AW-PHRWBS 4*25mmB)



- Z13. Door latch-2pcs (AW-DoorLatch)



- Z14. Wood dowel 6*30mm-5pcs (AW-WoodDowel 2)



- Z15. Hanger-4pcs (AW-Wall-Hanger)



- Z16. Glue-1pc (AW-Glue)



- Z17. Screw 4*25mm-2pcs (AW-PHFWS 4*25mmB)



- Z18. Stud-2pcs (AW-Stud)



- Z19. Strip tie-2pcs (AW-Strip tie)




- Z20. Key-2pcs (AW-Key 3)




- Z21. EVA Q20-2pcs (AW-EVAPAD-Q20)




Step 1

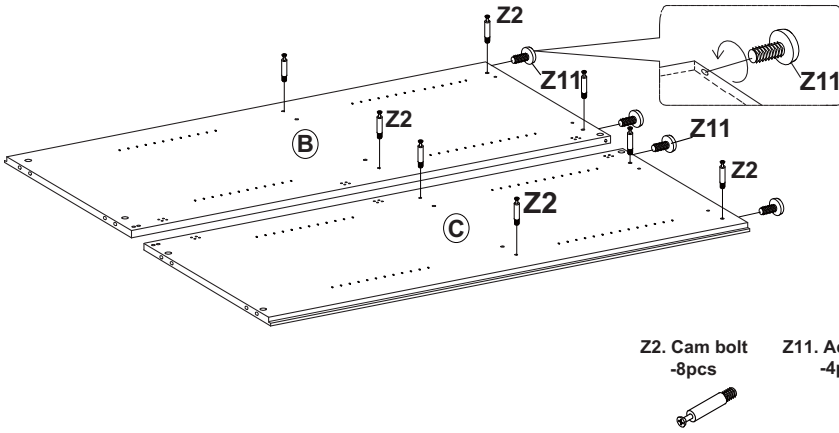


Step 2

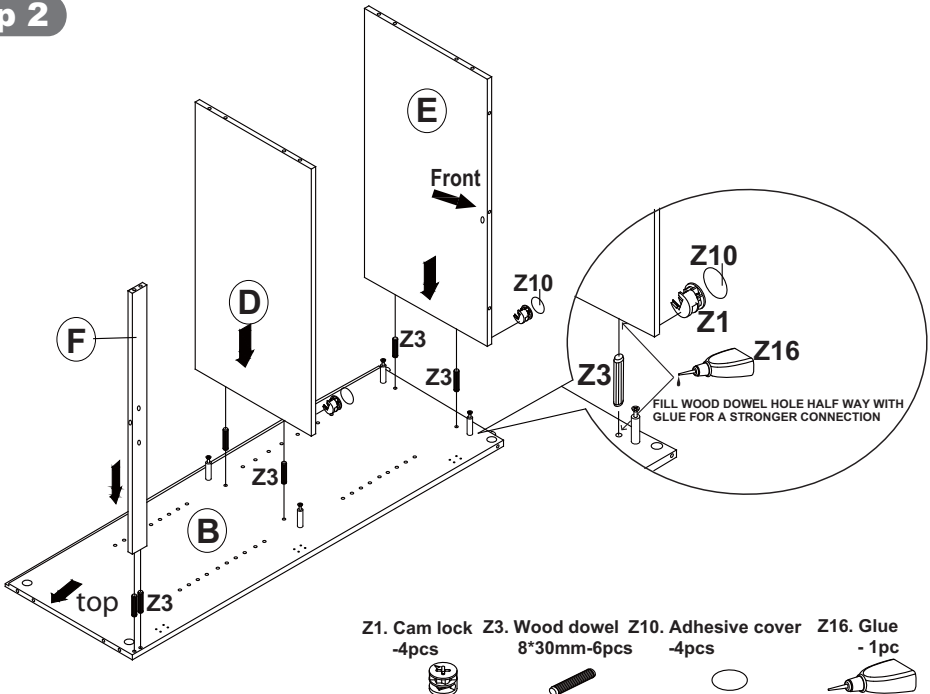

Step 3

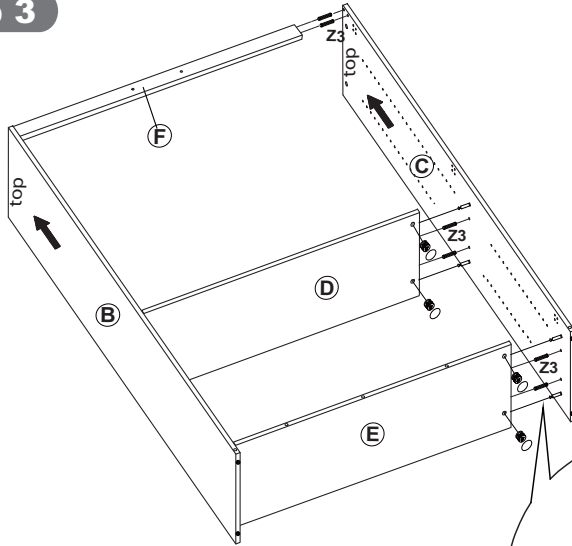

Note




Z16

FILL WOOD DOWEL HOLE HALF WAY WITH GLUE FOR A STRONGER CONNECTION


- Z1. Cam lock -4pcs Z3. Wood dowel 8*30mm-6pcs Z10. Adhesive cover -4pcs Z16. Glue-1pc



Step 4

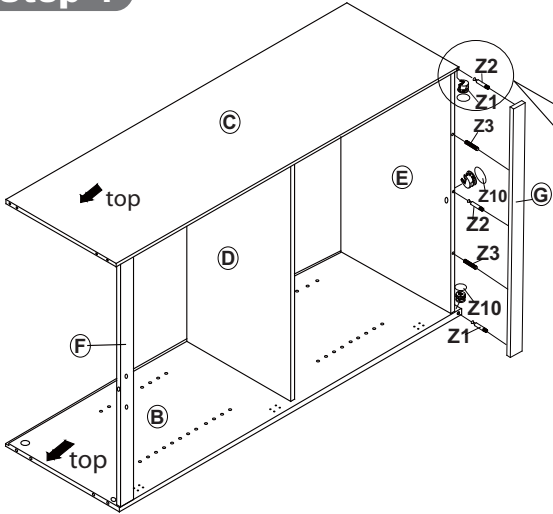

Note




Z16

FILL WOOD DOWEL HOLE HALF WAY WITH GLUE FOR A STRONGER CONNECTION

- Z1. Cam lock -3pcs Z2. Cam bolt -3pcs Z3. Wood dowel 8*30mm-2pcs Z10. Adhesive cover -3pcs Z16. Glue-1pc



Step 5

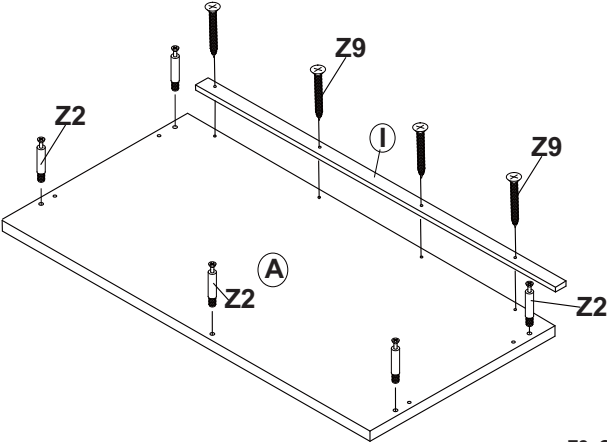


Z2. Cam bolt
-5pcs

Z9. Screw 4*29mm
-4pcs



Step 6

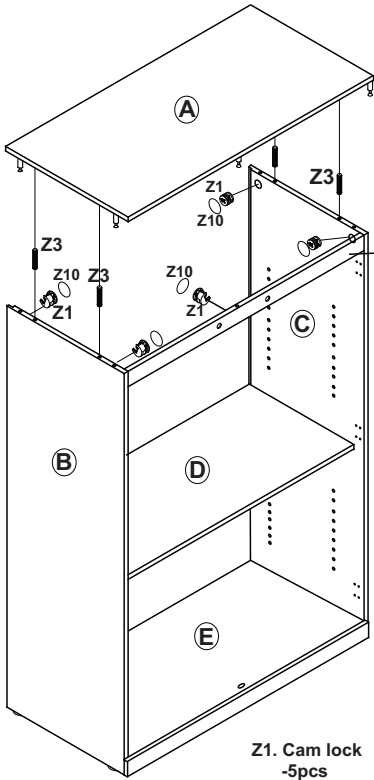


Note



Z16

FILL WOOD DOWEL HOLE HALF WAY WITH
GLUE FOR A STRONGER CONNECTION

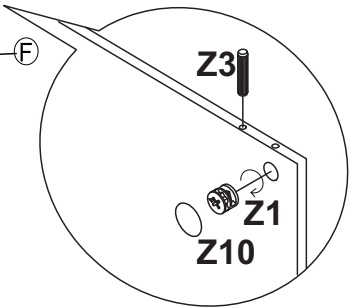

Z1. Cam lock
-5pcs


Z3. Wood dowel
8*30mm-4pcs

Z10. Adhesive cover
-5pcs

Z16. Glue-1pc




Step 7

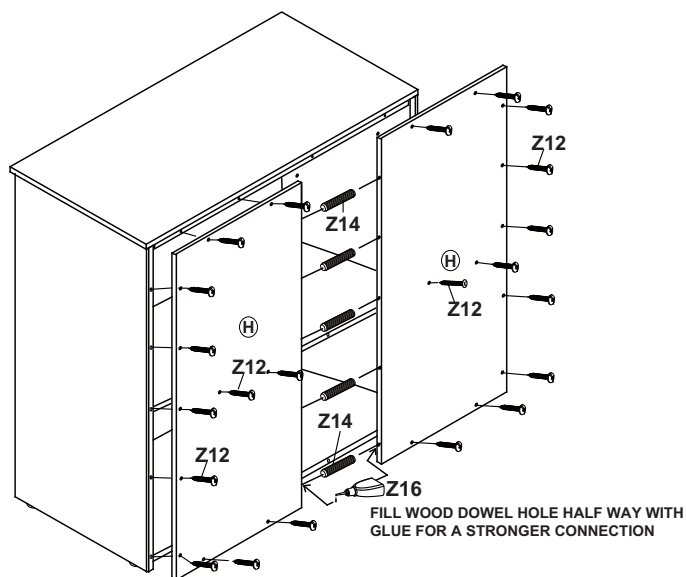

- Z12. Screw 4*25mmR -22pcs Z14. Wood dowel 6*30mm-5pcs Z16. Glue - 1pc



Step 8

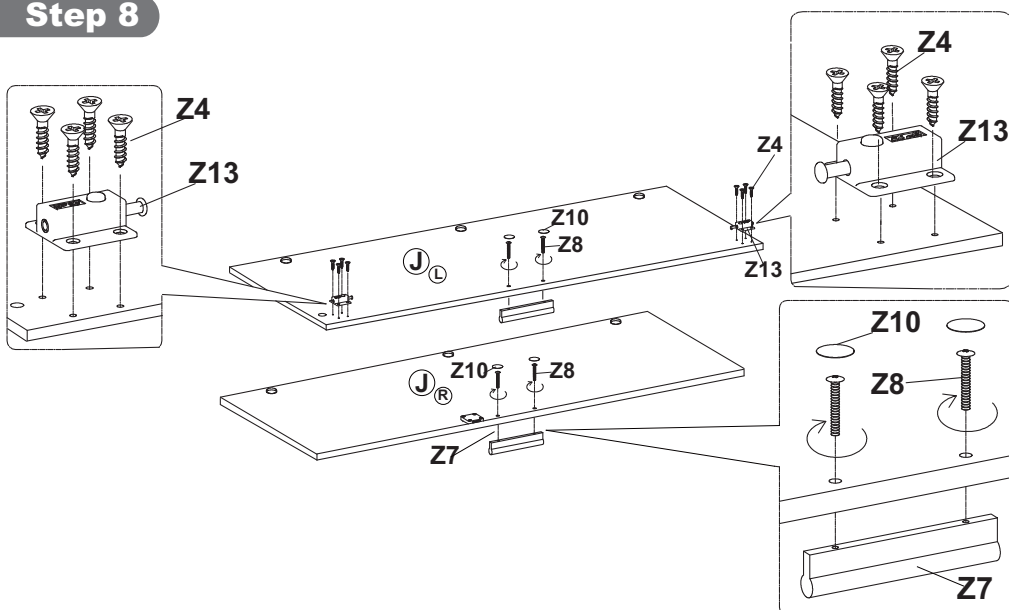

- Z4. Screw 3.5*14mm - 8pcs Z7. Handle - 2pcs Z8. Bolt - 4pcs Z10. Adhesive cover - 4pcs Z13. Door latch - 2pcs

