



Signature Series


800-558-1010

www.NBF.com

Assembly
Instructions

AtWork Divider

Model# AW-50212-96
(96" x 78")

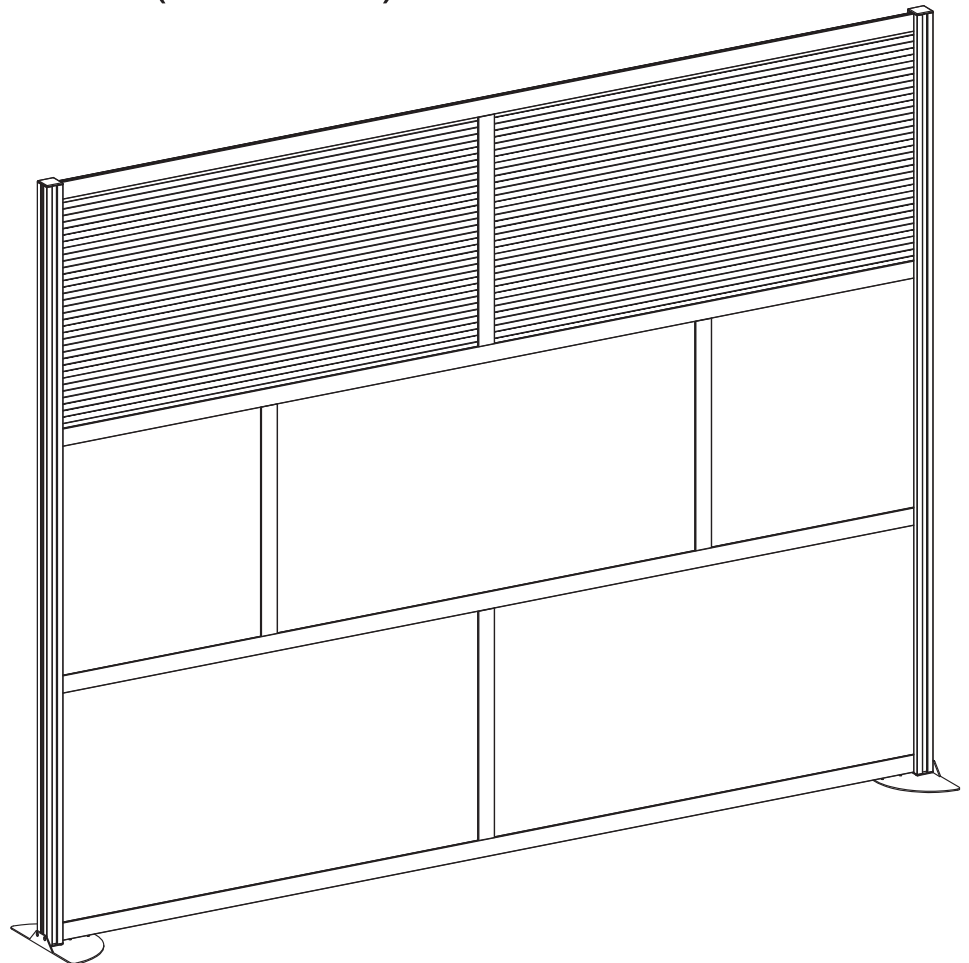

Do not return to store. For product support, please call toll free 866-606-7888

AtWork Divider


Model# AW-50212-96

(96" x 78")


Identify all the components

Carton A.


A. Plexi Glass Inserts 46"-2pcs
(AW-PG46)



B. Cherry Inserts 22"-2pcs
(AW-CH22)



C. Cherry Inserts 46"-1pc
(AW-CH46)




D. Espresso Inserts 46"-2pcs
(AW-ES46)




Carton B.


E. Frame -2pcs
(AW-50212-XX-FR)

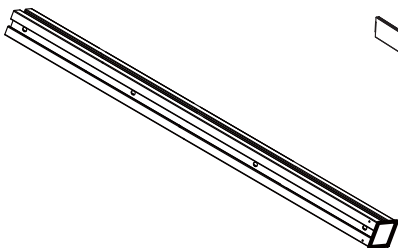

F. Horizontal Bar -4pcs
(AW-50212-72-HB)

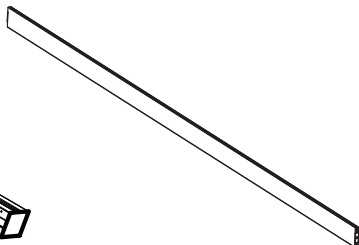

G. Vertical Bar -4pcs
(AW-50211-XX-VB)

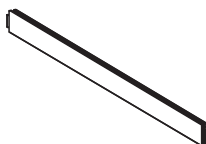


H. Duck Feet -2pcs
(AW-50211-48-DF)




Hardware identification

Carton B.

Z1. Bolt M6*60mm -8pcs
(AW-Bolt M6*60mm)




Z2. Bolt M6*15mm -4pcs
(AW-Bolt M6*15mm)




Z3. Screws 4*12mm -4pcs
(AW- Screws 4*12mm)




Z4. Screws 4*38mm -4pcs
(AW-Screws 4*38mm)




Z5. Allen Key- 1pc
(AW-Allen Wrench)




Z6. EVA 100mm -2pcs
(AW-50212-Z6)




Z7. Top Cap -2pcs
(AW-Top Cap)

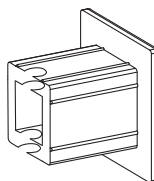


Z8. Bottom Cap (Pre-attached) -2pcs
(AW-Bottom Cap)

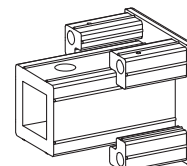


Step 1

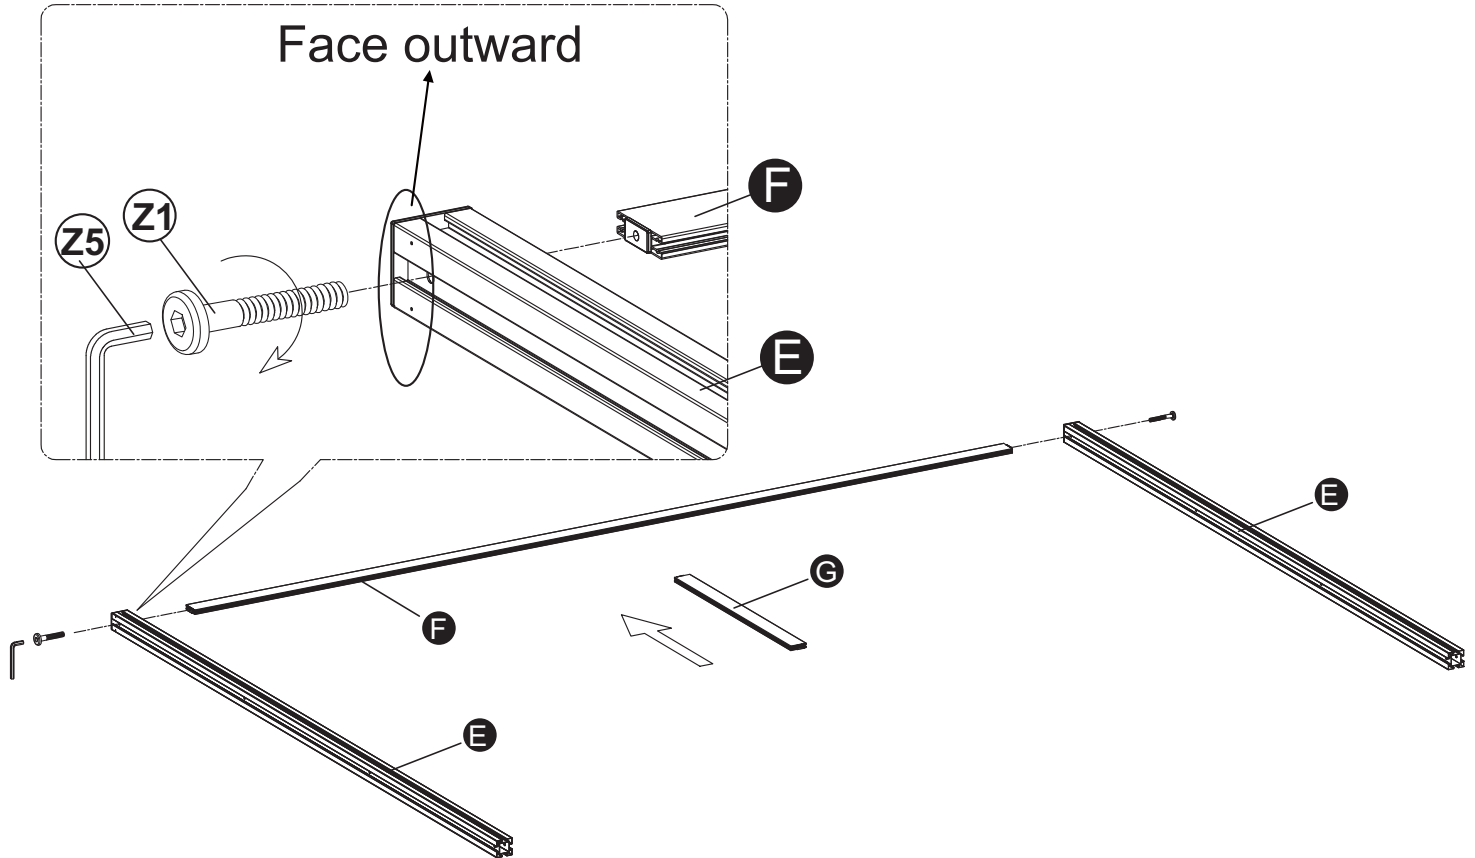

Z1. Bolt M6*60mm
- 2pcs



Z8. Bottom Cap (Pre-attached)
- 2pcs

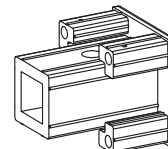


Z5. Allen Key
- 1pc




Note: Do not tighten screws until all screws have been started.

Step 2

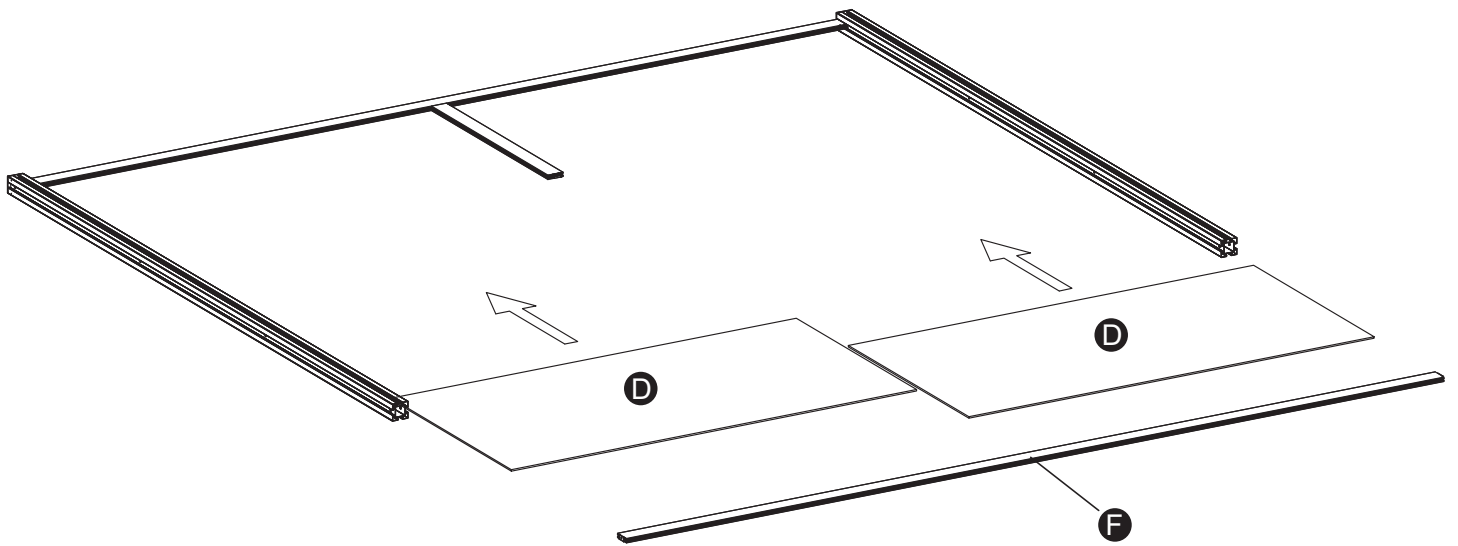


Note: Do not tighten screws until all screws have been started.

Step 3

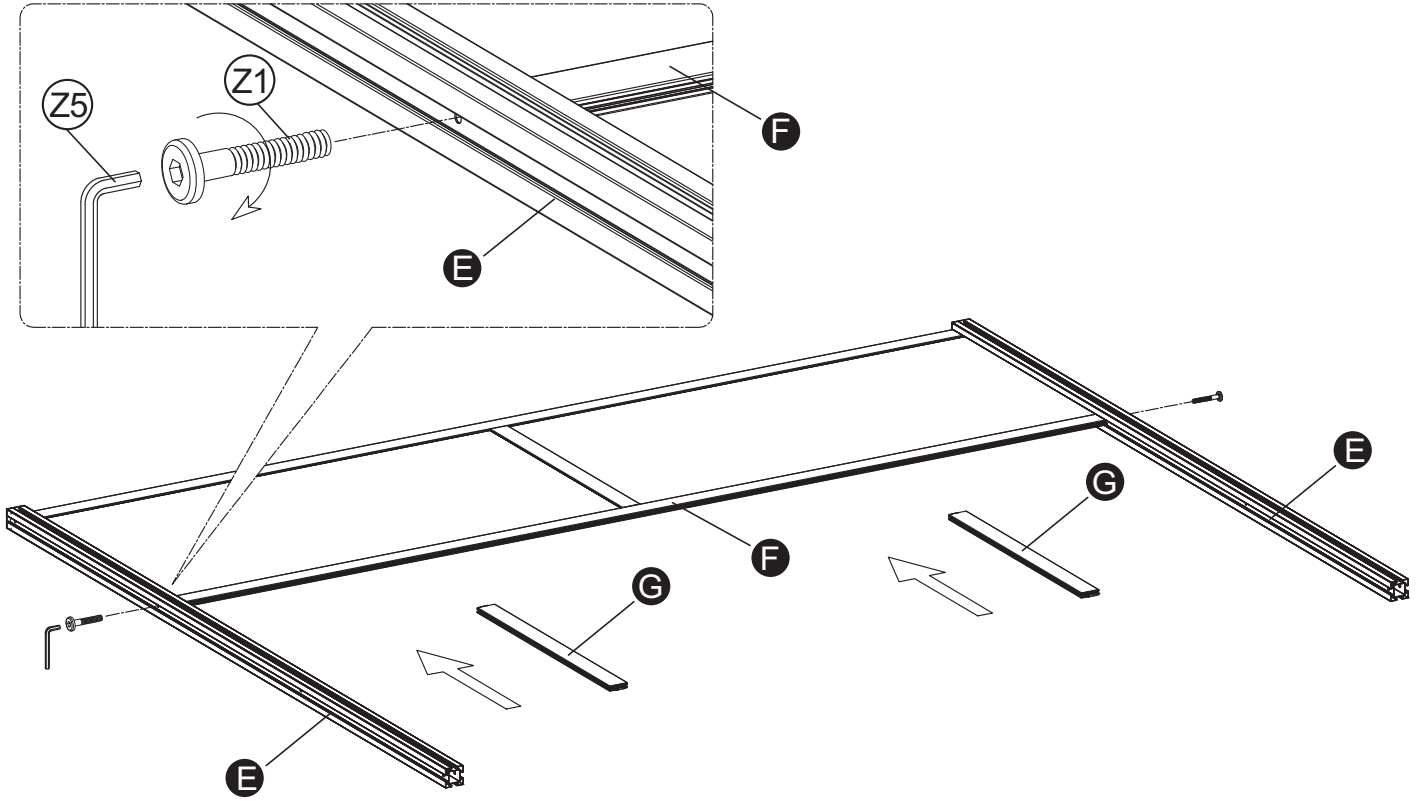


Z1. Bolt M6*60 mm
- 2pcs

Z5. Allen Key
- 1pc




Note: Do not tighten screws until all screws have been started.

Step 4

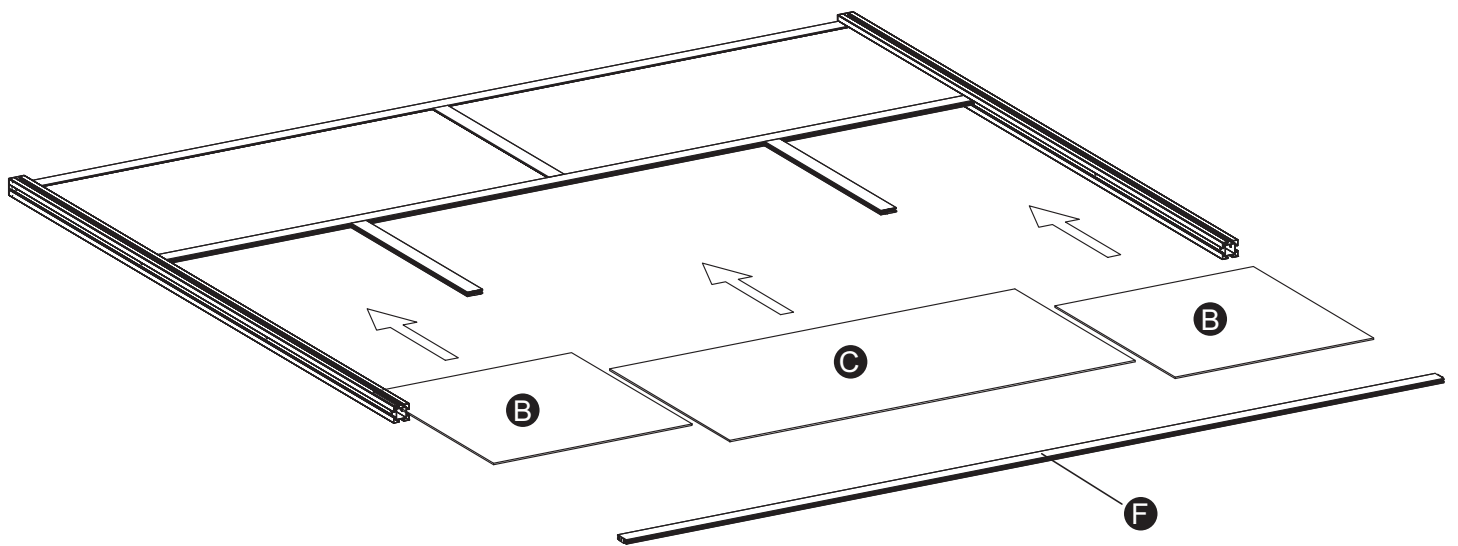


Note: Do not tighten screws until all screws have been started.

Step 5

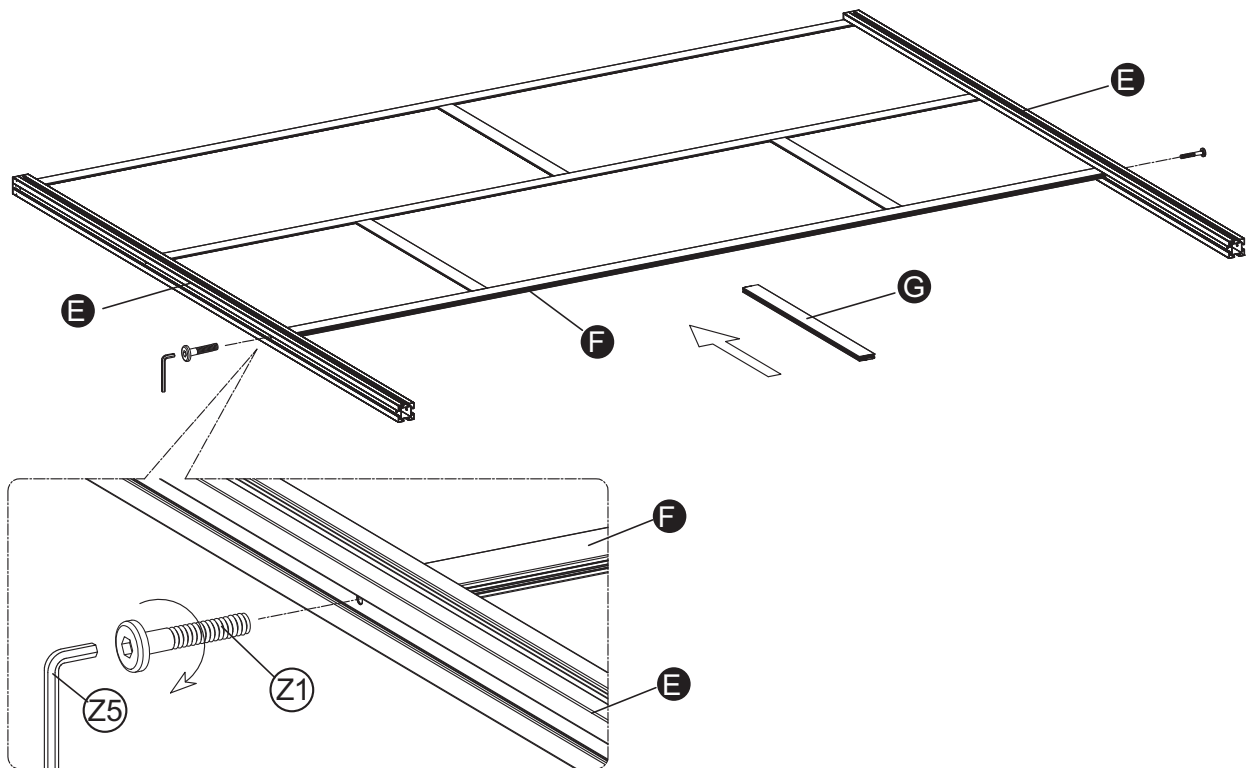


Z1. Bolt M6*60mm
- 2pcs

Z5. Allen Key
- 1pc




Note: Do not tighten screws until all screws have been started.

Step 6

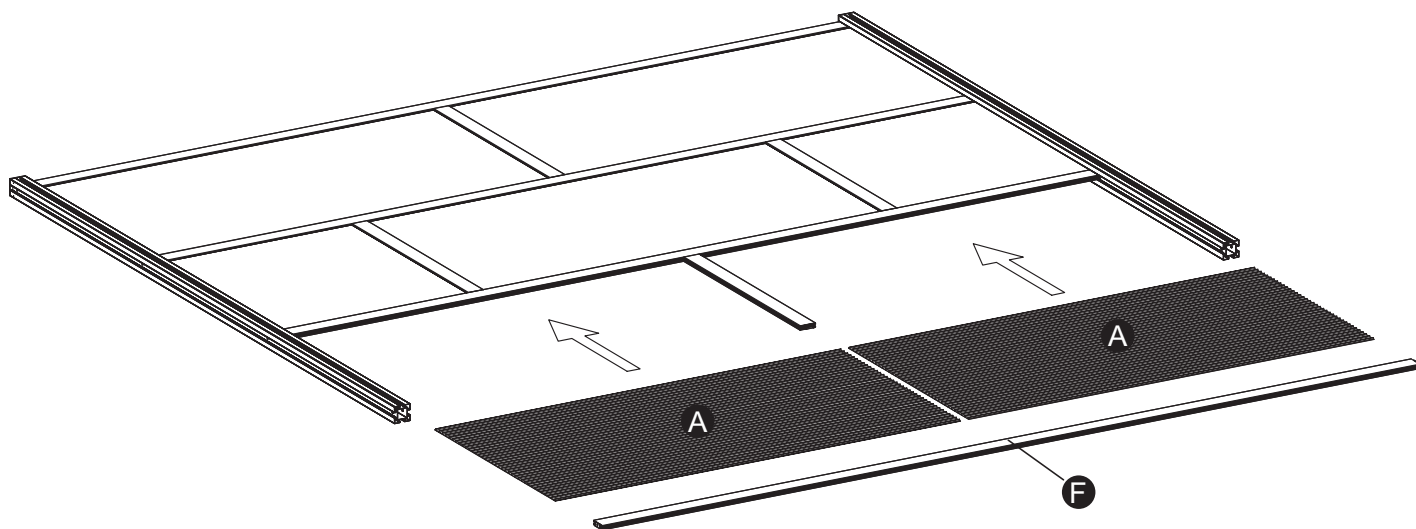

Note: Do not tighten screws until all screws have been started.



Step 7

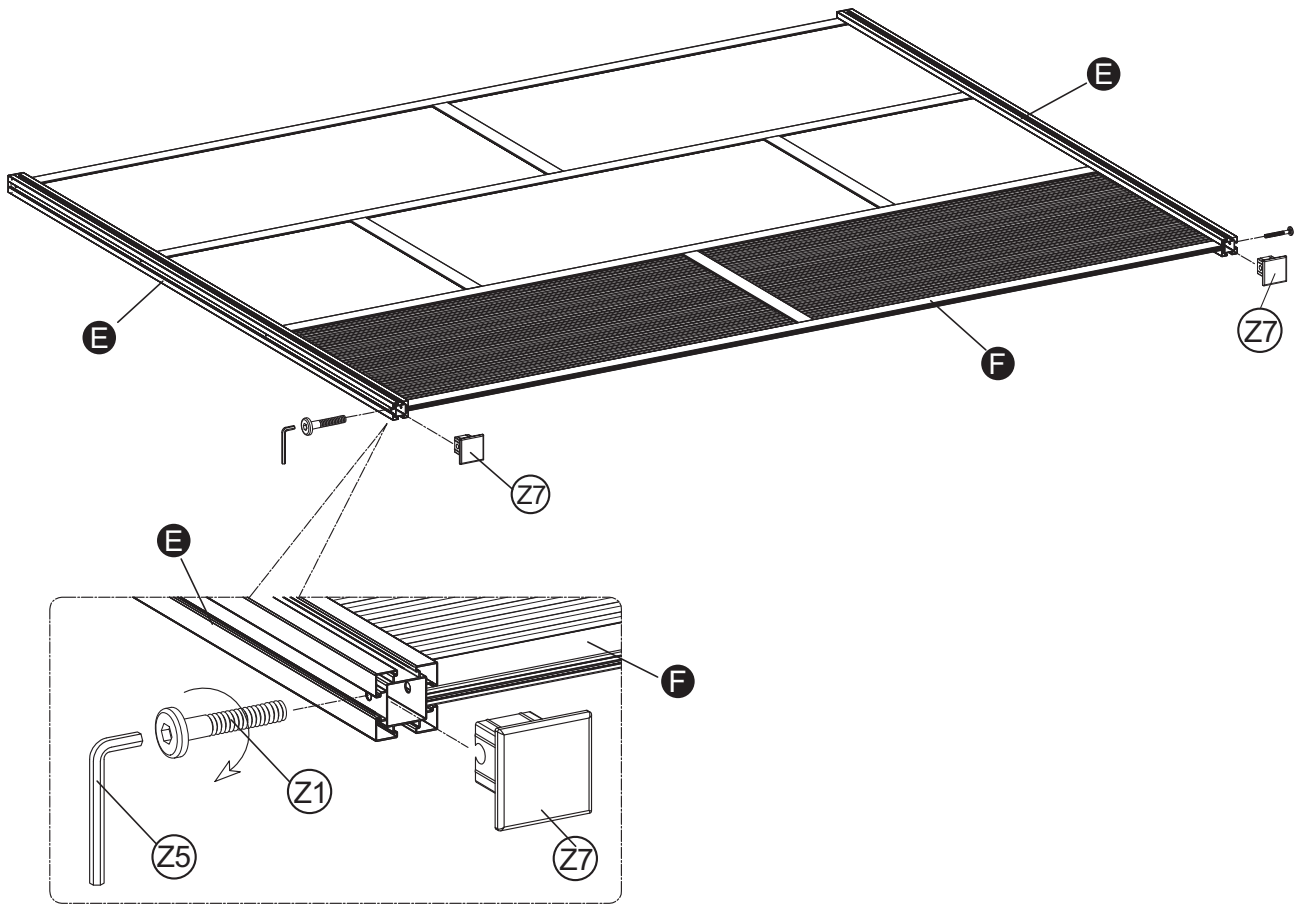

Z1. Bolt M6*60mm -2pcs


Z5. Allen Key -1pc

Z7. Top Cap -2pcs

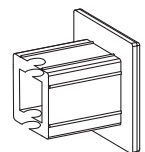


Note: Do not tighten screws until all screws have been started.

Step 8

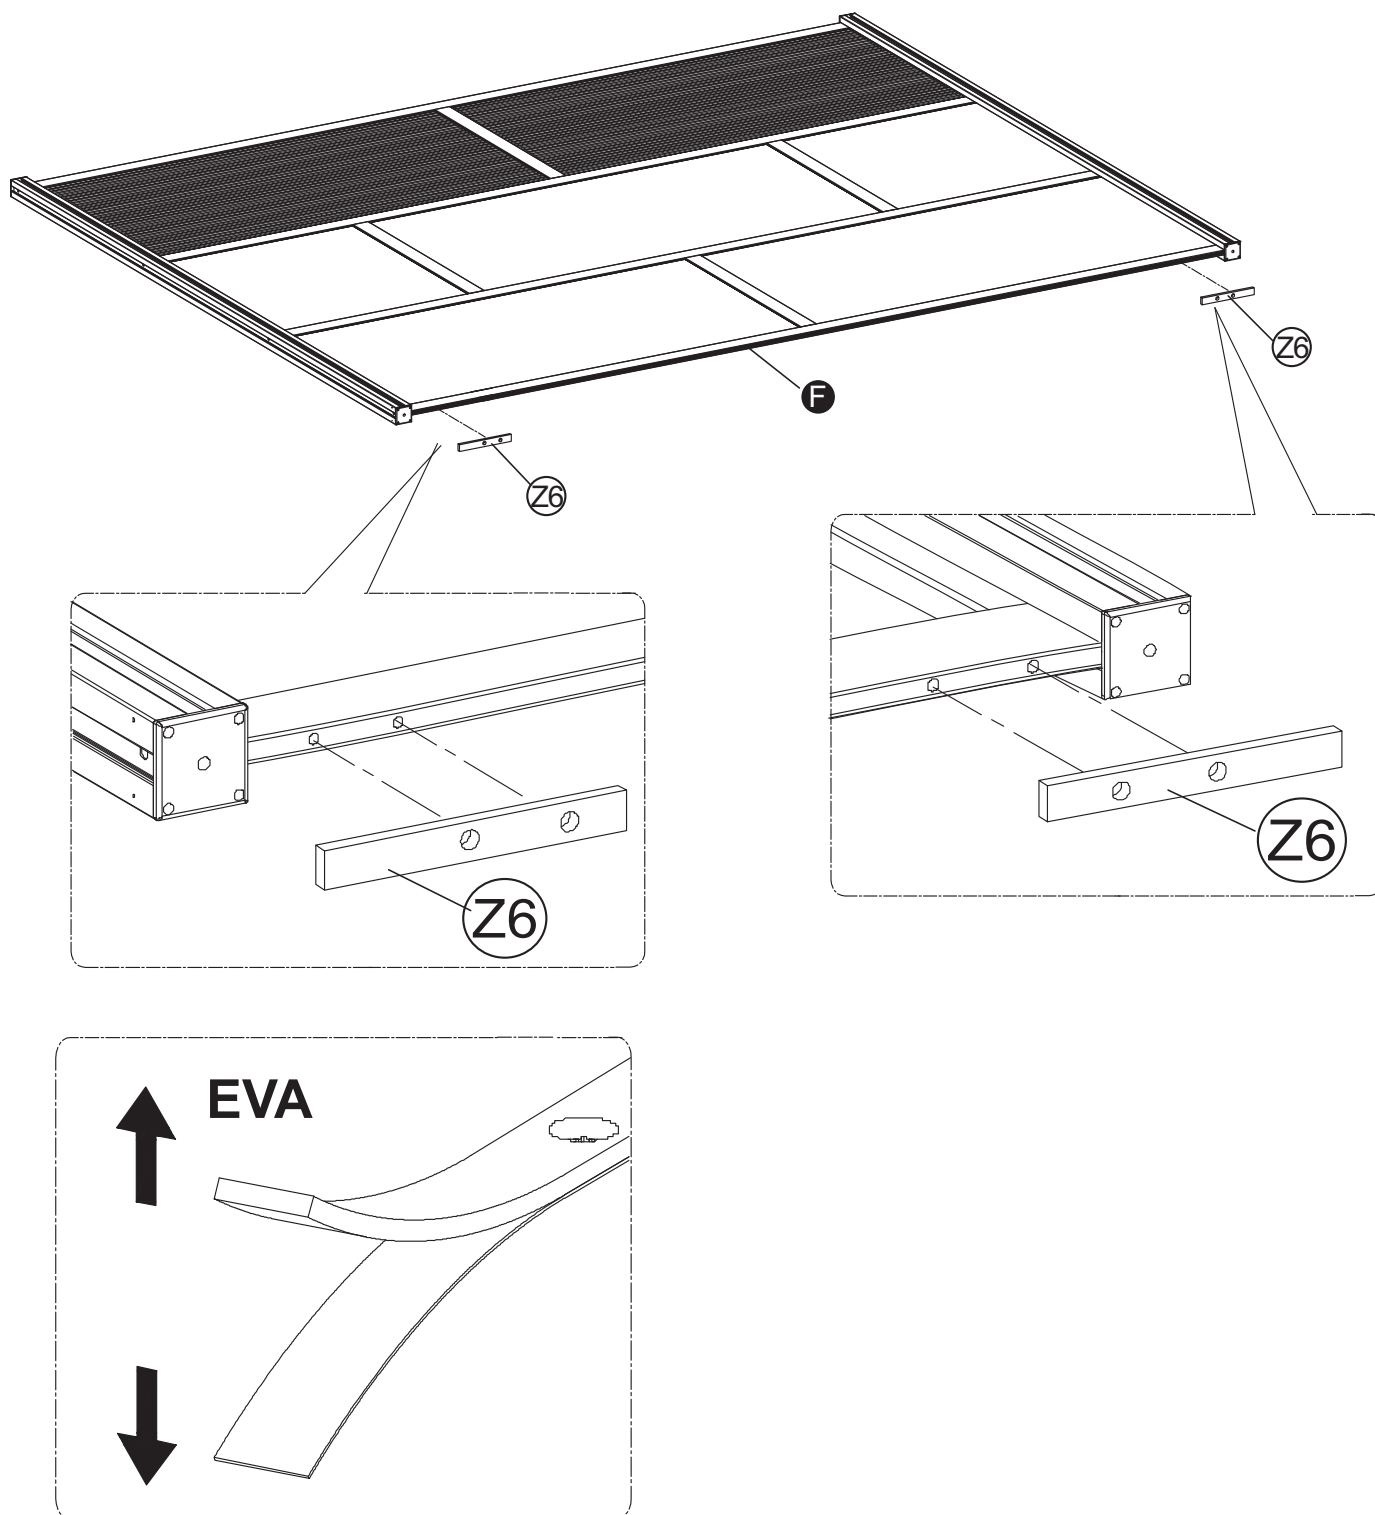


Z6. EVA 100 mm -2pcs




Note: Do not tighten screws until all screws have been started.

Step 9

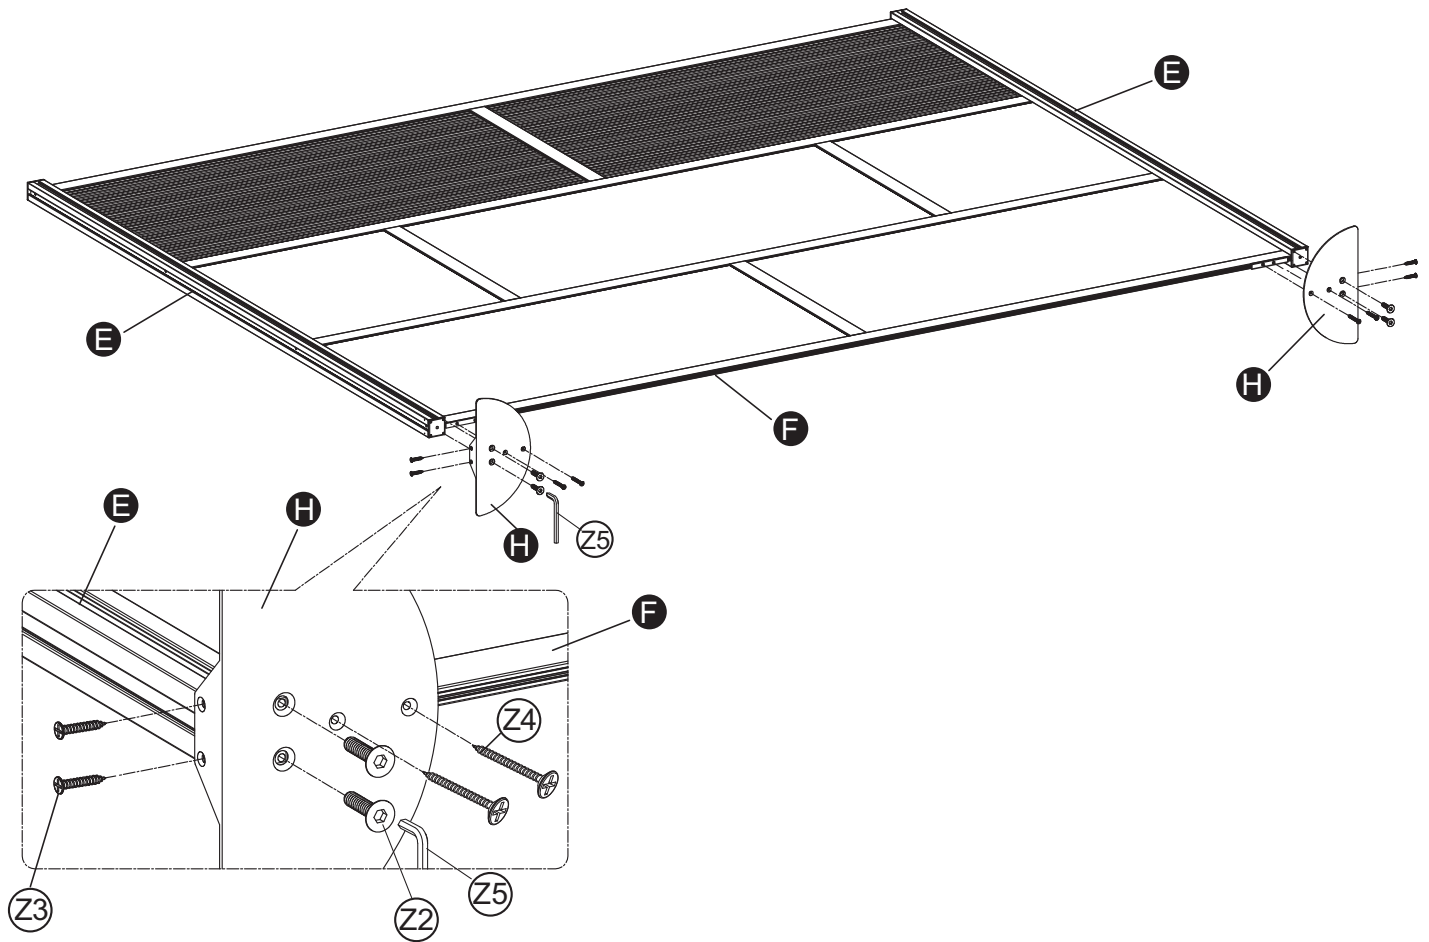


**Z2. Bolt M6*15mm
-4pcs**



**Z3. Screws 4*12mm
-4pcs**



**Z4. Screws 4*38mm
-4pcs**



**Z5. Allen Key
- 1pc**



Note: Do not tighten screws until all screws have been started.