
IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

MODEL:B7719 B709

(1)x1	(2)x1	(3)x1 (L)x1 (R)	
Back	Seat	Right Frame & Left Frame	
(4)x1	(5)x2		
Connection Rev			
Connecting Bar			
(A)x4 €∏	Ⅲ M6*40 SEAT SCR	M6*40 SEAT SCREW	
(B)x4	Ⅲ M6*25 BACK SCF	M6*25 BACK SCREW	
(C)x2		M6*14 CONNECTING BAR SCREW (Please find these 2 screws on sled base.)	

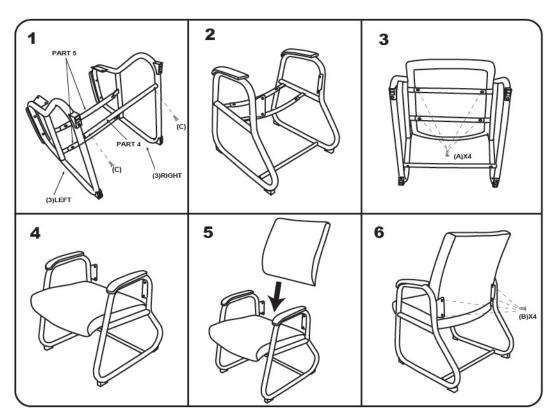

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.



