


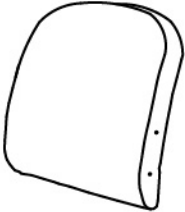






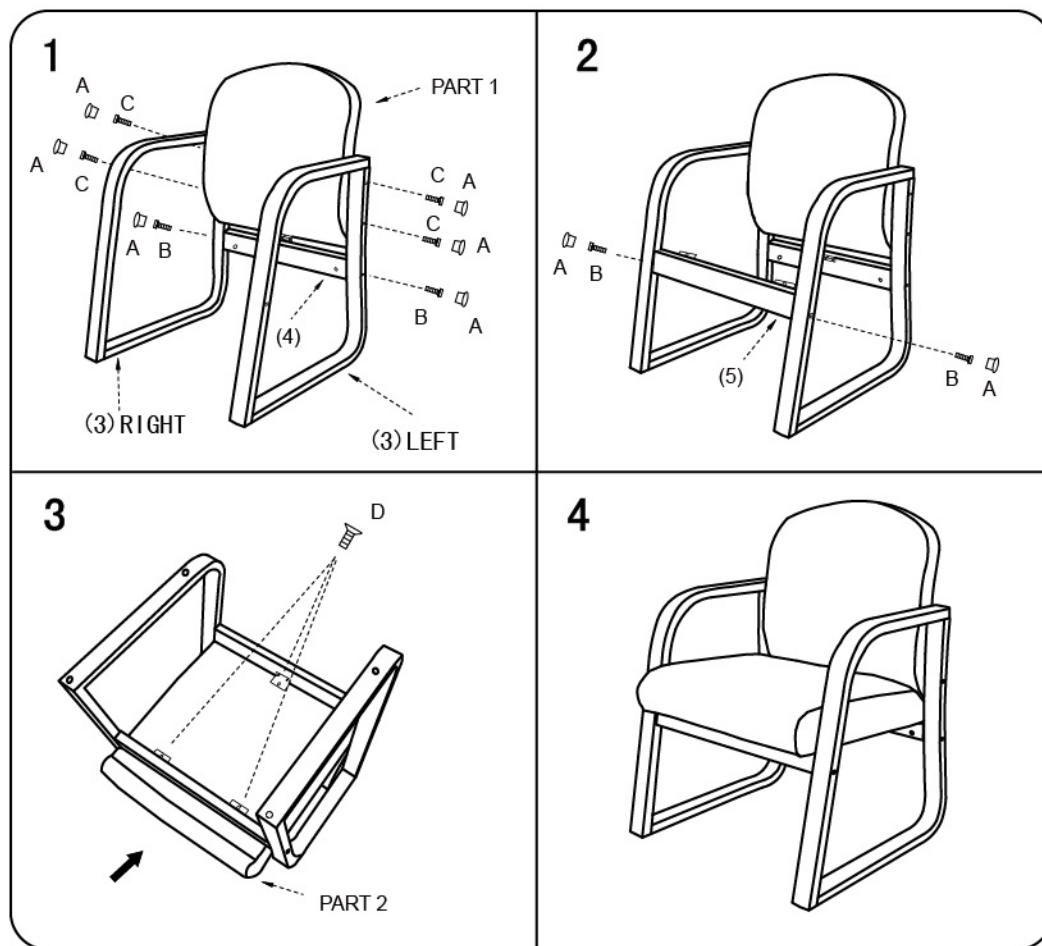


**IMPORTANT NOTICE:
HARDWARE PACKAGE IS ATTACHED
ON THE BOTTOM OF SEAT CUSHION.**

MODEL: 9560 9570

(1)x1	(2)x1	(3)x1 (L)x1 (R)
		
Back	Seat	Right & Left Frame
(4)x1	(5)x1	
		
Back Bar	Front Bar	
(A)x8		WOOD CAP
(B)x4		M6*80 SCREW FOR FRAME
(C)x4		M6*60 SCREW FOR BACK CUSHION
(D)x3		M6*22 SCREW FOR SEAT CUSHION
(E)x1		ALLEN KEY



Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.