


NBF

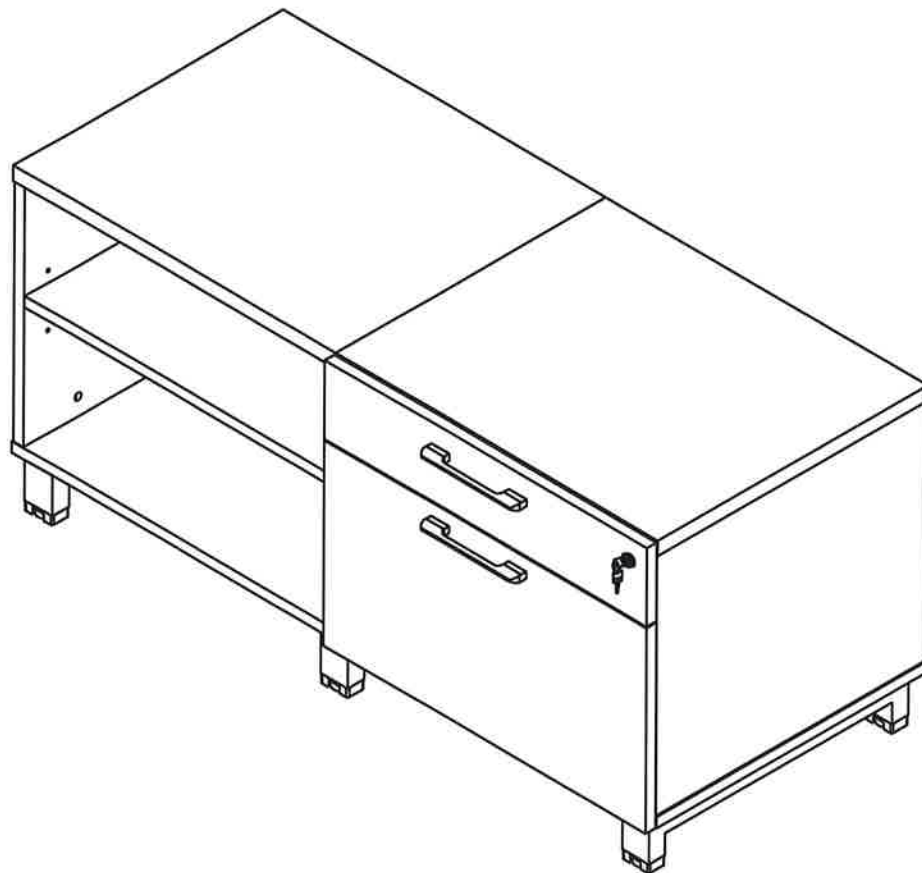







Low Credenza Assembly Instructions




O-EST-1240D

1.


**NBF****Assembly HARDWARE**

S/N	PICTURE	NAME	TOTAL QTY	REMARK
A		File clip	2+1PCS	
B		Aluminum File Bar	1PCS	
C		Keys	1SET	
D		Handle With Screws	2PCS	Come on drawers
E		Screw $\phi 6 \times 12$	20+1PCS	
F		Shelf Peg	4PCS	


PART LIST

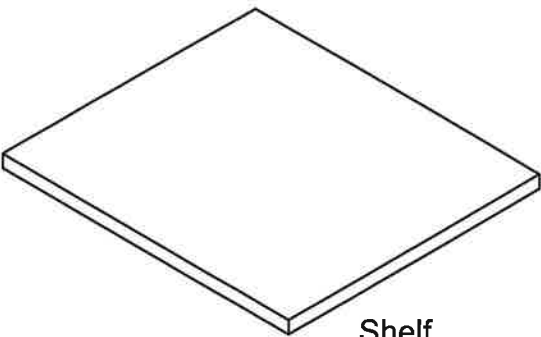


Shelf

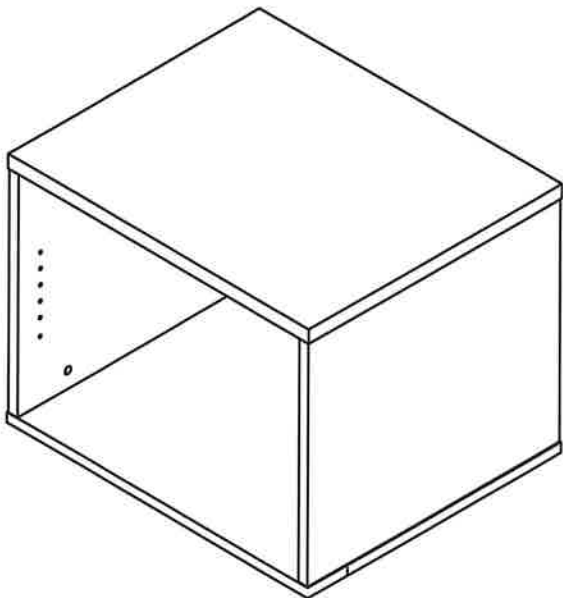


Bookcase

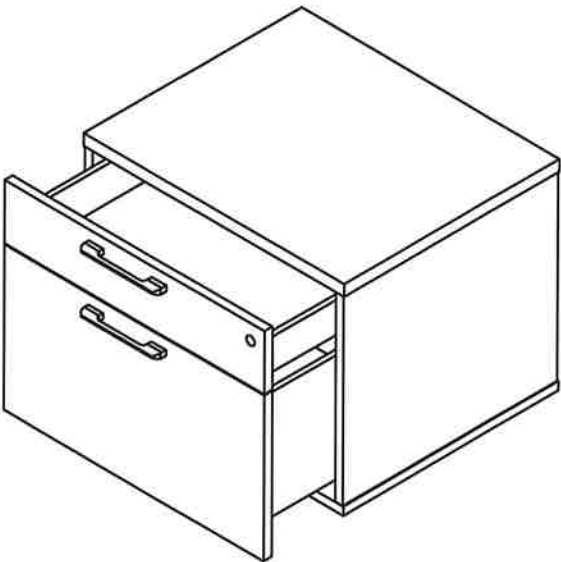


2-Drawer cabinet

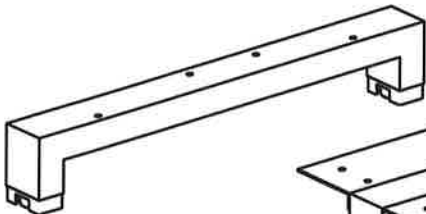

Side leg

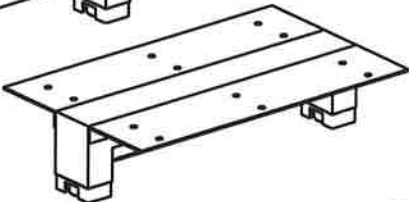


Middle leg

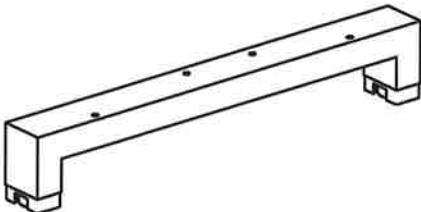


Side leg

1. UNSTALL THE PRE-INSTALLED HANDLES. THEN INSTALL ON THE FRONT OF DRAWER.

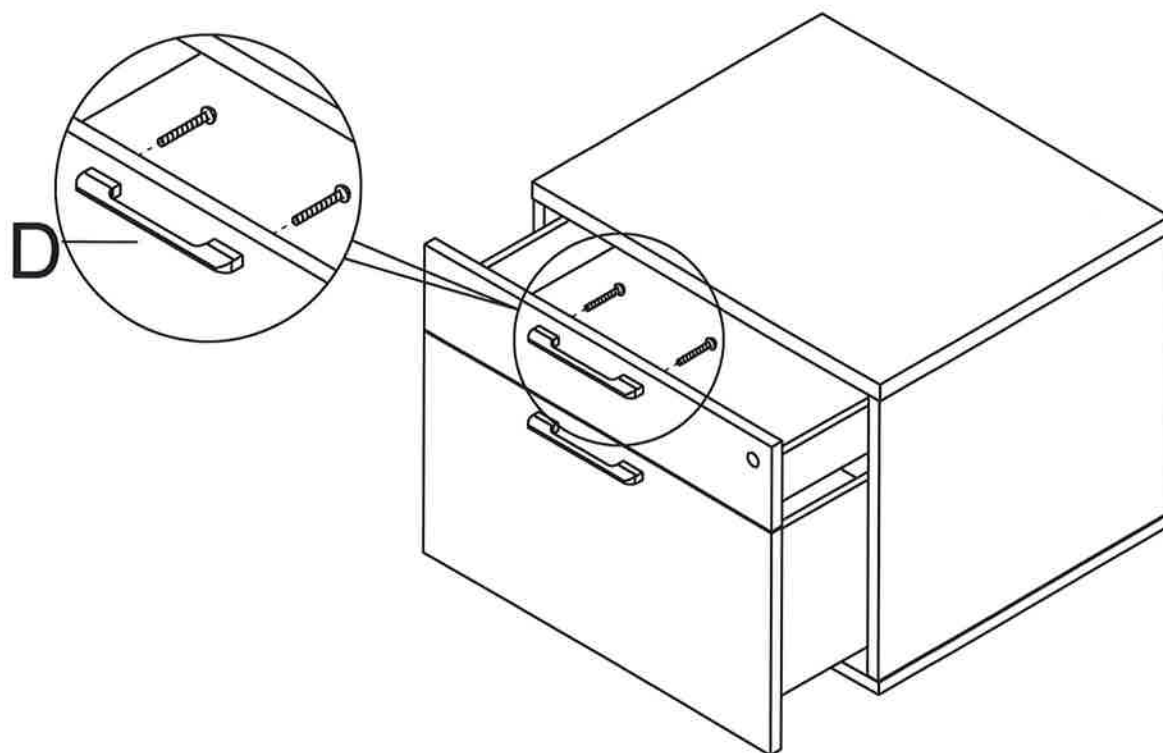


2. INSTALL 3 LEGS ON THE UNDERSIDE OF BOOKCASE AND 2-DRAWER CABINET WITH "E" SCREWS. USE POWER DRILL FOR CONNECTION.
E(20X)

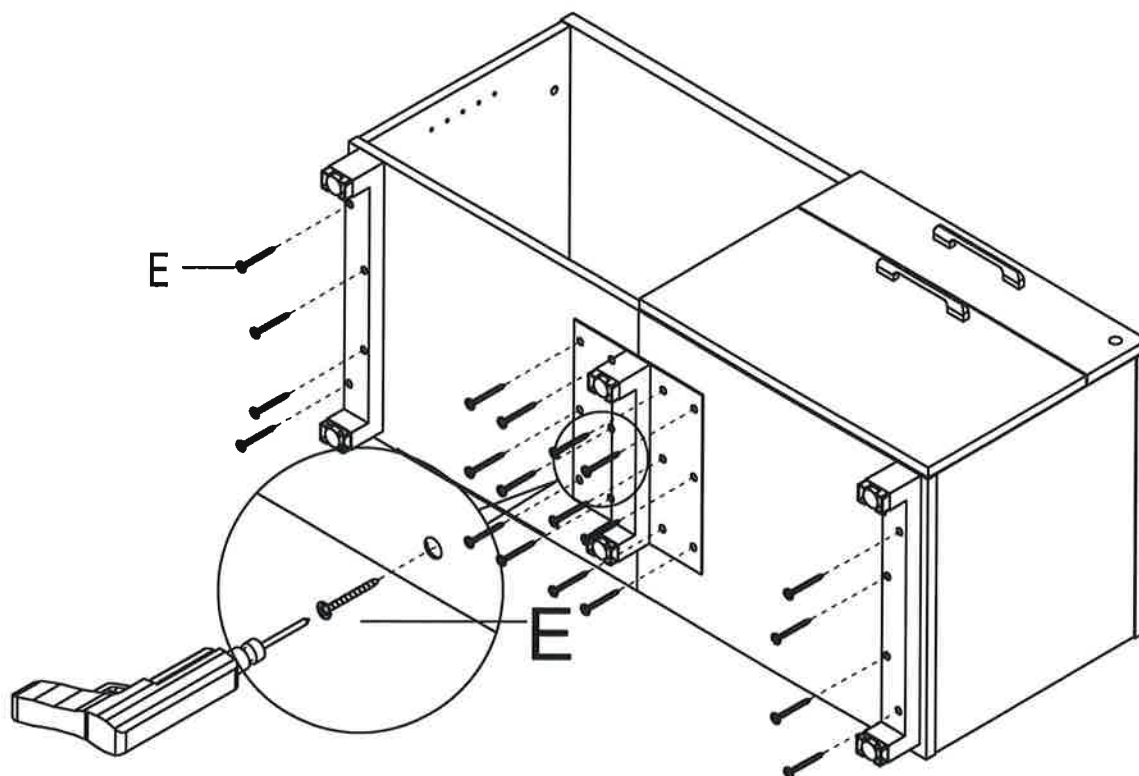

3. INSTALL "F" SHELF PEG ON BOTH SIDE PANELS OF BOOKCASE. THEN PUT SHELF IN PLACE.


F(4X)

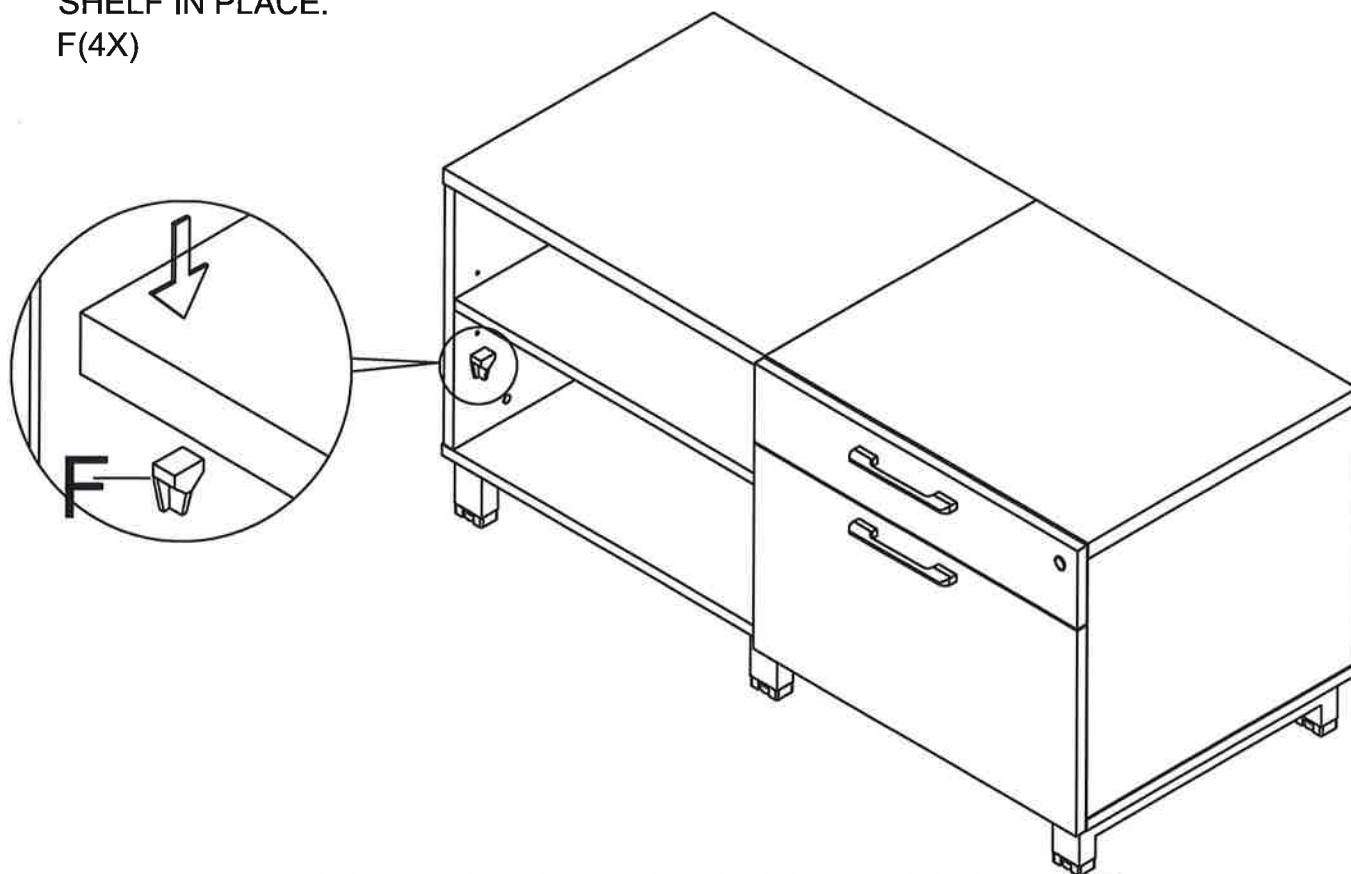

4.PLACE "B" FILE BAR INSIDE BOTTOM DRAWER USING "A" FILE CLIPS.

A(2X)

B(1X)

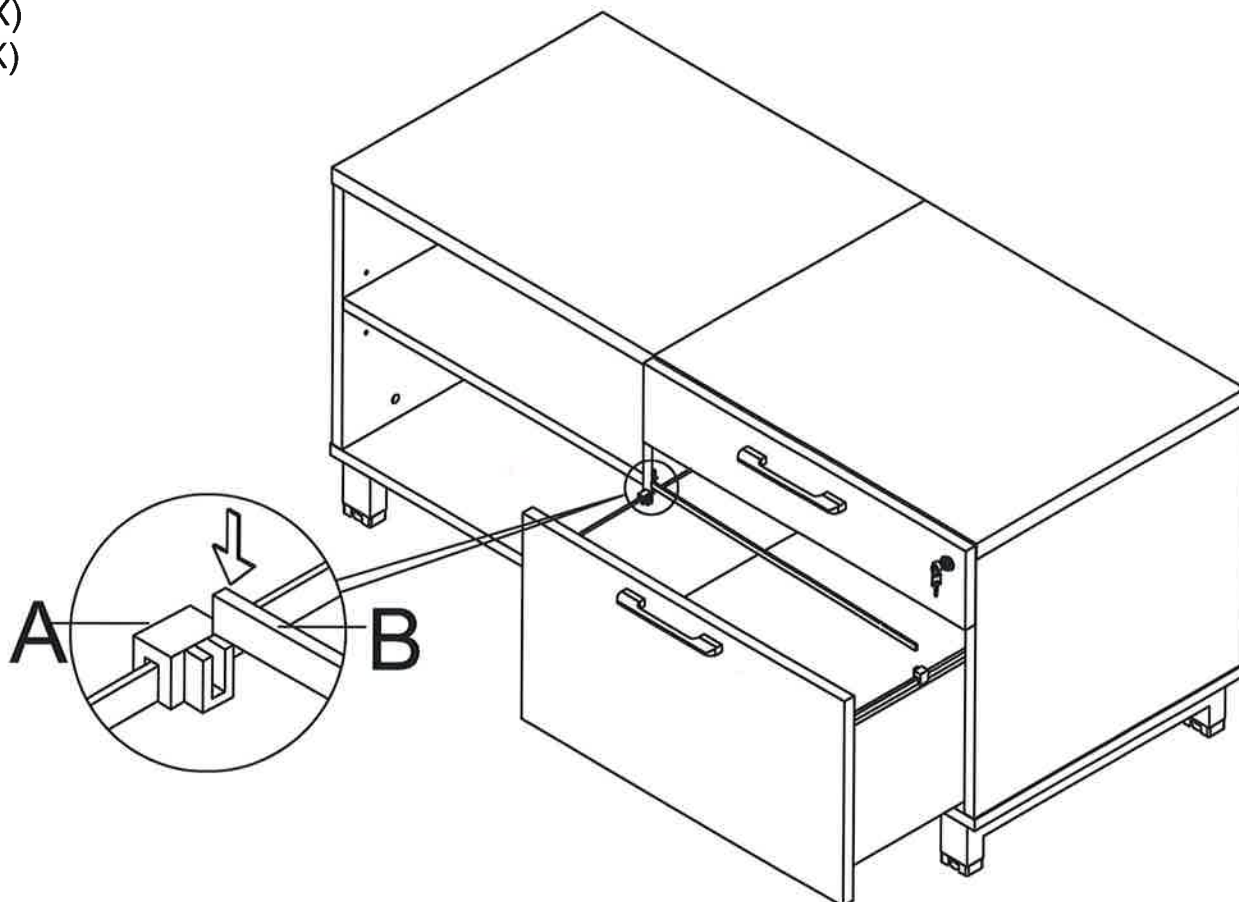

5.

5.COMPLETED.

