

Model #SNTACCSC Counter Stool

Model #SNTACBSC Bar Stool







Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HARDWARE LIST

- A (10) 1/4" x 5/8" Allen Bolts
- B (4) 1/4" x 1-1/2" Allen Bolts
- C (2) 1/4" x 1" Allen Bolts
- D (16) 1/4" Flat Washers
- E (16) 1/4" Spring Washers
- F (1) 1/4" Allen Wrench

PARTS LIST

- G (1) Stool Back
- H (1) Seat Base
- I (2) Stool Leg Panels
- J (1) Support Ring

| PART | QTY | HARDWARE | PART | QTY | HARDWARE |
|------|-----|---|------|-----|---|
| A | 10 |  | B | 4 |  |
| C | 2 |  | D | 16 |  |
| E | 16 |  | F | 1 |  |

STEP 1


Begin assembly by attaching the Legs (I) to the Support Ring (J) with 2 Allen Bolts (A), 2 Spring Washers (E) and 2 Flat Washers (D) per leg.

STEP 2

Next attach the Stool Leg Panels (I) to the Seat Base (H) by using 4 Allen Bolts (B), 4 Spring Washers (E) and 4 Flat Washers (D) to secure the tops of the panels to the swivel plates in the base.

STEP 3

Next attach the Stool Back (G) to the Seat Base (H) with 2 Allen Bolts (A), 2 Spring Washers (E) and 2 Flat Washers (D) from the inside and 2 Allen Bolts (C), 2 Spring Washers (E) and 2 Flat Washers (D) from the outside. Tighten all bolts with Allen Wrench (F) provided.

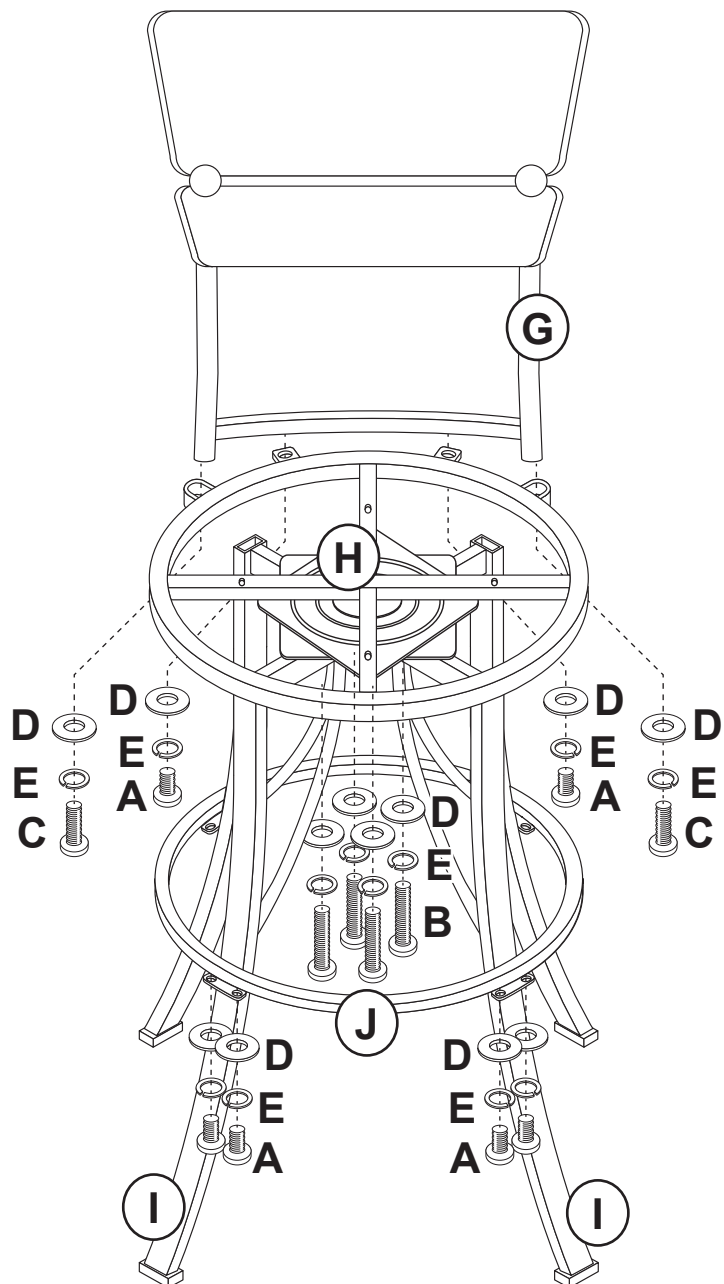







Examinez tous les matériaux d'emballage pour les petites pièces qui peuvent avoir été lâche pendant le transport. Des contrôles périodiques sont recommandées afin d'assurer que tous les composants sont en bonne position, tendu et sans dommages. Gardez ces instructions de montage pour référence future. Assemblage par un adulte est requise. Le produit de Hillsdale Furniture, LLC est conçu pour un usage résidentiel seulement. Numéro de téléphone Service à la clientèle: 502-562-0000

LISTE DU MATÉRIEL

- A (10) 1/4" x 5/8" Boulons Allen
- B (4) 1/4" x 1-1/2" Boulons Allen
- C (2) 1/4" x 1" Boulons Allen
- D (16) 1/4" Rondelles Plates
- E (16) 1/4" Rondelles Ressort
- F (1) 1/4" Clé Allen

LISTE DES PIÈCES

- G (1) Tabouret Retour
- H (1) Base de Siège
- I (2) Panneaux Tabouret Jambe
- J (1) Anneau de Soutien

| PARTIE | QTY | MATÉRIEL | PARTIE | QTY | MATÉRIEL |
|--------|-----|---|--------|-----|---|
| A | 10 |  | B | 4 |  |
| C | 2 |  | D | 16 |  |
| E | 16 |  | F | 1 |  |

ÉTAPE 1

Commencez l'assemblage en attachant les jambes (I) à l'Anneau de soutien (J) avec deux boulons Allen (A), 2 rondelles ressort (E) et deux rondelles plates (D) par jambe.

ÉTAPE 2

Attacher Suivant les panneaux Tabouret Leg (I) à la base du siège (H) en utilisant quatre boulons Allen (B), quatre Rondelles (E) et quatre rondelles plates (D) pour sécuriser les sommets des panneaux aux plaques pivotantes dans la base.

ÉTAPE 3

Fixez ensuite le Tabouret Retour (G) à la base du siège (H) avec deux boulons Allen (A), deux Rondelles (E) et deux rondelles plates (D) de l'intérieur et deux vis Allen (C), deux rondelles élastiques (E) et deux rondelles plates (D) de l'extérieur. Serrez tous les boulons avec la clé Allen (F) fourni.

